Botron B8203 Technical Data Sheet

BOTRON

Overview:

Botron's B8203 High Quality Lightweight Portable Wrist Strap tester has a large 3/4" touch button for easy testing and easy to read LEDs that show low, high and pass. Audible alarm will sound when passing. Works on all standard wrist straps and coil cords. Test ranges from 725k-10megohms.

Product Notes and Features

- Lightweight
- Portable
- Good for field kits
- LED Light Indicators

PROPERTIES

SPECIFICATIONS

| LED: Low Battery: Battery: Weight: Size: Test Range: Accuracy Range: Calibration: | 3 lights LED light 9 volts 5.1 oz. 3.5" x 4.5" x 1.5" >725k - 10megohm +/- 10% Hi 20% Low NIST Calibrated (recommended annually) Calibrated with accepted procedures and standards traceable to the National Institute of Standards and Technology. |
|--|---|
|--|---|

PART NUMBERS

B8203 Portable Wrist Strap Tester **B85503** Calibration Unit



Botron Company Inc. | 21601 N 21st Ave Phoenix AZ 85027 | Ph# 623-582-6700 | Fax# 623-582-6776

Disclaimer. All statements of technical information are believed to be true and are based upon tests we believe to be reliable. The proper use and application for this product must be the responsibility of the user. The statements herein shall have no force or effect.

OPERATION

Unscrew two screws on back of unit and insert 9v battery into compartment.

To test wrist straps, plug in banana jack from coil cord into banana jack input on front and press test button.

To test coil cords, unplug coil cord from strap, plug in banana jack. Holding snap end in hand, touch metal coil to the test button and press down.

CALIBRATION

The Botron Portable Wrist Strap Tester is calibrated to NIST traceable standards. There are no user adjustments necessary.

We recommend that calibration be performed annually using the Botron B85503 Calibration Unit.

Testing Wrist Straps With B85503 Calibration Unit:

Insert two test leads into banana jacks on calibration unit. One test lead goes to banana jack on front of tester while the other test lead attaches to test plate with an alligator clip. Push to test.

Rotate selector switch to LOW FAIL and push tester. Low fail light should display. Repeat test as you rotate to PASS and HIGH FAIL.

Botron Company Inc. | 21601 N 21st Ave Phoenix AZ 85027 | Ph# 623-582-6700 | Fax# 623-582-6776

Disclaimer. All statements of technical information are believed to be true and are based upon tests we believe to be reliable. The proper use and application for this product must be the responsibility of the user. The statements herein shall have no force or effect.