
Fieldpiece SMAN[®] Refrigerant Manifold with Built-in Vacuum Gauge OPERATOR'S MANUAL

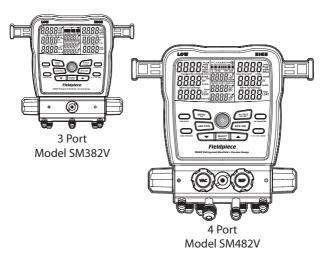

Contents


Important Notice		•		•		•	•	.4
Safety First!				•			•	.5
Quick Start What's Included								10
Description Features SM382V Front View SM382V Rear View SM482V Front View SM482V Rear View Display	v						•	12
Operation Buttons Recent Refrigerant LINK TOOL N2 TEST Select (Pre PIPE / AIR T1-T2 / TSH / ODDI Superheat (SH) and Target Superheat (Deep Vacuum (SM Test for Non-Cond	s essu 3 d Su TSH 382	ure ubc H) 2V 8	Tes :ool & SN	t) ling	g (S	C)		24

Menu
Data Logging
Auto Power Off (APO)
Temperature Calibration (CalTemp) ToolSet
Units
Vacuum Alarms
Backlight Timer
Advanced Pressure Calibration
Firmware Version and Update
Restore User Settings
Delete Log File
Format Internal Flash Drive
Maintenance
Cleaning
Battery Replacement
Using Different Refrigerants
Spare Parts
Hose Holder Replacement
Pipe Clamp Storage Arm Replacement
Valve and Knob Replacement
Specifications
Temperature
Pressure
Deep Vacuum
Wireless Compatibility
Manifold Diagrams (SM382V & SM482V)
Certifications
Limited Warranty

Important Notice

This is not a consumer product. Only qualified personnel trained in service and installation of A/C and/or refrigeration equipment shall use this product.

Read and understand this operator's manual in its entirety before using your SMAN[®] Refrigerant Manifold to prevent injury or damage to you or equipment.

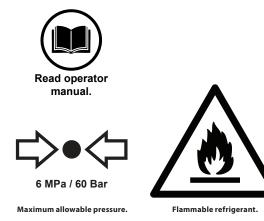

Safety First!

RISK OF EXPLOSION. DANGER: This instrument is for use in non-hazardous area only by qualified and certified technicians in the safe use, handling, and transporting of refrigerants. Please refer to flammable refrigerant safety guides, regional codes and legislation for more information. Read and understand this operator's manual in its entirety before using to prevent injury or damage to you or equipment.


MARNING – Failure to heed these hazards and actions while using this device can result in serious injury or death:

- 1. WARNING: EXPLOSION HAZARD. Verify the batteries are installed correctly and that the cover is properly sealed.
- 2. WARNING: EXPLOSION HAZARD. Do not expose the device or batteries to excessive temperatures. Different types of batteries, or new and used batteries, are not to be mixed. This device contains non-rechargeable batteries, these batteries are not to be recharged.
- 3. Do not apply more than 870 psig to any port of the manifold.
- 4. Always wear Personal Protective Equipment (PPE), including gloves, safety glasses and earplugs.
- 5. Know and understand the correct safety and handling requirements of the refrigerant, including those specified in the Safety Data Sheet (SDS).
- 6. Avoid breathing refrigerant and oil vapors. Inhalation of high concentrations of refrigerant vapor can block oxygen to the brain causing injury or death.
- 7. Handle hoses and equipment carefully as refrigerant may be under high pressure. Exposure to refrigerant can cause frostbite.
- 8. Perform leak detection in accordance with recommended practice to verify working environment is free from leaking refrigerant, as it can be toxic and/or flammable.
- 9. Only work in non-hazardous, well-ventilated areas (minimum of 4 air exchanges per hour).

- 10. Do not use this device in the vicinity of explosive substances.
- 11. This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge.
- 12. Electrostatic hazard don't clean with dry cloth, ensure that user is appropriately discharged/grounded.
- 13. Inspect this device prior to use. Do not use if there is obvious damage to the enclosure such that fingers or metallic objects might enter the casing.

MARNING: EXPLOSION HAZARD. This device is intended to be used strictly as a refrigerant manifold. Below are additional safety instructions for handling A2L & A3 refrigerants in conjunction with other equipment.

1. During maintenance and repair work on refrigeration systems with flammable refrigerants (e.g. category A2L, A2 and A3 of ISO 817), a hazardous and explosive atmosphere must always be expected in the immediate vicinity of the system. This product may only be operated in the non-hazardous area and outside of designated, recognizable or assumed explosion hazard zones (acc. to IEC 60079-10-1).

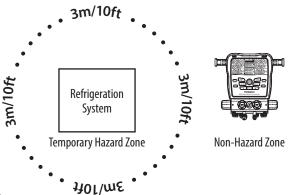

- 2. Designate and monitor a Temporary Hazard Zone with a 3-meter/10 foot perimeter. Identify and disable all possible ignition sources within this zone. Monitor air to verify refrigerant levels stay below hazardous levels as specified in Safety Data Sheet (SDS). Use a ventilation fan to maintain 4 air exchanges per hour within this zone.
- 3. When using a vacuum pump or recovery machine, always use a correctly grounded outlet. Plug and lock the supplied AC cord to the unit first. Plug into any extension cord and then plug into the mains outlet last. Follow in reverse for safe removal.
- When using a vacuum pump or recovery machine, ensure power and extension cords are in good working condition to prevent shock and spark hazards.
- 5. When an extension cord outlet is within the Temporary Hazardous Zone, it is recommended that users use a cord cover, or similar device, to reduce / eliminate the possibility of accidentally unplugging the vacuum pump or recovery machine from the extension cord while the circuit is live.
- Do NOT operate vacuum pumps or recovery machines in excessively dusty environments or environments where conductive dust is to be expected.
- 7. Do NOT connect or disconnect the power cord from the vacuum pump, recovery machine, or extension cord when energized.
- 8. Ensure area around the vacuum pump or recovery machine is free of debris that could enter air vents or fan and cause accidental sparking.
- 9. Risk of electrostatic shock. When handling A3 or A2L refrigerants, make sure the equipment and user are appropriately grounded to dissipate any built-up charge and prevent accumulation of static charge on isolated metal parts.
- 10. Do not impact the equipment when utilized with flammable refrigerants. Impacts may cause sparking which can result in a risk of explosion. Only use the equipment as intended and follow all instructions. Make sure the equipment is protected from impacts during use.
- 11. Adhere to local occupational safety codes and possess detailed knowledge and skills when handling flammable refrigerants.

- 12. Have emergency, evacuation, and fire protection plans.
- 13. Always remain in attendance and observant when equipment is operating.
- 14. Do NOT mix flammable refrigerants with air.
- 15. Use an evacuated recovery tank that complies with local regulations.
- 16. Avoid overfilling recovery tanks by following refrigerant manufacturer's filling instructions and using a refrigerant scale.
- 17. After recovery, purge system with 100% nitrogen before opening system for repair.

AUTION – Failure to heed these conditions can cause equipment damage.

- 1. Ensure that all equipment is in good working condition.
- 2. Prevent prolonged exposure to direct sunlight. Store indoors.
- 3. The unit must be protected against severe impact. Solid objects must NOT be allowed to fall onto the unit.

Intentionally Blank

Quick Start

- Install the included six AA batteries into rear battery compartment.
- 2. Press center blue button for 2 seconds to turn on your new SMAN[®] manifold.
- 3. Connect your hoses and pipe clamps to the SMAN[®] manifold and to the system.
- 4. View live pressures and temperatures.
- 5. Use arrow buttons to cycle through available refrigerants and view calculations in real-time!

What's Included

- SMAN[®] Refrigerant Manifold (3 Port), or
- SMAN[®] Refrigerant Manifold (4 Port)
- (1) ANC82 Padded, Easy-Open Case
- (2) TC24 Type K Pipe Clamp Thermocouples
- (1) ATA1 Type K Bead Thermocouple w/Clip
- (6) AA Alkaline Batteries
- (1) Year Warranty
- Operator's Manual

Scan the QR code to visit your Fieldpiece website and register your product.



US, CA, MX





EN, DE, FR, IT, ES, PT, NL, NO, SE, DK, FI

Description

SMAN[®] Refrigerant Manifolds give you the trust needed for doing the job right the first time.

Your new Fieldpiece manifold has the protection and long range wireless communication demanded by professionals working in the field. The impact resistant housing seals and protects from dust, bumps, and rain. Use the heavy duty hook to hang it in your work vehicle while protected by its easy-open padded soft case.

SMAN[®] is your testing hub at the jobsite. In addition to the included thermocouples, you can connect wirelessly to psychrometers, pipe clamps, and even a refrigerant scale. For example, assign one psychrometer (model JL3RH) to return air and another to supply air to view live temperature split across the evaporator.

View it all clearly, in any lighting condition, on the extra large LCD or remotely on your mobile device. A rolling list of your 10 most recently used refrigerants, indicated by a \bigstar , is stored at the top of the main refrigerant list for quick selection.

Verify proper charge by comparing actual superheat (SH) with target superheat (TSH). A thermocouple is included for wired outdoor dry bulb. You can link optional wireless tools for live indoor wet bulb and outdoor dry bulb! Pressure sensors automatically compensate for altitude and weather changes. Use the internal vacuum gauge for fast and convenient monitoring of your evacuations, or link to a wireless vacuum gauge for more control.

Features

Job Link® System

- Long Wireless Range (1000 feet / 305 meters)
- Connect to Your Mobile Device (page 54)
- Connect Job Link Tools (pages 25 & 54)

Real-time Calculations

- Superheat and Subcooling
- Vapor Saturation and Liquid Saturation
- Target Superheat (requires model JL3RH for real-time) - T1-T2
- (3) Type K Thermocouple Jacks
 - Suction Line
 - Liquid Line
 - Outdoor Ambient

Robust Port Design

- SM382V: (3) 1/4"

- SM482V: (3) 1/4" + (1) 3/8"

Built-in Vacuum Gauge with Graphic Indicators

Nitrogen Test (Tightness Test)

Recent Refrigerant List


Sealed Sight Glass


Heavy Duty Rubberized Construction


Rugged Hanging Hook


Operation in the Rain (IP55)

Data Logging with USB-C Export

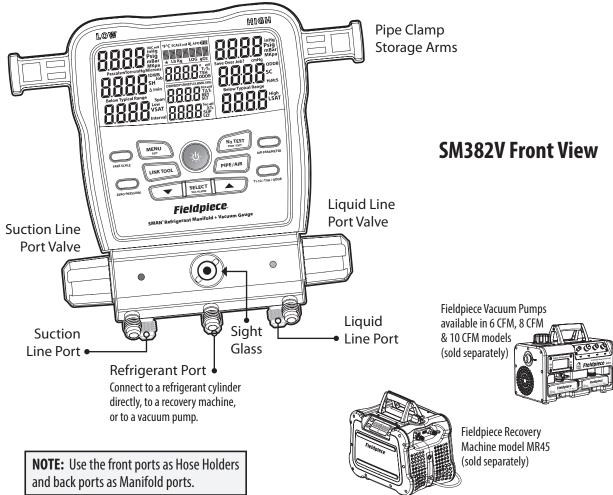


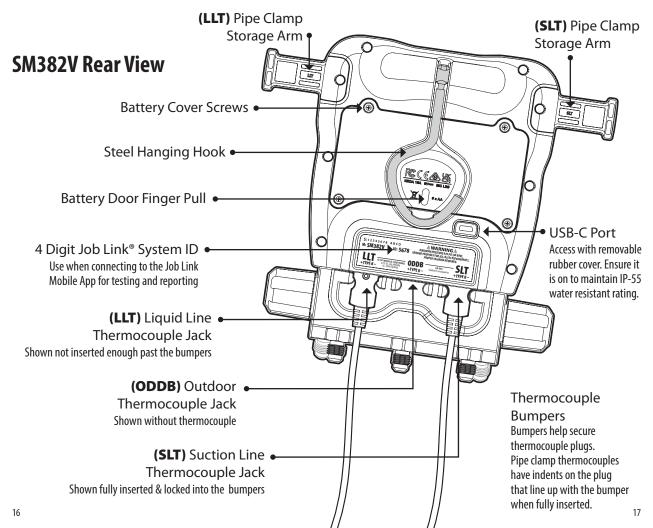

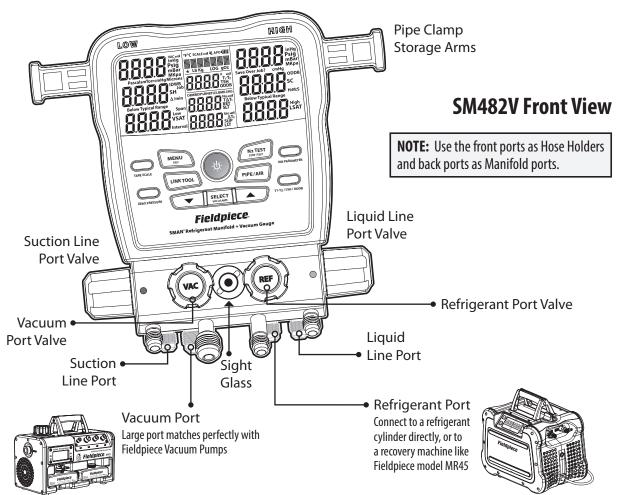

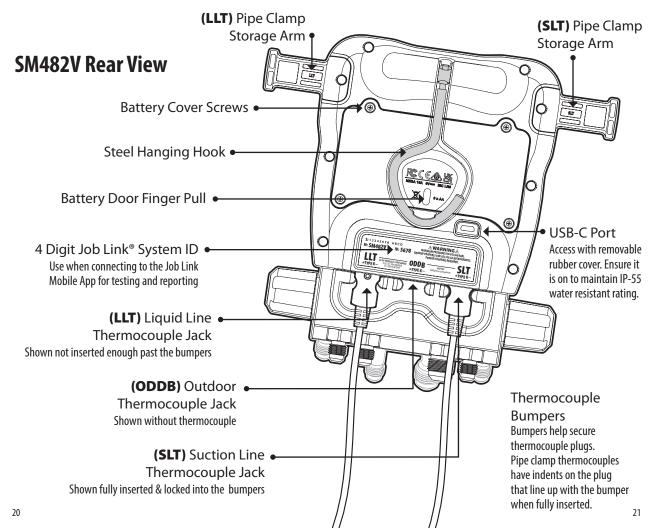

Display

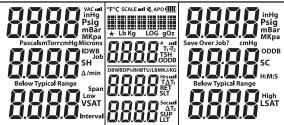

- °F: Temperature (Fahrenheit)
- °C: Temperature (Celsius)
- Psig: Pressure (pounds/in²)
- Bar: Pressure / Negative Pressure
- MPa: Pressure (megapascals)
- kPa: Pressure (kilopascals)
- inHg: Negative Pressure (inches of mercury)
- cmHg: Negative Pressure (centimeters of mercury)

Microns: Vacuum (microns of mercury)

Pascals: Vacuum

mBar: Vacuum (millibar)

mTorr: Vacuum (millitorr)

Torr: Vacuum (equivalent to mmHg)

Δ/min: Vacuum Rate (differential per minute)

- H:M:S: Hours:Minutes or Minutes:Seconds
- SH: Superheat (suction line vapor saturation)
- SC: Subcooling (liquid saturation liquid line)
- VSAT: Vapor Saturation Temperature (from P-T chart)
- LSAT: Liquid Saturation Temperature (from P-T chart)
- **TSH**: Target Superheat (calculated from IDWB and ODDB)
- T1-T2: Measurement Differential

- SLT: Suction Line Temperature (low side)
- LLT: Liquid Line Temperature (high side)
- **ODDB**: Outdoor Dry Bulb Temperature
- IDWB: Indoor Wet Bulb Temperature
- **LOG**: Data Logging in Progress
- Job: Job Slot (1-9) of Data Log
- Span: Hours (Hrs) of Data Logging
- Interval: Seconds (Sec) Between Logged Measurements
- Low: Vac Alarm Lowest Micron Level
- High: Vac Alarm Highest Micron Level
- **RET**: Return Psychrometer
- SUP: Supply Psychrometer
- **DB**: Dry Bulb from Psychrometer
- WB: Wet Bulb from Psychrometer
- **DP**: Dew Point from Psychrometer
- %RH: Relative Humidity from Psychrometer
- BTU/LBM: Enthalpy from Psychrometer (BTU per pound mass)
- KJ/KG: Enthalpy from Psychrometer (kilojoules per kilogram)
- **TΔT**: Target Dry Bulb Split from Psychrometers (Target Delta T)
- ΔT: Dry Bulb Split from Psychrometers (Delta T)
- Lb: Pounds (from wireless scale)
- Oz: Ounces (from wireless scale)
- Kg: Kilograms (from wireless scale)
- g: Grams (from wireless scale)
- VAC: Wireless Vacuum Gauge Connected
- SCALE: Wireless Scale Connected
- APO: Auto Power Off Enabled
- ★ : Top 10 Refrigerant Selected
- K : Speaker Turned Off
- I Battery Life Remaining
- Wireless Signal Strength

Operation

Buttons

A beep sounds when a button is pressed. A double beep sounds when a button is pressed and the function is not possible at that time. The speaker can be muted altogether (page 35).

· Press 2 sec to toggle power. Press to toggle backlight.

← Cycle through refrigerants, change values or vacuum views. **SELECT**: Confirm a changed value or activate a VAC ALARM (page 40). **MENU**: Enter the menu (page 35) or EXIT a mode.

LINK TOOL: Connect wireless tools (page 25).

- N2 TEST: For Nitrogen pressure tests (page 26).
- **PIPE / AIR**: Display SLT/LLT or various return and supply air measurements from optional psychrometers (page 27).
- **TARE SCALE**: Press 2 sec to zero (tare) weight from a wireless scale. **ZERO PRESSURE**: Press 2 sec to zero the displayed pressures.
- AIR PARAMETER: Toggle to display DB, WB, DP, %RH, BTU/LBM, ΤΔT & ΔT (page 29).

T1-T2/TSH/ODDB: Display T1-T2, TSH, or ODDB (page 27).

Recent Refrigerants (*)

A rolling list of your 10 most recent refrigerants, indicated by a \star , is stored above the main list. When you power off your manifold, the current refrigerant is added automatically to this dynamic list of 10.

LINK TOOL

Assign wireless Job Link® System tools to core manifold measurements such as pipe temperature or to broader measurements such as refrigerant weights and psychrometrics.

- 1. Press LINK TOOL to search for supported Fieldpiece wireless tools.
- Turn on any wireless sources you want to assign. If your Job Link[®] System tool has a selector switch, ensure it's set to match the measurement.
- Use ARROWS to auto search yes or no. Job Link[®] System tools are displayed by their 4 digit ID, usually found on the back of the tool.
- 4. Press SELECT to select and return to the list of measurements.
- Press **MENU** to exit at any time. *If changes were made, choose whether or not you want to save changes.*
- Most Job Link[®] System tools have a switch that selects a side of the system. Set it to match the measurement you're assigning it to.
- A wireless Return psychrometer is assigned to both Return air and IDWB (page 29) when selected.

NOTE: When adding JL3PC or JL3LC pipe clamps, you will need to disconnect the TC24 Type-K pipe clamps from the manifold.

N2 TEST (Pressure Test)

After working on a refrigerant-side component of an emptied system, it's a good idea to pressurize the system with dry nitrogen and check for pressure drops before evacuation.

- 1. Pressurize the system with dry nitrogen. *Pressure levels vary with the equipment you're testing. Always check with the manufacturer.*
- 2. Connect the low side (suction line) port to the system and wait for the pressure to stabilize. *You can connect the high side (liquid line) as well to help monitor stability, but the pressure differential (P.diF) calculation is only using the low side sensor.*
- 3. Attach SLT clamp to the pipe you're going to pressurize. This temperature is used to compensate for any temperature changes between the start and end of the test. Select "**Comp. OFF**" in **MENU** to deactivate temperature compensation.
- 4. Press N2 TEST to prepare test.
- Press N2 TEST to start the test. The stopwatch starts. Real-time compensated pressure change is labeled Δ. Real-time temperature is labeled SLT. Real-time temperature change is labeled ΔT.
- 6. Press N2 TEST to stop the test.

The stopwatch, Δ , and ΔT freeze. If Δ is negative, there may be a leak in the system. If Δ is positive, SLT or nitrogen temperature may be unstable. High and low side pressures and SLT continue to display, but they are no longer being used.

- 7. Press N2 TEST to exit the test.
- To save battery life, the screen will turn off after 3 hours of testing,
 but will continue to test. Press any button to turn the screen on.

PIPE / AIR

Press **PIPE / AIR** to display various calculations and measurements from Job Link[®] System psychrometers you've assigned (page 25). The parameter is briefly shown when pressed, then shown at the top of the LCD.

Press **PIPE / AIR** for >1 second to view SLT/LLT.

SLT: Live reading of suction line temperature.

LLT: Live reading of liquid line temperature.

RET: Live reading from return air psychrometer. **SUP**: Live reading from supply air psychrometer.

TΔT: Live target dry bulb split from psychrometers. **ΔT**: Live actual dry bulb split from psychrometers.

T1-T2 / TSH / ODDB

Press **T1-T2 / TSH / ODDB** to cycle through ODDB (outdoor dry bulb), TSH (target superheat), and T1-T2 (middle display - bottom display).

- **ODDB**: Live reading of the rear ODDB thermocouple jack. ODDB does not show if set to manual value (page 29).
- **TSH**: Live target superheat calculated from ODDB and IDWB. Each of these measurements can be live or manually entered (page 29).
- **T1-T2:** Live simple subtraction of the bottom display (T2) from the middle display (T1). With SLT and LLT showing, you can check for a temperature drop across a filter drier. With RET and SUP showing, you can check the effect of the indoor unit. With T Δ T and Δ T showing, you can see how close the actual Δ T is to the target.

Superheat (SH) and Subcooling (SC)

Superheat is the amount of heat added to refrigerant after changing to a vapor in the evaporator. Subcooling is the amount of heat removed from refrigerant after changing to a liquid in the condenser. View both live at the same time!

- 1. Use **ARROWS** to select the system refrigerant.
- 2. Close all manifold valves.
- 3. Connect EPA approved refrigerant hoses to LOW and HIGH side ports.
- Connect your supported wireless pipe clamps, or fully plug pipe clamp thermocouples into SLT and LLT rear jacks. See LINK TOOL on page 25.
- 5. Hand tighten both the LOW side hose to suction line service port and the HIGH side hose to the liquid line service port.
- 6. Clamp the SLT thermocouple to the suction line between the evaporator and compressor, at least 6 inches from the compressor.
- 7. Clamp the LLT thermocouple to the liquid line between the condenser and metering device, as close to the service port as possible.
- 8. Purge hoses as you open HIGH and LOW manifold valves.
- 9. View superheat and subcooling in real-time.
- Ensure system has stabilized before using superheat or subcooling to adjust the charge of the system.
- To add or remove refrigerant connect the tank/cylinder/machine to the REF port. Use the manifold valves to precisely charge or recover refrigerant as needed. Follow recommended charging or recovery practices from equipment manufacturer and training.
- When superheat and/or subcooling cannot be calculated, "- - "
 will be displayed. If superheat and/or subcooling is negative, "Below
 Typical Range" will show. In rare cases this is normal, but usually a
 thermocouple is disconnected or the selected refrigerant is incorrect.

Target Superheat (TSH)

Compare target superheat (TSH) to actual superheat (SH) when charging fixed orifice air conditioning systems. TSH is continually calculated from indoor wet bulb (IDWB) and outdoor dry bulb (ODDB) temperatures.

IDWB: By default, this is a manually set value of 60.0°F. For a live measurement, assign the optional model JL3RH wireless psychrometer. See **LINK TOOL** on page 25.

- **ODDB:** By default, this is the live measurement of the ODDB thermocouple jack. If you prefer a static measurement, assign a manual value. NOTE: Use your wireless psychrometer (JL3RH or PRH3) by pressing MENU > ToolSet > Outdoor (ODDB flashing) > SELECT > Arrows between Type K / Manual / ID-#### > SELECT.
- 1. Connect the included type K bead thermocouple to the ODDB thermocouple jack. Use the alligator clip to locate the bead in a shaded area of the condenser to measure the temperature of air entering the condenser.
- Use ARROWS to scroll through detected measurement sources. Job Link® System tools are displayed by their 4 digit ID, usually found on the back of the tool.
- Turn on any wireless sources you want to assign. If your Job Link® System tool has a selector switch, ensure it's set to match the measurement.
- 4. Press SELECT to select and exit or go to next until complete.
- 5. Press **T1-T2 / TSH / ODDB** until ODDB is displayed. If you changed ODDB to a manually set value, it will be used to calculate TSH but will not be displayed.
- 6. Measure IDWB after the filter, just in front of the indoor coil. If a psychrometer is assigned, you can press **AIR PARAMETER** until wet bulb is displayed to verify the measurement.
- 7. Press T1-T2 / TSH / ODDB until TSH is displayed.

Deep Vacuum - Model SM382V

Follow recommended evacuation practices from equipment manufacturer and training. Alarms can be adjusted in the MENU (page 40).


- 1. Close all manifold valves.
- Setup your tools and equipment (see diagram). Connect manifold 1/4" HIGH port to liquid line service port. Connect manifold 1/4" LOW port to suction line service port. Connect manifold 1/4" middle port to vacuum pump with a shutoff valve in between.
- 3. Turn on your vacuum pump.
- 4. Open shutoff valve.

The vacuum sensor is now exposed to your pump, but it will not display until HIGH/LOW manifold valves are opened. This ensures the measurement is of the system and not just the manifold.

- 5. Open HIGH and LOW manifold valves.
- 6. Press VAC ALARM to activate the low alarm. See details on page 40. The stopwatch starts. The rate of change is displayed in units per minute. Press ARROWS to switch between Rate Meter and Bar Graph views. The smaller the rate of change, the closer you are to stabilization. You may need to improve your setup if rate slows well before reaching your desired vacuum (see Tips for Better Evacuations). Note: The Rate Meter shows vacuum progress and eliminates uncertainty with a dynamic view. Bars displayed on the left side shows decreasing vacuum, bars in the center show a stable vacuum, and bars on the right side shows increasing vacuum. The Bar Graph is static and nonlinear for increased resolution at deeper vacuums.
- 7. Once the low alarm level is reached, the backlight blinks and alarm sounds. Press any button (other than **SELECT**) to silence alarm.
- 8. Close your shutoff valve between the middle port and pump to block the pump.

Do not close HIGH and LOW valves or you'll block the system and measure just the manifold!

- 9. Turn off your vacuum pump.
- 10. Press VAC ALARM to activate the high alarm and start the stopwatch.
- 11. Once the high alarm level is reached, the backlight blinks, alarm sounds, and the stopwatch stops. Press any button (other than **SELECT**) to silence alarm.
- 12. Close HIGH and LOW manifold valves. The vacuum sensor is now blocked from the system (page 55).

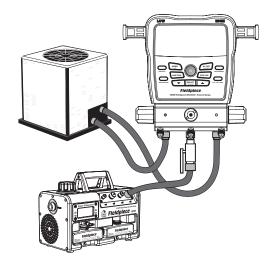

Tips for Better Evacuations

- Remove Schrader valve cores & depressors with a core removal tool.
- Use shortest vacuum rated hoses with largest diameter available.
- Do not evacuate through hoses with low loss fittings.
- Inspect the rubber seals at both ends of your hoses for damage.
- Apply a light amount of vacuum oil to the service port fittings before attaching hoses to help maintain a vacuum-tight seal.
- Change pump oil before and during the job. Change pump oil onthe-fly without losing vacuum with Fieldpiece vacuum pumps.
- When the vacuum pump is blocked, a slow rise that stabilizes may signify moisture is still present in the system. A continuous rise to atmosphere indicates a leak. Check hoses, tools, or the system itself.
- Measurements are less representative of the entire system when the vacuum pump is on because pumping creates a pressure gradient. Block the pump and allow the system to stabilize before assuming the measurement is of the entire system.


Deep Vacuum - Model SM482V

Follow recommended evacuation practices from equipment manufacturer and training. Alarms can be adjusted in the MENU (page 40).

- 1. Close all manifold valves.
- Setup your tools and equipment (see diagram). Connect manifold 1/4" HIGH port to liquid line service port. Connect manifold 1/4" LOW port to suction line service port. Connect manifold 3/8" VAC port to vacuum pump.
- 3. Turn on your vacuum pump.
- 4. Open VAC valve.

The vacuum sensor is now exposed to your pump, but it will not display until HIGH/LOW manifold valves are opened. This ensures the measurement is of the system and not just the manifold.

- 5. Open HIGH and LOW manifold valves.
- 6. Press **VAC ALARM** to activate the low alarm. See details on page 40. The stopwatch starts. The rate of change is displayed in units per minute. Press **ARROWS** to switch between Rate Meter and Bar Graph views. The smaller the rate of change, the closer you are to stabilization. You may need to improve your setup if rate slows well before reaching your desired vacuum (see Tips for Better Evacuations). Note: The Rate Meter shows vacuum progress and eliminates uncertainty with a dynamic view. Bars displayed on the left side shows decreasing vacuum, bars in the center show a stable vacuum, and bars on the right side shows increasing vacuum. The Bar Graph is static and nonlinear for increased resolution at deeper vacuums.
- 7. Once the low alarm level is reached, the backlight blinks and alarm sounds. Press any button (other than **SELECT**) to silence alarm.
- 8. Close VAC valve to block the pump. Do not close HIGH and LOW valves or you'll block the system and measure just the manifold!
- 9. Turn off your vacuum pump.
- 10. Press **VAC ALARM** to activate the high alarm and start the stopwatch.
- 11. Once the high alarm level is reached, the backlight blinks, alarm sounds, and the stopwatch stops. Press any button (other than **SELECT**) to silence alarm.
- 12. Close HIGH and LOW manifold valves. The vacuum sensor is now blocked from the system (page 55).

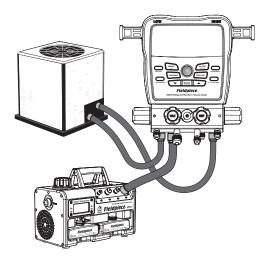

Tips for Better Evacuations

- Remove Schrader valve cores & depressors with a core removal tool.
- Use shortest vacuum rated hoses with largest diameter available.
- Do not evacuate through hoses with low loss fittings.
- Inspect the rubber seals at both ends of your hoses for damage.
- Apply a light amount of vacuum oil to the service port fittings before attaching hoses to help maintain a vacuum-tight seal.
- Change pump oil before and during the job. Change pump oil onthe-fly without losing vacuum with Fieldpiece vacuum pumps.
- When the vacuum pump is blocked, a slow rise that stabilizes may signify moisture is still present in the system. A continuous rise to atmosphere indicates a leak. Check hoses, tools, or the system itself.
- Measurements are less representative of the entire system when the vacuum pump is on because pumping creates a pressure gradient. Block the pump and allow the system to stabilize before assuming the measurement is of the entire system.

Test for Non-Condensables

If head pressure seems high even after cleaning coils, optimizing airflow, and other routine maintenance, you may have non-condensables trapped in the system or a low refrigerant charge. Non-condensables can reduce efficiency, performance, and put extra stress on system components. Non-condensables can enter the system in many ways, and your initial system service may be following years of poor service that introduced the non-condensables.

- 1. Use **ARROWS** to select the system refrigerant.
- 2. Unpower the compressor, but allow the condenser fan to run.
- 3. Connect high side port to the system to view system pressure.
- 4. Clamp one thermocouple to the discharge line.
- 5. Clamp the other thermocouple to the liquid line.
- 6. Clip the ODDB thermocouple to measure the air entering the condenser.
- 7. Monitor all three temperatures until they all stabilize and show the same value.
- View the subcooling (SC) calculation on the display. The closer SC is to 0.0°, the fewer non-condensables are trapped. Depending on the system, a negative SC may suggest a need to recover, evacuate, and charge with virgin refrigerant.

Menu

Press MENU to enter the menu where most settings are located. Use arrows to scroll through the menu and press SELECT to select one of the below menu items. NOTE: Starts from MENU function most recently entered.

LogData: Enter data logging setup mode (page 36). (StopLog): If data logging, stop the log (page 36). AutoOff: Enter auto off timer setup mode (page 37). CalTemp: Enter calibration mode for Type K jacks (page 38).

- Disable: Select to turn OFF wireless functionality.
- **Enable**: Select to turn ON wireless functionality.
- ToolSet: Enter wireless source setup mode (page 39).
- Units: Enter units setup mode (page 40).
- **Vac Alarms**: Enter vacuum alarm setup mode if gauge is assigned (page 40).

Mute: If unmuted, mute the speaker.

- (Unmute): If muted, unmute the speaker.
- Backlight Timer: Enter backlight timer setup mode (page 41).

Enable N2 Temp. Comp.: Enable N2 Test Parameters if OFF.

(Disable N2 Temp. Comp.): Disable N2 Test Parameters if ON.

Adv Pressure Cal: Enter advanced calibration mode for pressure sensors (page 42).

F Ware: Enter firmware version view and update mode (page 44).

Language: Select your language (English, German, French, Portuguese, Italian, Spanish, Danish, Dutch, Finnish, Swedish, Turkish, or Norwegian).

Restore Settings: Enter restore factory settings mode (page 45).

(Delete Log File): If a Job .csv log file is saved to the internal flash drive, enter delete log file mode (page 46).

Format Drive: Enter format drive mode (page 47).

Data Logging

Log measurements and resulting calculations, such as Superheat, at chosen spans and intervals. Save up to 9 Jobs (logs) to the internal flash drive.

MENU/LogData

- Use ARROWS to scroll through Jobs. The display will alternate between the % free space on the drive and the % of space the chosen Job uses.
- 2. Press **SELECT** to select.

If a Job already exists in that slot, use ARROWS then SELECT to choose whether or not you want to save over that Job.

- 3. Use **ARROWS** to set the Span (total time). It's a good idea to use new batteries if setting up a long span. If batteries run out during a Job, the log will automatically stop and save, then the SMAN[®] manifold will turn off.
- 4. Press SELECT to select.
- 5. Use **ARROWS** to set the Interval (time between measurements).
- 6. Press **SELECT** to select and begin logging data until the Span ends. *LOG will blink to indicate the log is still active.*
- Press MENU to exit setup at any time.
- Press **MENU** and select **StopLog** to stop the Job and return to standard operation. The Job will be saved.
- To save battery life, the screen will turn off after 3 hours of logging, but will continue to log. Press any button to turn the screen on.
- Some buttons and features (including auto power off) are disabled until the Job ends.
- Jobs are saved as .csv files.
- Connect to your computer via the USB-C port under the removable rubber cover. View its internal flash drive just like any other USB drive.

Auto Power Off (APO)

To save battery life, your SMAN[®] manifold automatically powers off after a set time of no button presses.

MENU/AutoOff

- 1. Use **ARROWS** to scroll through times (default is 30 min).
- 2. Press **SELECT** to select and exit. *If changes were made, choose whether or not you want to save changes.*
- Press **MENU** to exit at any time. *If changes were made, choose whether or not you want to save changes.*
- APO is automatically disabled when in Deep Vacuum, N2 Test, Firmware update and data logging modes.

Temperature Calibration (CalTemp)

Thermocouples (T/C) are not calibrated directly. Instead, each T/C jack (LLT, ODDB, SLT) must be calibrated to the particular T/C that is plugged into it. Though it's possible for a calibration to hold for years, it's best practice to calibrate regularly if only to verify accuracy.

Calibration is quick and easy, requiring just a known temperature to calibrate to. Ice water is the recommended medium for in-field calibration due to known temperature (32.0 F, 0.0 C) and ready availability.

MENU/CalTemp

- 1. Stabilize a large cup of ice water by stirring. Pure, distilled water will be the most accurate.
- 2. Immerse the sensing end of the thermocouple in the ice water.
- 3. Use **ARROWS** to select the temperature you want to calibrate (ODDB, SLT, or LLT).
- 4. Press **SELECT** to select.
- 5. Use **ARROWS** to adjust the temperature to match 32.0° F (0.0° C) making sure the ice water is continually stirred. *The calibration* range is limited to $\pm 7^{\circ}$ F ($\pm 3.8^{\circ}$ C) in order to help prevent mistakes.
- 6. Press **SELECT** to save and return to the list of temperatures.
- Press **MENU** to exit at any time. *If changes were made, choose whether or not you want to save changes.*
- If you have a wireless thermocouple (model JL3PC) assigned and wireless is on, calibration is for the wireless thermocouple.
- Calibration of a wireless thermocouple (model JL3PC) does not override a wired thermocouple calibration. You can switch between
- 38 wired and wireless without having to recalibrate.

ToolSet

Assign wireless Job Link® System tools to core manifold measurements such as pipe temperature or to broader measurements such as refrigerant weights and psychrometrics.

- Wireless OFF: Wireless is disabled by default. Line temperatures (SLT and LLT) are automatically assigned to their type K jacks.
- Wireless ON: SLT and LLT type K jacks DO NOT override an assigned wireless source. If wireless clamps are linked, the SLT and LLT ports are disabled.

MENU/ToolSet

- 1. Use **ARROWS** to scroll through the list of measurements.
- 2. Press SELECT to select.
- Turn on any wireless sources you want to assign. If your Job Link[®] System tool has a selector switch, ensure it's set to match the measurement.
- Use ARROWS to scroll through detected measurement sources. Job Link[®] System tools are displayed by their 4 digit ID, usually found on the back of the tool.
- 5. Press **SELECT** to select and return to the list of measurements.
- Press **MENU** to exit at any time. *If changes were made, choose whether or not you want to save changes.*
- Most Job Link[®] System tools have a switch that selects a side of the system. Set it to match the measurement you're assigning it to.
- Depending on the wireless tool, select Unlink, Type K, or Onboard to set a source to its factory default source. This is useful when you want to use a previously assigned tool at the job site, but do not want to use it with the SMAN[®] manifold.
- A wireless Return psychrometer is assigned to both Return air and IDWB (page 29) when selected.

Units

Each measurement can have its own unit of measure.

MENU/Units

- 1. Use **ARROWS** to scroll through the list of measurements.
- 2. Press **SELECT** to select.
- 3. Use **ARROWS** to scroll through units of measure.
- 4. Press SELECT to select and return to the list of measurements.
- Press **MENU** to exit at any time. *If a change was made before pressing SELECT, choose whether or not you want to save the change.*

Vacuum Alarms

Set high and low vacuum alarms so you know when you've reached an appropriate vacuum (Low) and time how long it takes to rise after blocking the pump from the system (High).

MENU/Vac Alarms

- 1. Use **ARROWS** to toggle between high and low alarm.
- 2. Press SELECT to select.
- 3. Use **ARROWS** to adjust the alarm trigger in 25 micron increments.
- 4. Press SELECT to select and exit or go to next.
- Press **MENU** to exit at any time. *If changes were made, choose whether or not you want to save changes.*
- The low alarm cannot go higher than the high alarm.
- The high alarm cannot go lower than the low alarm.
- Press SELECT (ALARM) while in deep vacuum to activate the next alarm (None >> Low >> High >> None).

Backlight Timer

The backlight turns off automatically after a set time of no button presses.

MENU/Backlight Timer

- 1. Use **ARROWS** to scroll through times (default is 2 min).
- 2. Press **SELECT** to select and exit. *If changes were made, choose whether or not you want to save changes.*
- Press **MENU** to exit at any time. *If changes were made, choose whether or not you want to save changes.*

Advanced Pressure Calibration

Typical HVACR service does not require this procedure, but you can occasionally calibrate the pressure sensors to maintain highest accuracy.

It works by measuring the temperature of virgin refrigerant (not recovered refrigerant) and applying an offset to match the pressure to that refrigerant's P-T chart.

- 1. Calibrate a beaded thermocouple to the ODDB jack (page 38).
- 2. Store a virgin refrigerant cylinder, upright and untouched, in the stable ambient environment for at least 24 hours.
- 3. Leaving the cylinder in the same place it was left to stabilize, connect the cylinder to either the HIGH or LOW side port.
- 4. Close VAC and REF valves and cap the unused port. If you don't have caps with seals, you can connect both ends of a refrigerant hose to the unused ports or hose seats. Some refrigerant will remain in the hoses which you need to recover after calibration.
- 5. Use **ARROWS** to select the refrigerant type in the cylinder.
- 6. Use tape to attach the ODDB thermocouple bead halfway up the cylinder to measure the temperature of the refrigerant.
- 7. Press T1-T2 / TSH / ODDB until ODDB is displayed.
- 8. Open both HIGH and LOW side manifold valves.
- 9. Open the refrigerant cylinder valve. The pressure inside cylinder should now be displayed on both HIGH and LOW side pressure sensors.

10. Allow the pressure readings and ODDB temperature to stabilize.

- 11. Press MENU.
- 12. Use **ARROWS** to show **Adv Pressure Cal**.
- 13. Press **SELECT** to initiate calibration of the pressure sensors.
- 14. Each pressure sensor will briefly display "Good" if successful or "Err" if unsuccessful, then return to normal operating mode.

Troubleshooting an "Err" message

- 1. Measured pressure was less than 10 psig.
- Refrigerant cylinder may be nearly empty. •
- Valves may be closed. ٠
- 2. Measured pressure was not within ± 3 psig of VSAT pressure on the P-T chart.
- Thermocouple may not have been calibrated properly. ٠
- *Thermocouple may not have been attached properly to cylinder.* ٠
- Thermocouple may have not been connected to ODDB jack. ٠
- Refrigerant cylinder pressure was unstable. ٠
- Refrigerant cylinder temperature was unstable. ٠
- *Refrigerant selected did not match refrigerant in cylinder.*

Firmware Version and Update

New firmware, with new refrigerants and/or performance enhancements, may be available for download at www.fieldpiece.com. View the firmware version installed on your manifold to compare to what's available. Register your manifold on-line to receive notification of new releases!

CAUTION: Updating the firmware keeps user settings but deletes any saved files/logs. Download any saved files/logs prior to updating the firmware.

View Firmware Version Installed

- 1. Press MENU, use the arrows to display F Ware, and press SELECT.
- The top line displays the installed firmware version. P/T chart is displayed on the second line and the radio region is displayed on the bottom line.

Update Firmware

- 1. Ensure your manifold is OFF and that the USB-C cable is disconnected.
- 2. Double click on the downloaded firmware file to open the firmware update window.
- 3. Connect the USB-C cable from the computer to your manifold's USB-C port which is on the rear of the manifold.
- 4. On your computer, press the SEND button on the firmware update window which transfers the data to your manifold. The progress bar will display the progress. Once completed, the update window will change and display the next steps.

NOTE: If the progress bar is full, and the manifold screen continues to show the animated dashes, it may have locked up the process. Remove a battery from the manifold and reinsert it to reboot the manifold to continue.

- 5. DO NOT delete the .bin file stored on your manifold's internal flash drive.
- 6. Unplug your manifold from the computer.

- Turn on your manifold and you will see the animated dashes on the manifold's screen. Allow a few minutes for your manifold to update. Once complete, the manifold's screen will display "donE" and will automatically power off.
- Press **MENU** to exit at any time before installation begins.
- During installation, buttons are disabled.

Restore User Settings

Restore factory default user settings when you want a fresh start.

MENU/Restore Settings

- 1. Use **ARROWS** to select Yes or No.
- 2. Press **SELECT** to select and exit.
- Press **MENU** to exit at any time. *If changes were made, choose whether or not you want to save changes.*
- If you choose to restore, it may take a few seconds before returning to standard operation.

Delete Log File

Clear up space by deleting old logs or just view free space available.

MENU/Delete Log File

- 1. Use **ARROWS** to scroll through Jobs (logs). *The display will alternate between the % free space on the drive and the % of space the chosen Job uses.*
- 2. Press **SELECT** to select a Job to delete. *Choose whether or not you want to delete that Job.*
- 3. If you choose to delete, it may take a few seconds to finish. If no additional Jobs are found, the manifold returns to standard operation.
- Press MENU to exit at any time.

Format Internal Flash Drive

Quickly clear up maximum space by reformatting the internal flash drive. This deletes everything on the drive including log files, firmware update files, and any other files added manually.

MENU/Format Drive

- 1. Use **ARROWS** to select Yes or No.
- 2. Press SELECT to select and exit.
- Press MENU to exit at any time.
- If you choose to format, it may take a few seconds before returning to standard operation.
- User settings are not deleted.

Maintenance

Cleaning

Wipe with damp cloth to clean the exterior. Do not use solvents.

Over time, the vacuum sensor of the SMAN may become contaminated with dirt, oil, and other contaminants. If you are frequently flowing refrigerant through the manifold and exposing the vacuum sensor to this flow, we recommend that users should flush or clean their manifold every 2 to 4 weeks to extend the life of the SMAN by avoiding contaminants from building up on the sensor components.

- 1. Never use an object such as a cotton swab to clean the sensor, you may cause damage to the sensor.
- 2. Open all valves and cap all the ports except for the VAC port on a 4-port manifold or the center port on a 3-port manifold. Turn the manifold over such that the manifold ports (not hose holders) are facing up.
- 3. Drop enough Isopropyl (rubbing) alcohol (minimum 70% alcohol content) into the VAC/center port using an eye dropper or funnel so that it can flush out contaminants. (Roughly 7 mL)
- Cap off the VAC/center port and gently shake your SMAN while upside down to clean sensor. (Approximately 30 to 60 seconds.)
- Turn right side up. Uncap one of the ports and pour out the rubbing alcohol. Uncap and open all ports to allow sensors to dry out. Drying usually takes about an hour.

Battery Replacement

The batteries must be replaced when the battery life indicator is empty. Once the batteries are drained beyond operating voltage, "Low Bat" briefly appears and the manifold turns off.

Unscrew the 4 cover screws and pull out the rear battery cover. Replace the 6 AA batteries and properly dispose of the old ones.

Using Different Refrigerants

You can use different refrigerants, but be sure to purge your manifold block and hoses with nitrogen before connecting to a system with a different refrigerant. Contamination can hurt system performance and cause damage.

Spare Parts

RSM82H – SMx82V Hose Holder Replacement Kit – 1/4" + 5/16" RSM82E – SMx82V Pipe Clamp Ear Replacement Kit RSMANK6 – SMAN 2 Valve and Knob Kit RSMANK8 – SMAN 4 Valve and Knob Kit

Hose Holder Replacement

Your manifold hose holders are 1/4'' as the default. If you want to change them to the 5/16'' (silver color) hose holders or replace a damaged 1/4'' hose holder, please complete the following.

- 1. Lay your manifold face up on a non-abrasive, flat surface.
- Insert a thin shafted, Phillips screwdriver into the desired hose holder. Turn the screw counter clockwise to loosen and remove the 1/4" (brass color) hose holder. Take care to not damage or strip the screw head.
- 3. Replace the sealing o-ring with a new o-ring. Ensure that the o-ring does not block the threaded screw hole.
- 4. Insert the replacement hose holder and align it to the flats in the manifold block so that the bottom of the fitting is flush with the manifold block.
- 5. Insert a new screw into the replacement hose holder. Do NOT re-use the old screw. Use your screwdriver to securely tighten. The provided screws are pre-coated with threadlocker. Do NOT overtighten.
- 6. Store the 1/4'' hose holder in a safe and secure place for future use.

Pipe Clamp Storage Arm Replacement

Your pipe clamp storage arms can easily be replaced if they become damaged or capped if unused.

- 1. Lay your manifold face down on a non-abrasive, flat surface.
- 2. Using a Phillips screwdriver, loosen the screw by turning it counter clockwise.
- 3. Discard the damaged storage arm and screw.
- 4. Select the correct side replacement, or cap (LLT or SLT), and slide in to securely insert. Ensure it is flush with the manifold body.
- 5. Insert a new screw, use your screwdriver to securely tighten. Do NOT re-use the old screw. Do NOT overtighten.

Valve and Knob Replacement

If you are experiencing vacuum leaks through your valve(s), gauges are inaccurate, or there is physical damage, please complete the following to rebuild.

- 1. Lay your manifold face up on a non-abrasive, flat surface.
- 2. On the valve(s) you are replacing, pry, lift and remove the knob's label to expose the knob's screw.
- 3. With a Phillips screwdriver, turn the screw counter clockwise to loosen and remove the knob. Do NOT re-use the old screw.
- 4. Using a 20 mm wrench, loosen the old valve by turning it counter clockwise. Once loose, pull straight up to remove.
- On the replacement valve, apply a thin layer of silicone grease to the o-rings. Push the valve back in, tighten by hand and complete with your wrench until tight. Do NOT overtighten. Use a threadlocker if desired.
- 6. Put on the new knob and twist until tight. Use the new screw and turn clockwise until tight onto the valve stem. Use a threadlocker if desired.
- 7. Stick on the correct replacement label depending on which valve you replaced.
- 8. Depending on how many valves you are replacing, repeat steps 2-7 as needed.

Specifications

Display: LCD (5 inches diagonal) Backlight: Blue (adjustable duration) Low Battery Indication: i is displayed when the battery voltage drops below the operating level. Over Range Display: OL for pressure, - - - - for temperature Auto Power Off: 30 minutes of inactivity (adjustable) Maximum Manifold Pressure: 870 Psig (6000 kPa) Battery Type: 6 x AA alkaline Battery Life: 405 hours typical (without vacuum, backlight, and wireless) Radio Frequency: 2.4 GHz Wireless Range: 1000 feet (305 meters) line of sight. Distance decreases through obstructions. Data Port: USB-C (for extracting data logs or updating firmware) **Operating Environment:** 14°F to 122°F (-10°C to 50°C) at <75% RH Storage Environment: -4°F to 140°F (-20°C to 60°C) at <80% RH (with battery removed) Maximum Altitude: 11,483 feet (3500 meters) **Temperature Coefficient:** 0.1 x (specified accuracy) per 1.8°F (14°F to 64°F, 82°F to 122°F), per °C (-10°C to 18°C, 28°C to 50°C) Weight: SM382V: 3.31 lbs (1.5 kg); SM482V: 3.97 lbs (1.8 kg) Water Resistance: Tested to IP55 **US Patent:** www.fieldpiece.com/patents Refrigerants: New refrigerants are continually being added so be sure to visit www.fieldpiece.com for the latest firmware. R11 R115 R290 R407A R414A R422A R438A R458A R600 R12 R116 R401A R407C R414B R422B R448A R500 R600A R13 R123 R401B R407F R416A R422C R449A R501 R601 R22 R124 R402A R407H R417A R422D R450A R502 R601A R23 R125 R402B R408A R417C R424A R452A R503 R744* R32 R427A R452B R507A R1233ZD R134A R403B R409A R420A R113 R236FA R404A R410A R421A R428A R453A R508B R1234YF R114 R245FA R406A R413A R421B R434A R454B R513A R12347F

Temperature

Sensor Type: Type K thermocouple

(nickel chromium/nickel aluminum)

Jack Type: (3) Type K thermocouple

Range: -50°F to 257°F (-46°C to 125°C), *limited by the thermocouple* specification. *Display range is -95°F to 999.9°F (-70°C to 537.0°C)*.

Resolution: 0.1°F (0.1°C)

Accuracy: Shown accuracies are after field calibration. $\pm (1.0^{\circ}\text{F}) -95^{\circ}\text{F}$ to $200^{\circ}\text{F}, \pm (2.0^{\circ}\text{F}) 200^{\circ}\text{F}$ to $999.9^{\circ}\text{F};$ $\pm (0.5^{\circ}\text{C}) -70^{\circ}\text{C}$ to $93^{\circ}\text{C}, \pm (1.0^{\circ}\text{C}) 93^{\circ}\text{C}$ to 537.0°C

Pressure

Sensor Type: Absolute pressure sensors

Port Type: SM382V: (3) 1/4" standard SAE male flare fittings, or SM482V: (1) 3/8" and (3) 1/4" standard SAE male flare fittings

Pressure Range and Units: 870 Psig (English), 60.00 Bar (Metric), 6.000 MPa (Metric), and 6000 kPa (Metric)

Negative Pressure Range and Units:

29 inHg (English), 74 cmHg (Metric), 0.98 Bar (Metric)

Resolution: 0.1 Psig; 0.01 Bar; 0.001 MPa; 1 kPa; 0.1 inHg; 1 cmHg

Negative Pressure Accuracy:

29 inHg to 0 inHg: \pm 0.2 inHg;

74 cmHg to 0 cmHg: ± 1 cmHg

0.98 Bar to 0 Bar; ± 0.01 Bar

Pressure Accuracy:

0 Psig to 200 Psig: ± 1 Psig;

200 Psig to 870 Psig: \pm (0.3% of reading + 1 Psig);

0 Bar to 13.78 Bar ± 0.07 Bar;

13.78 Bar to 60.00 Bar: \pm (0.3% of reading + 0.07 Bar);

0 MPa to 1.378 MPa: ± 0.007 MPa;

1.378 MPa to 6.000 MPa: $\pm (0.3\% \text{ of reading} + 0.007 \text{ MPa});$

0 kPa to 1378 kPa: \pm 7 kPa;

1378 kPa to 6000 kPa: \pm (0.3% of reading + 7 kPa)

Deep Vacuum

Sensor Type: Thermistor

Port Type: SM382V: (3) 1/4" standard SAE male flare fittings, or SM482V: (1) 3/8" and (3) 1/4" standard SAE male flare fittings Pance and Unit:

Range and Units:

50 to 9999 microns of mercury (English), 6.7 to 1330 Pascals (Metric), 0.067 to 13.30 mBar (Metric),

50 to 9999 mTorr (Metric),

0.050 to 9.999 Torr (Metric, equivalent to mmHg)

Best Resolution:

1 micron of mercury (below 2000 microns), 0.1 Pascal (below 250 Pascals), 0.001 m Par (below 250 Pascals),

0.001 mBar (below 2.500 mBar),

1 mTorr (below 2000 mTorr), 0.001 Torr (below 2.000 Torr)

0.001 for (below 2.000 curses @ 25°C (77°E).

Accuracy @ 25°C (77°F):

 \pm (5% of reading + 5 microns of mercury), 50 to 2000 microns \pm (5% of reading + 1.0 Pascal), 6.7 to 266.0 Pascal \pm (5% of reading + 0.010 mBar), 0.067 to 2.660 mBar \pm (5% of reading + 5 mTorr), 50 to 2000 mTorr \pm (5% of reading + 0.005 Torr), 0.067 to 2.000 Torr

Wireless Compatibility

Latest compatibility at www.fieldpiece.com

Job Link System Minimum Device Requirement:


BLE 4.0 devices running iOS 7.1 or Android™ Kitkat 4.4

Wireless Measurement Source Assignments:

Suction line temperature: Fieldpiece model JL3LC/PC (set to blue) Liquid line temperature: Fieldpiece model JL3LC/PC (set to red) Supply air psychrometer: Fieldpiece model JL3RH (set to blue) Return air psychrometer: Fieldpiece model JL3RH (set to red) Outdoor air psychrometer: Fieldpiece model JL3RH (set to red or blue) Refrigerant weight scale: Fieldpiece models SRS3 or SR47

54 Vacuum: Fieldpiece model MG44

Manifold Diagrams

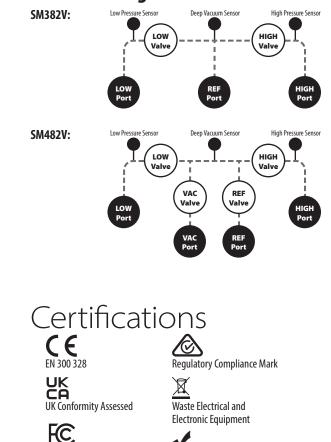

IC: Industry Canada

Restriction of Hazardous Substances Compliant

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

. Reorient or relocate the receiving antenna.

. Increase the separation between the equipment and receiver.

. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

. Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

FCC Radiation Exposure Statement: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0.5 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 0.5 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1) L'appareil ne doit pas produire de brouillage;

 L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC Radiation Exposure Statement: This equipment complies with RSS-102 radiation exposure limit set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0.5 cm between the radiator and your body.

Cet équipement est conforme aux CNR-102 d'Industrie Canada. Cet équipement doit êtreinstallé et utilisé avec une distance minimale de 0.5 centimètres entre leradiateur et votrecorps. Cet émetteur ne doit pas être co-localisées ou opérant en conjonction avec autreantenne ou émetteur. Les antennes utilisées pour cet émetteur doivent être installés etfournir une distance de séparation d'au moins 0.5 centimètre de toute personne et doit pas être co-située ni fonctionner en conjonction avec une autre antenne ou émetteur.

Limited Warranty

This device is warranted against defects in material or workmanship for one year from date of purchase from an authorized Fieldpiece dealer. Fieldpiece will replace or repair the defective unit, at its discretion, subject to verification of the defect.

This warranty does not apply to defects resulting from abuse, neglect, accident, unauthorized repair, alteration, or unreasonable use of the machine.

Any implied warranties arising from the sale of a Fieldpiece product, including but not limited to implied warranties of merchantability and fitness for a particular purpose, are limited to the above. Fieldpiece shall not be liable for loss of use of the machine or other incidental or consequential damages, expenses, or economic loss, or for any claim of such damage, expenses, or economic loss.

Local and national laws vary. The above limitations or exclusions may not apply to you.

Obtaining Service

Visit **www.fieldpiece.com/rma** for the latest information on how to obtain service.

For customers outside of the U.S., warranty for products should be handled through your local distributor.

For Europe / U.K. customers, visit www.fieldpiece-europe.com/ store-locator.

SM382V SM482V



Job Link[®] System App Link your Tools. Link your Jobs.

The Job Link[®] System works with all of our wireless tools—from clamps to probes to digital manifolds, and integrates all of their functionality seamlessly.

Download the app to get started!



Document: Opman SM382V - SM482V © Fieldpiece Instruments, Inc 2025; v14