
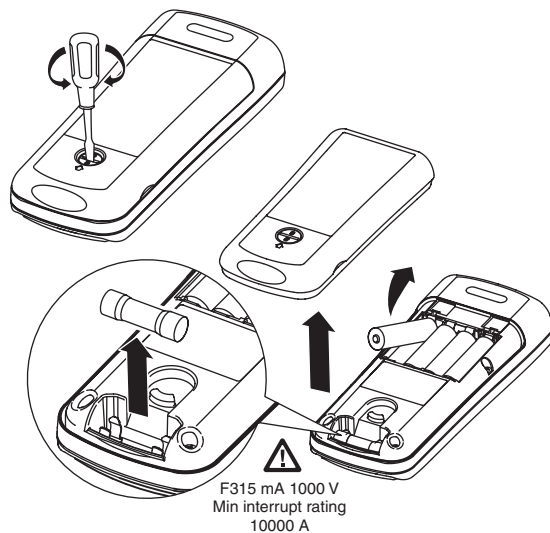



1507/1503 Insulation Tester Quick Reference Guide

 See Users Manual for "Safety Information" and complete operating information.


Fuse Test

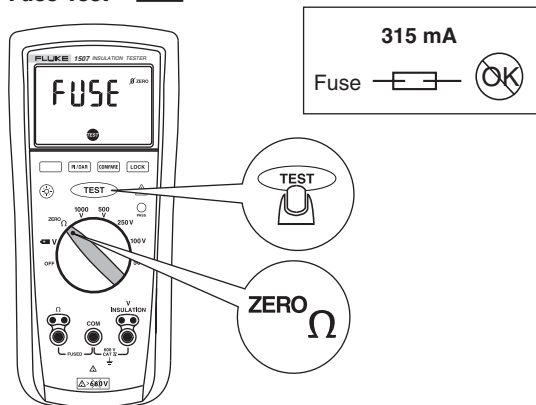


Battery Test

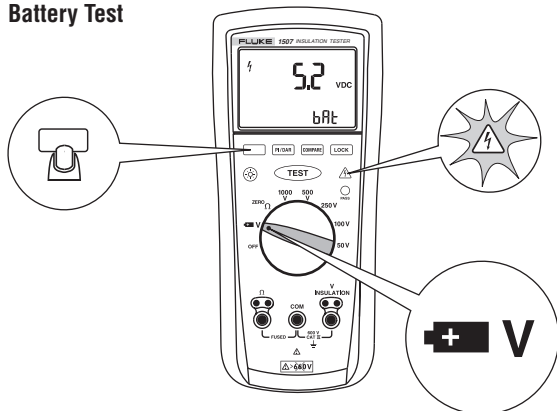


Voltage $\tilde{V}$ $\bar{V}$

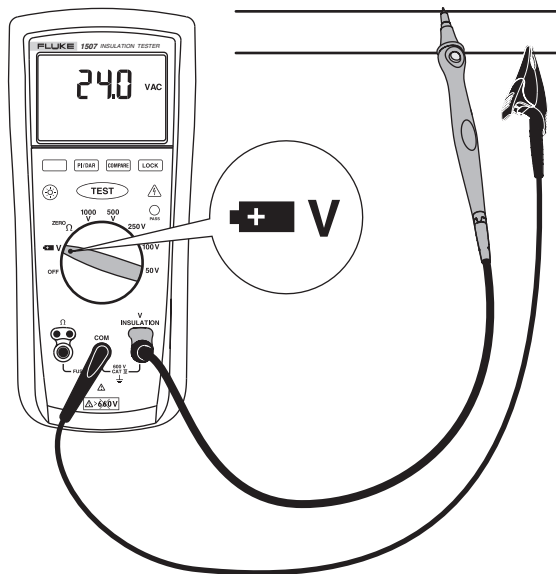


Measuring Insulation Resistance

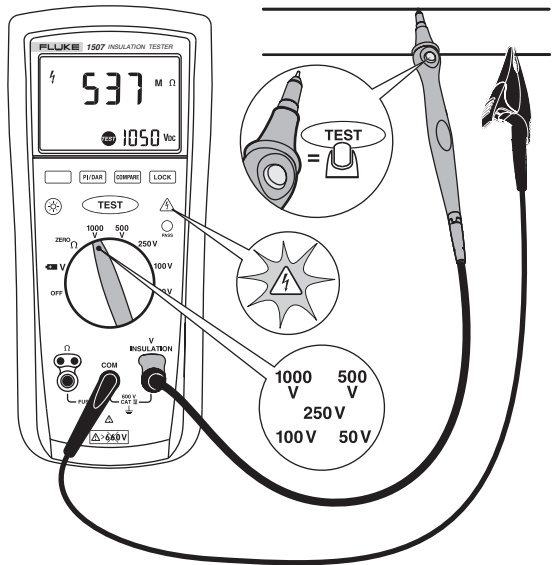

Compare Function (1507)

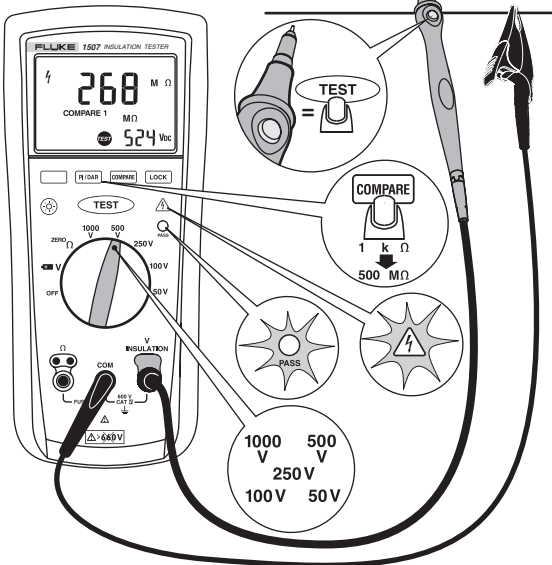

Polarization Index and Dielectric Absorbntion Ratio (1507)

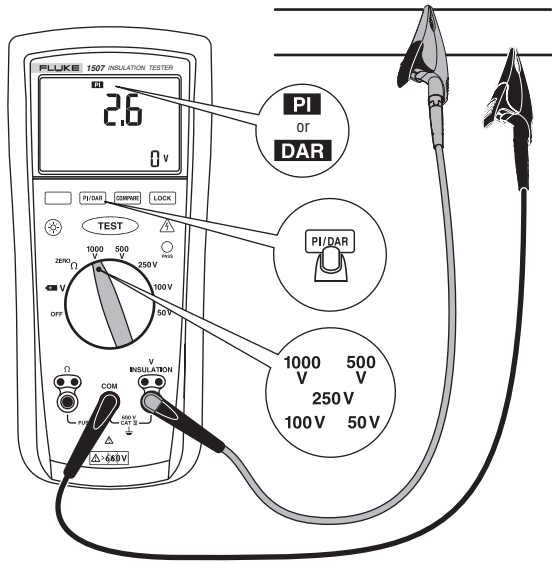

Measuring Earth-Bond Resistance

