



Quick Start for the HOBObot MX CO₂ Logger (MX1102A)



IMPORTANT: The CO₂ sensor within this logger can experience measurement drift during storage and shipment. Start the logger as described below and perform a manual calibration as described in Step 4. Note that improper manual calibration can cause incorrect sensor readings.

- 1 Install the batteries in the logger. Use a Phillips-head screwdriver to open the battery cover on the back of the logger and insert four AA batteries observing polarity. Screw the cover back in place.

- 2   Download HOBObot[®] to your phone or tablet and/or install HOBObotware[®] on your computer.

- 3 Configure the logger with HOBObotmobile or HOBObotware. To configure it with HOBObotmobile:

- a. Open HOBObotmobile. Enable Bluetooth[®] in your device settings if prompted.
- b. Tap the HOBObots icon at the bottom of the screen. Tap the logger in the In Range list to connect to it. If the logger does not appear in the list, make sure it is within range of your device.
- c. Once connected, tap Configure to set up and start the logger.
- d. Choose your logger settings in the Configure screen. Tap the CO₂ sensor and select manual and auto calibration (both are selected by default). Manual calibration immediately after logging begins is recommended for best accuracy. Enter the altitude if the logger will be deployed above or below 305 meters (1,000 feet). Tap Done.

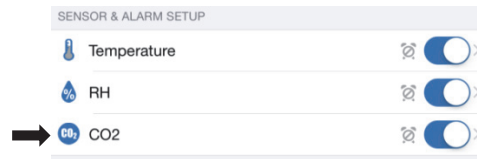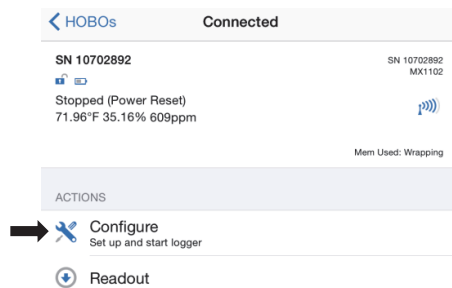

- e. Tap Start in the upper right corner of the Configure screen.



To configure the logger with HOBObotware:

- a. Connect the logger to the computer with a USB cable.
- b. From the Device menu in HOBObotware, select Launch.
- c. Choose your logger settings. Click the CO₂ Settings button and select manual and auto calibration (both are selected by default). Manual calibration immediately after logging begins is recommended for best accuracy. Enter the altitude if the logger will be deployed above or below 305 meters (1,000 feet).
- d. Click the Start button when finished. Note that the Start button text changes based on your Start Logging selection.

- 4 It is recommended that manual calibration be performed immediately after logging begins to ensure the best CO₂ accuracy. **Important:** If you do not follow these instructions as described, the sensor readings will be incorrect and you will need to manually calibrate the logger again.

- a. Take the logger outside in fresh air. Weather conditions should be dry or the calibration value may be incorrect.
- b. Press and hold the Calibrate button on the logger for 5 seconds until it beeps. The logger will then calibrate for 5 minutes; leave it outside during the process.
- c. The CO₂ and Calibrate symbols on the LCD will flash while manual calibration is underway. Return the logger inside once the calibration is complete. See the product manual for more details on calibration.

Note: If the logger was configured with both manual and auto calibration selected, auto calibration will occur every eight days after a manual calibration has occurred. Auto calibration requires that the building where the logger is deployed to be empty at least once during the eight-day period. Alternatively, you can perform a manual calibration as described above at any time. See the product manual for more details on calibration.

- 5 Deploy the logger using the included mounting materials.

- 6 Read out the logger. With HOBObotmobile, connect to your device and then tap Readout. Tap the Data Files icon to view the data after readout. With HOBObotware, select Readout from the Device menu. Save the data when prompted and plot as desired.



For detailed specifications and information about this logger, refer to the complete product manual. Go to www.onsetcomp.com/manuals/22504-mx1102a-manual or scan the code at left.