

# Function Generators In the Lab

## Waveform Function Keys



**Waveform:** Selects waveforms

**Parameter:** Configures waveform-specific parameters

**Units:** Specifies unit and parameter preferences

**System:** Configures general settings

## Connectors



**External Trigger / Gate / FSK / Burst Connector:** Accepts manual trigger / hardware trigger to control triggering

**Sync Out / Trigger Connector:** Provides sync output or "trigger out" signal

## Built-In Quick Help

Press and hold in any key for instant help for the selected function/feature.

## Quick Setup Tips

- 1 Connect the function generator output connector to a device under test (DUT).
- 2 Select the waveform type by pressing the Waveform key.
- 3 Configure waveform parameters by using the numeric keypad, knob, and cursor arrows.
- 4 Turn on the modulation mode and adjust the AM Depth and AM Frequency.
- 5 Ensure that the polarity is set to Normal in the Channel Setup.
- 6 Turn on the selected channel by toggling the [On / Off] button.

## Operation Function Keys



**Modulate:** Configures modulation parameters.

**Sweep:** Configures frequency sweep parameters.

**Burst:** Configure and activate burst mode.

**Trigger:** Configure trigger settings and sync output signal.




## Numeric Keypad, Knob, Cursor Arrows

Set and configure desired parameters or settings.

## Channel Setup, [On/Off] Button

**Setup:** Configure channel-related parameters.

**[On/Off] button:** Turn the channel on and off.

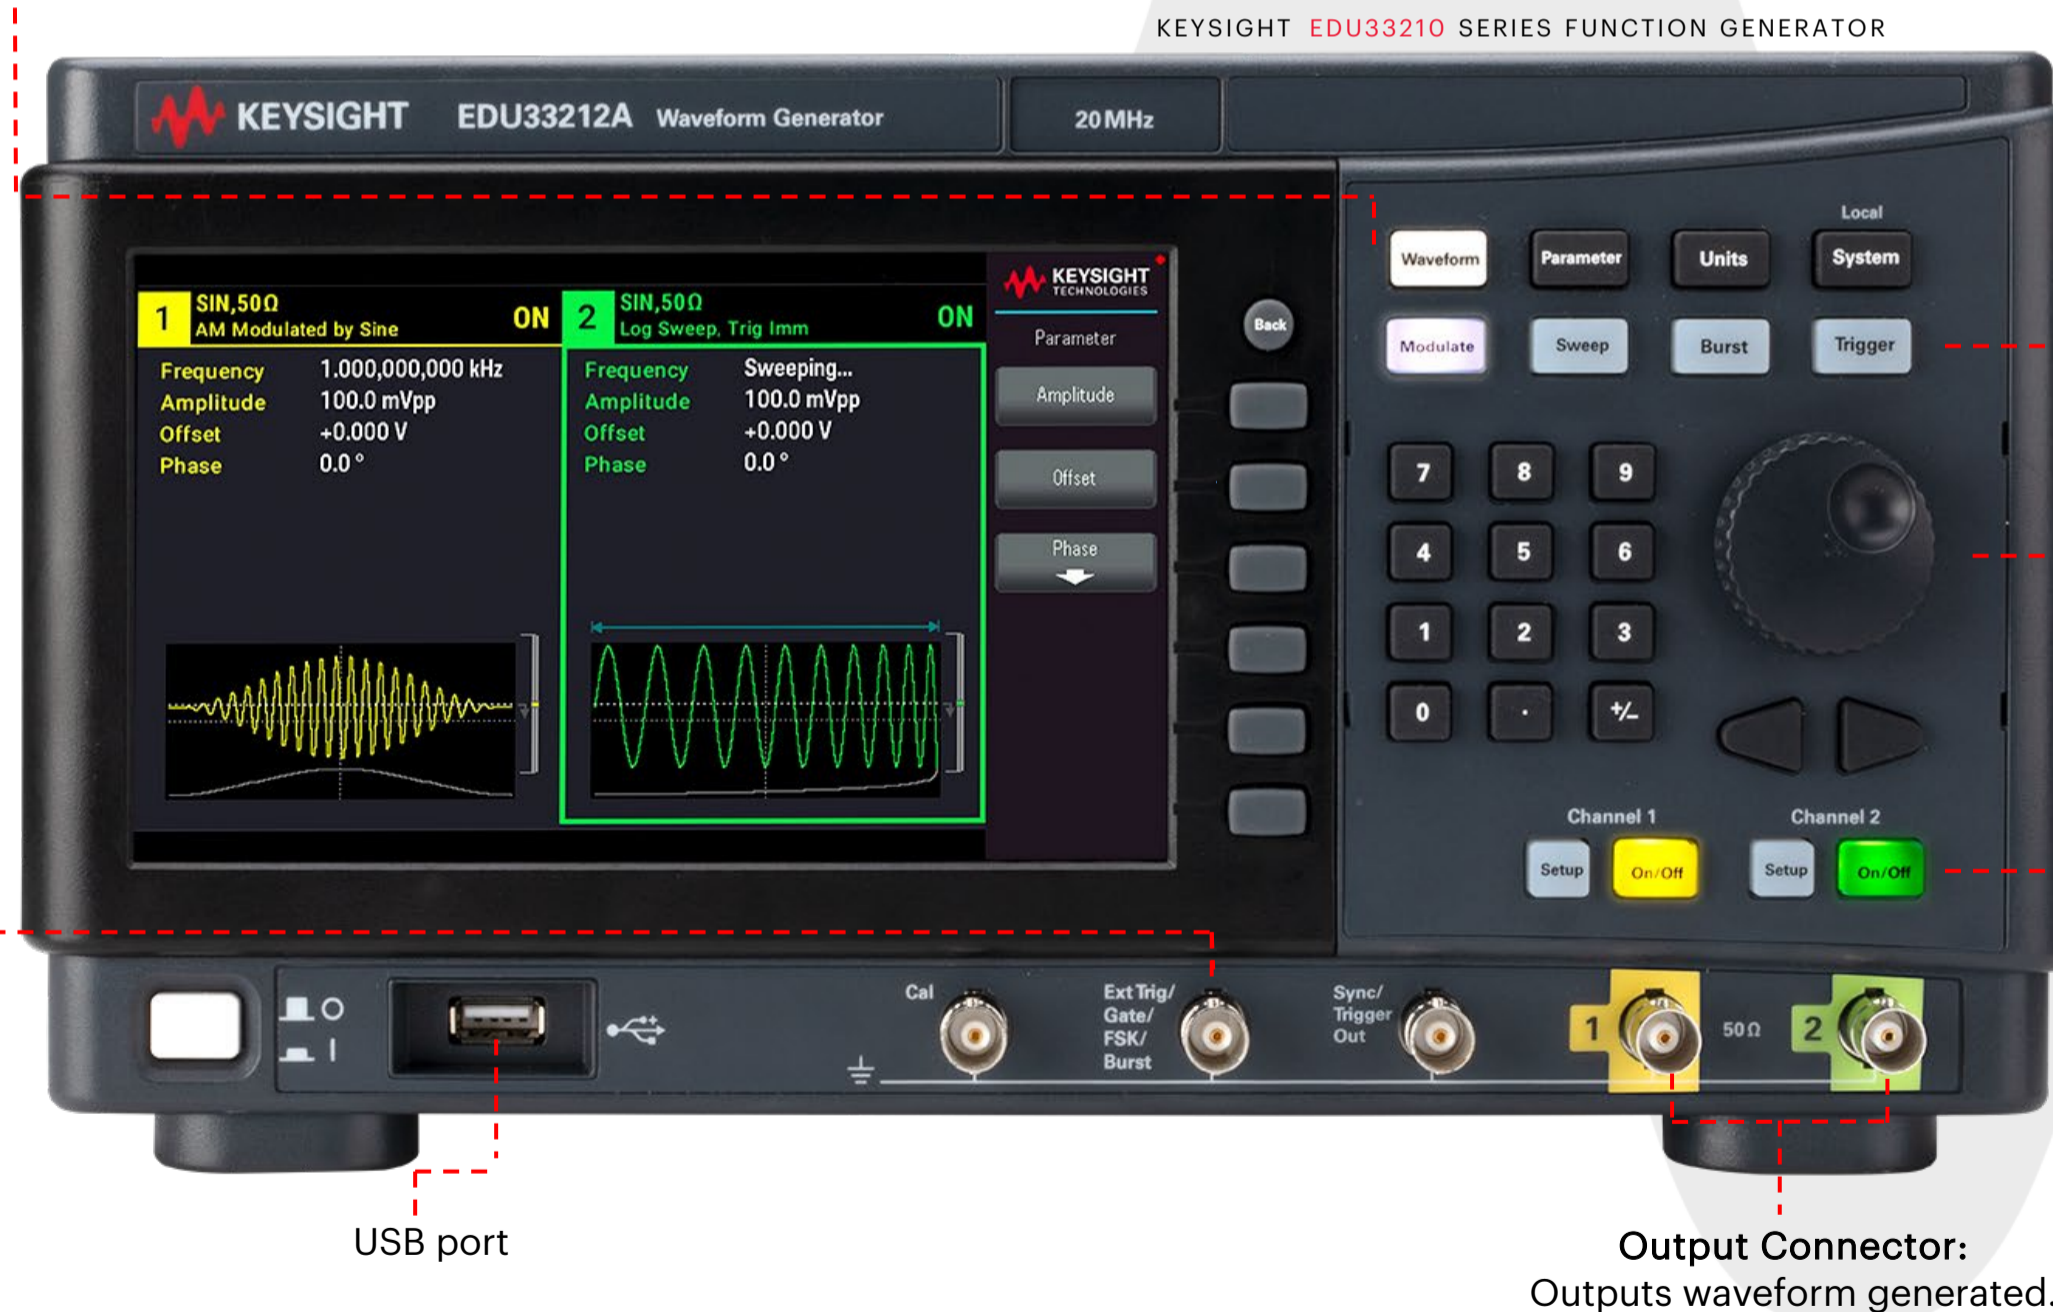

For more information, read the user manual at: <https://www.keysight.com/us/en/assets/9921-01386/user-manuals>

