

# Sturtevant Richmont

The Tools You Trust

555 Kimberly Drive, Carol Stream, IL 60188 US Only Toll Free: 800/877-1347 Worldwide: +1 847/455-8677

Fax: 847/455-0347

CustomerService@srtorque.com www.srtorque.com

# Ratchet Renewal Kit - Ratchet Replacement Instructions

For use with all SR ratcheting torque wrenches. See our Ratchet Replacement Video on YouTube

## **Needed Items**

- Correct size Ratchet Renewal Kit.
- 2. 1/8" or 3mm flat tip screwdriver.
- Snap ring pliers inside. 3.
- 4. High pressure grease w/molybdenum disulfide.

Check package for correct size ratchet.



Step 6

Step 5

Remove spring.

Clean head. Remove dirt and grease. Do not forget to clean inside spring recess.



Step 7



Step 2

Remove snap ring.



Open Ratchet Renewal Kit.



Step 3

Remove square drive. Lift straight out.



Step 8

Use high pressure molybdenum disulfide grease to lubricate parts.



Step 9

Lubricate inside of head very lighly.



## Step 4

Remove slide pin and ball. Use caution - ball is under pressure from spring beneath it.



Step 10

Insert spring in spring recess.



Step 11 Insert ball. Ball sits on top of spring.



Step 16 Lube one side of washer lightly.



Step 12 Lightly lube bottom of slide pin.



Step 17 Insert washer with lubricated side towards ratchet.



Step 13

Insert slide pin. Slide pin goes over top of ball and compresses spring.



Step 18 Insert snap ring. Assembly is complete when snap ring has been inserted.



Use flat tip screwdriver to assist in guiding slide pin and compressing spring.



 
1/4" Ratchet Renewal Kit (816998) Components

	Steel			Retaining	Reversing
<u>Spindle</u>	<u>Ball</u>	Spring	Washer	Ring	Pin
811350	816888	816834	816829	816832	865299




3/8" Ratchet Renewal Kit (816958) Components

Steel				Retaining	Reversing	
Spindle	<u>Ball</u>	Spring	Washer	Ring	<u>Pin</u>	
813378	816908	816909	816830	816748	812221	



1/2" w/3/8" Body Ratchet Renewal Kit (816959) Components

	Steel		`	Retaining	Reversing
<u>Spindle</u>	<u>Ball</u>	Spring	Washer	Ring	<u>Pin</u>
313380	816908	816909	816830	816748	812221

 

1/2" Ratchet Renewal Kit (816956) Components

Steel				Retaining	Reversing		
<b>Spindle</b>	<u>Ball</u>	Spring	Washer	Ring	<u>Pin</u>		
813467	816890	816836	816831	816837	813599		

Step 14 Lube square drive ratchet teeth very lightly.



3/4" w/1/2" Body Ratchet Renewal Kit (816957) Components

Steel				Retaining	Reversing
<u>Spindle</u>	<u>Ball</u>	Spring	Washer	Ring	<u>Pin</u>
813468	816890	816836	816831	816837	813599

Step 15 Insert square drive ratchet in head.



3/4" Ratchet Renewal Kit (816999) Components

	Steel	Retaining	Reversing		
<u>Spindle</u>	<u>Ball</u>	Spring	Washer	Ring	<u>Pin</u>
813520	816894	816895	816896	816749	865301

Some components may be ordeered individually, others are offeered in convenient multi-packs of five or 10 pieces. Contact Customer Service if you need to order individual part numbers.