



Call Us 1.877.571.7901

IDEAL INDUSTRIES, INC.

## USER MANUAL IDEAL INTELLIGENT OPTICAL LINK MAPPER

The screenshot displays the iOLM software interface. At the top, there are tabs for Source, iOLM, Link View (selected), Elements, and Measurement Info. A green checkmark and the word "Pass" are visible in the top right corner. The main area shows a fiber link map with a total length of 1.4905 km. The map includes several components: a 1:2 splitter at 0.5767 km, a 1:2 coupler at 0.5767 km, and several other components at 0.5968 km, 0.6128 km, and 0.6 km. The length of each component is listed below the map: 0.5738 km, 0.0201 km, 0.0160 km, and 0.0113 km. A table below the map shows the link loss and link ORL for 1310 nm, 1490 nm, and 1550 nm. The status bar at the bottom shows "PON 1 Splitters 1x32" and "Filename: 1310 1490 1550 Close events.iolm".

iOLM		1310 nm	1490 nm	1550 nm
Link loss:		3.470 dB	2.845 dB	2.749 dB
Link ORL:		19.62 dB	20.05 dB	20.73 dB

Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
1:2	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767*	---	---	---	---	---	---

---

Copyright © 2011–2016 EXFO Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form, be it electronically, mechanically, or by any other means such as photocopying, recording or otherwise, without the prior written permission of EXFO Inc. (EXFO).

Information provided by EXFO is believed to be accurate and reliable. However, no responsibility is assumed by EXFO for its use nor for any infringements of patents or other rights of third parties that may result from its use. No license is granted by implication or otherwise under any patent rights of EXFO.

EXFO's Commerce And Government Entities (CAGE) code under the North Atlantic Treaty Organization (NATO) is 0L8C3.

The information contained in this publication is subject to change without notice.

### ***Trademarks***

EXFO's trademarks have been identified as such. However, the presence or absence of such identification does not affect the legal status of any trademark.

### ***Units of Measurement***

Units of measurement in this publication conform to SI standards and practices.

### ***Patents***

Feature(s) of this product is/are protected by one or more of US patent 6,612,750; and US patent 8,576,389 and equivalent patents pending and/or granted in other countries.

Version number: 15.0.0.1

# Contents

Certification Information .....	v
<b>1 Introducing the intelligent Optical Link Mapper .....</b>	<b>1</b>
Principles of Operation .....	2
Exporting Data to Other Formats .....	2
Performing Multimode Measurements .....	3
Launch, Receive, and Loop Fibers .....	4
Software Options .....	7
Technical Specifications .....	7
Conventions .....	8
<b>2 Safety Information .....</b>	<b>9</b>
General Safety Information .....	9
Laser Safety Information for MAX-700B Series .....	10
Electrical Safety Information .....	11
<b>3 Getting Started with Your iOLM .....</b>	<b>13</b>
Main Window .....	13
Status Bar .....	14
<b>4 Preparing your iOLM for a Test .....</b>	<b>17</b>
Cleaning and Connecting Optical Fibers .....	17
Installing theIDEAL Universal Interface (UI) .....	19
<b>5 Setting User Preferences .....</b>	<b>21</b>
Defining General Settings .....	21
Defining Measurement Identification .....	24
Customizing the File Name .....	26
Naming iOLM Files Automatically .....	31
Customizing the iOLM Report .....	35
Configuring your iOLM .....	37
<b>6 Managing Test Configurations .....</b>	<b>47</b>
Selecting a Test Configuration .....	47
Impacts of Test Configurations .....	50
Creating a Test Configuration .....	51
Modifying a Test Configuration .....	53
Importing or Exporting a Test Configuration .....	80

## Contents

---

<b>7 Starting an Acquisition .....</b>	<b>89</b>
Performing a Standard or Loopback Acquisition .....	89
Performing a Bidirectional Loopback Acquisition .....	91
Stopping an Acquisition .....	95
<b>8 Understanding Diagnostics .....</b>	<b>97</b>
<b>9 Using the OTDR as a Source .....</b>	<b>99</b>
<b>10 Starting the OTDR Application .....</b>	<b>103</b>
<b>11 Managing Results .....</b>	<b>105</b>
Link View .....	105
Global Pass/Fail Status .....	116
Viewing Element and Section Details .....	118
Managing Elements and Analyzing Links (Optional, iOLM EXpert and Loopback Modes) ...	121
Measurement Information .....	130
<b>12 Managing Files .....</b>	<b>133</b>
Opening iOLM Files .....	133
Saving iOLM Files .....	135
Exporting OTDR Bellcore Files .....	138
Generating a Report .....	141
<b>13 Maintenance .....</b>	<b>145</b>
Cleaning UI Connectors .....	145
Recalibrating the Unit .....	148
Recycling and Disposal (Applies to European Union Only) .....	149
<b>14 Troubleshooting .....</b>	<b>151</b>
Viewing Online Documentation .....	151
Customer Support and Technical Assistance .....	151
Viewing Information About the Product .....	154
Transportation .....	154
<b>15 Warranty .....</b>	<b>155</b>
General Information .....	155
Liability .....	155
Exclusions .....	156
Service and Repairs .....	157
IDEAL Service Centers Worldwide .....	158
<b>Index .....</b>	<b>161</b>

## Certification Information

### North America Regulatory Statement

This unit was certified by an agency approved in both Canada and the United States of America. It has been evaluated according to applicable North American approved standards for product safety for use in Canada and the United States.

Electronic test and measurement equipment is exempt from FCC part 15, subpart B compliance in the United States of America and from ICES-003 compliance in Canada. However, IDEAL makes reasonable efforts to ensure compliance to the applicable standards.

The limits set by these standards are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the user guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

### European Community Declaration of Conformity

Warning: This is a class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

An electronic version of the declaration of conformity for your product is available on our website at [www.idealnetworks.net](http://www.idealnetworks.net). Refer to the product's page on the Web site for details.

## Certification Information

---


# 1 Introducing the intelligent Optical Link Mapper

The intelligent Optical Link Mapper (iOLM) is an optimized application for access/FTTx network characterization. Depending on the iOLM module configuration, the application can be used before and after network activation.

**Note:** Depending on the model and options you have purchased, some features may not be available.

**Note:** In this documentation, the words “tap” and “double-tap” (related to the use of a touchscreen) replace the words “click” and “double-click”.

## MAX-700B Series

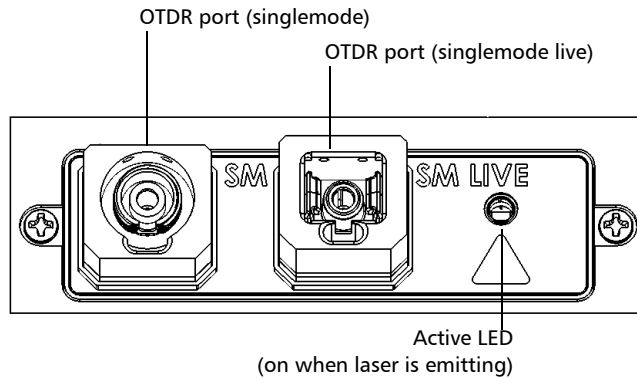

### Principles of Operation

The iOLM application uses the hardware of an IDEAL OTDR to perform acquisitions and characterize the various elements detected on the probed link. However, while a regular OTDR takes one averaged trace at a time, with one given set of test parameters, the iOLM takes a series of measurements and integrates them into a simple and intuitive Link View.

The test parameters for each sub-measurement are determined by smart algorithms during the measurement. Just as each link is different, each iOLM measurement is different, with its own set of test parameters according to the link length, loss, and ORL. Test time varies depending on the link tested, but is mostly influenced by total link loss. The application uses information from all sub-measurements to enhance the characterization of each element found on the link, yielding accurate and complete results. Depending on the module configuration, you can perform a single or multiple-wavelength acquisition. In the latter case, results will be provided for each wavelength, and a global pass/fail status for each element is displayed.

The application summarizes the results in a linear representation of the link, displaying each element with its associated position, loss and reflectance, as well as the element type.

### Exporting Data to Other Formats

The iOLM application can generate report in various formats and allow batch post-processing of the measurement. The test configuration files can be created from FastReporter and imported on each test unit.



### Performing Multimode Measurements

If your module supports multimode measurements, it can test both 62.5  $\mu\text{m}$  and 50  $\mu\text{m}$  fibers. The internal multimode fiber for an IDEAL OTDR is 62.5  $\mu\text{m}$ .

- When a 62.5  $\mu\text{m}$  fiber is connected, the loss at the connector can be correctly characterized just like in the case of a singlemode fiber. It is then simple to evaluate a pass/fail criterion in this case.
- When a 50  $\mu\text{m}$  fiber is connected, the loss at the connector depends on many factors:
  - the connector loss itself
  - the 62.5  $\mu\text{m}$  to 50  $\mu\text{m}$  core fiber difference
  - the RBS difference between 50  $\mu\text{m}$  and 62.5  $\mu\text{m}$  fibers

The measured loss between the OTDR connector and the fiber is typically around 3.3 dB.

With 50  $\mu\text{m}$  fibers, since the connector loss measurement at the OTDR is imprecise because of major other factors, the iOLM excludes the first connector from the link rather than providing inaccurate information.

With a launch fiber, the connector at link start (connector A) is “On-Link”.

When characterizing a multimode link or a singlemode fiber, launch fibers are recommended. In multimode, the launch and receive fibers must have the same core size as the link under test. Using an unfitting launch or receive fiber would lead to inaccurate results.

The use of an external EF-compliant device such as the SPSB-EF-C30 will ensure a fast and easy way to get accurate loss measurements. For more information about encircled flux compliance, refer to the encircled flux test solution specification sheet.

### Launch, Receive, and Loop Fibers

Unlike a traditional OTDR, the iOLM requires only a short launch fiber (>50 m) to benefit from all the advantages of this referencing method, regardless of the link length and loss. A launch fiber longer than 200 m is not recommended when testing PON links. Because the output port of an OTDR may degrade its loss and ORL performances after multiple connections, the use of a launch cable is always recommended.

The first element of the tested link is tagged with the letter (A) into the link view. A launch cable allows you to properly characterize the first connector of the fiber link under test (A) and exclude the OTDR connector's wear from the link evaluation. A reasonable amount of degradation of the OTDR connector is acceptable when using an APC interface; the ORL remains low due to the angle polish, preventing poor near-end resolution. By using a launch fiber, the OTDR connector loss is excluded from the measurement. The iOLM evaluates the OTDR connector loss each time a measurement is performed to inform you about the condition of the connector. It is important to understand that excessive loss at this connector will eventually degrade the measurement capabilities of the instrument. In addition, using a launch cable will help protect your OTDR connector by limiting the number of connections performed directly on that connector. It is easier to repair or replace a launch cable than to replace the OTDR connector.

The last element of the tested link is tagged with the letter (B) into the link view. A receive fiber cable can be used at the end of the link opposite the test module in order to characterize the last connector of the link (B) and increase the precision of the total insertion loss result by comparing differential level of two known fibers (to avoid errors due to different backscatter coefficients of the fiber used in the link). If no receive cable is used, the iOLM application will be able to measure the position and ORL of this connector in unmatched condition, but not its loss. No pass/fail status will be displayed for that connector. The required length of the receive fiber will depend on the loss of the link under test. A higher loss requires a longer pulse to reach the receive fiber level. Unlike the launch fiber, the

receive fiber has the same limitations than that of a traditional OTDR. Test of a 1 km fiber span with less than 2 dB of loss will require only 100 m of receive fiber. Testing a 23 dB PON link will require a receive fiber of 500 m to 2 km, depending on the fiber length after each splitter.

The iOLM application allows you to manually set the lengths of your launch, receive, and loop cables. After the values are set, the application will perform a calibration during which it does a fast measurement and evaluates the length of the fiber. For this reason, you must connect only the cable under test to the module at this point.

If link elements are found on the fiber under calibration or if the OTDR connector is defective, the calibration will fail and a warning is displayed to explain the reason for the failure. A short patchcord (<5 m) is accepted between the instrument and the fiber under calibration and will be included in the calibrated length. If the calibration is successful, the launch or receive fiber length will be updated in the **Test Parameters** tab.


When performing a measurement, the iOLM will try to match the defined launch and receive fibers with elements found on the link to set the A and B connector positions. If no events are found at specified distances because of a “perfect” connection between link and launch or receive fibers, the iOLM will insert an element at a specified position (with zero loss and ORL).

## Introducing the intelligent Optical Link Mapper

### Launch, Receive, and Loop Fibers

The loopback measurement modes are designed to test duplex cables and save test time by measuring two fibers at a time.

In the loopback measurement modes, one end of the first fiber is connected to the iOLM through a launch fiber, while the other end is connected to the second fiber using a fiber called a loop. Usually, a receive fiber is used on the proximal end of the second fiber. The loop fiber can be viewed as a receive fiber for the first fiber (the one the iOLM is connected to) and a launch fiber for the second fiber.

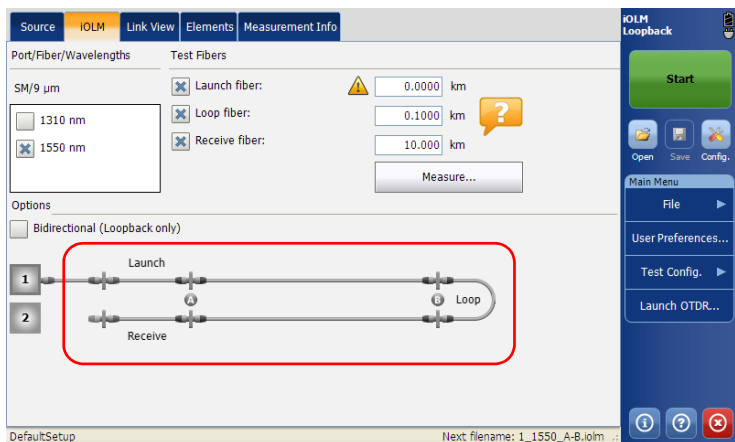

The automatic split of the initial measurement can only be performed if the length of the launch, loop and receive fibers are properly specified in the application.

See *Configuring your iOLM* on page 37 for more details.

### Software Options

Software options are offered with your unit.

- The iOLM software option gives you access to the iOLM application.
- The iCERT software option gives you access to certification configuration files; these will give you a pass/fail status based on industry standards. Since the thresholds cannot be edited, you are ensured of reliable pass/fail results each time.
- The iEX (iOLM EXpert) software option activates edition of links and custom elements, 2:N splitters, and link reanalysis.
- The Loopback (LB) software option allows you to perform both unidirectional and bidirectional iOLM loopback measurements. Both unidirectional and bidirectional iOLM loopback measurements loop two fibers together at one end to test both fibers at once. The unidirectional loopback measurements tests two fibers at once and evaluates both fibers separately. The bidirectional loopback measurements provides an auto-pairing function of two measurements (A -> B, B-> A). When both measurements have been correctly differentiated from one another, the application generates the bidirectional measurement for two fibers.
- The PON Last Mile Certification Optimode (iOPT-LM) software option enables you to perform a fiber characterization of the fiber between the ONT and the splitter (access fiber). The option detects the presence of splitters to ensure the fiber is connected to a splitter via a distribution fiber.
- The QUAD software option activates the singlemode wavelengths on a unit.

### Technical Specifications

To obtain this product's technical specifications, visit the IDEAL Web site at [www.idealnetworks.net](http://www.idealnetworks.net).

### Conventions

Before using the product described in this guide, you should understand the following conventions:



#### **WARNING**

Indicates a potentially hazardous situation which, if not avoided, could result in *death or serious injury*. Do not proceed unless you understand and meet the required conditions.



#### **CAUTION**

Indicates a potentially hazardous situation which, if not avoided, may result in *minor or moderate injury*. Do not proceed unless you understand and meet the required conditions.



#### **CAUTION**

Indicates a potentially hazardous situation which, if not avoided, may result in *component damage*. Do not proceed unless you understand and meet the required conditions.



#### **IMPORTANT**

Refers to information about this product you should not overlook.

## 2 **Safety Information**

### General Safety Information



#### **WARNING**

Do not install or terminate fibers while a light source is active. Never look directly into a live fiber and ensure that your eyes are protected at all times.




#### **WARNING**

The use of controls, adjustments and procedures, namely for operation and maintenance, other than those specified herein may result in hazardous radiation exposure or impair the protection provided by this unit.



#### **IMPORTANT**

When you see the following symbol on your unit , make sure that you refer to the instructions provided in your user documentation. Ensure that you understand and meet the required conditions before using your product.



#### **IMPORTANT**

Other safety instructions relevant for your product are located throughout this documentation, depending on the action to perform. Make sure to read them carefully when they apply to your situation.

## Safety Information

Laser Safety Information for MAX-700B Series

# Laser Safety Information for MAX-700B Series

Your instrument is a Class 1M laser product in compliance with standards IEC 60825-1: 2007 and 21 CFR 1040.10, except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007. Laser radiation may be encountered at the output port.



## WARNING

Viewing the laser output with certain optical instruments (for example, eye loupes, magnifiers, and microscopes) within a distance of 100 mm may pose an eye hazard.

The following label(s) indicate that the product contains a Class 1M source:

Laser information of the test instrument

IEC 60825-1:2007      21 CFR 1040.10

INVISIBLE LASER RADIATION  
DO NOT VIEW DIRECTLY  
WITH OPTICAL INSTRUMENTS  
CLASS 1M LASER PRODUCT

λ: 1300-1400 nm, PW ≤ 20 μsec, Ppk ≤ 260 mW  
λ: 1400-1700 nm, PW ≤ 20 μsec, Ppk ≤ 600 mW

LASER RADIATION  
DO NOT STARE INTO BEAM  
CLASS 2 LASER PRODUCT

λ: 650 ± 10 nm  
P<sub>out</sub> maximum < 2 mW

Complies with 21 CFR  
1040.10 except for  
deviations pursuant to  
Laser Notice No.50,  
dated June 24, 2007.

Laser information of the VFL. Always refer to  
the user guide of the MaxTester Series for  
the exact information.

**Note:** The label is affixed to the back panel of the unit.



## **Electrical Safety Information**

For more information on product safety and equipment ratings, refer to the user documentation of your platform.

The power consumption of all intelligent Optical Link Mapper modules is below 10 W.

## **Safety Information**

### *Electrical Safety Information*

---

# 3 Getting Started with Your iOLM

**Note:** Some features for this application are enabled when you purchase the corresponding options. For details on how to activate an option, refer to your platform's or unit's user guide.

## Main Window

The main window allows you to start the acquisition and view measurement results and values.

The screenshot displays the iOLM software interface. At the top, there are function tabs: Source, iOLM, Link View (selected), Elements, and Measurement Info. A green 'Pass' indicator is visible in the top right. The main view shows a network diagram with a fiber link of 1.4905 km. The diagram includes several components with their positions (Pos.) and lengths (Len.):

- Component 1: Pos. 0.0000, Len. 0.0030
- Component 2: Pos. 0.5767, Len. 0.5738
- Component 3: Pos. 0.5767, Len. 0.0201
- Component 4: Pos. 0.5968, Len. 0.0160
- Component 5: Pos. 0.6128, Len. 0.0113
- Component 6: Pos. 0.6, Len. 0.0113

Below the diagram, there are two data tables:

iOLM		1310 nm	1490 nm	1550 nm
Link loss:		3.470 dB	2.845 dB	2.749 dB
Link ORL:		19.62 dB	20.05 dB	20.73 dB

Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767*	---	---	---	---	---	---

At the bottom, the status bar shows 'PON 1 Splitters 1x32' and 'Filename: 1310 1490 1550 Close events.iolm...'. On the right side, there is a button bar with 'Start', 'Open', 'Save', and 'Config.' buttons, and a main menu with 'File', 'User Preferences...', 'Test Config.', and 'Launch OTDR...' options.

## Status Bar

The status bar, located at the bottom of the main window, identifies the selected configuration file name in the application, acquisition wavelength (when an acquisition is in progress), and the acquisition progress bar of the iOLM. It also displays the next file name according to the autonaming scheme. For more information, see *Naming iOLM Files Automatically* on page 31.

**Note:** *When an acquisition is not in progress, the file name of the file currently present in memory is displayed.*



Name of the current configuration file.

Name of the current loaded iOLM file. The loaded file name and the next file name turns into a progress bar during the acquisition.





# 4 ***Preparing your iOLM for a Test***

## **Cleaning and Connecting Optical Fibers**



### **IMPORTANT**

To ensure maximum power and to avoid erroneous readings:

- Always inspect fiber ends and make sure that they are clean as explained below before inserting them into the port. IDEAL is not responsible for damage or errors caused by bad fiber cleaning or handling.
- Ensure that your patchcord has appropriate connectors. Joining mismatched connectors will damage the ferrules.

***To connect the fiber-optic cable to the port:***

## Preparing your iOLM for a Test

### *Cleaning and Connecting Optical Fibers*

---

1. Carefully align the connector and port to prevent the fiber end from touching the outside of the port or rubbing against other surfaces.

If your connector features a key, ensure that it is fully fitted into the port's corresponding notch.

2. Push the connector in so that the fiber-optic cable is firmly in place, thus ensuring adequate contact.

If your connector features a screwsleeve, tighten the connector enough to firmly maintain the fiber in place. Do not overtighten, as this will damage the fiber and the port.

**Note:** *If your fiber-optic cable is not properly aligned and/or connected, you will notice heavy loss and reflection.*

 
IDEAL uses good quality connectors in compliance with EIA-455-21A standards.

To keep connectors clean and in good condition, IDEAL strongly recommends inspecting them with a fiber inspection probe before connecting them. Failure to do so will result in permanent damage to the connectors and degradation in measurements.



## Installing the IDEAL Universal Interface (UI)

The UI fixed baseplate is available for connectors with angled (APC) polishing. A green border around the baseplate indicates that it is for APC-type connectors




### IMPORTANT

IDEAL strongly recommends to only use APC module connectors.

***To install a UI connector adapter onto the UI baseplate:***

1. Hold the UI connector adapter so the dust cap opens downwards.

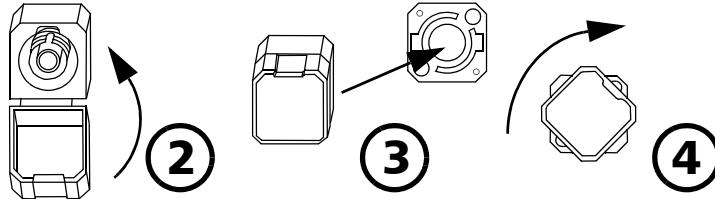

2. Close the dust cap in order to hold the connector adapter more firmly.
3. Align keys and insert the connector adapter into the baseplate.
4. While pushing firmly, turn the connector adapter clockwise on the baseplate to lock it in place.



# 5 Setting User Preferences

The **User Preferences** window allows you to set general settings, identification settings, and select the power meter mode.

**Note:** *The preference settings are user specific.*


## Defining General Settings

The **General** tab allows you to enable/disable items such as sound, fiber section information, file functionalities, whether you save a report upon saving files and export the file to OTDR Bellcore (.sor) format, and set the distance unit for the application.

**Note:** *The .sor format is not supported by the bidirectional loopback measurement.*

**To set general settings:**

1. From the **Main Menu**, tap **User Preferences**.

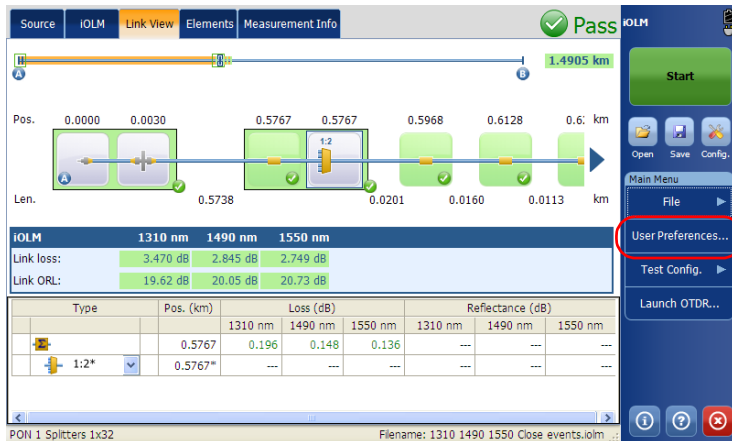


## Setting User Preferences

### Defining General Settings

---

#### 2. Select the **General** tab.

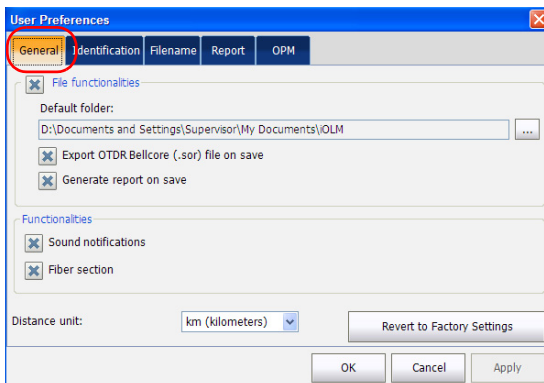

#### 3. Under the **General** tab, configure the following settings:

- **File Functionalities:** If enabled, any user interface control related to file functionalities (for example, Default path, Export OTDR bellcore file, Generate report on save, Open, Save, Filename, etc.) will be visible on the screen.

**Note:** If the **File Functionalities** option is disabled, the application does not notify you with the warning message when files are saved. When **File Functionalities** is disabled, the **Default folder**, **Export OTDR Bellcore (.sor) file on save**, and **Generate Report** options are also disabled.

- **File Save Path:** Enter the location for saving the files. This path is used to save the iOLM files and OTDR Bellcore (.sor) files after an acquisition.

**Note:** The default path provided by the operating system is used to save the files the first time you start an acquisition.

- **Export OTDR Bellcore (.sor) file on save:** If enabled, an OTDR Bellcore (.sor) file is generated for each wavelength whenever the iOLM measurement is saved. The wavelength value that is appended to the filename and it is separated with an “\_” (underscore).

**Note:** *When the iOLM bidirectional loopback process is successful, the application does not generate the corresponding OTDR Bellcore (.sor) file, even if the **Export OTDR Bellcore (.sor) file on save** option is enabled.*

**Note:** *The Bellcore (.sor) fails if the iOLM measurement doesn't contain the necessary intermediate OTDR data, or if the iOLM acquisition process is interrupted by the user, or it is self interrupted because of a live fiber is present in iOLM measurement.*

- **Generate Report on Save:** If enabled, the report is automatically saved each time the measurement is saved.

**Note:** *You can also generate a report by selecting **Report** in the **File** menu.*

- **Distance Unit:** Select the distance unit from the drop-down menu.

**Note:** *The units displayed in the application and report depend on the unit selected here.*

- **Sound Notification:** If enabled, you will hear a sound when the unit detects important events.
- **Fiber section(s):** If enabled, you can select the section in the link view and the corresponding details of the selected section are displayed in the **Elements** table.

Tap **Revert to Factory Settings** to remove all the changes and apply the default values.

## Setting User Preferences

### Defining Measurement Identification

# Defining Measurement Identification

You can define the measurement identification information, that is, job ID, company information, customer name, name of the operator, and comments for the future acquisition in the **Identification** tab. The identifiers defined in the **Link Definition** tab are also displayed here (see *Modifying Link Definition* on page 56 for more details).

### To enter identification information:

1. From the **Main Menu**, tap **User Preferences**.

The screenshot shows the iOLM software interface in the 'Measurement Info' tab. The top bar includes 'Source', 'iOLM', 'Link View', 'Elements', and 'Measurement Info'. A green 'Pass' status indicator is visible. The main area displays a fiber link diagram with components and their lengths. Below the diagram is a table showing link loss and ORL for different wavelengths. The 'Main Menu' is open, and 'User Preferences...' is highlighted with a red circle.

	1310 nm	1490 nm	1550 nm
Link loss:	3.470 dB	2.845 dB	2.749 dB
Link ORL:	19.62 dB	20.05 dB	20.73 dB

Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767**	---	---	---	---	---	---

2. Select the **Identification** tab.

Identifiers and range define in the Identifiers tab

Numeric and alphanumeric values

3. Define the identification information as needed.

The range describes the auto-increment start and stop values for the identifiers. It is specified in the **Identifiers** tab under the **Test Configuration** window.

The file name generated for future acquisitions will contain the combination of the numeric and alphanumeric values specified in the respective fields. For more information on file autonaming, see *Naming iOLM Files Automatically* on page 31.

4. Select the direction of the iOLM file from the **Direction** option.

**Note:** *When working in unidirectional loopback, the direction is disabled because it will be set automatically by the loopback process. In a bidirectional loopback measurement, the direction is automatically set to Bidirectional.*

5. Tap **Apply** to save the changes.
6. Tap **OK** to save the changes and close the window, or tap **Cancel** to exit without saving.

Tap **Revert to Factory Settings** to remove all the changes and apply the default values.

# Setting User Preferences


## Customizing the File Name

### Customizing the File Name

The application provides a way to define the name of the file to be saved. Defining a file autonaming format allows you to quickly and automatically name the files in a sequential order. The customized file name appears when the file is saved. It is possible to select which fields you want to include in the file name and the order in which it should be displayed. With the loopback option, the direction can be appended to the name of the file.

#### To customize the file name:


1. From the **Main Menu**, tap **User Preferences**.

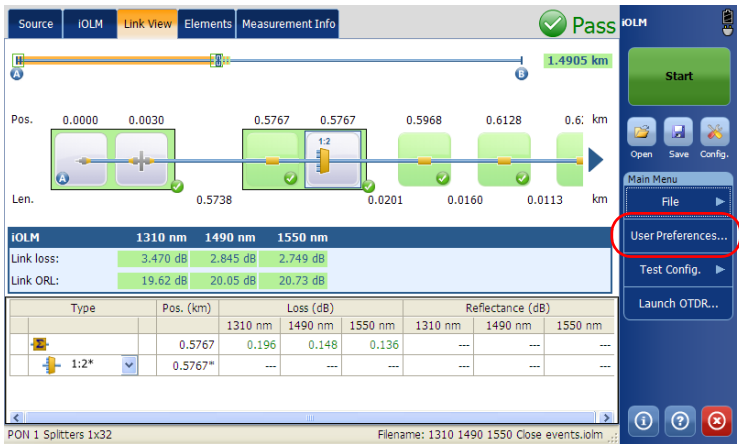




### 2. Select the **Filename** tab.

#### Standard measurement

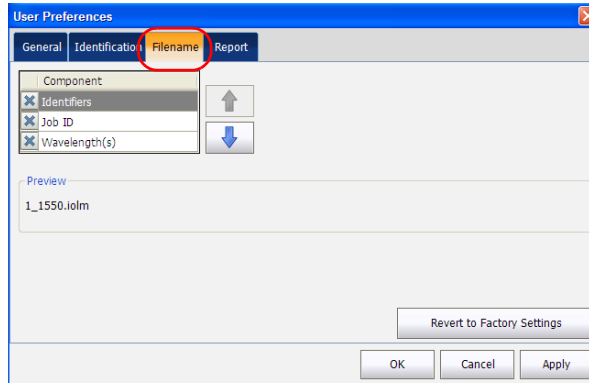

#### Loopback measurements

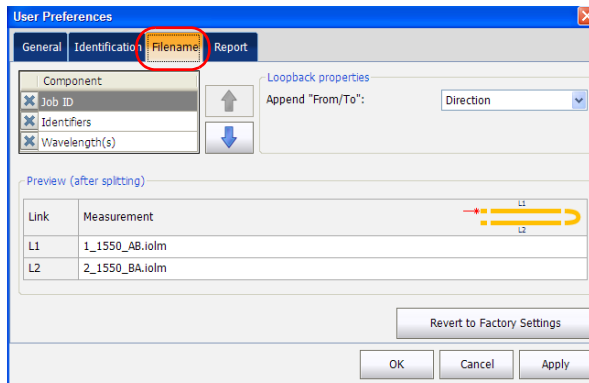



## Setting User Preferences

### Customizing the File Name


---

3. Select which component you want to include in the file name from the list of available choices:
  - **Job ID:** indicates the Job ID configured in the **Preferences** under the **Identification** tab.
  - **Wavelength(s):** indicates the current iOLM and power meter wavelengths.
  - **Identifiers:** indicates the identifier value configured in the **Preferences** under the **Identification** tab.

**Note:** *The identifier value is automatically incremented after a new acquisition is successfully saved using **Save** option. The **Save As** option will not increment the identifier value automatically.*

4. Tap Up (  ) or Down (  ) to change the order in which the components will appear in the file name.

5. If you have the loopback (LB) software option, under **Loopback properties**, select **Append “From/To”** to append the direction to the name of the file.

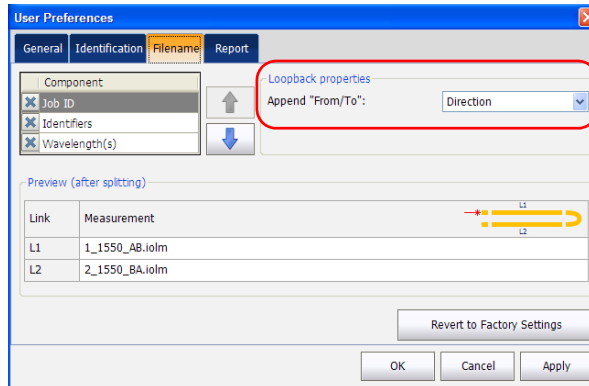

Based on the items you have selected, a preview of the file name is displayed under **Preview**. The components are separated with an “\_” (underscore).

**Note:** *If you do not select any file component, the **Save As** window appears even when you tap **Save**.*

## Setting User Preferences

### Customizing the File Name

---

6. Tap **Apply** to save the changes.
7. Tap **OK** to save the changes and close the window, or tap **Cancel** to exit without saving.

Tap **Revert to Factory Settings** to remove all the changes and apply the default values.

**Note:** *If the “Wavelengths” file name component is selected, then all of the iOLM wavelengths present in the iOLM measurement are added to the file name. When the power meter level is present in the measurement, power meter wavelengths are added to the file name. For example, if the wavelength is the only file name component selected under the **Filename** tab, the iOLM measurement is done at 1625 nm and the power meter measurement is done at 1490 nm + 1550 nm, then the file name will be “1625\_1490 + 1550.iolm”.*

## Naming iOLM Files Automatically

Each time you start an acquisition, the application suggests a next file name based on autonaming settings.

The application displays the next file name in the status bar in the following scenarios:

- When the application is started for the first time, the status bar displays the next file name. You can change the name of the next file through the **Filename** tab. When you load the iOLM file the application displays the corresponding file name in the status bar.
- When the acquisition is complete and the file is not saved, the next file name is displayed. Once the file is saved the application displays the file name.

DefaultSetup	Next filename: 2_1310 + 1490.iolm
Name of the current configuration file	Next file name


The application displays the file name in the Status bar, after the file is saved.

**Note:** *All the file name components are enabled in this example. See Customizing the File Name on page 26 to enable file name components.*

## Setting User Preferences

### Naming iOLM Files Automatically

Consider the figure below as an example of autonaming feature.

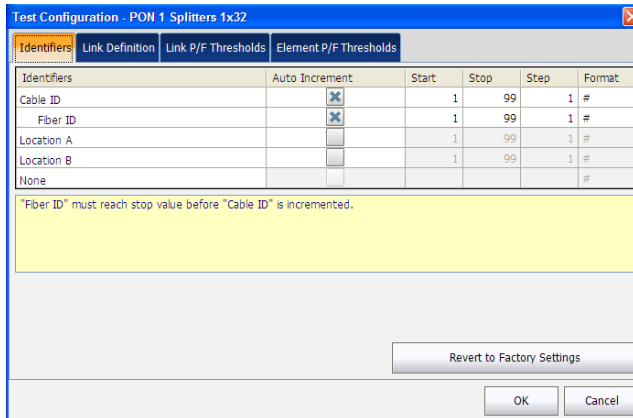

You can find the above window at **Test Config. > Manage > Modify > Identifiers** tab.


In the figure above, you can modify the identifiers, start, stop, and step values and enable the auto increment of the identifier values. See *Modifying Identifiers* on page 54 for more details on how to specify the start, stop, and step values.

You can select the number of digits displayed for the incremented or decremented values.

Select "#" if you want to keep the value exactly in the same format as defined in the start and stop values. If a value is to be incremented from 1 to 10, it becomes 1, 2, 3, ... 9, 10. One "#" is the default format.

Select two, three, or four "#" if you want all values to be expressed with the same number of digits. The application fills the empty spaces with zeros before the increment or decrement to ensure the appropriate format is displayed. For example, if you select two "#" and the value is to be incremented from 1 to 10, it becomes 01, 02, 03, ... 09, 10.

**Note:** *The identifiers defined in the **Identifiers** tab are displayed in the **Identification** tab of the **User Preferences** window.*

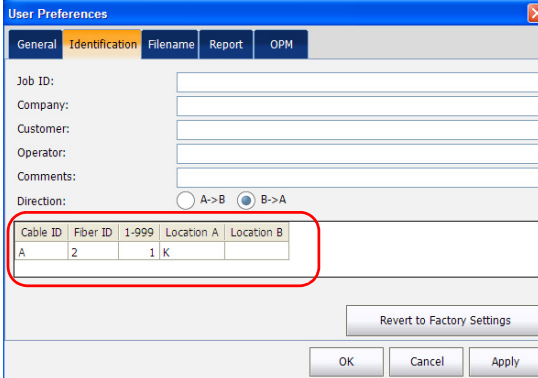

Cable ID	Fiber ID	1-999	Location A	Location B
A	2	1	K	

You can find the above window at **User Preferences** > **Identification** tab.

In the figure above, you can specify the values of the identifiers, such as **OLT** as A, **OLT** measurement range as 2, **ONT** as B, and so on.

**Note:** *By default, the start values specified in the **Identifiers** tab are displayed in the measurement range in the table under **User Preferences** in the **Identification** tab. See *Defining Measurement Identification* on page 24 for more details.*

## Setting User Preferences

### *Naming iOLM Files Automatically*

---

After an acquisition is successfully saved, the file name is the combination of job ID, identifiers, and the wavelength. These values are separated in the file name with an “\_” (underscore).

For example, the file name after the first acquisition is  
<Job ID>\_A2\_B1\_K3\_<wavelength>.iolm

**Note:** *If the ONT, OLT, and location values are not specified, then the file name will only contain the Job ID value, numeric identifiers value, and the wavelength.*

After a new acquisition is successfully saved, the location value will increment by the set step value, that is, for the second acquisition file name, the location value will be 6.

So, the file name after the second acquisition can be

<Job Id>\_A2\_B1\_K6\_<wavelength>.iolm

When the location value reaches the stop value, it resets to start value and ONT value starts incrementing by step value.

The auto increment of values proceeds from right to left.

**Note:** *The auto increment continues until the first number (that is, OLT value) reaches the stop value.*




### Customizing the iOLM Report

The application allows you to personalize the iOLM report.


**Note:** You can only generate PDF reports for loopback measurements.

**To customize the iOLM report:**

**1.** From the **Main Menu**, tap **User Preferences**.

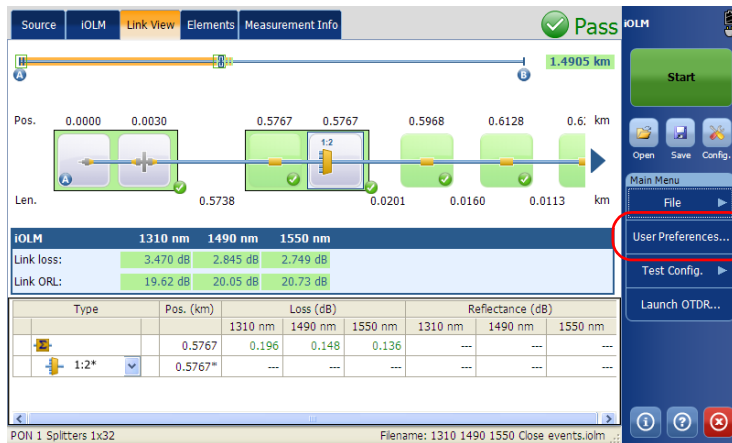

**2.** Select the **Report** tab.

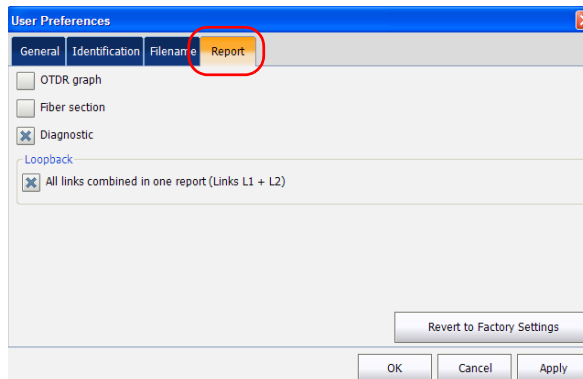

## Setting User Preferences


### Customizing the iOLM Report

---

3. If your unit allows it, select the report file type from **File type** option.
4. Select the **OTDR Graphic** option to display the OTDR graph in the iOLM report.

**Note:** *The OTDR graph generation fails if the iOLM measurement does not contain the necessary intermediate OTDR data, or if the iOLM acquisition process is interrupted by the user, or it is self interrupted because of a live fiber is present in iOLM measurement.*

5. Select **Fiber section(s)** option to display the section information in the iOLM report.
6. Select **Diagnostic** option to display the diagnostics information in the iOLM report.
7. If you have the loopback (LB) software option, under **Loopback**, select the checkbox if you want to generate a report with all links combined in one report.

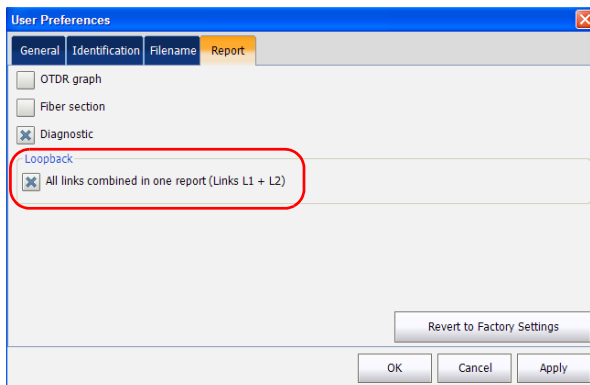

Tap **Revert to Factory Settings** to remove all the changes and apply the default status.

## Configuring your iOLM

The **iOLM** tab displays the settings used for taking measurements. The iOLM performs the acquisition on the port and wavelengths selected in the iOLM tab; the values are preserved for the next acquisition.

The loopback mode allows you to test two fibers at once, which saves time and manipulations. If you have activated the loopback option for your application, it is ready to use when needed.

When working in loopback mode, there are three rules to follow so the loopback can give appropriate results:

- Both fibers under test and connected to the loop must have the same length.
- The launch and receive lengths must be specified correctly.
- The length of the loop must be specified correctly.

The loopback measurement is especially designed for testing cables formed of a pair of identical fibers of an equivalent length. The measuring time is optimized because two fibers are checked in a single measurement.

**Note:** *You cannot use the files created using the loopback mode to perform a second loopback operation.*


When you work with the launch, receive and loop fiber lengths, you have to set the values yourself.

## Setting User Preferences

### Configuring your iOLM

#### To configure the iOLM:

1. From the main window, select the **iOLM** tab.

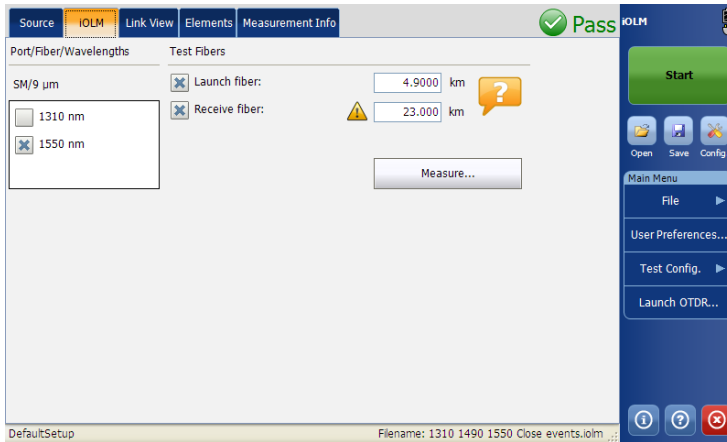


2. If two ports are available on your module, select which one to use for your test. The fiber core is also selected at this point; for C fibers, select  $50\ \mu\text{m}$ , and for D fibers, select  $62.5\ \mu\text{m}$ .
3. Select the wavelengths for the next acquisition. The available wavelengths depend on the iOLM module.

4. Specify if a launch and receive fibers are connected to the link under test.

If you have the loopback (LB) software option and if you want to test in loopback mode, select the loop fiber checkbox.

See *Launch, Receive, and Loop Fibers* on page 4 for more details.

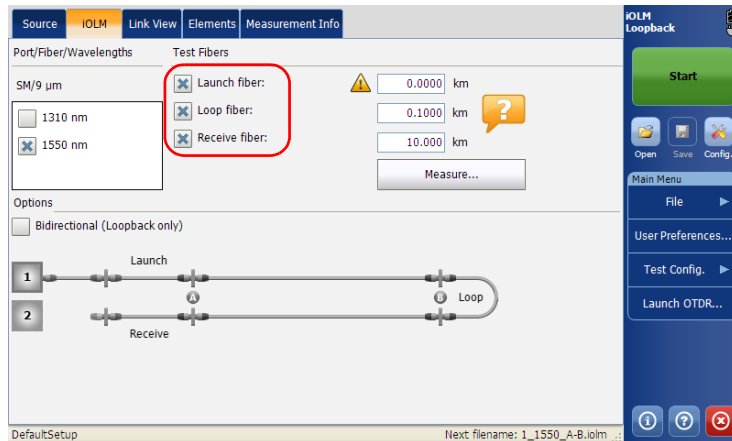


5. If you want to specify the launch, receive and loop fiber lengths manually, enter the values in the corresponding boxes.

The acceptable range is from 0 to 5 km for the launch fiber and 0 to 10 km for the receive fiber.



The range for the loop fiber is from 0 to 5 km.


## Setting User Preferences
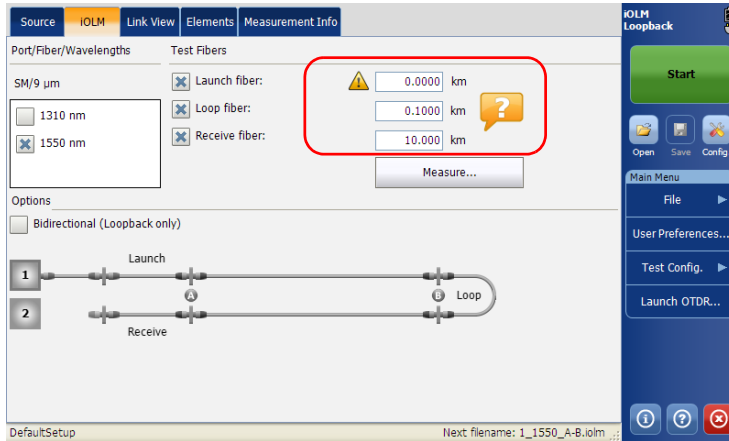
### Configuring your iOLM



When specifying a launch and a receive fibers, as well as a loop fiber, two different icons may appear when the fiber length is out of the recommended range. If you tap on the icons, the application then suggests the appropriate values.

- The  appears if the provided values are required but not selected and if the values entered are not within the appropriate range.
- The  is displayed if the values are not within the appropriate range.

The help icon  opens a window suggesting the appropriate fiber length for an expected link loss. The icon is not available when a non-supported configuration is selected.

6. If you have selected the **Loop fiber** checkbox, you can choose to work with the **Bidirectional (Loopback only)** option or not.

The screenshot displays the iOLM software interface for configuring a Bidirectional (Loopback only) setup. The interface is divided into several sections:

- Port/Fiber/Wavelengths:** Shows SM/9  $\mu\text{m}$  and selected wavelengths of 1310 nm and 1550 nm.
- Test Fibers:** Includes checkboxes for Launch fiber, Loop fiber, and Receive fiber, along with distance inputs (0.0000 km, 0.1000 km, 10.0000 km) and a Measure... button.
- Options:** A red circle highlights the  Bidirectional (Loopback only) option.
- Diagram:** Shows a schematic with two ports (1 and 2), a Launch fiber (1\_1550), a Receive fiber (2\_1550), and a Loop fiber connected to port 1.
- Instructions:** Text below the diagram reads: "Connect the iOLM to the launch fiber and tap 'Start'. It is recommended to connect a jumper between the instrument and the launch fiber."
- Right Panel:** Contains a Start button, Open, Save, and Config. buttons, and a Main Menu with File, User Preferences..., Test Config., and Launch OTDR... options.

DefaultSetup Next filename: 1\_1550.iolmldr...

## Setting User Preferences

*Configuring your iOLM*

---





## Setting User Preferences

*Configuring your iOLM*

---





# 6 **Managing Test Configurations**


This section explains the procedure to select, create, view and modify the test configuration.

## **Selecting a Test Configuration**

The test configuration is selected to apply the configuration settings (thresholds, link definition parameters, etc.) in the iOLM application for the next acquisition.

- There are two types of configuration files that are activated with the iCERT software option.

**Note:** *These configurations do not contain splitters, therefore they are not suitable for testing PON links.*

- The configuration files that do comply to the certification standard are indicated with a blue bubble with a “c” in the middle (  ).
- The EXFO configuration files do not comply with the certification standard.
- The PON Last Mile Certification Optimode (iOPT-LM) software option enables you to perform a fiber characterization of the fiber between the ONT and the splitter (access fiber). The option detects the presence of splitters to ensure the fiber is connected to a splitter via a distribution fiber.

Optimode is a test configuration using an algorithm intended for specific use cases, which overpass the iOLM standard mode performances in given testing topologies.

The optimode test configuration has some limitations and may cause your unit to display odd results if it is used in cases other than what it has been designed for.


Refer to the iOLM technical specifications for the optimode available and the appropriate specifications. You can also contact IDEAL to ensure the optimode is designed for your use cases.

# Managing Test Configurations


## Selecting a Test Configuration

**To select the test configuration:**

1. From the Main Menu, tap **Test Config.**

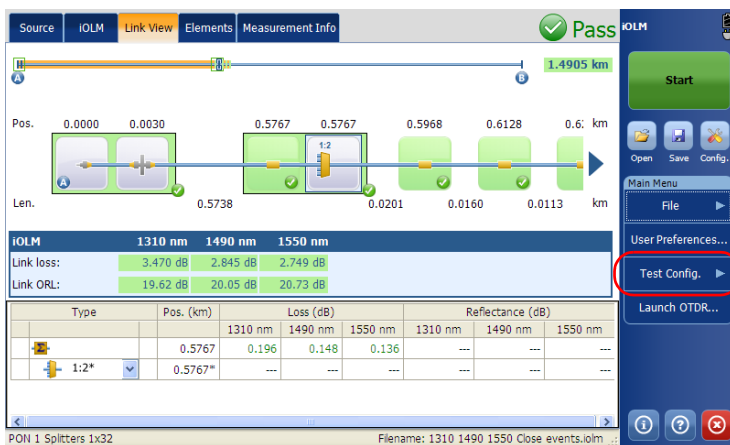


2. Tap **Select.**

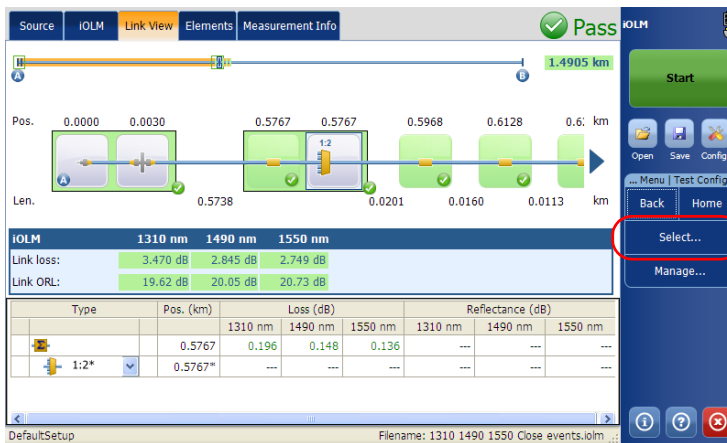

### 3. Select the test configuration file.

Name of the configuration file.

Name of the identifiers present in the file. When more than one identifier is present, they will be separated by a semicolon.

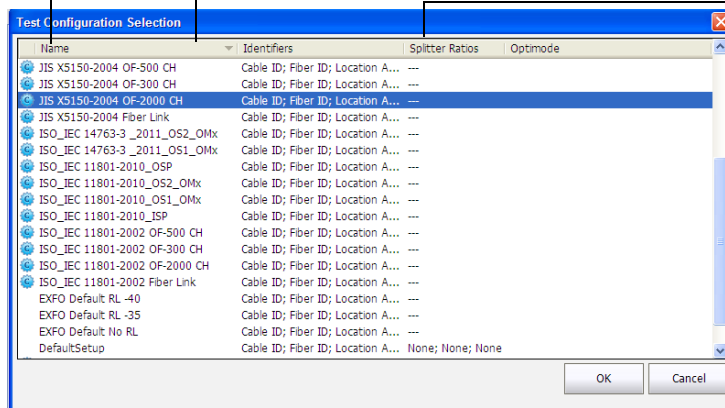

Split ratio which is defined for each stage of the splitter defined. When more than one splitter is defined, they will be separated by a semicolon.

Configuration files which are not PON are indicated by "----".

**Note:** If you have selected any measurement where 2:N is available, then it is displayed as Read Only mode in the **Test Configuration Selection** dialog box even if the **iOLM EXpert** option is not activated

**Note:** Tap on the column to sort the column in ascending or descending order. By default, the configuration list will be sorted in ascending order according to the Name column.

### 4. Select the test configuration from the list of available choices.

### 5. Tap **OK** to apply the configuration and close the window, or tap **Cancel** to exit without applying changes.

### Impacts of Test Configurations

Before performing an acquisition, you can select or edit a test configuration that fits the link under test. This configuration contains specific pass/fail thresholds and the definition of any expected PON splitter. Once selected, the configuration will be used for all following measurements.

The configuration data is structured in the same way than an iOLM result file. Each result file contains the entire configuration data used for the measurement.

Using a test configuration may influence the minimum reach of the measurement in terms of loss. For instance, the expected loss budget of a link that includes splitters will force the acquisition to cover at least this loss budget. Because of this, using an accurate test configuration can improve the accuracy of the measurements. If an inaccurate configuration file is used, some link element types might be wrongly defined. For instance, if no splitter stage is defined, actual splitters will be described as splices or connectors. This will not affect the reflectance and loss values associated with the link elements, only their type. After a measurement is completed, a link element type can be changed in order to apply the correct pass/fail threshold.

The pass/fail thresholds defined in the configuration file will have no impact on the capacity of the iOLM application to perform measurements. Only the pass/fail status of the link or link elements will be determined by the user-defined thresholds.




### Creating a Test Configuration

The **Duplicate** button allows you to create a copy of a selected configuration file.

**To create a copy of test configuration:**


1. From the **Main Menu**, tap **Test Config**.

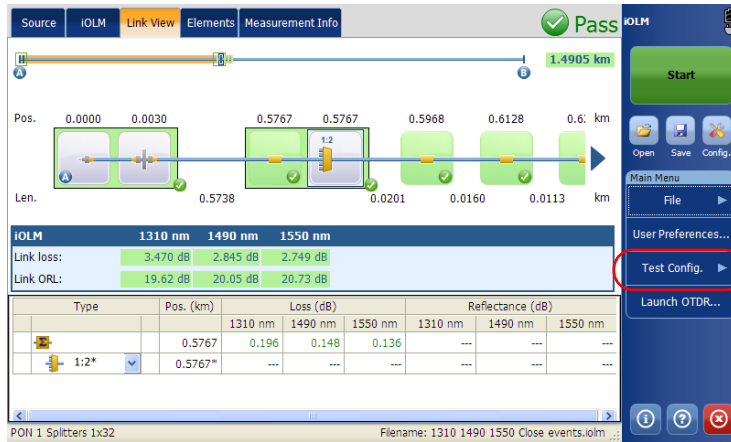

# Managing Test Configurations


## Creating a Test Configuration

### 2. Select **Manage**.

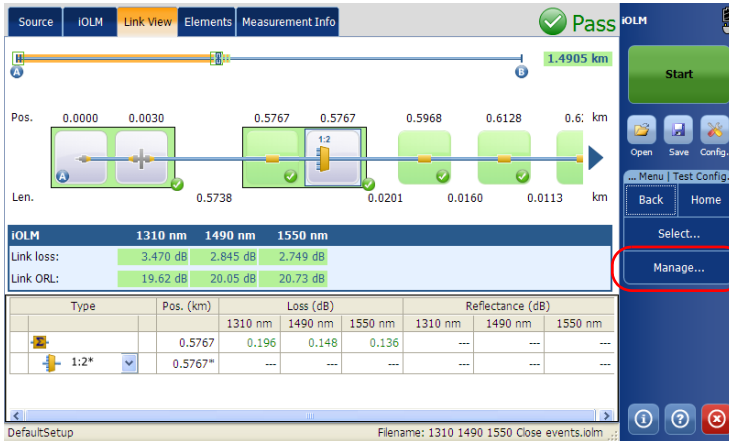

### 3. Select the test configuration file to duplicate.

### 4. Tap **Duplicate**.

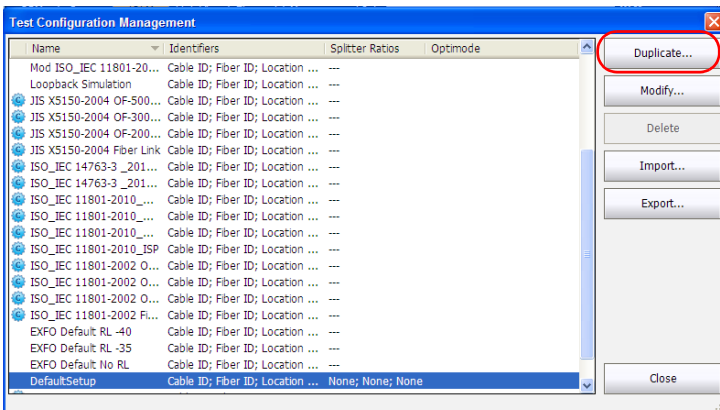

5. The default file name is displayed. You can modify the file name, if required.
6. Tap **Save** to save the file or tap **Cancel** to exit without saving.

**Note:** *A number between parenthesis will be automatically incremented at the end of the file name to avoid unwanted overwrites.*

A new copy of the selected configuration file is created. You can modify the duplicated file, if required. See *Modifying a Test Configuration* on page 53 for more details.

7. Tap **Close** to close the window.

## Modifying a Test Configuration

The **Modify** button in the **Manage** main menu allows you to view the selected configuration file and modify it, if required.

**Note:** *The test configuration settings will be effective for the next acquisition.*

**Note:** *If the default factory settings file, or any predefined file is selected, the **Modify** button will appear as **View**, which means that you cannot modify the factory test configuration files. Also, you cannot modify the files created by the supervisor, if you are logged in the module as a operator or any user with lower privileges than supervisor.*

# Managing Test Configurations


## Modifying a Test Configuration

### Modifying Identifiers


The **Identifiers** tab allows you to view and modify the identifier values.

**To modify Identifiers:**


1. From the **Main Menu**, tap **Test Config.**

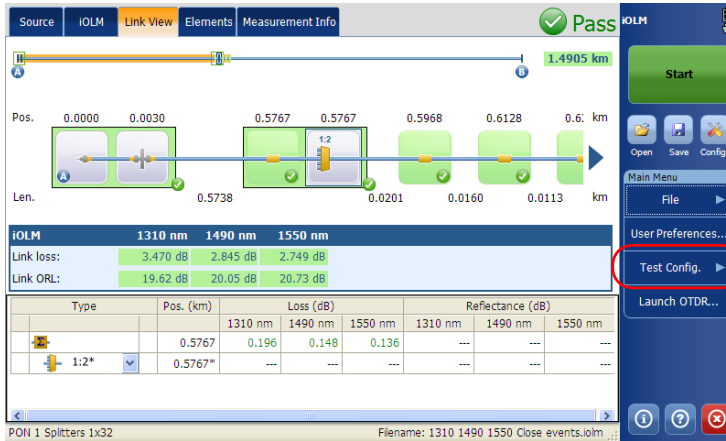

2. Select **Manage**.

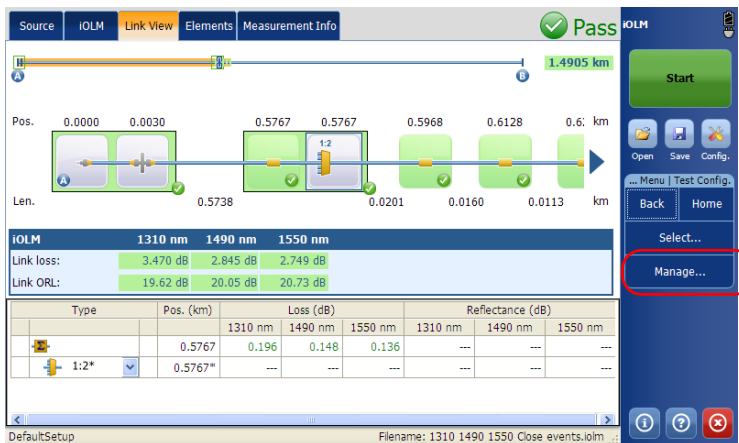


3. Select the test configuration file to modify.
4. Tap **Modify**.

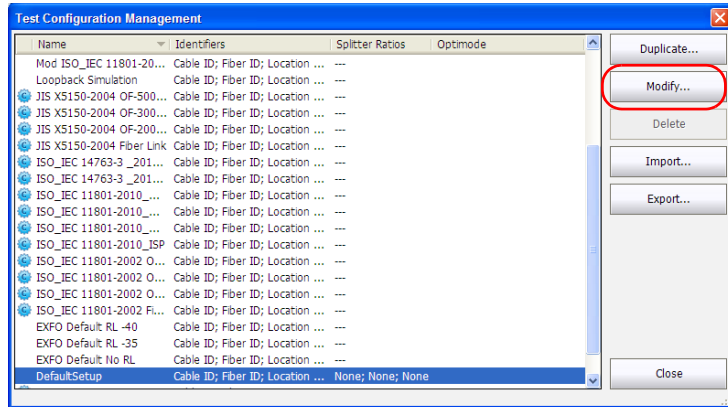

The name of the configuration is displayed on the title bar of the window.

5. Select the **Identifiers** tab.

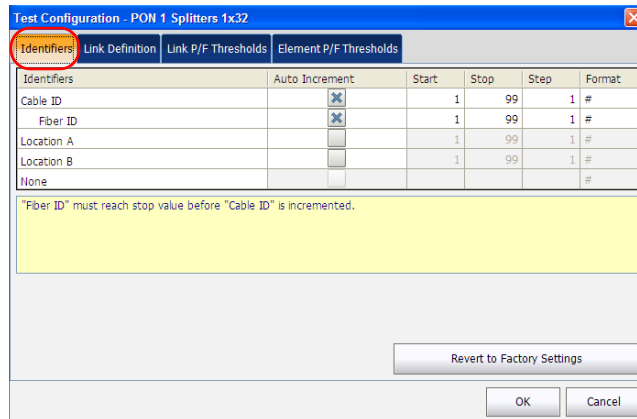

## Managing Test Configurations

### *Modifying a Test Configuration*

---

6. Under **Identifiers**, select the identifiers from the list of available choices.

**Note:** *Two identifiers cannot have the same name.*

7. Under **Auto Increment**, enable or disable the auto increment option. It enables the numeric part of the identifiers to be incremented/decremented after the acquisition has been saved successfully.
8. Enter the start, stop, and step values for the identifier under **Start**, **Stop**, and **Step**.

**Note:** *The Step value must be smaller than the difference between the Start and Stop values. If the Start is greater than the Stop, then the identifier value begins decrementing by the specified Step.*

9. Tap **OK** to save the changes and close the window, or tap **Cancel** to exit without saving.

Tap **Revert to Factory Settings** to remove all the changes and apply the default values associated with the selected configuration.

## Modifying Link Definition

The **Link Definition** tab allows you to view and modify the link definition.

The links defined in the **Link Definition** tab are based on the network topology. For example, if there are 2 splitters present in the PON network, you may define two stages of splitter with their respective split ratio. You may change the IOR value, or change or rename the identifiers according to the network, which will help you to identify where the measurement is done in the PON network. The modifications will be applicable for future acquisitions.

**Note:** *Splitters are available only for PON configurations.*

### To modify link definition:

1. From the Main Menu, tap **Test Config.**

The screenshot shows the IOLM software interface with the 'Link View' tab selected. The main display area shows a fiber link diagram with various components and their positions and lengths. Below the diagram is a table of IOLM parameters and a detailed table of loss and reflectance data.

IOLM		1310 nm	1490 nm	1550 nm
Link loss:		3.470 dB	2.845 dB	2.749 dB
Link ORL:		19.62 dB	20.05 dB	20.73 dB

Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767**	---	---	---	---	---	---

Filename: 1310 1490 1550 Close events.iolm

2. Select **Manage.**

The screenshot shows the IOLM software interface with the 'Link View' tab selected. The main display area shows a fiber link diagram with various components and their positions and lengths. Below the diagram is a table of IOLM parameters and a detailed table of loss and reflectance data.

IOLM		1310 nm	1490 nm	1550 nm
Link loss:		3.470 dB	2.845 dB	2.749 dB
Link ORL:		19.62 dB	20.05 dB	20.73 dB


Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767**	---	---	---	---	---	---

Filename: 1310 1490 1550 Close events.iolm

# Managing Test Configurations


## Modifying a Test Configuration

3. Select the test configuration file to modify.
4. Tap **Modify**.

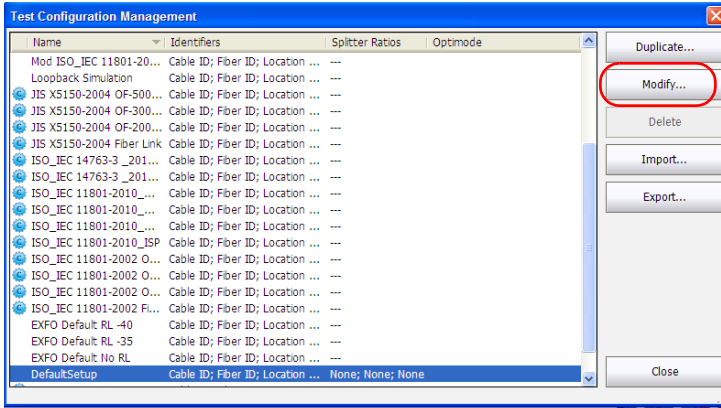

The name of the configuration is displayed on the title bar of the window.

5. Select the **Link Definition** tab.

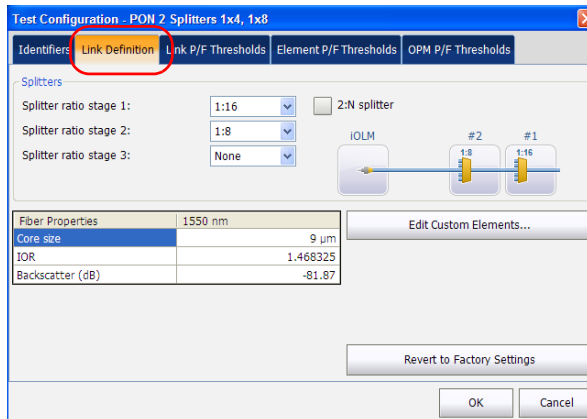



**6.** Select the split ratio of a splitter at a given stage.

Select **1:?** if the splitter ratio is unknown. The iOLM finds the splitter ratio automatically and the element is not tested for pass/fail.

If **None** is selected as Splitter Ratio Stage, then the iOLM will not try to find or apply a split ratio at the given stage.

The PON network can have multiple splitters. The iOLM application supports testing a PON network having maximum of three splitters. So, the splitter ratios can be defined up to three stages.

**Note:** *The splitter ratios are defined at different stages, depending on how they are defined in the network.*

**Note:** *The link view displays the link element closest to the iOLM module to the left and then proceeds towards the right.*

- **Core size:** When a multimode port is selected, the default fiber core size is 50  $\mu\text{m}$ .
- **IOR:** Refraction index of the iOLM measurement, also known as *group index*. If you modify this parameter, the distance measurements for the trace will be adjusted.
- **Backscatter (dB):** Rayleigh backscatter coefficient setting of the iOLM measurement. If you modify this parameter, the reflectance and ORL measurements for the trace will be adjusted.


**Note:** *For the multimode wavelengths, the values are defined at 850 nm. For the singlemode wavelengths, the values are defined at 1550 nm. The iOLM application automatically calculates the IOR and Backscatter values for other wavelengths.*

## Managing Test Configurations

### Modifying a Test Configuration

7. Tap **OK** to save the changes and close the window, or tap **Cancel** to exit without saving.

Tap **Edit Custom Elements** to add, edit, or delete the custom element. For more information, see *Managing Custom Elements (Optional, iOLM EXpert Mode Only)* on page 65. If the iOLM EXpert option is not activated, you can view the custom element present in the test configuration by tapping **View Custom Elements**.

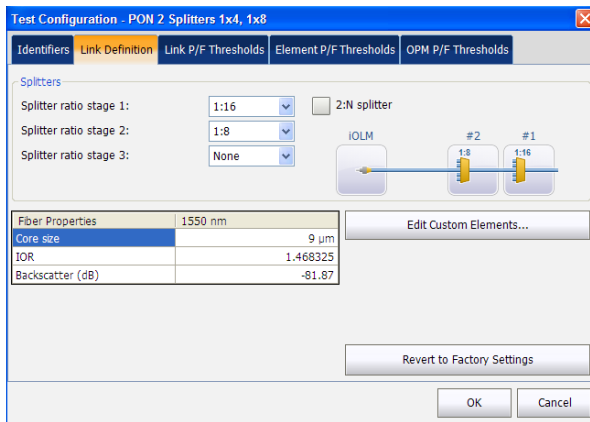

Tap **Revert to Factory Settings** to apply the default values associated with the selected configuration.

**Note:** *Revert to Factory Settings* does not change the modifications done in the *Edit Custom Element*.


### Enabling 2:N Splitters (Optional, iOLM EXpert Mode Only)

**Note:** *The bidirectional loopback measurements are not supported by 1:N splitter and 2:2 splitter elements.*

The 2:N splitter can be used to create network redundancy. If a network break occurs, the operator can connect through the other network branch. This ensures active communication while the repairing of the broken network is in progress.

If the 2:N splitter is selected for the **Splitter ratio stage 1** field and the test configuration is imported on a unit where the iOLM EXpert is not activated then the 2:N splitter is automatically replaced by 1:N splitter. For example, if in the test configuration stage 1 is selected as 2:128 and the iOLM EXpert option is deactivated, then it is automatically replaced by 1:128.

In the Splitter ratio stage 1 field, if 1:? or None is selected and you have enabled the 2:N splitter option, then the 1:? and None are replaced by a splitter value of 2:2.

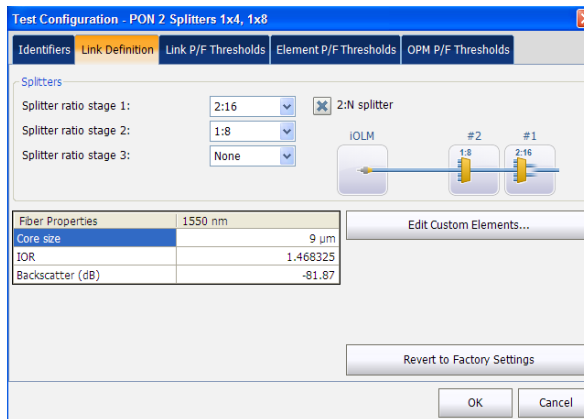


**Note:** *The threshold for the 2:N splitter is displayed in the **Element P/F Thresholds** tab only if the 2:N splitter is selected in **Link Definition** tab.*

# Managing Test Configurations


## Modifying a Test Configuration

**To enable the 2:N splitter:**


1. From the Main Menu, tap **Test Config > Manage**.

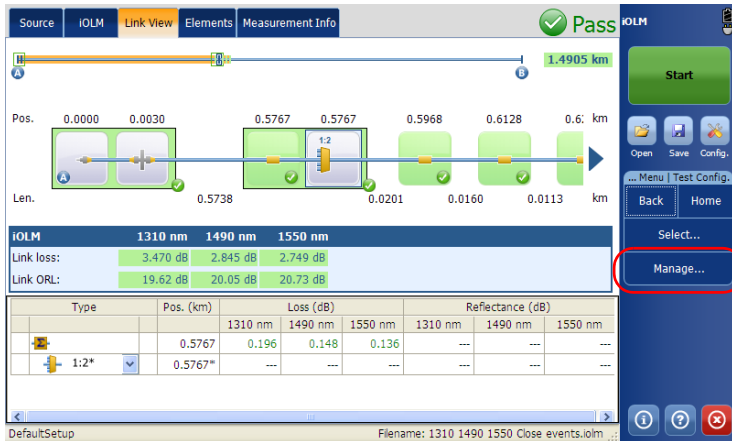


2. Select the test configuration file to modify from the test configuration list file.
3. Tap **Modify**.

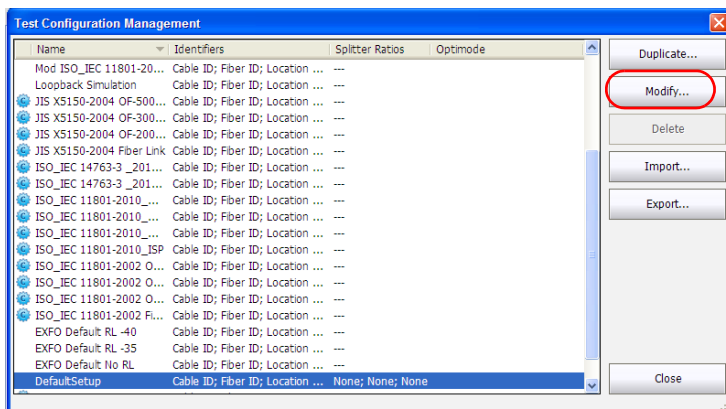

4. Select the **Link Definition** tab from the test Configuration.

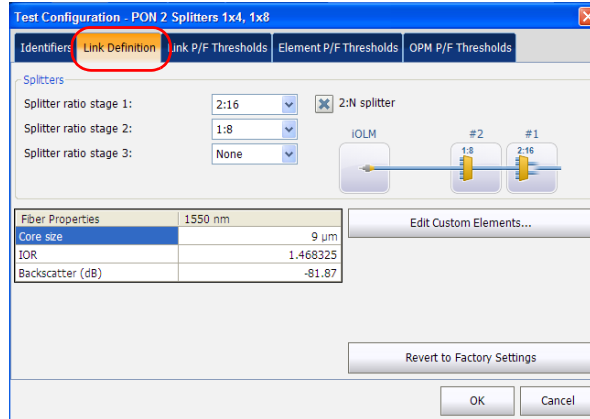

5. Enable **2:N splitter**.

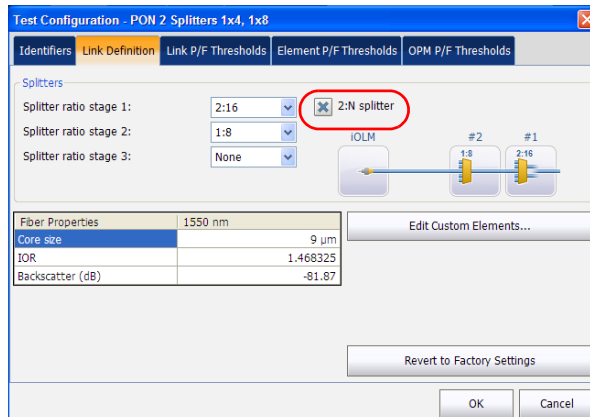

6. Select the required ratio from **Splitter ratio stage 1**.
7. Tap **OK** to save your changes or **Cancel** to discard them.

## Managing Test Configurations

### *Modifying a Test Configuration*

---

The element pass/fail status remains unknown in the following scenarios:

- If any element is followed by 2:N splitter in the link then the element's loss pass/fail status is displayed as unknown.
- If the element has a reflectance value and it is placed after the 2:N splitter element, then the element's reflectance pass/fail status is displayed as unknown.
- If the 2:N splitter is in a group of elements and an element follow the 2:N splitter in the group, then the pass/fail status of group is displayed as unknown.


### Managing Custom Elements (Optional, iOLM EXPert Mode Only)

The application allows you to add, modify or delete custom elements when the iOLM EXPert option is activated. You can add custom elements of two basic element types: splice or connector. Each custom element must have its unique name. You can view and edit the element's pass/fail threshold of the custom element in the **Element P/F Threshold** tab.

If the iOLM EXPert option is not activated, then you will not be able to edit the element pass/fail threshold for the custom element and if the measurement file contains custom elements, the custom elements are displayed in the **Element P/F Threshold** tab under the **Measurement Settings**.

#### To add a custom element:


1. From the **Main Menu**, select **Test Config. > Manage**.
2. Select the test configuration file to modify.
3. Tap **Modify**.

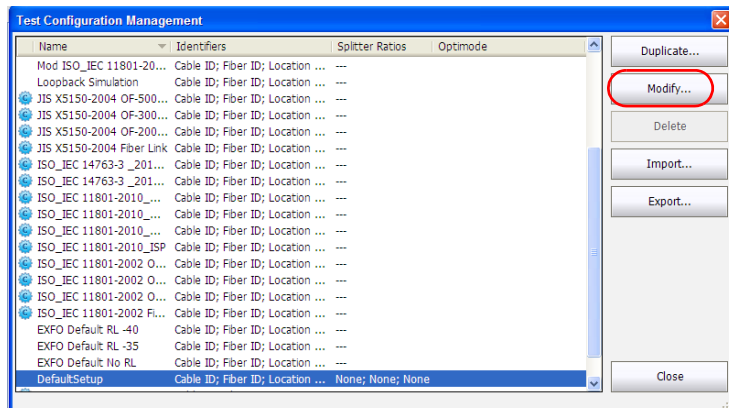


# Managing Test Configurations

## Modifying a Test Configuration

### 4. Tap **Link Definition > Edit Custom Elements.**

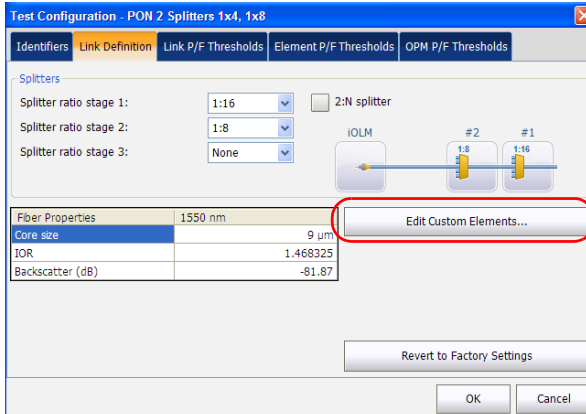

5. Enter the custom element name under the **Name** column in the **Custom Elements** dialog box. The name of the custom element can contain a maximum of 12 characters.
6. Select the custom element type under the **Type** column.

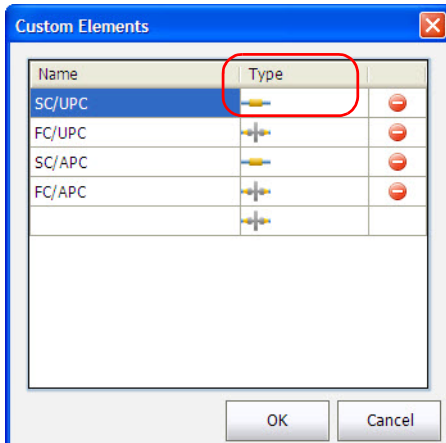


7. Tap **OK** to save the changes and close the dialog box, or tap **Cancel** to exit without saving.




### To modify the custom element:

1. From the **Main Menu**, select **Test Config. > Manage**.
2. Select the test configuration file to modify.
3. Tap **Modify**.

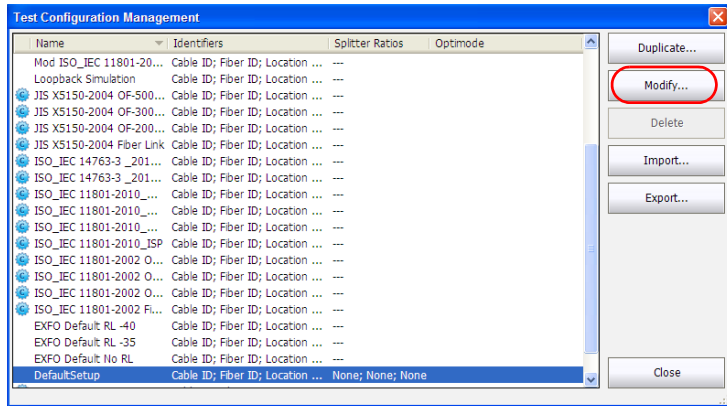

4. Select **Link Definition > Edit Custom Elements**.

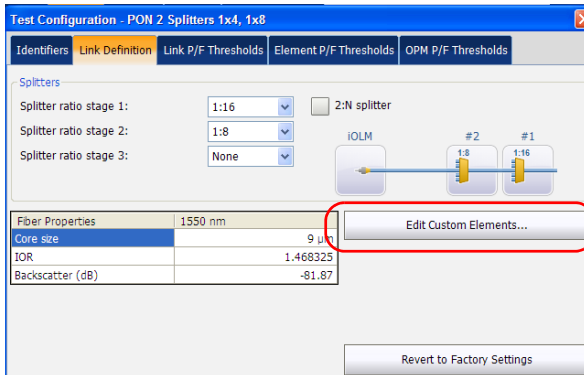


## Managing Test Configurations

### *Modifying a Test Configuration*

---


5. Select the custom element name under the **Name** column and modify it as needed.

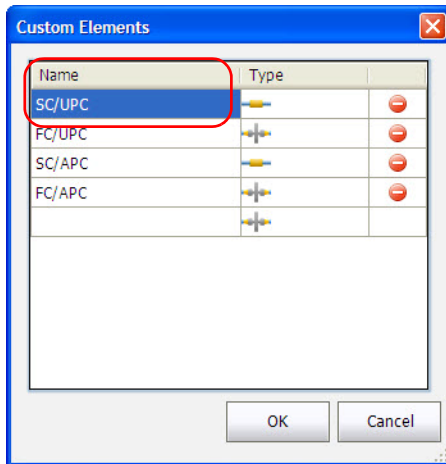


6. Select the required custom element type under the **Type** column.
7. Tap **OK** to save the changes and close the dialog box, or tap **Cancel** to exit without saving.

### To delete the custom element:

1. From the **Main Menu**, select **Test Config. > Manage**.
2. Select the test configuration file to modify.
3. Tap **Modify**.

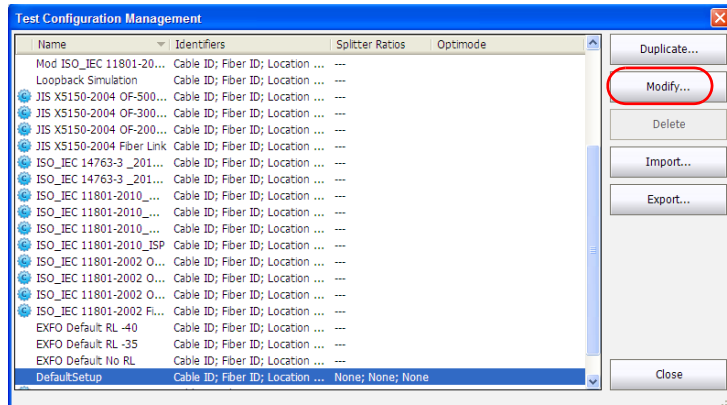

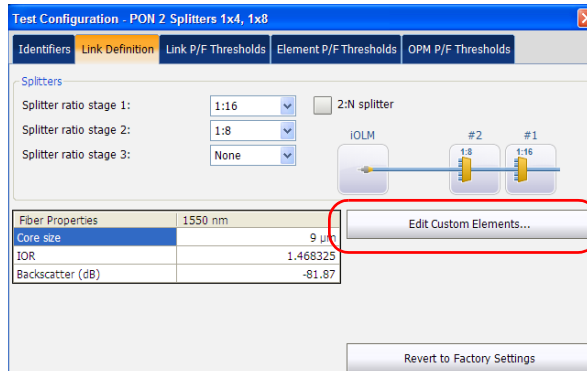

4. Select **Link Definition > Edit Custom Elements**.




## Managing Test Configurations

### *Modifying a Test Configuration*

---

5. Tap the  or  icon (depending on the unit) beside the custom element which you want to delete.

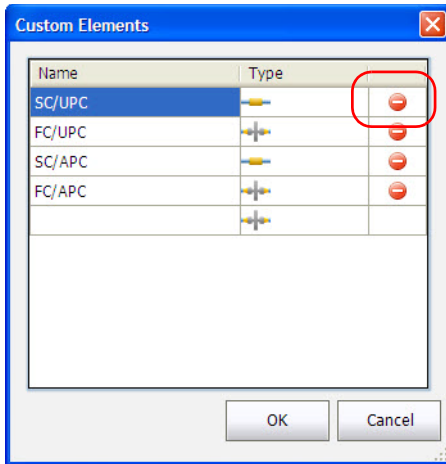

6. Tap **OK** to save the changes and close the dialog box, or tap **Cancel** to exit without saving.


### Modifying Link Pass/Fail Thresholds

This tab allows you to apply modification to the link pass/fail thresholds. If the selected wavelength is *Any*, the values edited will be applied to all the wavelengths present.

**Note:** *Pass/Fail thresholds cannot be viewed or edited for some configurations related to specific standards.*

#### To modify link pass/fail thresholds:


1. From the **Main Menu**, tap **Test Config.**

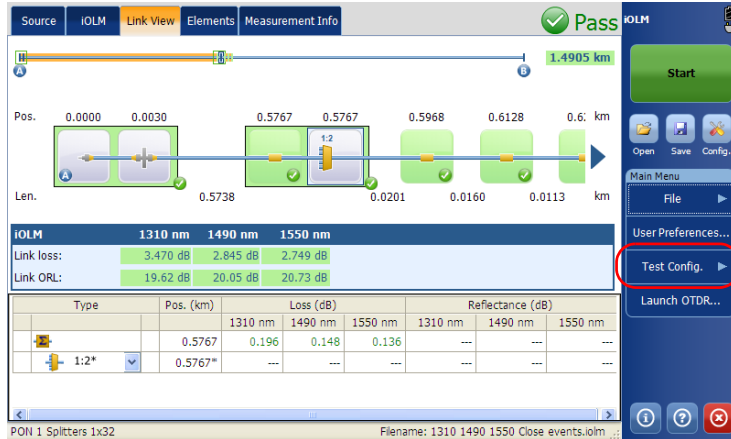

# Managing Test Configurations


## Modifying a Test Configuration

### 2. Select **Manage**.

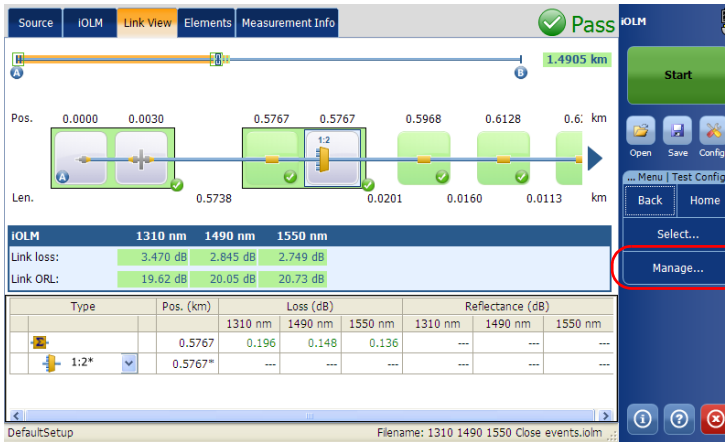


### 3. Select the test configuration file to modify.

### 4. Tap **Modify**.

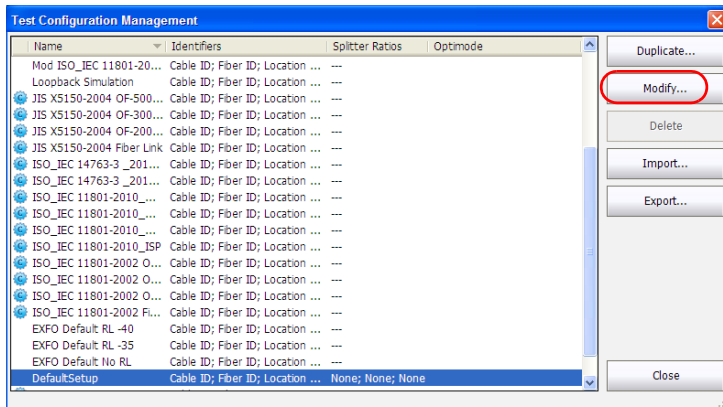

5. Select the **Link P/F Thresholds** tab.

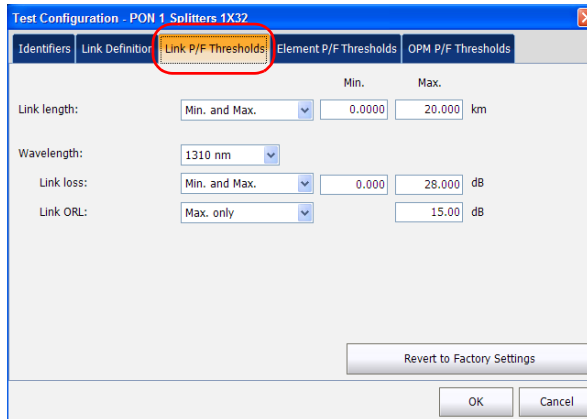

6. Under **Link P/F Thresholds**, modify the following parameters, as needed.

- **Link Length:** Select the link length threshold type from the available choices and then modify the link length as required.

**Note:** *The minimum link length cannot be greater than the maximum link length.*

- **Wavelength:** Select the wavelength for which the different Pass/Fail threshold values can be specified. The available choices of the wavelength depend on the iOLM module.
- **Link Loss:** Select the Link Loss threshold type from the available choices and then modify the link loss as required.

**Note:** *The minimum link loss cannot be greater than the maximum link loss.*

- **Link ORL:** Select the Link ORL (Optical Return Loss) threshold type from the available choices and then modify the link ORL as required. The optical return loss (ORL) refers to the total effect of multiple reflections and scattering events within a fiber-optic system.

# Managing Test Configurations

## Modifying a Test Configuration

- 7. Tap **OK** to save the changes and close the window, or tap **Cancel** to exit without saving.

Tap **Revert to Factory Settings** to remove all the changes and apply the default values associated with the selected configuration.


## Modifying Element Pass/Fail Thresholds

This tab allows you to apply modifications to the element pass/fail thresholds.

**Note:** *Pass/Fail thresholds cannot be viewed or edited for some configurations related to specific standards.*


### To modify element pass/fail thresholds:

- 1. From the **Main Menu**, tap **Test Config.**

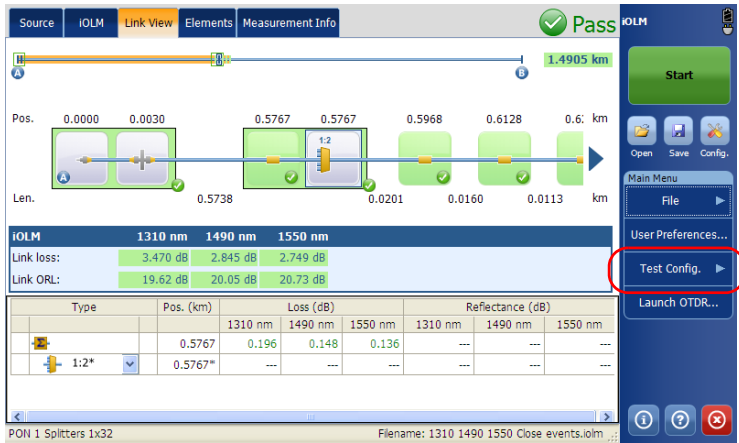




### 2. Select **Manage**.

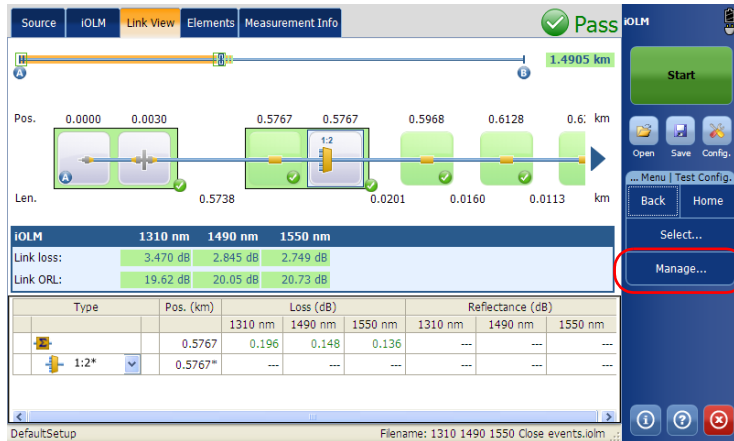

### 3. Select the test configuration file to modify.


### 4. Tap **Modify**.

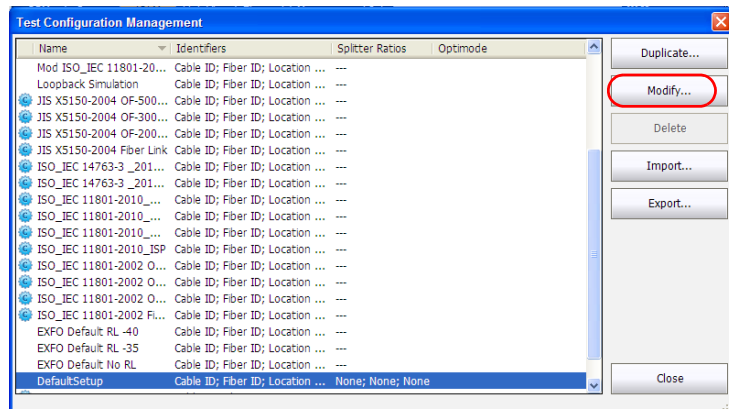


# Managing Test Configurations

## Modifying a Test Configuration

- 5. Select the **Element P/F Thresholds** tab.

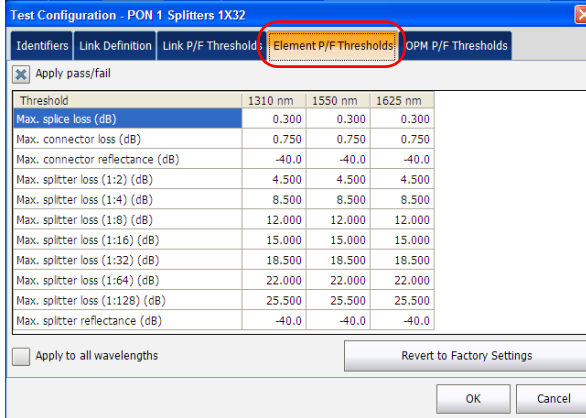

The **Threshold** column displays the threshold values for Splice, Connector, and Splitter ratios (1:N and 2:N) for each available wavelength in the test configuration settings. The custom elements are displayed in the group under Max. connector loss or Max. connector reflectance or Max. splice loss. This information is also displayed in the iOLM report.

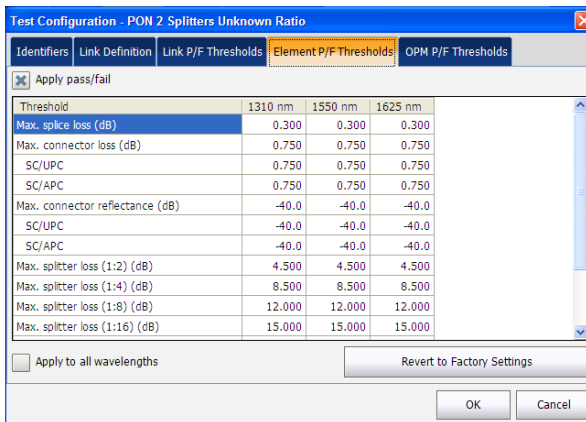


6. Enable the **Apply pass/fail** option to access the parameters, and modify them as needed. You can add, edit, and delete the custom element by tapping on the custom element. For steps to modify or create custom elements, see *Managing Custom Elements (Optional, iOLM EXpert Mode Only)* on page 65.

**Note:** *The pass/fail thresholds of the custom elements can only be edited when the iOLM EXpert option is activated.*

**Note:** *The available wavelength choices depend on the iOLM module.*

7. Tap **OK** to save the changes and close the window, or tap **Cancel** to exit without saving.

Select **Apply to all wavelengths** to display the common threshold values for all the wavelengths. If any threshold has different values for its wavelengths, then the cell will be empty.

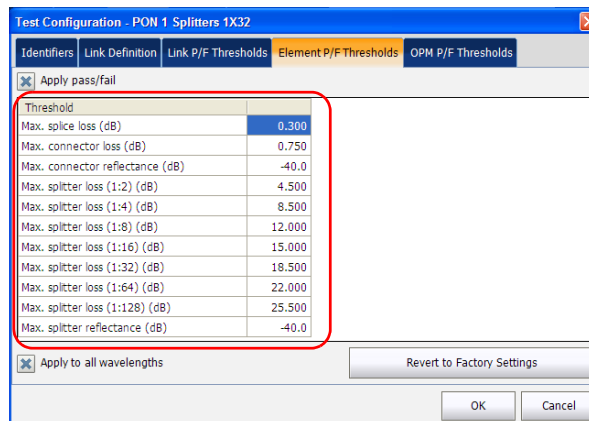

Tap **Revert to Factory Settings** to remove all the changes and apply the default values associated with the selected configuration.

# Managing Test Configurations

## Modifying a Test Configuration

### Deleting Test Configuration

The **Delete** button allows you to delete an existing configuration file.

**Note:** You cannot delete the *DefaultSetup* configuration or *iCERT* standard-compliant configurations.

#### To delete a test configuration:

1. From the **Main Menu**, tap **Test Config.**


The screenshot displays the iOLM software interface for a test configuration. The top navigation bar includes 'Source', 'IOLM', 'Link View', 'Elements', and 'Measurement Info'. A green 'Pass' status indicator is shown in the top right. The main area shows a fiber link diagram with components like splitters and couplers, with their positions and lengths listed. Below the diagram is a table for 'Link loss' and 'Link ORL' at 1310 nm, 1490 nm, and 1550 nm. At the bottom, there is a table for 'Loss (dB)' and 'Reflectance (dB)'. On the right side, a 'Main Menu' is open, with 'Test Config.' highlighted by a red circle.

IOLM		1310 nm	1490 nm	1550 nm
Link loss:		3.470 dB	2.845 dB	2.749 dB
Link ORL:		19.62 dB	20.05 dB	20.73 dB


Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767"	---	---	---	---	---	---

### 2. Select **Manage**.

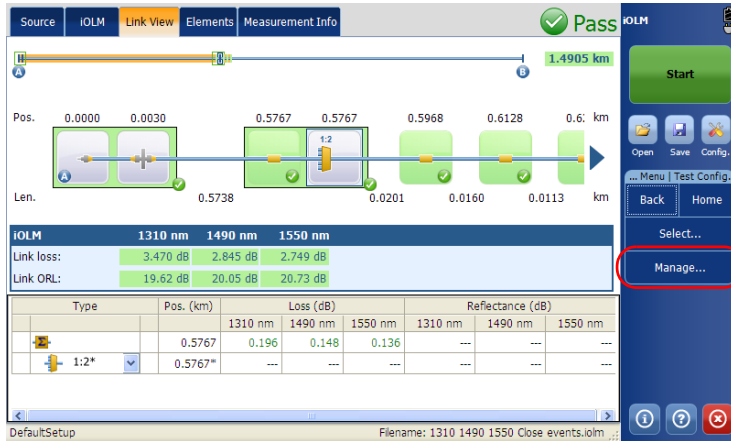

### 3. Select the test configuration file to delete.

### 4. Tap **Delete**.

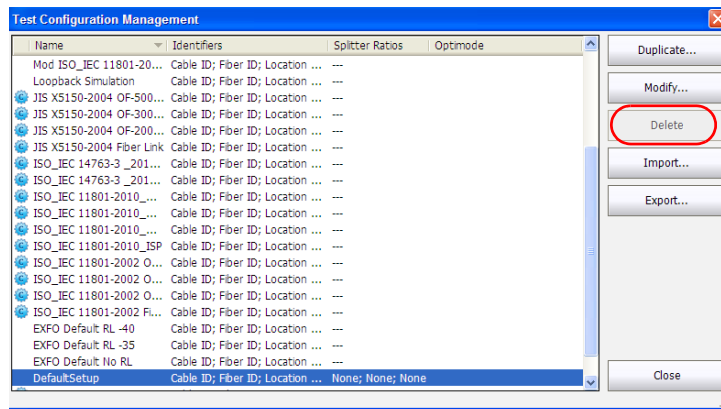

A confirmation message is displayed.

### 5. Tap **Yes** to delete the file or tap **No** to cancel the deletion.

### 6. Tap **Close** to close the window.

## Managing Test Configurations

### Importing or Exporting a Test Configuration

# Importing or Exporting a Test Configuration

The **Import** button allows you to import test configuration from an external storage device and the **Export** button allows you to export the selected configuration to an external storage device.

**Note:** To import iCERT configurations and its duplicates, you need to activate the option on the unit.

**Note:** If a USB device is connected to the module, the default path for import/export will be the USB device.

### To import a test configuration:


1. From the **Main Menu**, tap **Test Config.**

IOLM		1310 nm	1490 nm	1550 nm
Link loss:		3.470 dB	2.845 dB	2.749 dB
Link ORL:		19.62 dB	20.05 dB	20.73 dB


  

Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767*	---	---	---	---	---	---

### 2. Select Manage.

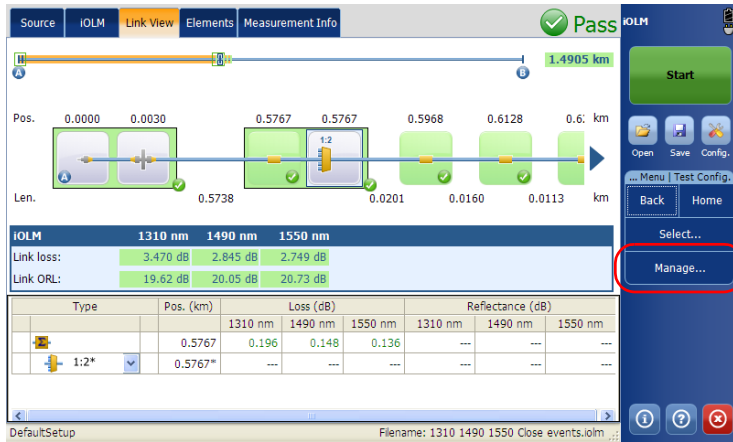

### 3. Tap Import.

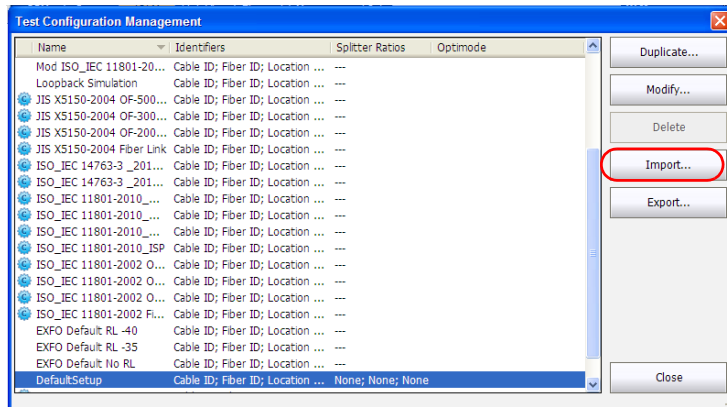


## Managing Test Configurations

### Importing or Exporting a Test Configuration

---

4. An **Import** dialog box opens, select the file to import and tap **Open**.

**Note:** Depending on the type of unit you are using, the **Open** button may be replaced with an **OK** button.

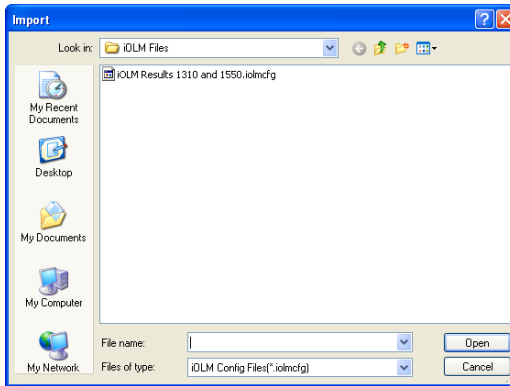

A confirmation message is displayed.

5. Tap **Yes** to select the file or tap **No** to cancel the selection.



**To export a test configuration:**

1. From the Main Menu, tap **Test Config.**

The screenshot shows the IOLM software interface with the 'Main Menu' on the right. The 'Test Config.' option is highlighted with a red circle. The main window displays a fiber link diagram with various components and their positions. Below the diagram are tables for IOLM parameters and a detailed table for loss and reflectance.

IOLM		1310 nm	1490 nm	1550 nm
Link loss:		3.470 dB	2.845 dB	2.749 dB
Link ORL:		19.62 dB	20.05 dB	20.73 dB

Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767**	---	---	---	---	---	---

2. Select **Manage.**

The screenshot shows the IOLM software interface with the 'Main Menu' on the right. The 'Manage...' option is highlighted with a red circle. The main window displays the same fiber link diagram and data tables as the previous screenshot.


IOLM		1310 nm	1490 nm	1550 nm
Link loss:		3.470 dB	2.845 dB	2.749 dB
Link ORL:		19.62 dB	20.05 dB	20.73 dB

Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767**	---	---	---	---	---	---

## Managing Test Configurations


### Importing or Exporting a Test Configuration

3. Select the test configuration file.
4. Tap **Export** to export the configuration to an external storage device.

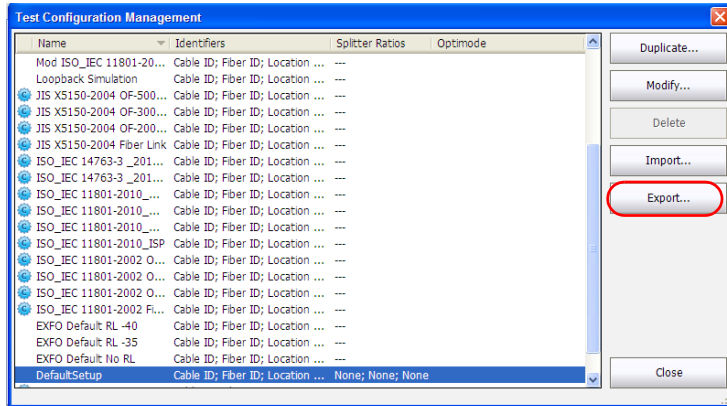

5. An **Export** dialog box opens, select the location and tap **Save**.

**Note:** Depending on the type of unit you are using, the **Save** button may be replaced with an **OK** button.

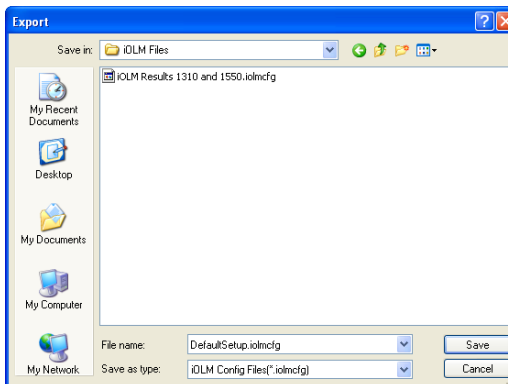

## **Managing Test Configurations**

*Importing or Exporting a Test Configuration*

---

## **Managing Test Configurations**

*Importing or Exporting a Test Configuration*

---

## **Managing Test Configurations**

*Importing or Exporting a Test Configuration*

---



# 7 **Starting an Acquisition**

The iOLM allows you to characterize a fiber-optic span, usually optical fiber sections joined by splices and connectors. The iOLM provides an inside view of the fiber, and can calculate fiber length, breaks, total return loss, as well as splice, connector, and total losses.

## **Performing a Standard or Loopback Acquisition**

When an iOLM acquisition starts, the **Link View** tab is displayed by default.

The progress of the overall acquisition for all wavelengths is displayed in the status bar. For example, if two wavelengths have to be processed, at the end of the first wavelength acquisition, the overall progress will be 50 %.

The current wavelength is displayed in front of the acquisition progress.


You can perform standard and loopback acquisitions with the iOLM. For more information on how to perform a loopback measurement, see *Configuring your iOLM* on page 37. To perform bidirectional loopback acquisitions, see *Performing a Bidirectional Loopback Acquisition* on page 91.

## Starting an Acquisition

### Performing a Standard or Loopback Acquisition

#### To perform an iOLM acquisition:

1. Ensure that the settings for the acquisition are already set. For more information, see *Configuring your iOLM* on page 37.
2. Tap **Start** (for standard and loopback measurements). If you are working with the Short Link Close Events and PON Last Mile specialized measurements, the button will indicate **Start OptiMode**.

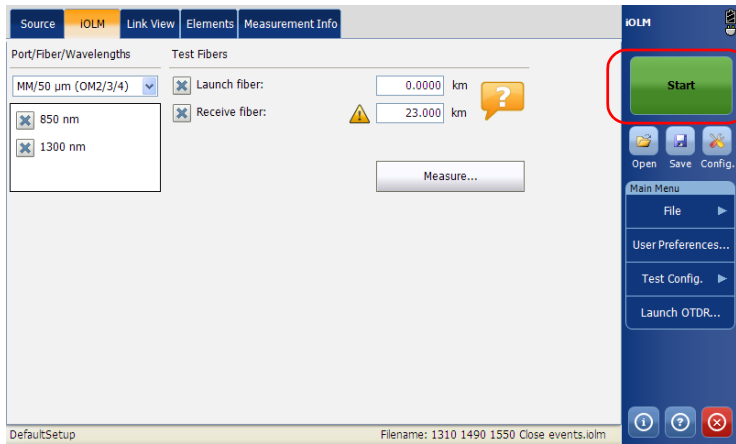

The application will prompt you to save unsaved data (if any) before starting a new acquisition.

**Note:** You will not be asked to save the file if the file functionalities are not activated. See *Setting User Preferences* on page 21 for more details.




## Performing a Bidirectional Loopback Acquisition

With the iOLM, you can perform bidirectional loopback acquisitions. The acquisition process is done in two main steps. The first acquisition can be repeated until the results are suitable for your needs. Then, you perform the second acquisition, which can be done only once.

### To perform a bidirectional acquisition:


1. Ensure that the settings for the acquisition are already set. For more information, see *Configuring your iOLM* on page 37.
2. Select the **Bidirectional (Loopback only)** checkbox.

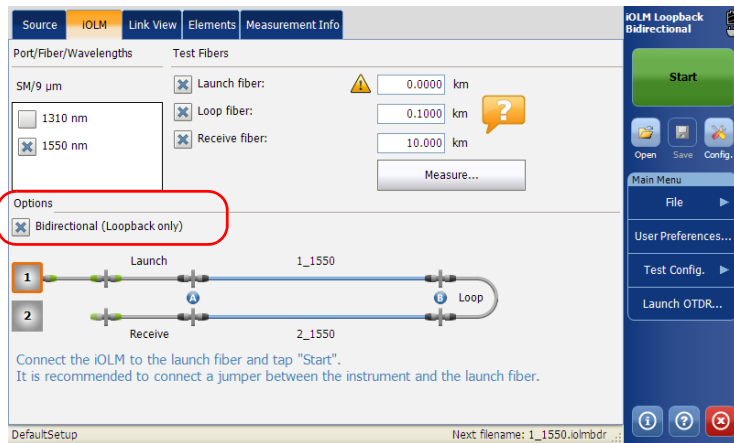


## Starting an Acquisition

### Performing a Bidirectional Loopback Acquisition

3. Select number **One** or **Two** depending on which direction you want to use to test the link first.

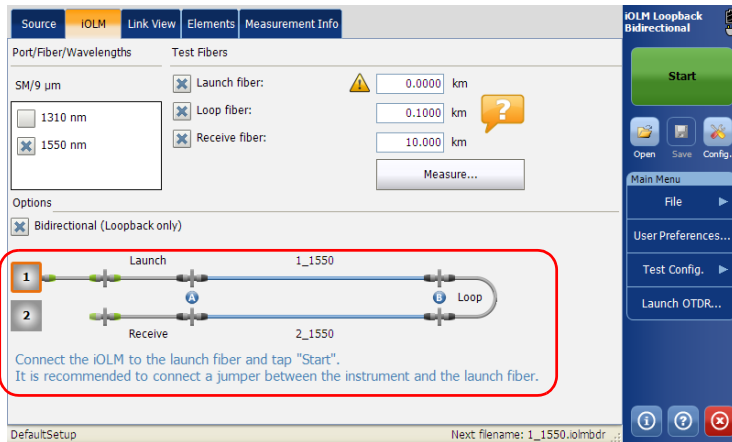

4. Tap **Start**.

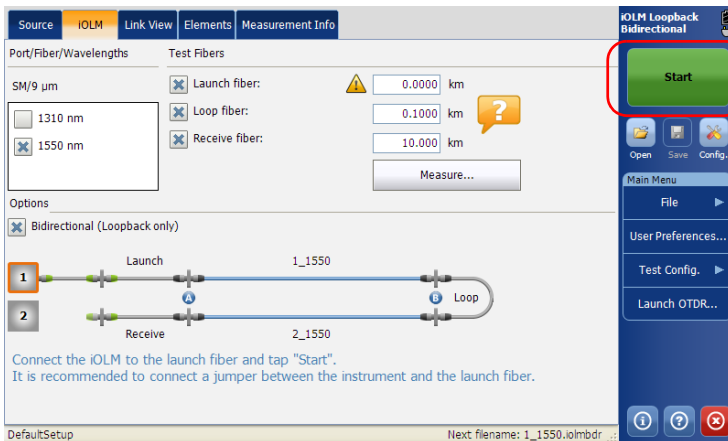

**Note:** Depending on the number you have selected first, number One or Two turns blue to indicate that the acquisition was made.

## Starting an Acquisition

### Performing a Bidirectional Loopback Acquisition

5. If you are not satisfied with the result of the first acquisition, or if the application does not split the link, check the acquisition parameters and the fiber that is connected, then tap **Test Again**.

Indicates that you should not disconnect the setup

Source IOLM Link View Elements Measurement Info 73 AB IOLM Loopback Bidirectional 74 BA

Port/Fiber/Wavelengths Test Fibers

SM/9  $\mu\text{m}$  Launch fiber: 0.5000 km  
Loop fiber: 0.5000 km  
Receive fiber: 0.5000 km

Options

Bidirectional (Loopback only)

1 Launch 73\_1550 Loop  
2 Receive 74\_1550

Connect the iOLM to the launch fiber and tap "Test Again".  
It is recommended to connect a jumper between the instrument and the launch fiber.

Reset Acquisition

DefaultSetup Next filename: Link 1 AB.iolm...

OR

Tap the **Reset Acquisition** button to clear the measurement.

Source IOLM Link View Elements Measurement Info 73 AB IOLM Loopback Bidirectional 74 BA

Port/Fiber/Wavelengths Test Fibers

SM/9  $\mu\text{m}$  Launch fiber: 0.5000 km  
Loop fiber: 0.5000 km  
Receive fiber: 0.5000 km

Options

Bidirectional (Loopback only)

1 Launch 73\_1550 Loop  
2 Receive 74\_1550

Connect the iOLM to the launch fiber and tap "Test Again".  
It is recommended to connect a jumper between the instrument and the launch fiber.

Reset Acquisition


DefaultSetup Next filename: Link 1 AB.iolm...

## Starting an Acquisition


### Performing a Bidirectional Loopback Acquisition

The results of the first acquisition are available in the **Link View** tab.

Pass/Fail results for Link 1 and Link 2

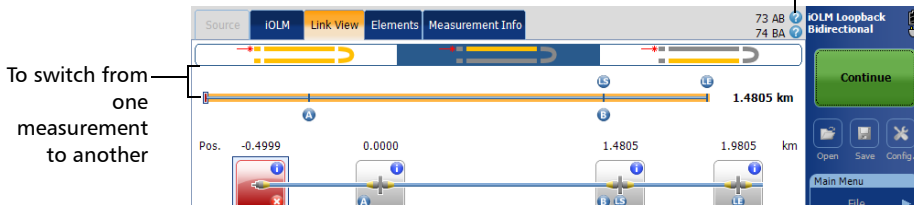


6. Tap **Continue** to perform the second acquisition.

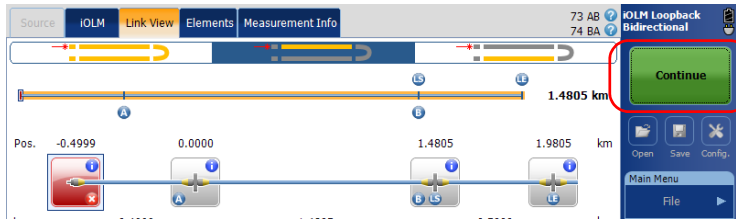

**Note:** The second acquisition can only be performed once.

When both measurements are split properly, the application generates the bidirectional measurement for the two fibers.

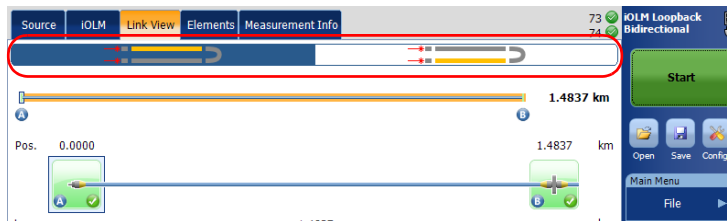

## Stopping an Acquisition

The acquisition stops automatically after the acquisition is complete.

It is possible to stop the acquisition at any time while the acquisition is in progress.

**Note:** *The unprocessed wavelengths will not be processed when a multiple wavelength acquisition is stopped manually.*

### To stop the acquisition:

Tap **Stop** from the main window.

The screenshot shows the IOLM software interface. At the top, there are tabs for OPM, Source, IOLM, Link View, Element, and Measurement Info. A 'Fail' indicator is visible in the top right. The main display area shows a link view with a horizontal line representing the link. Below the line, there are four ports labeled 'Pos.' and 'Len.' with their respective values: -0.0274, -0.0239, 0.0000, and 0.0199 km. The 'Len.' values are 0.0035, 0.0239, and 0.0199 km. A red box highlights the 'Stop 1/12' button in the top right corner. A callout line points to the button with the text: 'The numbers indicate the port of the switch on which the acquisition is underway.'

Type	Pos. (km)	Loss (dB)	Ref. (dB)
	1550 nm		1550 nm
	-0.0239	1.682	-63.9

\*A short patchcord is connected between the test unit and launch fiber. It is considered as a part of the launch fiber.  
\*The high loss at unit connector or patchcord reduces the measurement range.

The stopped acquisition status will be saved in the measurement file. The stopped acquisition status is also displayed in the **Measurement Info** tab.

The global pass/fail status will show unknown or fail when the acquisition is stopped manually.


**Note:** *A manually stopped acquisition should not be considered as a reliable link measurement. To fully characterize a link, a complete acquisition should be performed.*




# 8 Understanding Diagnostics


This section explains the diagnostics feature available in the iOLM application.

Diagnostics are used to provide additional information about detected problems or ambiguous measurement situations, such as root cause possibilities for the fail status of a link element. The diagnostics provide help to troubleshoot faulty connectors, understand why link elements are tagged as fail or unknown, indicate unexpected instrument or test conditions and so forth.

Link elements with an associated diagnostic are marked with an  icon, and the diagnostics are displayed in the **Link View** and **Elements** tabs. More than one diagnostic can be associated with any given element.

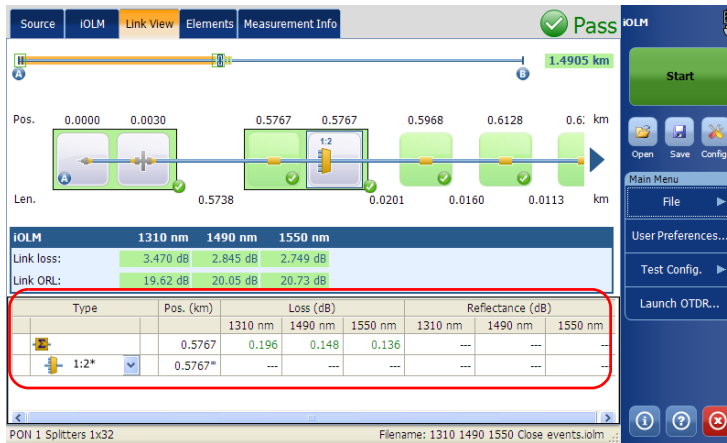

The screenshot shows the iOLM application interface. The top navigation bar includes 'Source', 'IOLM', 'Link View', 'Elements', and 'Measurement Info'. A green checkmark and 'Pass' status are visible. The main area displays a link diagram with various components and their positions (Pos.) and lengths (Len.). Below the diagram, there are summary tables for IOLM and Link ORL. A red box highlights a diagnostic table with the following data:

Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767*	---	---	---	---	---	---

Elements diagnostics are associated with specific link elements issues. Each failed link element will have associated diagnostics to assist in troubleshooting. Some elements, such as macrobends, will have associated diagnostics even with a pass status.






## 9 Using the OTDR as a Source

The **Source** tab allows you to operate the existing OTDR laser as a source to do power meter measurements at the other end of the fiber. This helps to quickly locate the correct fiber or perform loss measurements.

**To use the OTDR as a source:**


1. From the upper panel, select **Source** tab.

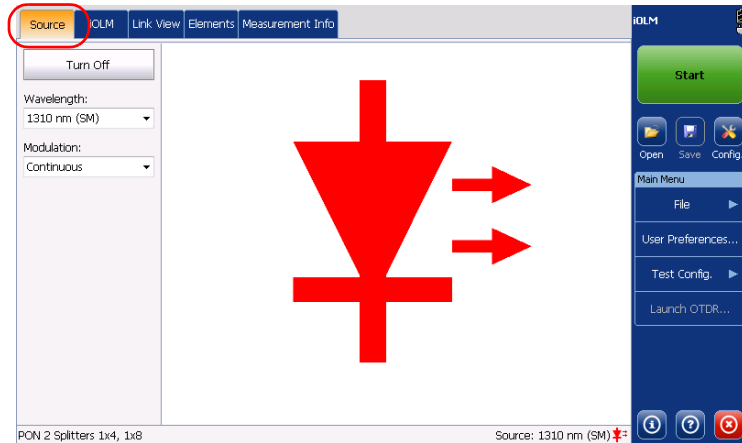

## Using the OTDR as a Source

---

2. Select the desired wavelength from the **Wavelength** list.

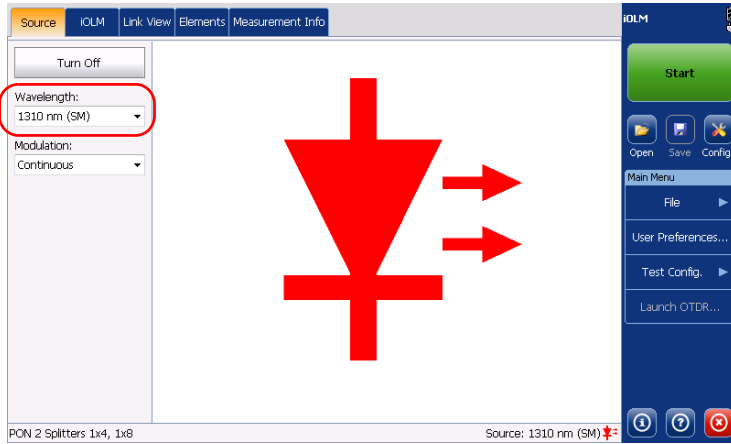


### 3. Select the desired modulation from the **Modulation** list.

Select **Continuous** to receive the measurement loss with a power meter at the other end.

Select **1 kHz** or **2 kHz** to identify the fiber under test, which could be particularly useful when working with cables containing many fibers.

You can also select **1 kHz + Blink** and **2 kHz + Blink** for easier fiber identification. If you select this pattern, the modulated signal (1 KHz or 2 KHz) is sent for 1 second, then is off for the next second, then be sent again for 1 second, and so on.

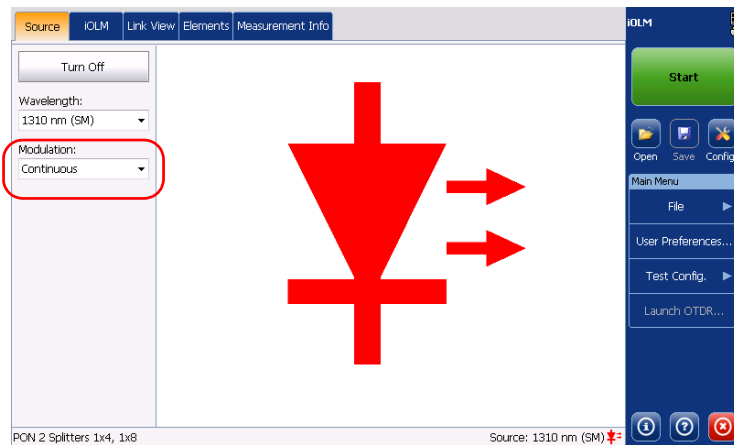

### 4. Select **Turn On** to start emission.

**Note:** The application displays the source wavelength, source port, and the turn on state in the status bar.




# 10 Starting the OTDR Application

You can start the classic OTDR application without leaving the iOLM application. You can use this option to do real-time acquisitions with the OTDR application and quickly switch back to the iOLM application to troubleshooting in a more user-friendly environment.

**Note:** This option is available only when the OTDR or RT software option is activated.

## To use the OTDR application:

1. From the Main Menu, tap **Launch OTDR**.

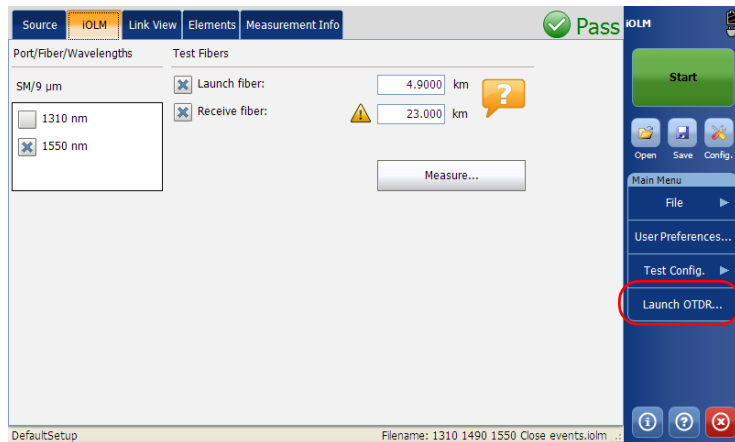


**Note:** You cannot do any operations related to hardware when the classic OTDR application is started. You will be notified that you need to close the OTDR application to allow interaction with the hardware.

## Starting the OTDR Application

---

2. Tap **Start** to start the OTDR acquisition. For more information, refer to the OTDR user guide.

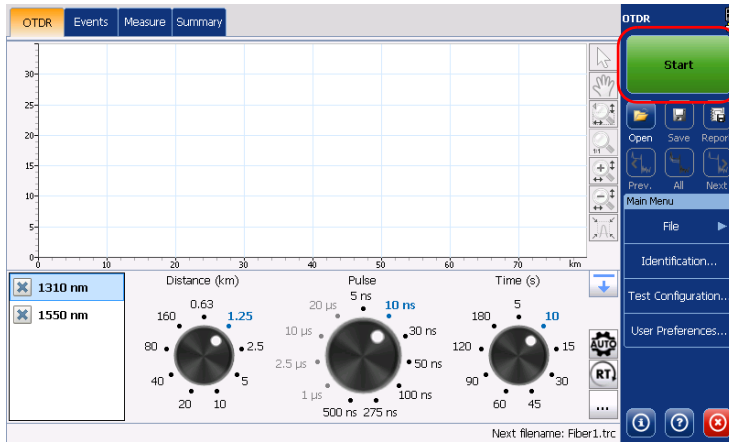

**Note:** *The aspect of the OTDR application could differ slightly depending on the unit you are using.*

# 11 Managing Results


This section explains the link view, measurement information, element details, and the results displayed after the acquisition process.

## Link View

The iOLM Link View is an intuitive representation, which combines several measurement results and values into a single view.

The Link view is divided into five different regions.

- Link overview
- Link composition
- Link details, which include
  - iOLM results
  - Global Pass/Fail Status

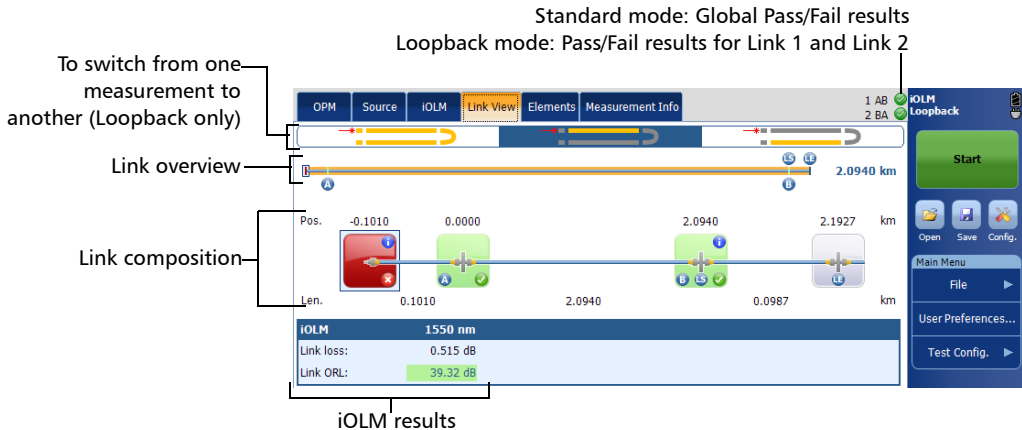

## Link Overview

The link overview shows the entire link without scrolling. You can directly select an element by tapping the tick mark (+) representing it.

The following color codes are used for the link overview.

## Managing Results


### Link View

---

- Red: If element is fail.
- Green: If element is pass.
- Blue: When the element is not tested for Pass/Fail or the status of the element is unknown.

The pass/fail status also depends on the threshold values specified. See *Modifying Element Pass/Fail Thresholds* on page 74 for more details.

The link overview representing all the elements discovered on the link is described below.

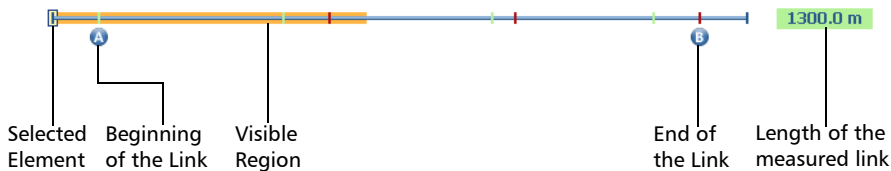

- Length of the measured link: Length of the measured link excluding the launch and receive fiber. In other words, the fiber length between point A and point B.
- Selected element: Rectangle representing the selected element.
- Visible region: The colored background represent the visible region in the Link Composition view.
- Beginning of the link: Beginning of the link under test.
- End of the link: End of the link under test.


Elements before A and after B are referred to as *out of span* elements. Elements out of the span are not tested for pass/fail status, but can have diagnostics on them. If the receive fiber is not defined, the element marked as "B" will not be tested for pass/fail.

## Link Composition


The link composition is described below.



**Standard measurement**

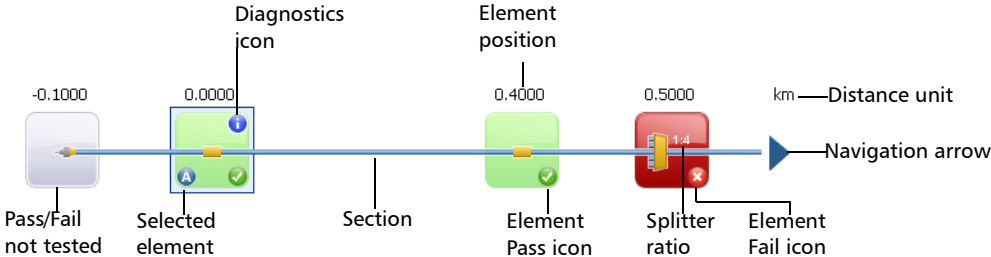

**Loopback measurement**

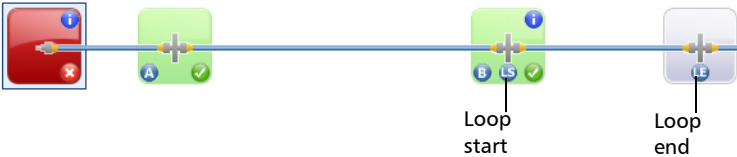




## Managing Results




### Link View

---

- Element position: The distance of the element from the beginning of the link under test.
- Navigation Arrow: The navigation arrow is only displayed when more items are available on a particular side. It indicates that you have to scroll to view those items.
- Selected Element: The gray background represents the currently selected element.
- Letter A: The beginning of the link under test.
- Letter B: The end of the link under test.

**Note:** An arrow (➤) icon is displayed on the element, if the start and the end of the link is represented by the same element.

- Element Pass/Fail: The status of the element whether it is pass, fail, or unknown.
- Element Pass icon : The pass status of the element.
- Element Fail icon : The fail status of the element.
- Pass/Fail not tested: Gray background indicates that the element is unknown. If there is no icon at the right side corner, it indicates that thresholds are not applied on the element and the element is not tested for Pass/Fail.
- Diagnostics icon : This icon specifies that some diagnostics are present on the element. See *Understanding Diagnostics* on page 97 for more details.
- Distance Unit: The units are defined in the **Distance unit** under **General** tab in **User Preferences**.
- Splitter Ratio: The splitter ratio is displayed on the element, if the element type is a splitter.

- Loop Start icon : Indicates the beginning of the loop.
- Loop End icon : Indicates the end of the loop.
- Loop Middle icon : The loop middle icon is displayed on the element if the loop is configured on a single element. The element can be a splice or a connector. When the length of the loop is set to zero, the loop is identified in the middle of the link. An item is automatically added to the links when no one is found.

**Note:** *The number of elements displayed in the composition view varies according to the available space, number of elements, and section size.*

**Note:** *When the link length is large, not all of the elements are visible; you may need to scroll on the link using the navigation arrow.*

**Note:** *The distance between the elements are not 100 % proportional. To have a proportional representation of the element, see Link Overview on page 105.*

## Managing Results

### Link View

---


## Link Groups

Link elements will be displayed as groups when the iOLM analysis detects several link elements that are too close to one another to be independently characterized. When this occurs, as much information as possible will be displayed for each individual sub-element. The pass/fail status is applied to each sub-element whenever possible, and a global status is also displayed for the group.

Groups can also be displayed when a link element (such as a splitter) is found to have wavelength dependant loss. In that case, the link element is grouped with a macrobend element. In this particular case, there might not be a physical macrobend next to the link element, but the macrobend icon is used to highlight the presence of the wavelength dependant loss.

When elements are grouped, the group loss and group reflectance value is also displayed in the **Elements** tab.

The grouped elements are described below.

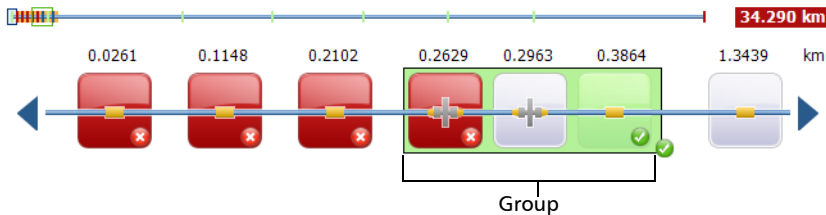

Each sub-element is directly displayed as if they were normal elements. See *Link Composition* on page 106 for more details on elements.

**Note:** *For grouped elements, some values may not be available individually but are available at the group level such as loss and reflectance.*

**Note:** *If some elements are grouped then the total group loss value is compared with the addition of the thresholds defined for the individual elements in group. If the total group loss value is greater than the addition of the thresholds defined for the individual elements in group, the element will show a fail status.*

You can individually select grouped elements as any other standalone element.






When elements are grouped at the beginning of the link, icon A is displayed on one of the sub-elements.


When elements are grouped at the end of the link, icon B is displayed on one of the sub-elements.

### Link View Elements

The iOLM Link View is an intuitive representation which combines several measurement results and values into a single view.

You can find the following elements in the iOLM Link View.

Element Name	Element Icon	Element Description
Macrobends		Macrobends can be displayed in the link view when more than one wavelength is present in the measurement.  <b>Note:</b> <i>The macrobend will always be displayed as a failed element.</i>
Out of Range		The out of range element is displayed when the end of fiber could not be detected by the module because of not enough dynamic range.
Splitter		The splitter is a passive fiber optic coupler that divides light from a single fiber into two or more fiber channels. The splitter ratio is displayed beside the icon.
2:N Splitter		2:N splitter can be used to create network redundancy. If a network break occurs, the operator can connect through the other network branch.
Splice		The splice can indicate the junction of two fiber sections, the presence of a macrobend, or a microbend in the fiber.

Element Name	Element Icon	Element Description
Connector		The connector is used to join two fibers.


## Managing Results

### Link View

## iOLM Results

The iOLM acquisition results are displayed in the **iOLM** table for all the wavelengths at which the iOLM acquisition was performed.

**Note:** *The iOLM results are not displayed if they are not available.*

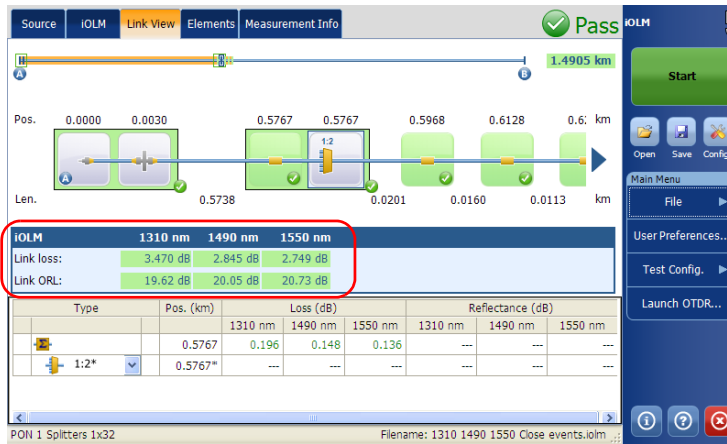

When a multiple-wavelength acquisition is in progress, only the wavelength currently being acquired and the ones already completed are displayed. Link loss, link ORL, and propagation delay (multimode only) are displayed for each wavelength. For the link loss and the link ORL, the values are tested and displayed according to current pass/fail settings.

**Note:** *The propagation delay (multimode only) is a global link measurement which is measured by the OTDR. It is defined by the amount of time necessary for a signal to travel from point A to point B. It may vary between wavelengths.*

**Note:** *If the link ORL value is saturated, that is, if the value is displayed with a < symbol, the value will be tested for Pass/Fail and it will be able to specify the fail status if the value is fail, but it will not be able to specify the pass status.*



## Unidirectional and Bidirectional Loopback Results


The loopback measurement is especially designed for testing cables formed of a pair of identical fibers of an equivalent length. The measuring time is optimized because two fibers are checked in a single measurement.

The loopback results appear after a successful split.

- In the case of a uni-bidirectional loopback measurement:

You can navigate through the split measurement and the original measurement by selecting the appropriate icon at the top of the link view.

The original measurement is analyzed and the pass/fail thresholds are displayed for this measurement. However, there is no overall status for the original measurement. The overall status is only for the split measurements.

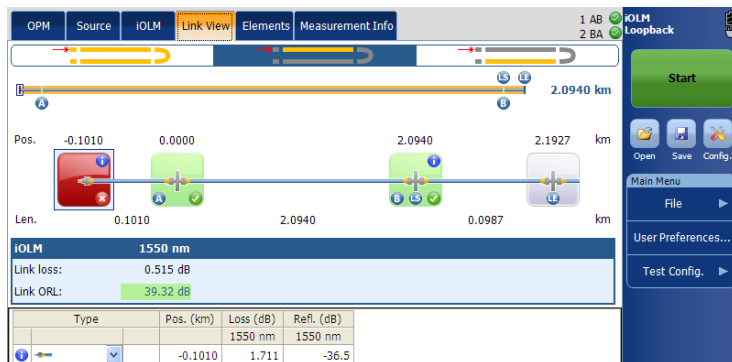

## Managing Results


### Global Pass/Fail Status

---

- In the case of a bidirectional loopback measurement:

After the first measurement is taken, the results are presented exactly as they would be for a non-bidirectional loopback measurement.

After the second measurement is taken, both measurements are split properly, and the application generates the bidirectional measurement for the two fibers.

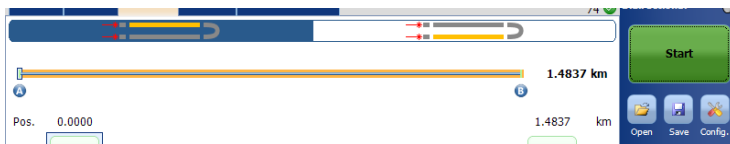

## Global Pass/Fail Status

The global pass/fail status depends on the pass/fail status of the link length, link loss, link ORL, and the link elements.

If any of the status is fail, then the global pass/fail status will be fail.

The status is automatically updated when a value is modified in the application. When the element type is changed from the **Elements** tab, the individual pass/fail status is recalculated, which might affect the global pass/fail status.


The iOLM application waits for the acquisition to finish before displaying the Pass status. However, the Fail status is displayed as soon as any of the values tested has a Fail status. A fail value can change to unknown or pass when the acquisition is finished.

**Note:** *It is important to complete the entire acquisition process to have a good pass/fail status.*


The global pass/fail status of the iOLM measurement is displayed as unknown, if there is no failed value and one element is not tested because it follows the 2:N splitter on the link.

In loopback measurements modes, when the measurement is split (link 1 and link 2), the global pass/fail status is replaced by the link 1 and link 2 statuses.

**Standard measurement**

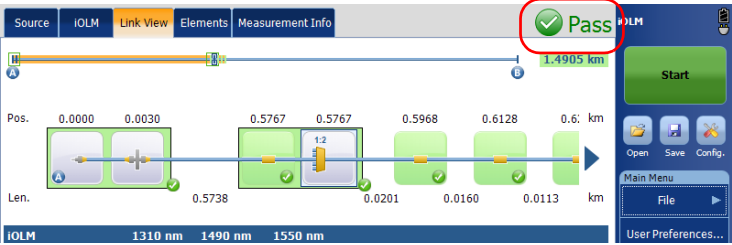

**Loopback measurements**

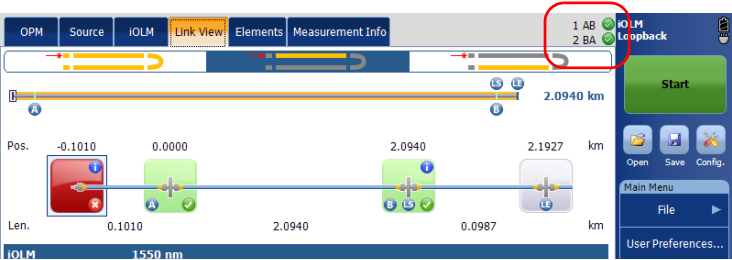

# Managing Results

## Viewing Element and Section Details

### Viewing Element and Section Details

When an element or section is selected from the **Link View** tab, the details of the corresponding element/section is displayed in the **Elements** tab.


The loss and reflectance are displayed with appropriate coloring based on the pass/fail status of each value.

#### To view the element or section details:

1. From the **Link View** tab, select the desired element or section.

**Note:** You can select the section only if the **Fiber section(s)** option is enabled in the **User Preference** window. For more information, see Defining General Settings on page 21.

2. From the main window, tap the **Elements** tab. You can view the selected element or section details.

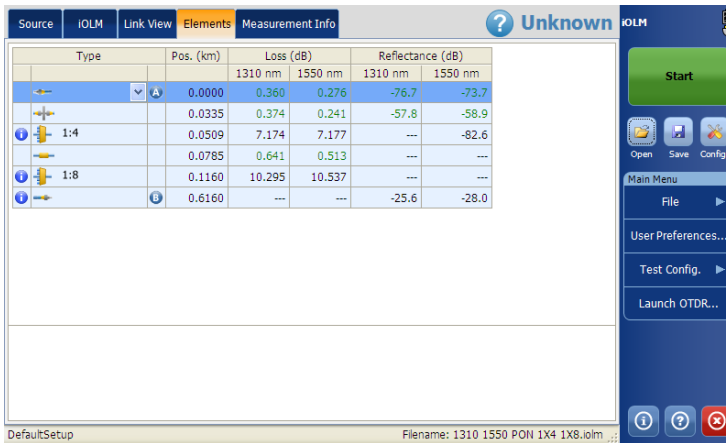

3. Under the **Elements** tab, the following information is displayed.
  - **Type:** The type of element selected in the Link View. You can modify the type of element by selecting it from the drop down menu. You can change the splitter ratio if the selected element is a splitter. You can change the element type to splitter ratio 2:N if the

iOLM EXpert option is activated and the 2:N splitter ratio is present in the iOLM measurement. If the custom element is defined in the test configuration used for iOLM acquisition, you can select the custom element from the element type list. For more information on custom element, see *Managing Custom Elements (Optional, iOLM EXpert Mode Only)* on page 65.

- The application displays the beginning of the link **A** and link end **B** in the element table. If the beginning of the link and link end are in the same element, the application displays **↓** in the element table. This information is also displayed in the report.
- In loopback measurement modes, the application displays the link start (A), the loop start (LS), the loop middle (LM) or the loop end (LE) and the link end (B). You can navigate through the split measurement and the original measurement by selecting the appropriate icon at the top of the link view.
- **Position:** The position of the selected element in the link. The position 0.00 is set on the first element when the launch fiber is present.

Type	Pos. (km)	Loss (dB)		Reflectance (dB)	
		1310 nm	1550 nm	1310 nm	1550 nm
↔	0.0000	0.360	0.276	-76.7	-73.7
↔	0.0335	0.374	0.241	-57.8	-58.9
1:4	0.0509	7.174	7.177	---	-82.6
↔	0.0785	0.641	0.513	---	---
1:8	0.1160	10.295	10.537	---	---
↔	0.6160	---	---	-25.6	-28.0

## Managing Results

### Viewing Element and Section Details

---

**Note:** When an element is selected through **Elements** table, automatically the corresponding element of the link view will get selected

**Note:** The items available in the list depends on the characteristics of the selected element. It may not be possible to change the element type.

**Note:** If the type of an element is modified, a “\*” sign is displayed at the value in the **Type** column. When you generate the report the “\*” mark is displayed in the **Type** column of the report.

- **Loss (dB):** The loss at different wavelengths.
- **Reflectance (dB):** The reflectance at different wavelengths.
- **Attenuation:** If any section is selected in the Link view then the attenuation value is displayed in the **Elements** table.

**Note:** It is possible to underestimate the loss or reflectance value if the noise level is too high (for instance, after a lot of loss on the link, the noise levels increase). In that case, it is possible for the signal processing algorithms to detect an element, and to estimate the loss/reflectance values, but since the measured signal does not completely clear the noise floor, the loss or reflectance/Attenuation values are likely to be underestimated. If the loss or reflectance/Attenuation value is underestimated, the value is displayed with a > symbol.

**Note:** If the loss or reflectance value is saturated, that is, the value is displayed with a > symbol, the value will be tested for Pass/Fail and it will be able to specify the fail status if the value is fail but it will not be able to specify the pass status.

For grouped elements, the following information is displayed:

- ▶ **Group Loss:** The total loss of the grouped elements.
- ▶ **Group Reflectance:** The highest reflectance of the grouped elements.

**Note:** *When the main screen is split, the first row of the element table displays the Group Loss and Group Reflectance, and the second displays the loss and reflectance of the selected element of the group.*

## Managing Elements and Analyzing Links (Optional, iOLM Expert and Loopback Modes)

The application allows you to add and delete elements from both the Link view and **Elements** tab. You can also analyze the link.

**Note:** *These functionalities are available only if the iOLM Expert option is activated.*

### Adding Elements

The iOLM application allows you to add elements by selecting any element or fiber section.

**Note:** *You cannot add an element after the last element.*

**Note:** *When an element is edited on a multimode wavelength, it is impossible to change the type of this element to a splitter.*

## Managing Results

### *Managing Elements and Analyzing Links (Optional, iOLM Expert and Loopback Modes)*

#### **To add an element:**

1. Open an iOLM file.
2. Select the existing element in the Link view where you want to add the new element

OR

Select the element from the **Elements** tab.

3. Tap and hold on the element to view the contextual menu and select **Add element**. If a mouse is connected to your platform, then right-click on the element or click and hold down the mouse button to view the contextual menu.

The screenshot displays the iOLM software interface. At the top, there are tabs for 'Source', 'IOLM', 'Link View', 'Elements', and 'Measurement Info'. A green 'Pass' indicator is visible in the top right corner. The main area shows a link view with a blue line representing the link and various elements along it. A contextual menu is open over one of the elements, with the 'Add Element...' option highlighted by a red circle. Below the link view, there is a table showing link loss and ORL for different wavelengths (1310 nm, 1490 nm, 1550 nm). The status bar at the bottom shows 'DefaultSetup' and 'Filename: 1310 1490 1550 Close events.iolm'.


IOLM		1310 nm	1490 nm	1550 nm
Link loss:		3.470 dB	2.845 dB	2.749 dB
Link ORL:		19.62 dB	20.05 dB	20.73 dB

Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767**	---	---	---	---	---	---



4. In the **New Element** dialog box, configure the element details.
  - 4a. You can add the new element after or before the selected element. The position can be selected as required in the **Location** field.
  - 4b. Select the type of the new element as required.

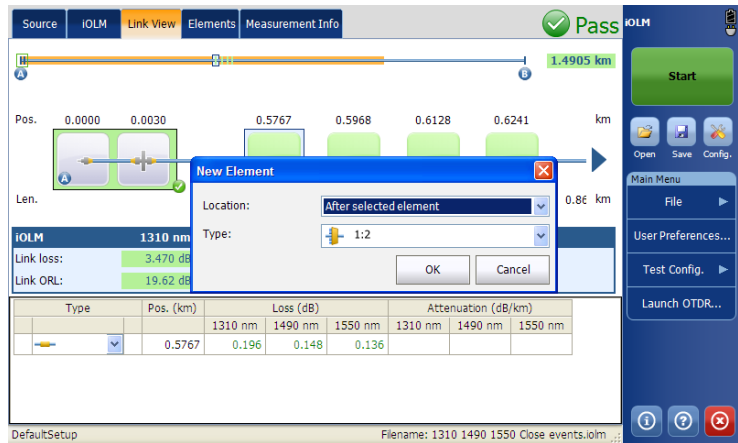

**Note:** *The 2:N splitter and custom elements are displayed in the element type list if they are present in the selected iOLM files.*

5. Tap **OK** to apply the changes or **Cancel** to discard them.

**Note:** *If an element is added, the “\*” sign is displayed at the **Position** and **Type** columns in the **Elements** table.*

**Note:** *You can add an element to a group of elements and it will influence the pass/fail status of the grouped element.*

## Managing Results

### Managing Elements and Analyzing Links (Optional, iOLM EXPert and Loopback Modes)

The application also allows you to add an element by selecting the fiber section.

**Note:** You can select the fiber section only if the **Fiber section** option is enabled from **User Preferences > General**.

#### To add an element on a fiber section:

1. Open an iOLM file.
2. Select the required section in the Link view where you want to add the element.

OR

Select the section from the **Elements** tab.

3. Tap and hold on the fiber section to view the contextual menu and select **Add element**. If a mouse is connected to your platform, then right-click on the fiber section or click and hold down the mouse button to view the contextual menu.


iOLM			
	1310 nm	1490 nm	1550 nm
Link loss:	3.470 dB	2.845 dB	2.749 dB
Link ORL:	19.62 dB	20.05 dB	20.73 dB

Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767*	---	---	---	---	---	---

4. Enter the position of the new element in the **Position** field as per your requirement.
5. Select the element type in the **Type** list.

**Note:** The 2:N splitter and custom elements are displayed in the element type list if they are present in the selected iOLM files.

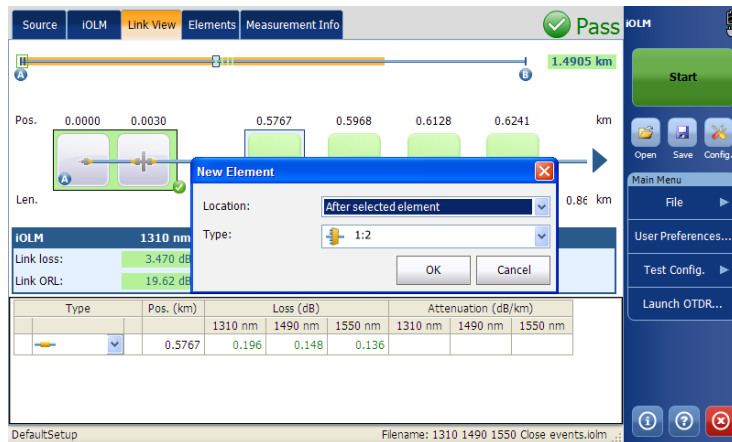

6. Tap **OK** to apply the changes or **Cancel** to discard them.

# Managing Results

## Managing Elements and Analyzing Links (Optional, iOLM Expert and Loopback Modes)

When you add a new element to an element or group of elements, the Loss and Reflectance values are set to “---” and the Pass/Fail threshold is not applied to the newly added element. Accordingly the status for the new element is reflected as unknown. The global pass/fail status can be affected after adding an element on an existing element. The added elements are taken into account to determine the pass/fail status of group.

The screenshot shows the iOLM software interface. At the top, there are tabs for Source, iOLM, Link View, Elements, and Measurement Info. A green checkmark and the word "Pass" are visible in the top right. Below the tabs is a graphical representation of a fiber link with various elements. A context menu is open over one of the elements, showing options: "Add Element...", "Delete Element", and "Analyze Link".

Below the graphical view is a table with the following data:

	1310 nm	1490 nm	1550 nm
Link loss:	3.470 dB	2.845 dB	2.749 dB
Link ORL:	19.62 dB	20.05 dB	20.73 dB

Below this table is another table with columns for Type, Pos. (km), and Reflectance (dB) for three wavelengths (1310 nm, 1490 nm, 1550 nm). The first row is highlighted with a red box:

Type	Pos. (km)	1310 nm	1490 nm	1550 nm
1:2*	0.5767*	---	---	---

The interface also includes a right-hand sidebar with buttons for Start, Open, Save, Config, File, User Preferences, Test Config, and Launch OTDR. At the bottom, it shows "DefaultSetup" and "Filename: 1310 1490 1550 Close events.iolm...".

### Deleting Elements

The application allows you to delete manually added elements.

**Note:** *You cannot delete elements on the link of a loopback measurement for the original measurement, but you can delete added elements when working with the split measurements.*


**To delete an element:**

1. Open an iOLM file.
2. Select the required element which you want to delete.

OR

Select the element from the **Elements** tab.

3. Tap and hold on the element to view the contextual menu. If a mouse is connected to your platform, then right-click on the element or click and hold down the mouse button to view the contextual menu.

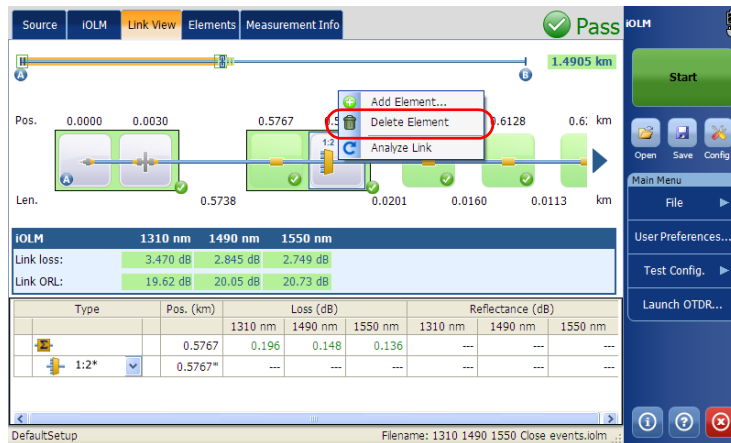

## Managing Results

*Managing Elements and Analyzing Links (Optional, iOLM EXpert and Loopback Modes)*

---

4. Select **Delete Element** from the contextual menu or tap Delete from the keyboard.
5. A confirmation message is displayed. Tap **Yes** to continue or **No** to cancel your choice.


## Analyzing Links

The application allows you to reanalyze measurements from the Link view as well as from the **Elements** tab. When you re-analyze the link, it regenerates all the elements from the acquired measurement and resets the link start and link end values. Once a measurement is re-analyzed, any UI element related to the link composition, values, and characteristic are refreshed. All the manually added elements are removed from the link; the global pass/fail status and element table are also refreshed when you analyze the link.

**Note:** *You cannot analyze elements on the link of a loopback measurement (either original measurement or split measurements).*

### To analyze the link:

1. Open an iOLM file.
2. Tap and hold on the Link view to view the contextual menu, and select **Analyze Link**. If a mouse is connected to your platform, then right-click on the Link view or click and hold down the mouse button to view the contextual menu.

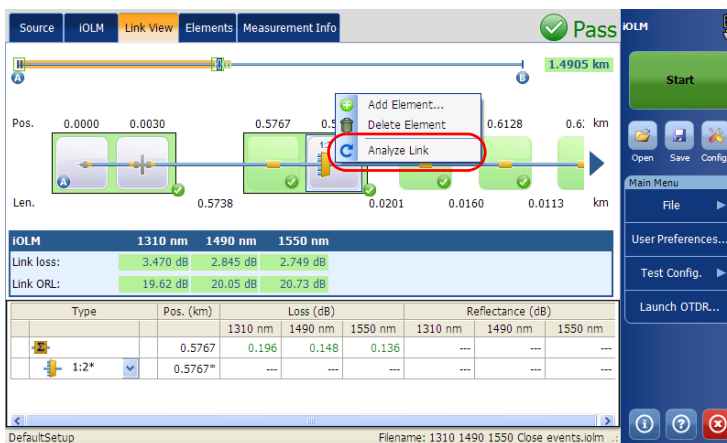

3. A confirmation message is displayed. Tap **Yes** to continue or **No** to cancel your choice.

# Managing Results

## Measurement Information

### Measurement Information


You can find information about a measurement, in the application, such as the file name, the acquisition date, the acquisition status, the analysis version, and the test method.

- The acquisition status indicates if the acquisition has been taken normally or if it has been interrupted.
- The analysis version is the version of the application used to analyze the measurement. It is the same as the install kit version.
- The test method indicates if the measurement was performed in loopback mode or not.

You can also have access to the identification information and to the measurement settings.

#### **To view measurement information:**

From the main window, tap **Measurement Info**.

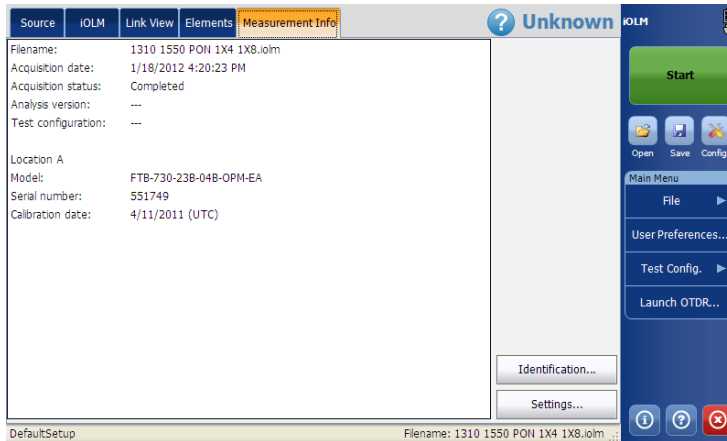


**Note:** If file autonaming is deactivated, the file name will be “---”.



**To view identification information:**

1. From the main window tap **Measurement Info**.
2. Tap **Identification**.

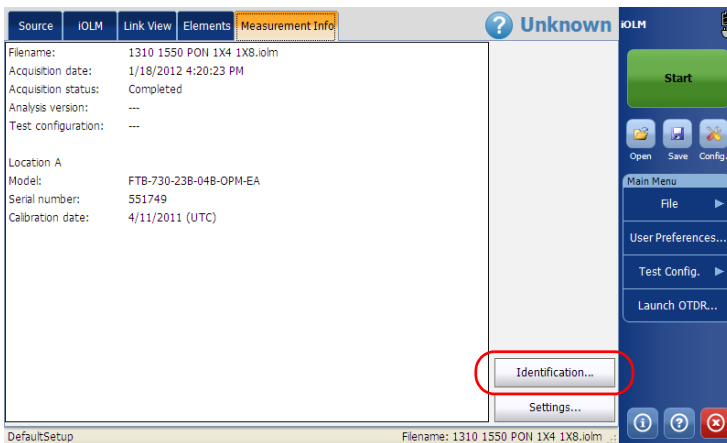

3. Modify the identification information, if required.
4. Set the direction of the measurement.

**Note:** When working in unidirectional loopback, the direction is disabled because it will be set automatically by the loopback process. In a bidirectional loopback measurement, the direction is automatically set to Bidirectional.

5. Tap **OK** to save the modification.

**Note:** The modifications done here will be saved in the measurement file only, not in the application user preferences.


## Managing Results

### Measurement Information

---

#### To view measurement settings:

1. From the main window, tap **Measurement Info**.
2. Tap **Settings**.

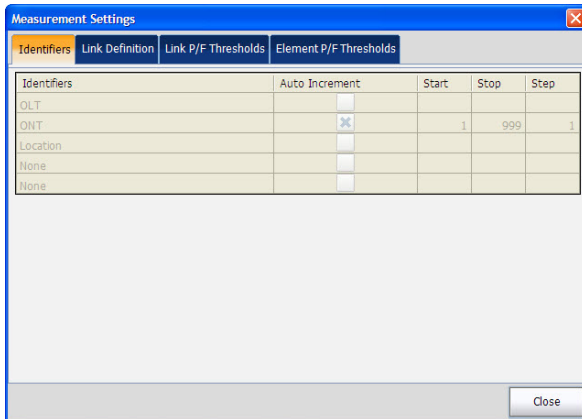

3. By default, the **Identifiers** tab is selected. To view the thresholds, select the corresponding tab.

**Note:** See *Modifying a Test Configuration on page 53* to modify the settings for future acquisitions.

4. Tap **Close** to close the window.

# 12 Managing Files

The **File** menu allows you to open an existing file, save a file, and generate a report from the measurement currently in the memory.

## Opening iOLM Files

The **Open** menu item allows you to open an existing iOLM file in the application.

**To open iOLM files:**

1. From the **Main Menu**, tap **File**.


The screenshot displays the iOLM application interface. At the top, there are tabs for 'Source', 'iOLM', 'Link View', 'Elements', and 'Measurement Info'. A green checkmark and the word 'Pass' are visible in the top right corner. Below the tabs, a network diagram shows a fiber link with various components and their positions. The 'Pos.' row shows values: 0.0000, 0.0030, 0.5767, 0.5767, 0.5968, 0.6128, 0.6 km. The 'Len.' row shows values: 0.5738, 0.0201, 0.0160, 0.0113 km. Below the diagram, there is a table with columns for 'iOLM', '1310 nm', '1490 nm', and '1550 nm'. The 'Link loss:' row shows values: 3.470 dB, 2.845 dB, 2.749 dB. The 'Link ORL:' row shows values: 19.62 dB, 20.05 dB, 20.73 dB. At the bottom, there is a table with columns for 'Type', 'Pos. (km)', 'Loss (dB)', and 'Reflectance (dB)'. The 'Loss (dB)' column has sub-columns for 1310 nm, 1490 nm, and 1550 nm. The 'Reflectance (dB)' column has sub-columns for 1310 nm, 1490 nm, and 1550 nm. The 'File' menu item in the right-hand sidebar is highlighted with a red circle.

Type	Pos. (km)	Loss (dB)			Reflectance (dB)		
		1310 nm	1490 nm	1550 nm	1310 nm	1490 nm	1550 nm
	0.5767	0.196	0.148	0.136	---	---	---
1:2*	0.5767"	---	---	---	---	---	---

# Managing Files


## Opening iOLM Files

### 2. Tap Open.

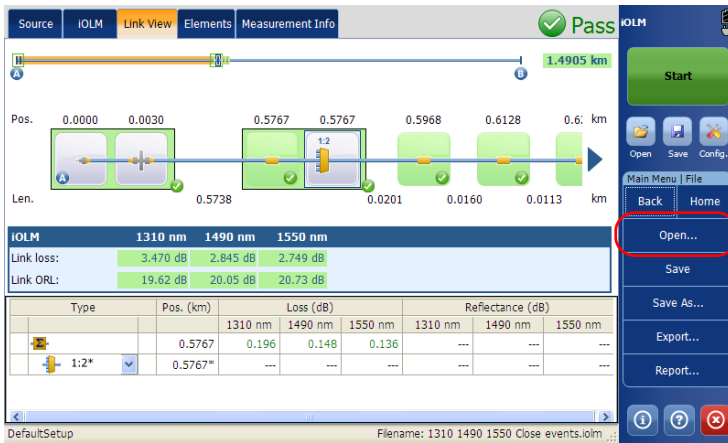

### 3. Select the file you want to open and tap Open.

**Note:** Depending on the type of unit you are using, the **Open** button may be replaced with an **OK** button.

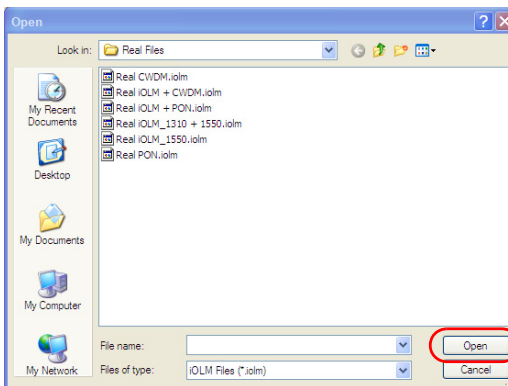

The file will be loaded in the application. The **Link View** and **Elements** tab are displayed by default.


## Saving iOLM Files

The **Save** or **Save As** menu item allows you to save an existing iOLM file on the disk.

If the wavelengths file name component is selected under the **Filename** tab, then all of the iOLM wavelengths present in the iOLM measurement are added to the file name.

### To save iOLM files:


1. From the **Main Menu**, tap **File**.

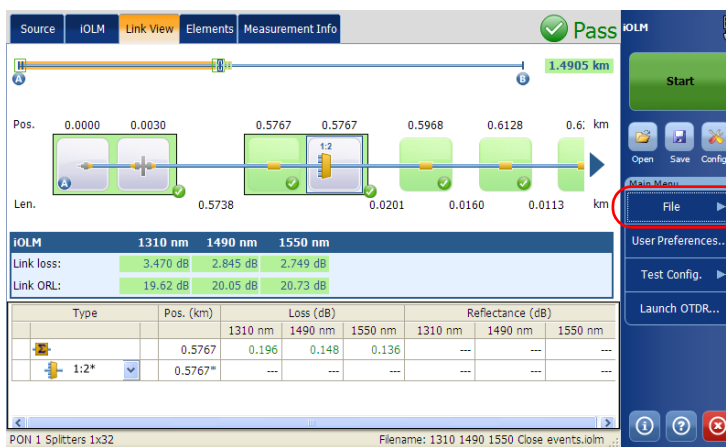

## Managing Files

### Saving iOLM Files

2. Tap either **Save** to overwrite the existing file with the new file, or **Save As** to enter a new name or location.

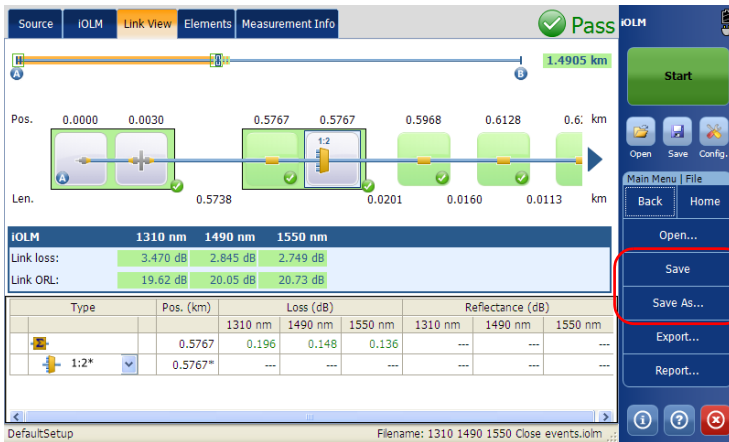


**Note:** If a file already exists on the disk and it is saved a first time after an acquisition, a confirmation message will be displayed to overwrite the existing file. If you select **No**, the **Save As** dialog box will open.

**Note:** If an OTDR Bellcore (.sor) file already exists on disk, a number in parenthesis will be automatically incremented at the end of the file name to avoid unwanted overwrite.

**Note:** The .sor format is not supported by the bidirectional loopback measurement.

3. Enter the file name and tap **Save**.

**Note:** Depending on the type of unit you are using, the **Save** button may be replaced with an **OK** button.

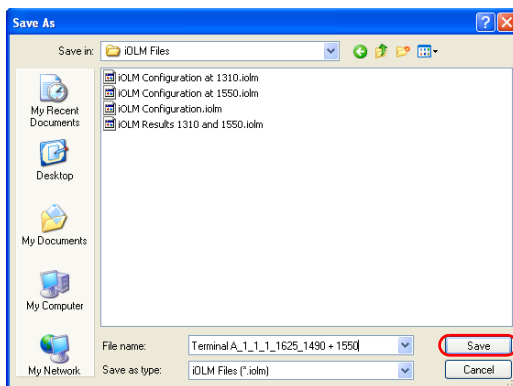

# Managing Files

## Exporting OTDR Bellcore Files

### Exporting OTDR Bellcore Files


The **Export** option allows you to manually export a OTDR Bellcore file to the disk. If multiple wavelengths are present in the iOLM measurement, a Bellcore (.sor) file is generated for each wavelength.

**Note:** The .sor format is not supported by the bidirectional loopback measurement.

**Note:** When a bidirectional measurement is loaded in memory, the **Export** button is disabled.


#### To export .sor file:

1. From the **Main Menu**, tap **File**.

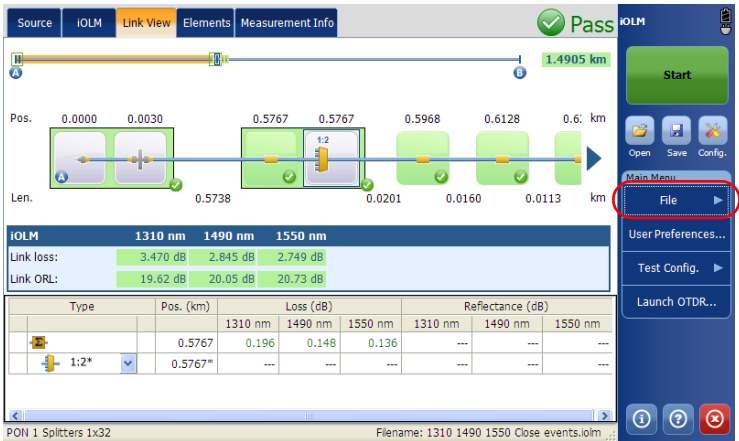



2. Tap **Export** to save the file in .sor format.

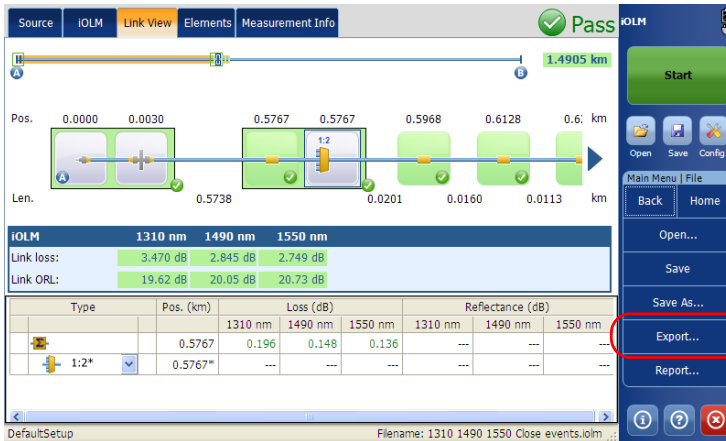

## Managing Files


### Exporting OTDR Bellcore Files

---

3. The default file name is displayed in the **File name** field. You can edit the file name and tap **Save**. If multiple wavelengths are present in the iOLM file, then the wavelengths are appended in the file name while you save the Bellcore (.sor) files.

**Note:** Depending on the type of unit you are using, the **Save** button may be replaced with an **OK** button.

**Note:** Application provides the path in dialog box to save the OTDR Bellcore (.sor) file on disk.

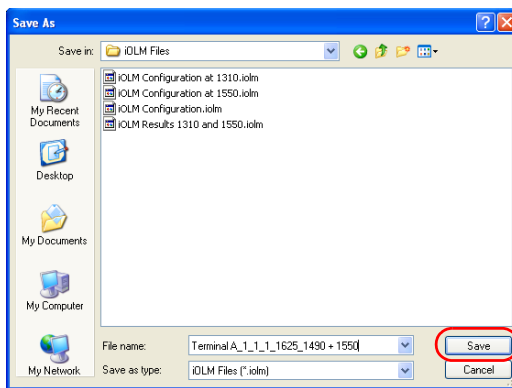

When you attempt to generate the .sor file and that the iOLM measurement does not contain the necessary intermediate OTDR measurements, you are notified that the file was not generated, and the reason why. If you interrupt the generation of the .sor file, you are also notified that the file was not generated.

## Generating a Report

The **Report** menu item allows you to generate an iOLM report.

**Note:** *You need Internet Explorer 7 or later to open .mht files. The UNmht plug-in is required to open the report files in any browser other than Internet Explorer. You can retrieve the plug-in on the website of the browser.*

**Note:** *In Internet Explorer, you have to enable the **Print Background Colors and Images** option from **File > Page Setup** to print the report properly.*


**Note:** *Google Chrome and Safari do not support the UNmht plug-in.*

# Managing Files


## Generating a Report

**To generate a report:**

1. From the Main Menu, tap File.

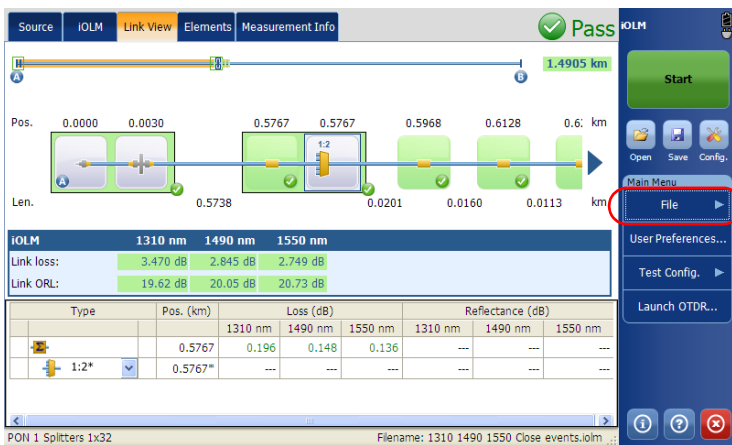


2. Tap Report.

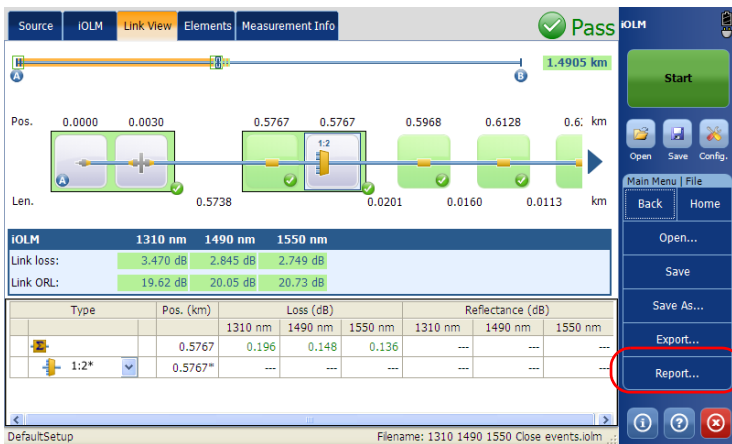

**3.** Enter the report file name and tap **Save**.

**Note:** *Depending on the type of unit you are using, the **Save** button may be replaced with an **OK** button.*

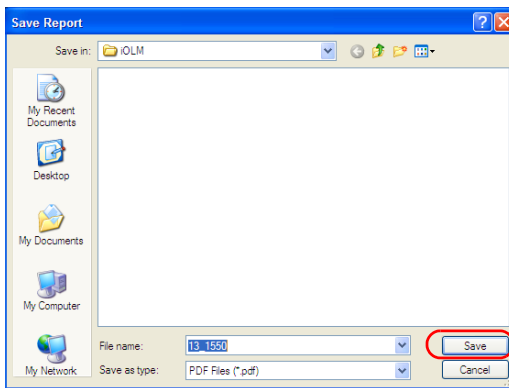



# 13 Maintenance

To help ensure long, trouble-free operation:

- Always inspect fiber-optic connectors before using them and clean them if necessary.
- Keep the unit free of dust.
- Clean the unit casing and front panel with a cloth slightly dampened with water.
- Store unit at room temperature in a clean and dry area. Keep the unit out of direct sunlight.
- Avoid high humidity or significant temperature fluctuations.
- Avoid unnecessary shocks and vibrations.
- If any liquids are spilled on or into the unit, turn off the power immediately, disconnect from any external power source, remove the batteries and let the unit dry completely.



## WARNING

The use of controls, adjustments and procedures, namely for operation and maintenance, other than those specified herein may result in hazardous radiation exposure or impair the protection provided by this unit.

## Cleaning UI Connectors

Regular cleaning of UI connectors will help maintain optimum performance. There is no need to disassemble the unit.



## IMPORTANT

If any damage occurs to internal connectors, the module casing will have to be opened and a new calibration will be required.

## Maintenance

### Cleaning UI Connectors




## WARNING


Looking into the optical connector while the light source is active **WILL** result in permanent eye damage. IDEAL strongly recommends to **TURN OFF** the unit before proceeding with the cleaning procedure.

### To clean UI connectors:

1. Remove the UI from the instrument to expose the connector baseplate and ferrule.

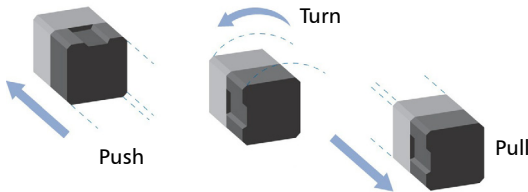

2. Moisten a 2.5 mm cleaning tip with *one drop* of isopropyl alcohol (alcohol may leave traces if used abundantly).
3. Slowly insert the cleaning tip into the UI adapter until it comes out on the other side (a slow clockwise rotating movement may help).

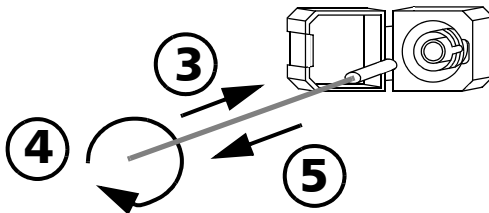

4. Gently turn the cleaning tip one full turn, then continue to turn as you withdraw it.
5. Repeat steps 3 to 4 with a dry cleaning tip.

**Note:** Make sure you don't touch the soft end of the cleaning tip.



**6.** Clean the ferrule in the connector port as follows:

**6a.** Deposit *one drop* of isopropyl alcohol on a lint-free wiping cloth.



## **IMPORTANT**

Isopropyl alcohol may leave residues if used abundantly or left to evaporate (about 10 seconds).

**Avoid contact between the tip of the bottle and the wiping cloth, and dry the surface quickly.**

**6b.** Gently wipe the connector and ferrule.

**6c.** With a dry lint-free wiping cloth, gently wipe the same surfaces to ensure that the connector and ferrule are perfectly dry.

**6d.** Verify connector surface with a portable fiber-optic microscope or fiber inspection probe.

**7.** Put the UI back onto the instrument (push and turn clockwise).

**8.** Throw out cleaning tips and wiping cloths after one use.

## Recalibrating the Unit

IDEAL manufacturing and service center calibrations are based on the ISO/IEC 17025 standard (*General Requirements for the Competence of Testing and Calibration Laboratories*). This standard states that calibration documents must not contain a calibration interval and that the user is responsible for determining the re-calibration date according to the actual use of the instrument.

The validity of specifications depends on operating conditions. For example, the calibration validity period can be longer or shorter depending on the intensity of use, environmental conditions and unit maintenance, as well as the specific requirements for your application. All of these elements must be taken into consideration when determining the appropriate calibration interval of this particular IDEAL unit.

Under normal use, the recommended interval for your intelligent Optical Link Mapper is: one year.

For newly delivered units, IDEAL has determined that the storage of this product for up to six months between calibration and shipment does not affect its performance (IDEAL Policy PL-03).

To help you with calibration follow-up, IDEAL provides a special calibration label that complies with the ISO/IEC 17025 standard and indicates the unit calibration date and provides space to indicate the due date. Unless you have already established a specific calibration interval based on your own empirical data and requirements, IDEAL would recommend that the next calibration date be established according to the following equation:

**Next calibration date = Date of first usage (if less than six months after the calibration date) + Recommended calibration period (one year)**

To ensure that your unit conforms to the published specifications, calibration may be carried out at an IDEAL service center or, depending on the product, at one of IDEAL's certified service centers. Calibrations at IDEAL are performed using standards traceable to national metrology institutes.

## Recycling and Disposal (Applies to European Union Only)



Recycle or dispose of your product (including electric and electronic accessories) properly, in accordance with local regulations. Do not dispose of it in ordinary garbage receptacles.

This equipment was sold after August 13, 2005 (as identified by the black rectangle).

- Unless otherwise noted in a separate agreement between IDEAL and a customer, distributor, or commercial partner, please return the equipment either to IDEAL or the business partner at which the equipment has been purchased.
- Except for reasons of safety or environmental benefit, equipment manufactured by IDEAL, under its brand name, is generally designed to facilitate dismantling and reclamation.

For complete recycling/disposal procedures and contact information, visit the IDEAL Web site at [www.europe.idealindustries.de](http://www.europe.idealindustries.de).

# 14 **Troubleshooting**

## **Viewing Online Documentation**

An online version of the intelligent Optical Link Mapper user guide is available at all times from the application.

### **To access online help:**

At the bottom of the **Main Menu**, tap .

## **Customer Support and Technical Assistance**

To obtain after-sales service or technical support for this product, contact IDEAL at one of the following numbers. All inquiries regarding service, calibration and technical assistance should be directed to the Customer Service department:

### **IDEAL Industries, Inc.**

Corporate Headquarters  
Becker Place  
Sycamore, IL 60178, USA

Tel.: 800-947-3612  
Fax: 815-895-4800  
[contactus@idealnetworks.net](mailto:contactus@idealnetworks.net)

### **IDEAL Industries (Canada), Inc.**

33 Fuller Road  
Ajax, Ontario L1S 2E1, Canada

Tel.: 800-824-3325  
Fax: 800-263-3115  
[ideal\\_canada@idealindustries.com](mailto:ideal_canada@idealindustries.com)

### **IDEAL Industries Product Solutions**

Stokenchurch House  
Oxford Road High Wycombe  
Stokenchurch Buckinghamshire  
HP14 3SX, United Kingdom

Tel.: +44 (0) 1494 486400  
Fax: +44 (0) 1494 486479  
[uksales@idealnwd.com](mailto:uksales@idealnwd.com)

## Troubleshooting

*Customer Support and Technical Assistance*

---

### **IDEAL Industries GmbH**

Gutenbergstrasse 10  
85737 Ismaning, Germany

Tel.: +49-89-99686-0  
Fax: +49-89-99686-111  
Tech. Hotline: +49-0-89-99-686-200  
[germanysales@idealnwd.com](mailto:germanysales@idealnwd.com)

### **IDEAL Networks (France)**

ZA Burospace  
Bâtiment 23  
Route de Gisy  
91570 Bièvres, France

Tel.: 01 69 35 54 70  
Fax: 01 60 19 00 48  
Tech. Hotline: +33 01 69 35 54 75  
[francesales@idealnwd.com](mailto:francesales@idealnwd.com)

### **IDEAL Industries Asia Limited (Beijing)**

Room 2507, Golden Tower  
No.1 South Road of Xibahe  
Chaoyang District  
Beijing, 100028 China

Tel.: 86-10-8518-3141  
[Ideal\\_China@idealindustries.com](mailto:Ideal_China@idealindustries.com)

### **IDEAL Industries Asia Limited (Shanghai)**

No.61, Lane 1000, Zhangheng Road  
Pudong District  
Beijing, 201203 China

Tel.: 86-021-3126-3188

### **IDEAL Industries India PVT Ltd**

229 - 230, Spazedge, Tower B,  
Sector 47, Sohna Road,  
Gurgaon, 122001, Haryana, India

Tel: +91 (0)956 0075 905  
E-Mail:  
[Indiasales@ideal-industries.in](mailto:Indiasales@ideal-industries.in)

### **IDEAL Industries Brasil**

Domo Business  
Rua José Versolato, 111 - Bloco B -  
Sala 826  
São Bernardo do Campo - SP  
09750-730, Brasil

Tel.: +55-011-4314-9930  
[Ideal\\_Brazil@idealindustries.com](mailto:Ideal_Brazil@idealindustries.com)

### **IDEAL Industries Mexico**

Paseo de los Adobes 1079-10, Ferran 3 Tel.: 52-055-2488129

Guadalajara Technology Park

ideal\_mexico@idealindustries.com

Zapopan, Jalisco, Mexico C.P. 45010

To accelerate the process, please have information such as the name and the serial number (see the product identification label), as well as a description of your problem, close at hand.

### Viewing Information About the Product

You can view the product version details and technical support information at any time.

**To view the information about the product:**

From the **Main Menu**, tap .

### Transportation

Maintain a temperature range within specifications when transporting the unit. Transportation damage can occur from improper handling. The following steps are recommended to minimize the possibility of damage:

- Pack the unit in its original packing material when shipping.
- Avoid high humidity or large temperature fluctuations.
- Keep the unit out of direct sunlight.
- Avoid unnecessary shocks and vibrations.



# 15 **Warranty**

## **General Information**

IDEAL warrants this equipment against defects in material and workmanship for a period of one year from the date of shipment. Any instrument found to be defective during the warranty period may be returned, transportation pre-paid, to the factory for repair without charge.

This warranty does not apply to instruments that have been repaired or altered by an unauthorized person, or which have been subjected to misuse, negligence, or accident, or to instruments on which the Calibration/Warranty seal is broken.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL IDEAL BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

## **Liability**

IDEAL shall not be liable for damages resulting from the use of the product, nor shall be responsible for any failure in the performance of other items to which the product is connected or the operation of any system of which the product may be a part.

IDEAL shall not be liable for damages resulting from improper usage or unauthorized modification of the product, its accompanying accessories and software.

## Exclusions

IDEAL reserves the right to make changes in the design or construction of any of its products at any time without incurring obligation to make any changes whatsoever on units purchased. Accessories, including but not limited to fuses, pilot lamps, batteries and universal interfaces (UI) used with IDEAL products are not covered by this warranty.

This warranty excludes failure resulting from: improper use or installation, normal wear and tear, accident, abuse, neglect, fire, water, lightning or other acts of nature, causes external to the product or other factors beyond the control of IDEAL.

## Service and Repairs

IDEAL commits to providing product service and repair for five years following the date of purchase.

***To send any equipment for service or repair:***

- 1.** Call one of IDEAL's authorized service centers (see *IDEAL Service Centers Worldwide* on page 158). Support personnel will determine if the equipment requires service, repair, or calibration.
- 2.** If equipment must be returned to IDEAL or an authorized service center, support personnel will issue a repair authorization number and provide an address for return.
- 3.** If possible, back up your data before sending the unit for repair.
- 4.** Pack the equipment in its original shipping material. Be sure to include a statement or report fully detailing the defect and the conditions under which it was observed.
- 5.** Return the equipment, prepaid, to the address given to you by support personnel. Be sure to write the repair authorization number on the shipping slip. *IDEAL will refuse and return any package that does not bear a valid number.*

**Note:** *A test setup fee will apply to any returned unit that, after test, is found to meet the applicable specifications.*

After repair, the equipment will be returned with a repair report. If the equipment is not under warranty, you will be invoiced for the cost appearing on this report. IDEAL will pay return-to-customer shipping costs for equipment under warranty. Shipping insurance is at your expense.

## **Warranty**

*IDEAL Service Centers Worldwide*

---

### **IDEAL Service Centers Worldwide**

If your product requires servicing, contact your nearest authorized service center.

#### **IDEAL Industries, Inc.**

Corporate Headquarters  
Becker Place  
Sycamore, IL 60178, USA

Tel.: 800-947-3612  
Fax: 815-895-4800  
contactus@idealnetworks.net

#### **IDEAL Industries (Canada), Inc.**

33 Fuller Road  
Ajax, Ontario L1S 2E1, Canada

Tel.: 800-824-3325  
Fax: 800-263-3115  
ideal\_canada@idealindustries.com

#### **IDEAL Industries Product Solutions**

Stokenchurch House  
Oxford Road High Wycombe  
Stokenchurch Buckinghamshire  
HP14 3SX, United Kingdom

Tel.: +44 (0) 1494 486400  
Fax: +44 (0) 1494 486479  
uksales@idealnwd.com

#### **IDEAL Industries GmbH**

Gutenbergstrasse 10  
85737 Ismaning, Germany

Tel.: +49-89-99686-0  
Fax: +49-89-99686-111  
Tech. Hotline: +49-0-89-99-686-200  
germanysales@idealnwd.com

#### **IDEAL Networks (France)**

ZA Burospace  
Bâtiment 23  
Route de Gisy  
91570 Bièvres, France

Tel.: 01 69 35 54 70  
Fax: 01 60 19 00 48  
Tech. Hotline: +33 01 69 35 54 75  
francesales@idealnwd.com

**IDEAL Industries Asia Limited (Beijing)**

Room 2507, Golden Tower  
No.1 South Road of Xibahe  
Chaoyang District  
Beijing,100028 China

Tel.: 86-10-8518-3141  
Ideal\_China@idealindustries.com

**IDEAL Industries Asia Limited  
(Shanghai)**

No.61, Lane 1000, Zhangheng Road  
Pudong District  
Beijing, 201203 China

Tel.: 86-021-3126-3188

**IDEAL Industries India PVT Ltd**

229 - 230, Spazedge, Tower B,  
Sector 47, Sohna Road,  
Gurgaon, 122001, Haryana, India

Tel: +91 (0)956 0075 905  
E-Mail: Indiasales@ideal-industries.in

**IDEAL Industries Brasil**

Domo Business  
Rua José Versolato, 111 - Bloco B -  
Sala 826  
São Bernardo do Campo - SP  
09750-730, Brasil

Tel.: +55-011-4314-9930  
Ideal\_Brazil@idealindustries.com

**IDEAL Industries Mexico**

Paseo de los Adobes 1079-10, Ferran 3  
Guadalajara Technology Park  
Zapopan, Jalisco, Mexico C.P. 45010

Tel.: 52-055-2488129  
ideal\_mexico@idealindustries.com



# Index

<b>A</b>	
adding element .....	121
after-sales service .....	151
auto incrementing identifiers .....	56
<b>B</b>	
backscatter .....	59
beginning of the link .....	106
bidirectional	
acquisition .....	91
loopback results .....	115
<b>C</b>	
caution	
of personal hazard .....	8
of product hazard .....	8
certification information .....	v
cleaning	
fiber ends .....	17
front panel .....	145
UI connectors .....	145
configuration files .....	47
connector .....	113
connectors, cleaning .....	145
conventions, safety .....	8
custom elements .....	65
customer service .....	157
customizing file name .....	26
<b>D</b>	
deleting test configuration .....	78
distance unit .....	23, 108
<b>E</b>	
electrical safety information .....	11
end of the link .....	108
<b>F</b>	
exporting a test configuration .....	83
<b>F</b>	
fiber	
launch .....	39
receive .....	39
section .....	23
fiber ends, cleaning .....	17
file	
functionalities .....	22
name .....	26
save path .....	22
Filename tab .....	27
front panel, cleaning .....	145
<b>G</b>	
General tab .....	21
generating report on save .....	23
global pass/fail status .....	116
<b>H</b>	
help. see online user guide	
<b>I</b>	
icons .....	40
identification label .....	153
Identification tab .....	24
identifiers .....	28, 56
importing a test configuration .....	80
iOLM	
acquisitions .....	89
wavelength(s) .....	38
IOR .....	59
<b>J</b>	
job ID .....	28

# Index

---

## L

label, identification .....	153
launch	
fiber length .....	39
length of the measured link .....	106
link	
composition .....	106
end .....	106
groups .....	110
length .....	73
loss .....	73
ORL .....	73
overview .....	105
loop	
end .....	109
middle .....	109
start .....	109
loopback	
mode .....	37, 39, 119
results .....	115

## M

macrobends .....	112
maintenance	
front panel .....	145
general information .....	145
UI connectors .....	145
measurement information .....	130
modifying	
element pass/fail thresholds .....	74
link definition .....	56
link pass/fail thresholds .....	71
test configuration .....	53
mounting UI connector adapter .....	19

## N

naming trace files automatically .....	31
navigation arrow .....	108

## O

online user guide .....	151
OTDR application .....	103

## P

pass/fail status .....	116
PDF. see online user guide	
performing	
bidirectional acquisitions .....	91
iOLM acquisitions .....	89
PON Last Mile .....	47
product	
identification label .....	153

## R

receive fiber length .....	39
report .....	141

## S

safety	
caution .....	8
conventions .....	8
warning .....	8
saving an acquisition .....	135, 138
selected element .....	106, 108
selecting test configuration .....	47
service and repairs .....	157
service centers .....	158
software options .....	7
sound notification .....	23
splice .....	112
splitter	
ratio .....	59, 108
status pass/fail .....	116
stopping acquisition .....	95
storage requirements .....	145
symbols, safety .....	8



**T**

technical support ..... 151  
temperature for storage ..... 145  
test parameters ..... 37  
transportation requirements ..... 145, 154

**U**

UI  
    baseplate ..... 19  
    connector adapter ..... 19  
    dust cap ..... 19  
UI connectors, cleaning ..... 145  
universal interface. *see* UI  
user guide. *see* online user guide

**V**

visible region ..... 106

**W**

warranty  
    exclusions ..... 156  
    general ..... 155  
    liability ..... 155  
wavelength ..... 28, 73

## NOTICE

### 通告

#### CHINESE REGULATION ON RESTRICTION OF HAZARDOUS SUBSTANCES 中国关于有害物质限制的规定

#### NAMES AND CONTENTS OF THE TOXIC OR HAZARDOUS SUBSTANCES OR ELEMENTS CONTAINED IN THIS IDEAL PRODUCT



包含在本**IDEAL** 产品中的有毒有害物质或元素的名称和含量

O	Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
X	Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363-2006 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

Part Name 部件名称	Toxic or hazardous Substances and Elements 有毒有害物质和元素					
	Lead 铅 (Pb)	Mercury 汞 (Hg)	Cadmium 镉 (Cd)	Hexavalent Chromium 六价铬 (Cr VI)	Polybrominated biphenyls 多溴联苯 (PBB)	Polybrominated diphenyl ethers 多溴二苯醚 (PBDE)
Enclosure 外壳	O	O	O	O	O	O
Electronic and electrical sub-assembly 电子和电子组件	X	O	X	O	X	X
Optical sub-assembly <sup>a</sup> 光学组件 <sup>a</sup>	X	O	O	O	O	O
Mechanical sub-assembly <sup>a</sup> 机械组件 <sup>a</sup>	O	O	O	O	O	O

a. If applicable.  
如果适用。

MARKING REQUIREMENTS  
标注要求

Product 产品	Environmental protection use period (years) 环境保护使用期限 (年)	Logo 标志
This IDEAL product 本IDEAL 产品	10	
Battery <sup>a</sup> 电池 <sup>a</sup>	5	

- a. If applicable.  
如果适用。



Call Us 1.877.571.7901