

LF-Series Operating Instructions

Rev 1.1 (4/26/17)




RoHS

CE



LF-Series Operating Instructions

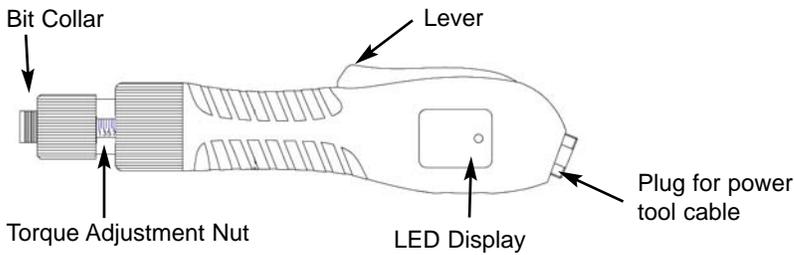

**Torque Cover
Item # 145700**
Protects the LF-Series from incidental or operator tampering of torque setting.



Operating the Tool

1. Attach power tool cable to the LF screwdriver and the transformer. Make sure notch in plug lines up with the notch on the socket. Tighten knurled ground ring.
2. Plug in power cord to the back of the transformer and power outlet. Flip power switch to "ON" position located on the back of transformer.
3. Select a bit. Retract the bit collar. Insert the bit and release the retracted collar. To avoid damaging fasteners, make sure the proper bit is suitable for the head of the fastener.
4. The torque limit is determined by the tension of the coil spring housed in the torque adjustment nut. The tighter the coil spring is wound the higher the torque limit is raised. See Torque Charts on page 3 to determine the appropriate torque adjustment setting.
5. Rotate the torque adjustment nut to set the torque limit. Turn clockwise to increase torque and counter clockwise to decrease torque. The scale adjacent to the Torque Adjustment Nut is a reference guide. The torque output from the driver can change depending on various fastening factors like friction, type of joint, and the type material being used like a washer. Verify torque setting with a torque testing system.
6. Turn driver on and check for proper rotation. FOR-clockwise, REV-counterclockwise.
7. To apply torque, squeeze the lever (Push-to-Start models - place light downward pressure on the nose of the driver). The driver will automatically stop when the preset torque has been reached.
8. To remove the screw, turn the FOR/REV switch to REV position.

Information by Color LED for BF brushless screwdriver

The LED display signals the tool status for the operator. It's located on the side of the tool. Below is the LED display indicator for reference.

No.	Description	Display	Reset
1	Over voltage input (over 32V)	● (Green) Light On-Off blink (0.5s)	Automatically resets when it's below DC32V.
2	Over load (over 4A/0.5s)	● (Red) Light On-Off blink (0.5s)	Automatically resets after 5 seconds.
3	Over temperature (over 80°C of motor)	● (Orange) Light On-Off blink (0.5s)	Automatically resets when it's below 80°C.
4	Driver Lock (Remote External Signal)	● (Orange) Light On Continuously	Reset by signal off



LED Display

LF-Series Operating Instructions


Torque Reference Charts

These charts are meant to be used as guidelines for setting the torque on the LF-Series electric screwdrivers. The drivers have a torque scale on the torque adjustment nut showing reference numbers. These numbers determine the approximate torque setting. Refer to the charts to determine the reference number setting for your torque requirement.


How to Read the Torque Charts

Torque ranges (lbf.in) approximate tightening torque, operated with no load at maximum speed. Verify torque setting with a torque testing system.


lbf.in LF060 & LF060P

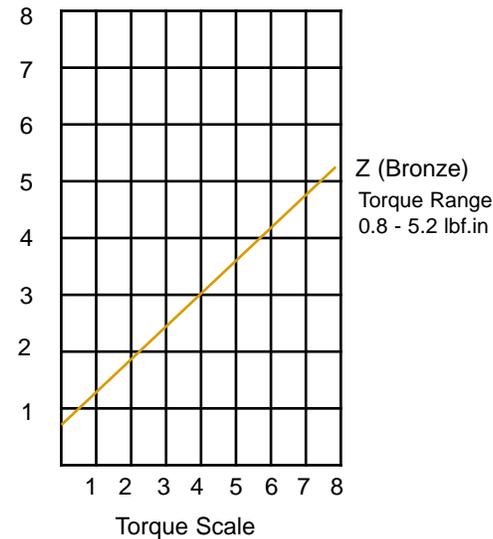


lbf.in LF080 & LF080P

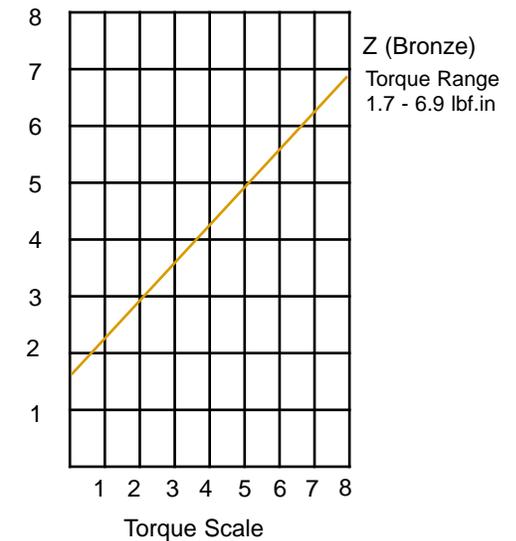

lbf.in LF120 & LF120P

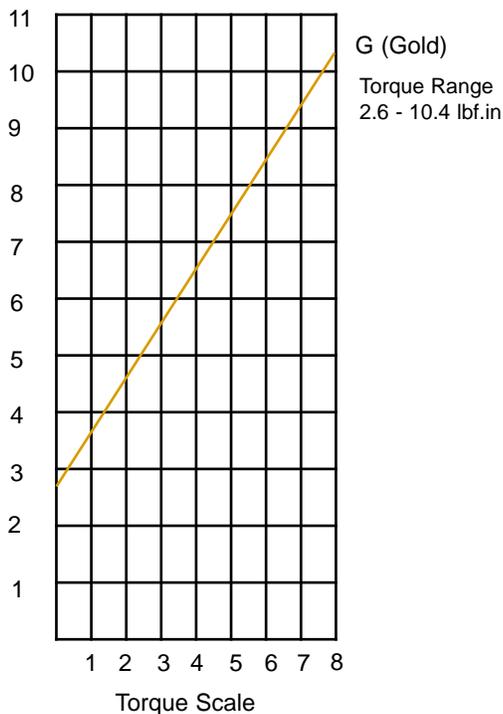

lbf.in LF180 & LF180P

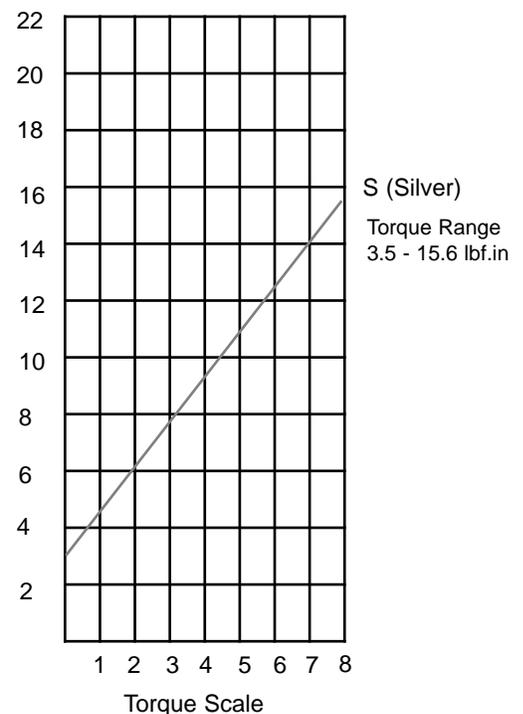



LF-Series Operating Instructions

Testing Power Tools:

1. Application Method: Use a torque tester in "Peak Mode" with a rotary torque sensor between the power tool and the actual application. This is the best way to test since you are using the actual joint as the test station. You will see the actual torque applied to the fastener. **Caution:** Variances in tool performance may occur do to the addition of the rotary torque sensor.
2. Simulated Method: Always use a quality joint rate simulator (run down adapter) with a torque tester when testing power tools in a simulated application. Use Joint rate and Breakaway methods to obtain most accurate torque readings in a simulated rundown.

Care

1. The LF-Series screwdrivers are a precision torque control instrument and should be handled with care at all times.
2. Only use the transformers listed in the Mountz catalog or website for appropriate LF-Series driver model (If you have any questions regarding the appropriate transformer set-up, contact Mountz Customer Service Department).
3. Operate under safe conditions. Do not place in operation where such objects as hair, strings, clothing, etc. can become tangled in the rotating bit.
4. Keep away from moisture. Never use in high humid, moist or damp environment.

Mountz Calibration & Repair Services

Mountz Inc. features an experienced calibration and repair staff. Our trained technicians can calibrate and repair most any tool. Mountz provides rapid service with quality that you can trust as we offer two state-of-the-art calibration lab and repair facilities that can calibrate up to 20,000 lbf.ft.

Mountz, The Torque Tool Specialists®, has been a leader in the torque tool industry for more than 50 years. Engineered in the Silicon Valley and serving the globe, Mountz focuses on delivering high-quality torque products, services, and solutions to ensure customers can always proceed with confidence. We are committed to forging a safer world through precision and accuracy, and by innovating every day.

Tool Service & Repair Capability

- Torque Wrench Calibration: Click Wrench, Dial Torque Wrench, Beam Wrench, Cam-Over & Break-Over Wrench
- Torque Screwdrivers: Dial, Micrometer, Preset & Adjustable
- Torque Analyzers/Sensors: All brands
- Electric Screwdrivers: All brands
- Air Tools: All brands
Impact Wrenches, Drills, Pulse Tools, Grinders, Percussive Tools,
Air Screwdrivers, Nutrunners, DC Controlled Nutrunners
- Torque Multipliers: All brands

Mountz Service Locations

Eastern Service Center

19051 Underwood Rd.
Foley, AL 36535
Phone: (251) 943-4125
Fax: (251) 943-4979

Western Service Center

1080 N.11th Street
San Jose, CA 95112
Phone: (408) 292-2214
Fax: (408) 292-2733

www.mountztorque.com
sales@mountztorque.com