www.jbctools.com

P&P Guide



JTSE

Power Hot Air Station

This Plug & Play Guide corresponds to the following references:

Ref.
JTSE-9B (100 V)
JTSE-1B (120 V)
JTSE-2B (230 V)

Station
More Information at the product web page

Video Guide
Watch the product video

Packing List

The following items are included according purchased station reference:



JTSE
Hot Air Control Unit ..... 1 unit
Ref. JTSE-9UA (100 V)
Ref. JTSE-1UA (120 V)
Ref. JTSE-2UA (230 V)



JTS
Stand ..... 1 unit
Ref. JT-SF



JTT
Heater Hose Set ..... 1 unit
Ref. JT-T1A (100V / 120V)
Ref. JT-T2A (230V)



JN2015
JTT Bent Nozzle Ø 4 mm - 18 ° .... 1 unit
Ref. JN2015



JN2012
JTT Bent Nozzle Ø 6 mm - 18 ° .... 1 unit
Ref. JN2012



JN2020
JTT Straight Nozzle Ø 8 mm ..... 1 unit
Ref. JN2020



PH217
Kapton Tape ..... 1 unit
Ref. PH217




PH218
Thermocouple Type K .....1 unit
Ref. PH218



ESHT
Magazine for
Protectors & Extractors ..... 1 unit
Ref. ESHT-A

Installation

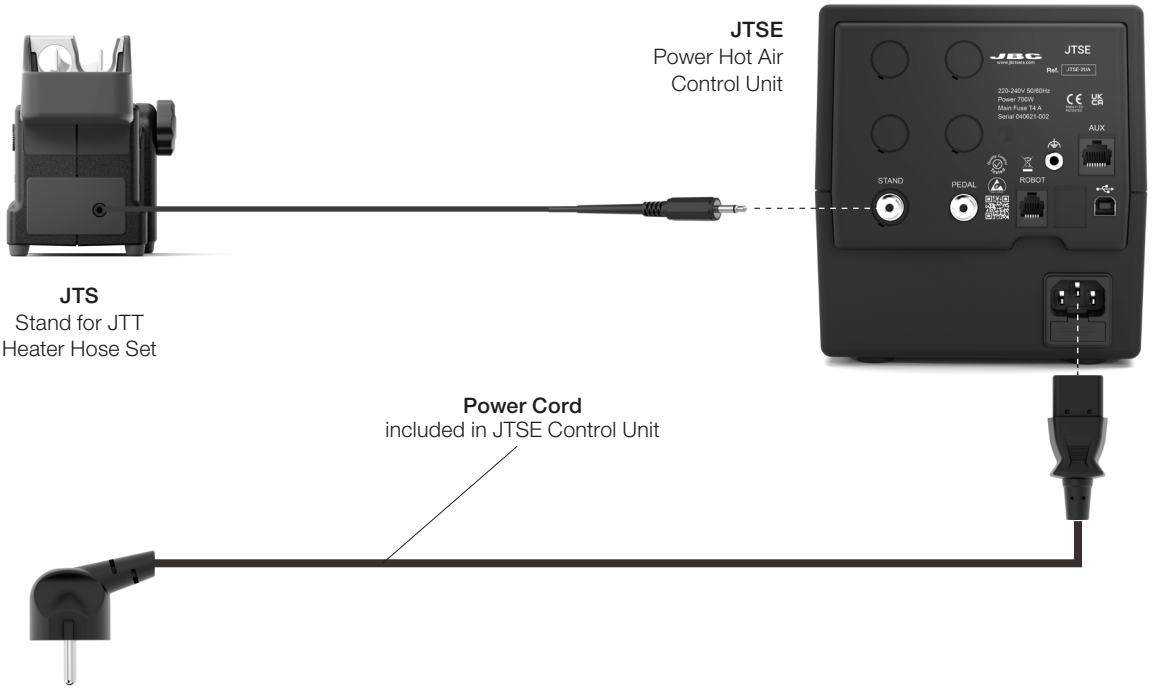

Installation

JTSE
Power Hot Air
Control Unit



PH218
Thermocouple Type K





Nozzle for JTT

JTT
Heater Hose Set



Suction Tube for
Protectors & Extractors



Extractor

included in
ESHT
Magazine for Protectors & Extractors



Specifications

JTSE

Power Hot Air Station

Ref. **JTSE-9B** (100 V) 50/60Hz. Input fuse: 8A. Rated current: 7A
Ref. **JTSE-1B** (120 V) 50/60Hz. Input fuse: 8A. Rated current: 7A
Ref. **JTSE-2B** (230 V) 50/60Hz. Input fuse: 4A. Rated current: 3A

- Package Dimensions / Weight:	545 x 345 x 275 mm / 7.89 kg
(L x H x W)	21.5 x 16.6 x 10.8 in / 17.39 lb

Complies with CE standards.
ESD safe.

JBC

Warranty

Information regarding the warranty of each product can be found on the final page of its instruction manual.



This product should not be thrown in the garbage.
In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.

www.jbctools.com

0031284-190924