



Agilent 35181M

5.25" High Storage Drawer

Installation Guide



Agilent Technologies

November 2007 E1107



5967-9309

Notice

The information contained in this document is subject to change without notice.


AGILENT TECHNOLOGIES MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Agilent Technologies shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material. This document contains proprietary information, which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Agilent Technologies.

Copyright © 1998, 2007 Agilent Technologies, Inc.

35181M Drawer (5.25 inch) Parts List

Item	Quantity	Description
1	1	Drawer with slides attached
2	2	Extension brackets
3	4	Clip nuts (10 - 32)
4	4	Pan head screws (10- 32 x .5")
5	4	Hex nuts (8-32)
6	4	Pan head screws (8-32 x .375")

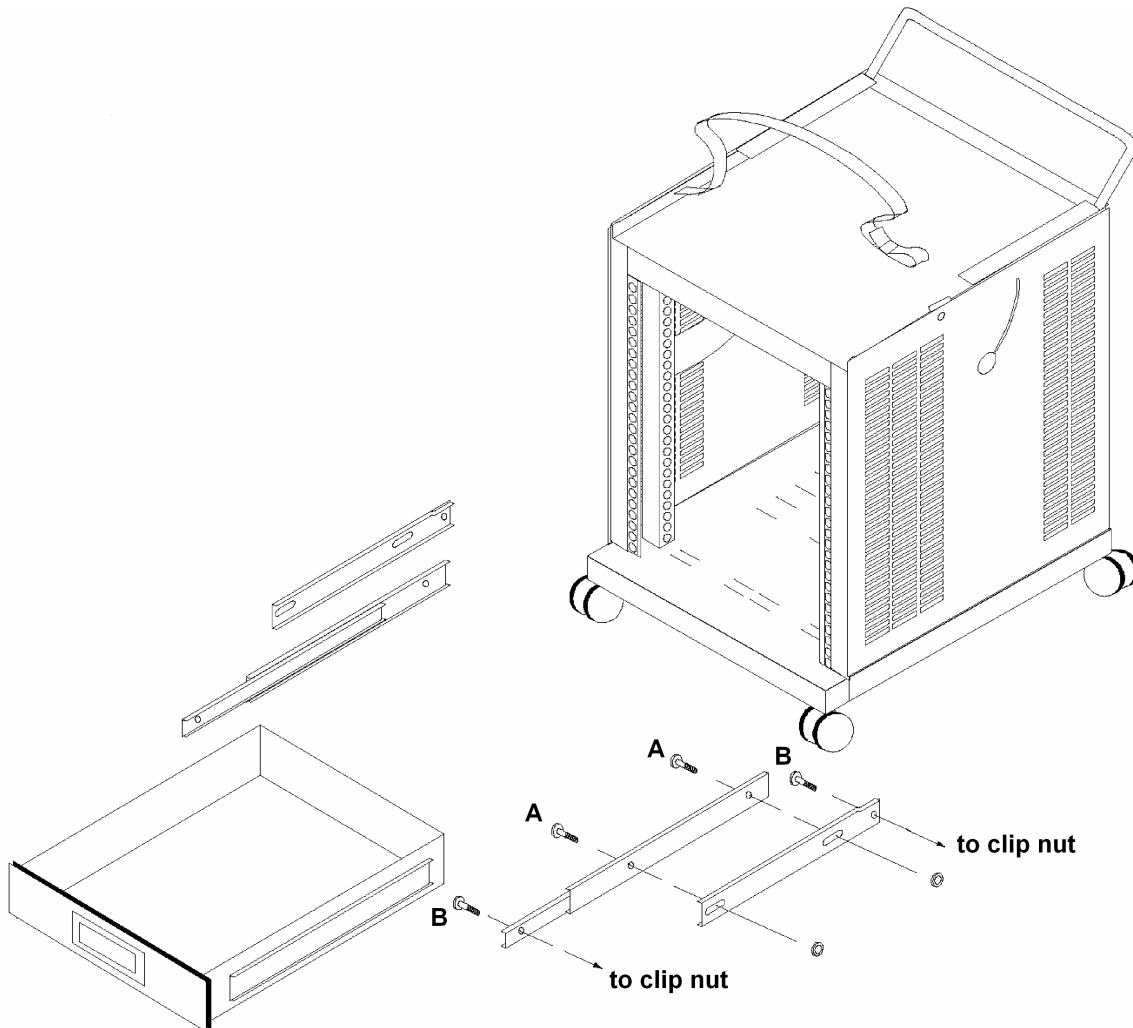


Note: attach the (4) clip-on nuts at the desired location in the Agilent 1181B Testmobile System Cart or the Agilent E3661B/62B/E7590A rack cabinets to screw the slides to the columns. Screws "B" fasten to the clip-on nuts. Screws "A" are used to adjust the length of the rail if necessary.

You may need to adjust the rail length to fit your cabinet. Remove the two 8-32 x .375 screws and nuts and adjust to the appropriate length as shown on the following page.

To install the rails in the Agilent 1181B Testmobile system cart:


1. Set distance between two screw holes "B" in the figure below to 533 mm, then tighten 8-32 x 0.375 inch screws "A" and nuts on the left rail as shown below.
2. Install the left rail using 10-32 x 0.5 inch screws "C" and clip nuts previously installed in cart.
3. Repeat steps 1 and 2 for the right rail.
4. Engage drawer on left and right slides.

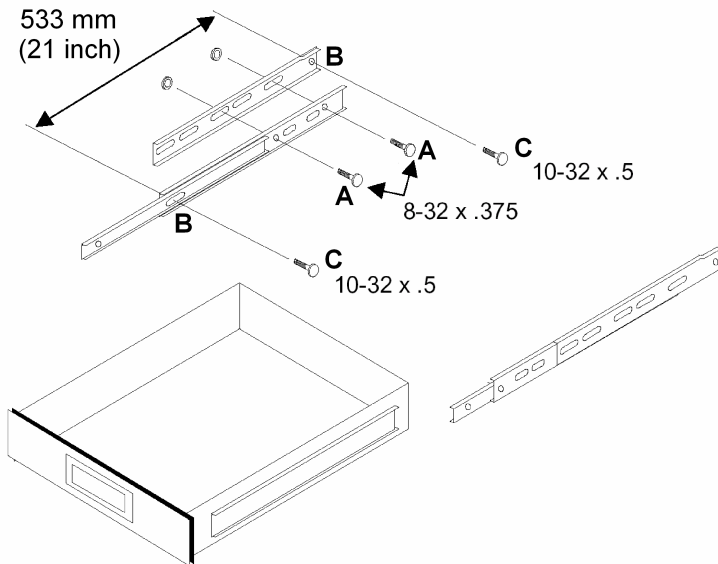

For 1181B Testmobile System Cart

To install the rails in the Agilent 3661B, 3662B, and E7590A 19-inch EIA rack cabinets:

1. Set distance between two screw holes "B" in the figure below to 610 mm, then tighten 8-32 x 0.375 inch screws "A" and nuts on the left rail as shown below.
2. Install the left rail using 10-32 x 0.5 inch screws "C" and clip nuts previously installed in rack.
3. Repeat steps 1 and 2 for the right rail.
4. Engage drawer on left and right slides.

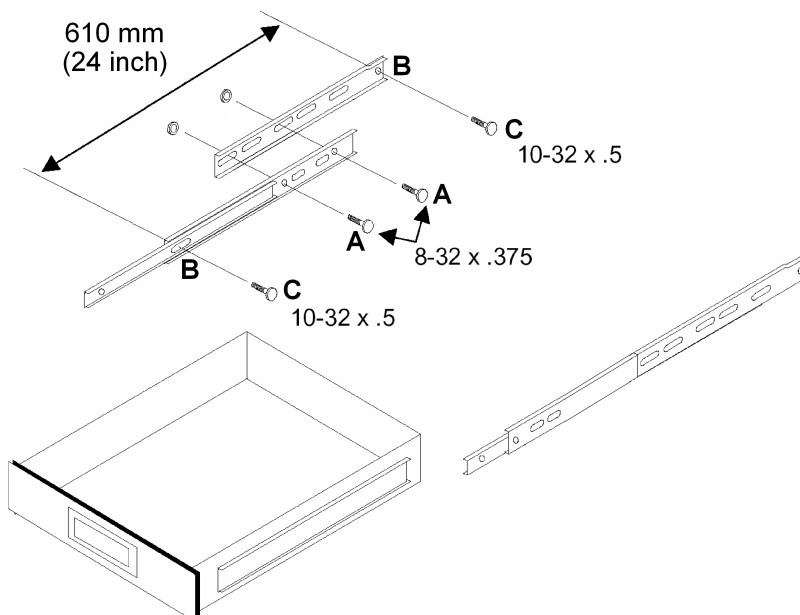

For E3661B/62B and E7590A EIA Racks