



Mounting the solder wire on the spool

1

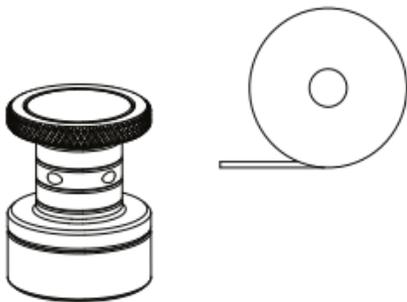


Place the PCBite holder on a base plate and select the solder wire you want to use.

2

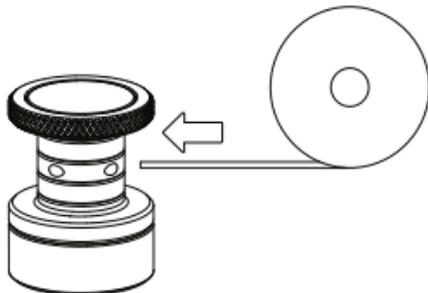

Align the end of the solder wire towards the hole (diameter 1,6mm)

3

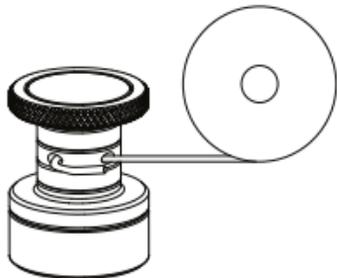

Run the solder wire through the hole and make a bend.

4



Wind up the desired amount of solder wire on the 360 rotating spool