IntraVUE[™] Edge



specifications

IntraVUE™ Edge is an Industrial Network Documentation and Monitoring Solution. By simply connecting the device to the network that needs to be scanned, IntraVUE™ Edge is capable of continuously monitoring the status of all devices and switches within the network. It is physically hardened with a fan-less design and has been designed for compliance with the Center for Internet Security (CIS) benchmarks.



technical information

Dimensions:	4.33 x 4.57 x 1.93 in.
Mounting Information:	Includes accessories to support shelf mount, VESA Mount, Wall Mount, and DIN Rail Mount
Packaged Accessories:	12V 3 AMP Converter with American and European Power Cord, USB flash drive loaded with configuration support, CAT 6A UTP patch cable, printed Getting Started guide
Part Number:	PNPIV (1024 Licensed Appliance) WNMS-APPL (Unlicensed Agent)
Processor:	Fanless Intel* Celeron* N2930 Quad-core 1.83GHz, 2.16GHz Burst, Bay Trail-M, 7.5W TDP, 22nm, Intel* Gen7 HD Graphics
Memory:	1 * 204-pin DDR3L-1333 SO-DIMM up to 8GB total memory, 1.35V Required
Storage:	1 * Full-size mSATA slot (3Gb/s)
Network:	2 * Intel* 82583V Gigabit LAN 1 * Half-size Mini-PCIE slot
Other Features:	HD Audio, AHCI, Watchdog Timer 10-255 min/sec
BIOS:	AMI 32MB Flash ROM
Compliance:	CE, FCC, RoHS, ErP Ready
Temperature:	Operating Temperature 0-40°C, Storage Temperature -20-85°C
Warranty:	1 Year Limited Warranty, details at www.panduit.com/warranty
Appliance OEM:	Jetway* Computer Corporation (p/n: JBC311U93)
*All trademarks, service marks	trade names, product names, and logos appearing in this document are the property of

^{*}All trademarks, service marks, trade names, product names, and logos appearing in this document are the property of their respective owners.

key features and benefits


Perpetual Use License	No subscriptions are needed to run IntraVUE™ Edge. Purchasers obtain a perpetual license to perform the IntraVUE™ software installed on IntraVUE™ Edge for its own internal business use.
Easy to Deploy	No virtual machine or server commissioning required. IntraVUE™ Edge simply requires IP configuration on the client network.
Device Discovery and Identification	All devices and switches connected and within the scanning parameters will be discovered and identified by IP address, MAC address, Vendor, and other parameters depending on its primary protocol.
Switch Identification	All switches connected and within the scanning parameters will be discovered and polled for topology information based upon SNMPv1, v2 or v3 protocols.
Connection Map and Plant Layout	All devices and switches will be displayed within a connection map as discovered, depending upon the logical system configuration and parameters provided by the client.
Access all Levels of Industrial Networks	The appliance has two copper network ports, one of which can be optionally configured as an 802.1Q VLAN trunk to scan multiple networks. With proper placement, the appliance can scan both the production network, VLANs, and isolated networks behind the PLC backplane.
Active Monitoring and Alerts	The devices on the network will be constantly monitored, letting the user know of any changes in their network. With configuration, any disconnection or reconnection events can be sent as email alerts.
Hardened for Security	IntraVUE™ Edge implements security based on the CIS benchmarks for Debian Linux, Chrome, Firefox, Edge, and Internet Explorer 11. It also supports https and can be configured for users to log into using active directory.

IntraVUE™ Edge

application

- 1. Plug appliance into desired network, connect to power, and power on
- 2. Connect laptop to the network and run configuration software on the included USB flash drive
- 3. Assign IP address using configuration software
- 4. Open IntraVUE and begin scanning the network



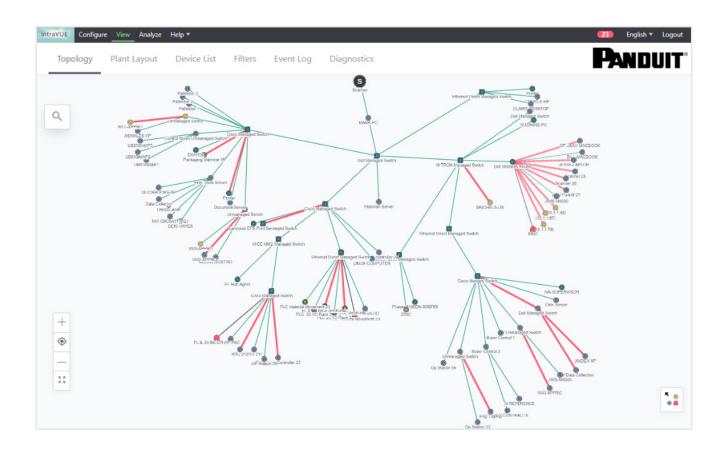

WORLDWIDE SUBSIDIARIES AND SALES OFFICES

PANDUIT US/CANADA Phone: 800.777.3300 PANDUIT EUROPE LTD. London, UK Phone: 44.20.8601.7200 PANDUIT SINGAPORE PTE. LTD. Republic of Singapore Phone: 65.6305.7575 PANDUIT JAPAN Tokyo, Japan Phone: 81.3.6863.6000 PANDUIT LATIN AMERICA Guadalajara, Mexico Phone: 52.33.3777.6000 PANDUIT AUSTRALIA PTY. LTD. Victoria, Australia Phone: 61.3.9794.9020

