

www.jbctools.com

INSTRUCTION MANUAL



SB03CC

3cc Syringe

This manual corresponds to the following reference:

SB03CC

Packing List

The following items are included:





Syringe Adapter		1	unit
-----------------	--	---	------




Ref. 0027449



Operation


SB03CC ist designed to be used with JBC's Manual Solder Paste Dispenser DPM*, with JBC's Needles ND-KS* and Tappered Tips ND-KP* .

1. Barrel Filling

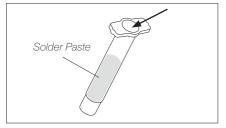


Fill in the syringe barrel with solder paste.

1. Seal Placement

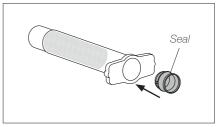


Take the barrel filled with solder paste and place the seal into the barrel.

2. Plunger Placement

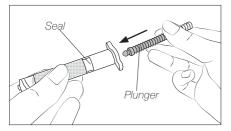


Insert the plunger into te seal and press the seal against the solder paste to eliminate the air inside the barrel.

4. Adapter Use (for 3cc syringe only)

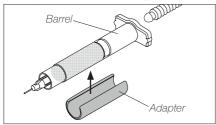

For 3cc syringes in use with DPM the enclosed adapter is needed. Assemble the adapter by clipping it onto the barrel.

3. Tip Placement

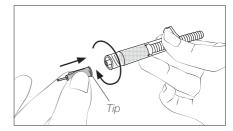

Thread the tip onto the syringe barrel.

Specifications

SB03CC 3cc Syringe Barrel Ref.: SB03CC	
Volume Capacity:Weight:	3 cc / 0.1 fl OZ 0.02 kg / 0.04 lb
- Total Package Dimensions / Weight: (L x W x H)	90 x 55 x 40 mm / 0.03 kg 3.54 x 2.17 x1 .57 in / 0.07 lb
Complies with CE standards ESD Safe	



Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.



This product should not be thrown in the garbage. In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.



www.jbctools.com