

RAIL MOUNTED NETWORK METER PCE-N27D



USER'S MANUAL



Contents

1. APPLICATION.....	5
2. METER SET	6
3. BASIC REQUIREMENTS, OPERATIONAL SAFETY	6
4. INSTALLATION.....	10
4.1. Mounting	10
4.2. External connection diagram.....	11
5. HANDLING.....	12
6. TECHNICAL DATA	13
7. ORDER CODES.....	16

1. APPLICATION

N27D meters are designed for direct a.c. measurement: voltage, current, frequency and active power. The design allows for installation of the meter for modular switchgear in accordance with EN 62208 (meter has a width of 3 modules) on 35 mm rail. The current is measured through current transformer (CT). Measured values are displayed on 4 - digit readout field. Switching between measured values is realized by pressing a button.



Fig.1. View of the PCE-N27D meter.

2. METER SET

The meter set includes:

- PCE-N27D meter 1 pc
- user's manual 1 pc
- warranty certificate 1 pc

3. BASIC REQUIREMENTS, OPERATIONAL SAFETY

Symbols located in this service manual mean:



WARNING!

Warning of potential, hazardous situations. Especially important, one must acquaint with this before connecting the module. The non-observance of notices marked by these symbols can occasion severe injuries of the personnel and the damage of the module.



CAUTION!

Designates a general useful note. If you observe it, handling of the meter is made easier. One must take note of this, when the meter is working inconsistently to the expectations.

Possible consequences if disregarded!

In the security scope, the meter fulfills the requirements of the EEC Low-Voltage Directive (EN 61010 -1 issued by CENELEC).



Remarks concerning the operator safety:

1. General

- The PCE-N27D meter is designed to be installed in measuring systems.
- Non-authorized removal of the required housing, inappropriate use, incorrect installation or operation creates the risk of injury to personnel or damage to equipment. For more detailed information please study the user's manual.
- All operations concerning transport, installation, and commissioning as well as maintenance must be carried out by qualified, skilled personnel and national regulations for the prevention of accidents must be observed.
- According to this basic safety information, qualified, skilled personnel are persons who are familiar with the installation, assembly, commissioning, and operation of the product and who have qualifications necessary for their occupation.

2. Transport, storage

- Please observe the notes on transport, storage and appropriate handling.
- Observe the climatic conditions given in Technical Data.

3. Installation

- The meter must be installed according to the regulation and instructions given in this User's Manual.
- Ensure proper handling and avoid mechanical stress.
- Do not bend any components and do not change any insulation distances.

- Do not touch any electronic components and contacts.
- Meters may contain electrostatic sensitive components, which can easily be damaged by inappropriate handling.
- Do not damage or destroy any electrical components since this might endanger your health!
- Wire cross-sections must be chosen such to assure the protection of the cable in case of a short-circuit, by means of an installation cut-off.
- Requirements concerning the mains supply are described in the EN 61010-1 standard.
- A cut-out or a circuit-breaker should be installed in the building and be easily accessible for the operator.

4. Electrical connection

- Before switching the meter on, one must check the correctness of connection to the mains supply.
- In case of the protection terminal connection with a separate lead, one must remember to connect it before the connection of the meter to the mains.
- When working on live meters, the applicable national regulations for the prevention of accidents must be observed.
- The electrical installation must be carried out according to the appropriate regulations (cable cross-sections, fuses, PE connection). Additional information can be obtained from the user's manual.
- The documentation contains information about installation in compliance with EMC (shielding, grounding, filters and cables). These notes must be observed for all CE-marked products.
- The manufacturer of the measuring system or installed devices is responsible for the compliance with the required limit values demanded by the EMC and LVD legislation.

5. Operation

- Measuring systems including PCE-N27D meters must be equip-ped with protection devices according to the corresponding standard and regulations for prevention of accidents. After the instrument has been disconnected from the supply voltage, live components and power connections must not be touched immediately because capacitors can be charged. The housing must be closed during operation.

6. Maintenance and service

Please observe the manufacturer's documentation.

Read all product-specific safety and application notes in this user's manual.

- Before taking the meter out, ensure the power supply is off.
- The removal of the meter housing during the guarantee period may cause its cancellation
- The meter fulfills requirements related to electromagnetic compatibility in the industrial environment.

4. INSTALLATION

4.1. Mounting

The meter is designed to be mounted on a 35 mm rail acc. to EN 60715.

The meter is equipped with terminals which enable the connection of external wires with cross-sections:

- input current signals: 2,5 – 16 mm² (solid wire),
4 – 16 mm² (stranded wire);
- input voltage signals: 1,5 – 16 mm² (solid wire),
2,5 – 16 mm² (stranded wire);
- supply: up to 2,5 mm².

Meter dimensions are presented on the fig. 2

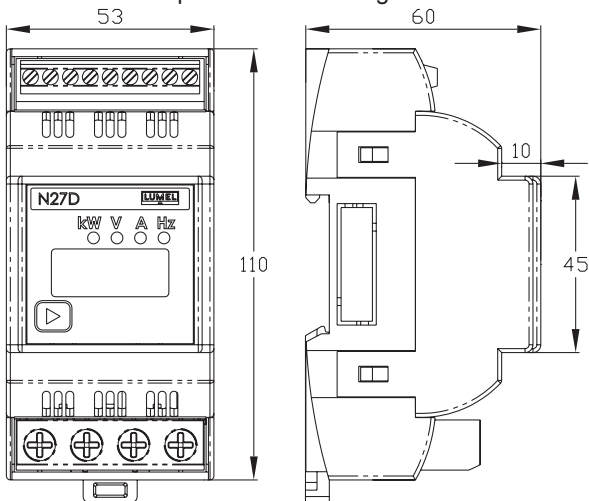


Fig. 2. Overall dimensions

Meters shouldn't be mounted on the rail in direct contact with another devices emitting heat (eg other meter N27D). You must keep a minimum 5 mm distance between the devices to allow emit heat from the housings to the ambient. Otherwise, temperature outside of meter which is in direct contact with the other device may exceed the rated operating temperature stated in operating conditions.



4.2. External connection diagram

The power supply must be connected by a two-wire conductor of suitable wire cross-section ensuring its protection by an installation cut-out.

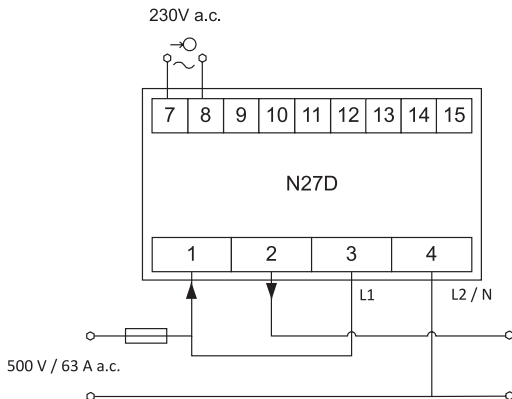


Fig. 3. Electrical connections of the PCE-N27D meter

5. HANDLING



Fig. 4. Front view.

After connecting external signals and switching the supply on, the meter displays name *n27d* and software revision. Then displays default quantity – voltage. One can change displayed quantity by pressing button . If button is pressed longer than 3 seconds, text *SRUE* is displayed and displayed quantity is remembered as a default quantity. After switching on power supply the meter displays its default quantity. If voltage is in measured range then frequency is taken from voltage otherwise frequency is taken from current.

The appearance of following symbols on the display means:



Measured value exceeds the upper value of the indication range.



Measured value exceeds the lower value of the indication range.

E_{rCA}

Loss of meter calibration values. In such a case, one must contact the service workshop.

6. TECHNICAL DATA

Measuring range:

INPUTS:

Measuring range of voltage U: 0...0.01...1.2 Un -
input resistance > 3 M Ω

Measuring range of current I: 0...0.01...1.2 In

Voltage frequency measurement: 0...2.0...500.0 Hz

Current frequency measurement: 0...45.0...500.0 Hz

Active power measurement: ~~-45.4~~...-31.5...31.50...45.36 kW
at frequency 45...65 Hz

Sustained overload: 120 % Un, 120 % In

Short duration overload (1 s): input voltage
2 U_n (<1000 V)

current input: 10 I_n

Basic error:

- voltage $\pm$ (0.5% of the range) in frequency
range 40...500 Hz
- current $\pm$ (0.5% of the range) in frequency
range 45...65 Hz
- frequency $\pm$ (0.02% of the range)
- active power $\pm$ (1% of the range) in frequency
range 45...65 Hz

Additional errors in rated operating conditions:

- from ambient temperature changes (50% of basic error/10 K)

Preheating time: 15 minutes

Measuring time: 0.5 s

Rated operating conditions:

- supply voltage: 230 V $\pm$ 10% a.c. (45...65 Hz)
- input voltage U_n : 500 V a.c.
0...2...40.0...500.0 Hz
- input current I_n : 63 A a.c. 0...45.0...500.0 Hz
- ambient temperature: -10...23...55°C
- storage temperature: -25...+85°C
- humidity: < 95% (condensation inadmissible)
- work position: any
- input signal: sinusoidal (THD $\leq$ 8%)

- admissible peak factor 2

Readout field:

- | | |
|---------------------|--------------|
| - display | 4-digit LED |
| - digit height | 8.5 mm |
| - color | yellow |
| - indication range: | -1999...9999 |

Ensured protection grade: IP 00 acc. to EN 60529

Overall dimensions: 110 x 53 x 60 mm

Weight: < 0.25 kg

Power:

- | | |
|--------------------|----------|
| - in supply input | < 2 VA |
| - in voltage input | < 0.2 VA |
| - in current input | < 2.5 VA |

Test voltage:

- voltage input 3.2 kV d.c.
- current input 3.2 kV d.c.
- power supply 2,1 kV d.c.

Electromagnetic compatibility:

- noise immunity acc. to EN 61000-6-2
- noise emission acc. to EN 61000-6-4

Safety requirements acc. to EN 61010-1:

- | | |
|-------------------------------|--|
| - isolation between circuits: | basic, |
| - installation category | III up to 300 V
(II for 300 ... 600 V), |
| - pollution grade | 2, |

- maximal phase-to-earth working voltage:
 - for the supply circuit 300 V,
 - for the measuring input 600 V – cat. II
(300 V – cat. III)
- altitude above sea level: < 2000 m.

7. ORDER CODES

PCE-N27D-		XX	X	X
Version:				
standard		00		
custom-made*		XX		
Language:				
Polish			P	
English			E	
other*			X	
Acceptance tests:				
without extra quality inspection requirements				0
with an extra quality inspection certificate				1
acc. to customer's request*				X

* only after agreeing with the manufacturer

Example of order:

The code: **PCE-N27D - 00 E 0** means:

00 – standard version,

E – English language,

0 – without extra quality inspection requirements.