

# LR5031

Instruction Manual

# INSTRUMENTATION LOGGER



Read carefully before use.  
Keep for future reference.

✓ **When using the instrument for the first time**

Part Names/Functions and Display Indicators ▶ p.14  
Settings List ▶ p.29

📖 **Troubleshooting**

Maintenance and Service ▶ p.91  
Troubleshooting ▶ p.92  
Error Displays ▶ p.95

**EN**



# Contents

|  |   |
|--|---|
| Introduction .....                             | 1 |
| Verifying Package Contents .....               | 3 |
| Safety Information .....                       | 5 |
| Operating Precautions .....                    | 7 |
| Measurement Preparation to Data Analysis ..... | 9 |

## Chapter 1

### Overview \_\_\_\_\_ 13

|   |    |
|---|----|
| 1.1 Product Overview and Features .....               | 13 |
| 1.2 Part Names/Functions and Display Indicators ..... | 14 |
| 1.3 Display Organization .....                        | 16 |

## Chapter 2

### Measurement Preparations \_\_\_\_\_ 19

|   |    |
|---|----|
| 2.1 Installing (or Replacing) the Battery ..... | 19 |
| 2.2 Connecting the Connection Cable .....       | 22 |
| 2.3 Installing the PC Application Program ..... | 23 |

## Chapter 3

### Settings \_\_\_\_\_ 29

|  |    |
|--|----|
| 3.1 Settings List .....                                      | 29 |
| 3.2 Making Settings on the Logger .....                      | 31 |
| 3.3 Making Settings from the LR5000 Utility<br>Program ..... | 35 |

## Chapter 4

### Measurement and Analysis \_\_\_\_\_ 43

|  |    |
|--|----|
| 4.1 Pre-Measurement Inspection .....                                 | 43 |
| 4.2 Installing the Logger .....                                      | 44 |
| 4.3 Starting and Stopping Recording .....                            | 46 |
| 4.4 Confirming Currently Measured Values and<br>Data Recording ..... | 49 |

|     |   |    |
|-----|---|----|
| 4.5 | Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display ..... | 49 |
| 4.6 | Manually Importing (Saving) Recorded Data to a Computer, and Graph Display .....      | 59 |
| 4.7 | Displaying a Graph of Saved Recording Data .....                                      | 62 |
| 4.8 | Printing Recorded Data .....  | 64 |

## Chapter 5

### Processing Recorded Data \_\_\_\_\_ 65

|     |   |    |
|-----|---|----|
| 5.1 | Scaling .....                               | 67 |
| 5.2 | Calculating Electric Power .....            | 68 |
| 5.3 | Calculating Energy Cost .....               | 69 |
| 5.4 | Calculating Operating Rate .....            | 70 |
| 5.5 | Integration .....                           | 71 |
| 5.6 | Calculating Dew-Point Temperature .....     | 72 |
| 5.7 | Two-Data-Item Arithmetic Calculations ..... | 73 |
| 5.8 | Converting Over-Threshold Data Values ..... | 74 |

## Chapter 6

### Organizing Data \_\_\_\_\_ 75

|     |                               |    |
|-----|-------------------------------|----|
| 6.1 | Copying and Moving Data ..... | 76 |
| 6.2 | Deleting Data .....           | 77 |
| 6.3 | Combining Data .....          | 78 |
| 6.4 | Extracting Data .....         | 79 |

## Chapter 7

### Options Settings (LR5000 Utility Program) \_\_\_\_\_ 81

|     |   |    |
|-----|---|----|
| 7.1 | Changing the Saving Method for Imported Data .                                | 82 |
| 7.2 | Changing the Connection Monitoring Method, and Logger Settings Displays ..... | 83 |

## Chapter 8

### Specifications \_\_\_\_\_ 85

|     |                                  |    |
|-----|----------------------------------|----|
| 8.1 | Measurement Specifications ..... | 85 |
| 8.2 | Functional Specifications .....  | 86 |

---

8.3 Miscellaneous .....87

8.4 LR5091 Communication Adapter Specifications ..88

## Chapter 9

**Maintenance and Service** \_\_\_\_\_ **91**

9.1 Cleaning .....92

9.2 Disposing of the Logger .....92

9.3 Troubleshooting .....92

9.4 Error Displays .....95

**Appendix** \_\_\_\_\_ **A 1**

Appendix 1 About Recording Modes..... A 1

Appendix 2 Recording Intervals and Recording Times A 2

Appendix 3 Battery Life Approximation ..... A 2

**Index** \_\_\_\_\_ **Index 1**

---



## Introduction

Thank you for purchasing the HIOKI "Model LR5031 Instrumentation Logger. " To obtain maximum performance from the instrument, please read this manual first, and keep it handy for future reference.

### The latest edition of the instruction manual

The contents of this manual are subject to change, for example as a result of product improvements or changes to specifications. The latest edition can be downloaded from Hioki's website.  
<https://www.hioki.com/global/support/download>



### Trademarks

Microsoft and Excel are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.

### Notation

|   |  |
|---|--|
|  | Indicates a prohibited action.   |
| (p. )   | Indicates the location of reference information.   |
|  | Indicates hints on operation and troubleshooting.  |
| *   | Indicates that descriptive information is provided below.  |
| [ ]   | Menus, commands, dialogs, buttons in a dialog, and other names on the screen and the keys are indicated in brackets. |
| <b>SET</b><br>(Bold characters)   | Bold characters within the text indicate operating button labels.  |
| Windows   | Unless otherwise specified, "Windows" represents Windows 7 or Windows 10.  |
| Dialog  | Dialog box represents a Windows dialog box.  |

# 2

## Introduction

---

The screen of this instrument displays characters in the following manner.

|   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| A | B | C | D | E | F | G | H | I | J | K | L | M | N | O | P | Q | R | S | T | U | V | W | X | Y | Z |
| A | b | C | d | E | F | G | H | I | J | K | L | M | N | O | P | Q | R | S | T | U | V | W | X | Y | Z |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |   |

### ◆ Accuracy

We define measurement tolerances in terms of rdg. (reading) and dgt. (digit) values, with the following meanings:

|                                      |  |
|--------------------------------------|--|
| rdg.<br>(reading or displayed value) | The value currently being measured and indicated on the measuring instrument.  |
| dgt.<br>(resolution)                 | The smallest displayable unit on a digital measuring instrument, i.e., the input value that causes the digital display to show a "1" as the least-significant digit. |

### ◆ Mouse Operation


|              |  |
|--------------|--|
| Click        | Press and quickly release the left button of the mouse.  |
| Right-click  | Press and quickly release the right button of the mouse.   |
| Double click | Quickly click the left button of the mouse twice.  |
| Drag         | While holding down the left button of the mouse, move the mouse and then release the left button to deposit the chosen item in the desired position. |
| Activate     | Click on a window on the screen to activate that window.   |

---

## Verifying Package Contents

When you receive the instrument, inspect it carefully to ensure that no damage occurred during shipping. In particular, check the accessories, panel switches, and connectors. If damage is evident, or if it fails to operate according to the specifications, contact your dealer or Hioki representative.

Quantities in parentheses ( ).

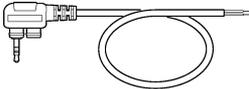
|   |   |   |
|---|---|---|
| <input type="checkbox"/> LR5031 (1)   | <u>Accessories</u>  |   |
|  | <input type="checkbox"/> LR6 alkaline battery (1)<br>(Pre-installed in the logger.) | <input type="checkbox"/> LR9801 Connection Cable<br>(Cable length: Approx. 1 m) (1) |
|   |    |    |
|   | <input type="checkbox"/> Stand (1)  |   |
|   |    |   |
|   | <input type="checkbox"/> Operation Manual (1)                                       | <input type="checkbox"/> Instruction Manual (1)                                     |
|   |    |    |
|   | <b>See:</b> Other specified options: "Options" (p.4)                                |   |

**Options**

The options listed below are available for the instrument. To order an option, please contact your authorized Hioki distributor or reseller.


Options are subject to change. Please check Hioki's website for the latest information.

- LR5091 Communication Adapter(1)**  
(Includes LR5000 Utility Program\* CD [PC application software] and USB Cable)

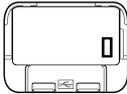

**See:** LR5091 specification: (p.88)

- LR9801 Connection Cable**  
(Cable length: Approx. 1 m)

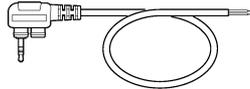

- LR5092-20 Data Collector**  
(Includes LR5000 Utility Program\* CD [PC application software], LR6 alkaline battery x2, Instruction manual, Operation manual, and USB Cable)




\*: The latest version can be downloaded from our web site.

- Z5004 Magnetic Strap**



**See:** Method of mounting: (p.45)

- LR9901 Wall-Mounted Holder**

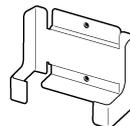

**See:** Method of mounting: (p.45)

**Transporting Precautions**

Use the original packing materials when transporting the instrument, if possible. Pack the instrument so that it will not sustain damage during shipping, and include a description of existing damage. We do not take any responsibility for damage incurred during shipping.

## Safety Information

This manual contains information and warnings essential for safe operation of the instrument and for maintaining it in safe operating condition. Before using it, be sure to carefully read the following safety precautions.



This instrument is designed to comply with IEC 61010 Safety Standards, and has been thoroughly tested for safety prior to shipment. However, mishandling during use could result in injury or death, as well as damage to the instrument. However, using the instrument in a way not described in this manual may negate the provided safety features.

Be certain that you understand the instructions and precautions in the manual before use. We disclaim any responsibility for accidents or injuries not resulting directly from instrument defects.

## Safety Symbols

Markings on the logger have the following meanings.

|   |   |
|---|---|
|  | In the manual, the  symbol indicates particularly important information that the user should read before using the instrument.   |
|  | The  symbol printed on the instrument indicates that the user should refer to a corresponding topic in the manual (marked with the  symbol) before using the relevant function. |
|  | Indicates DC (Direct Current).  |

## Symbols for Various Standards

Markings on the logger have the following meanings.

|   |  |
|---|--|
|  | Indicates that the product conforms to regulations set out by the EU Directive.                    |
|  | This symbol indicates that the product conforms to safety regulations set out by the EC Directive. |

**Danger Levels**

The following symbols in this manual indicate the relative importance of cautions and warnings.

|   |  |
|---|--|
|  <b><u>DANGER</u></b>  | Indicates that incorrect operation presents an extreme hazard that could result in serious injury or death to the user.    |
|  <b><u>WARNING</u></b> | Indicates that incorrect operation presents a significant hazard that could result in serious injury or death to the user. |
|  <b><u>CAUTION</u></b> | Indicates that incorrect operation presents a possibility of injury to the user or damage to the instrument.               |
| <b><u>NOTE</u></b>  | Indicates advisory items related to performance or correct operation of the instrument.                                    |

## Operating Precautions

Follow these precautions to ensure safe operation and to obtain the full benefits of the various functions.

### Installation Precautions

Operating temperature and humidity:  $-20^{\circ}\text{C}$  to  $70^{\circ}\text{C}$  ( $-4.0^{\circ}\text{F}$  to  $158.0^{\circ}\text{F}$ ), 80%RH or less (non-condensating)

Storage temperature and humidity :  $-20^{\circ}\text{C}$  to  $70^{\circ}\text{C}$  ( $-4.0^{\circ}\text{F}$  to  $158.0^{\circ}\text{F}$ ) 80%RH or less (non-condensating)

Avoid the following locations that could cause an accident or damage to the instrument.



Exposed to direct sunlight  
Exposed to high temperature



In the presence of corrosive or explosive gases



Exposed to liquids  
Exposed to high humidity or condensation



Exposed to strong electromagnetic fields  
Near electromagnetic radiators



Subject to vibration



Near induction heating systems (e.g., high-frequency induction heating systems and IH cooking utensils)

### **CAUTION**

- The protection rating for the enclosure of this device (based on EN60529) is \*IP54.
- Although this instrument is designed to resist the ingress of dust and water, it is not entirely water- or dust-proof, so to avoid shock or damage, do not use it in a wet or dusty environment.

\*IP54 : This indicates the degree of protection provided by the enclosure of the device against use in hazardous locations, entry of solid foreign objects, and the ingress of water.

- 5 : Protected against access to hazardous parts with wire measuring 1.0 mm in diameter. Dust-proof type (The penetration of dust cannot be prevented completely, but quantities of dust that may hinder the stated operation of equipment or safety cannot penetrate the enclosure.
- 4 : The equipment inside the enclosure is protected against the harmful effects of spraying water.

**Avoiding Instrument Damage**

**⚠ CAUTION** To avoid damage to the instrument, protect it from physical shock when transporting and handling. Be especially careful to avoid physical shock from dropping.

**CD Handling**

**⚠ CAUTION**

- Always hold the disc by the edges, so as not to make fingerprints on the disc or scratch the printing. Never touch the recorded side of the disc. Do not place the disc directly on anything hard.
- Do not wet the disc with volatile alcohol or water, as there is a possibility of the label printing disappearing.
- To write on the disc label surface, use a spirit-based felt pen. Do not use a ball-point pen or hard-tipped pen, because there is a danger of scratching the surface and corrupting the data. Do not use adhesive labels.
- Do not expose the disc directly to the sun's rays, or keep it in conditions of high temperature or humidity, as there is a danger of warping, with consequent loss of data.
- To remove dirt, dust, or fingerprints from the disc, wipe with a dry cloth, or use a CD cleaner. Always wipe from the inside to the outside, and do no wipe with circular movements. Never use abrasives or solvent cleaners.
- Hioki shall not be held liable for any problems with a computer system that arises from the use of this CD, or for any problem related to the purchase of a Hioki product.

**Preliminary Checks**

Before using the instrument the first time, verify that it operates normally to ensure that the no damage occurred during storage or shipping. If you find any damage, contact your dealer or Hioki representative.

**⚠ WARNING** Before using the instrument, make sure that the insulation on the connection cables is undamaged and that no bare conductors are improperly exposed. Using the instrument in such conditions could cause an electric shock, so contact your dealer or Hioki representative for replacements.


## Measurement Preparation to Data Analysis

The steps from measurement preparation to data analysis are illustrated with a typical measurement example.

**Example Case:** Record a factory flow sensor output signal (4-20 mA) at one-minute intervals for one month, and store the data on a computer.

### Required Items:

Quantities in parentheses ( ).

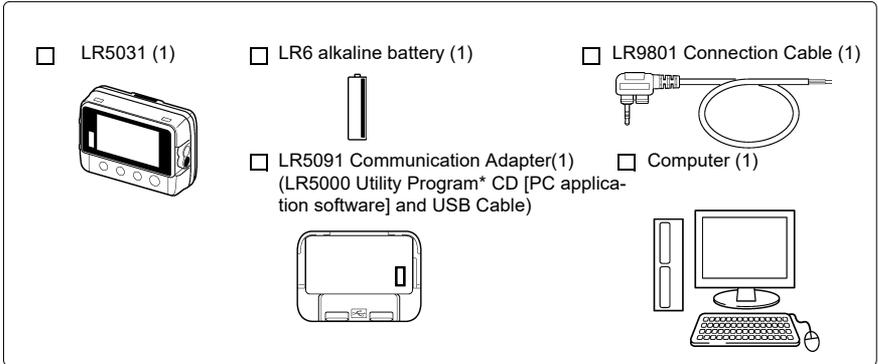

### Procedure:

1




1

Install the battery in the logger.

See: "2.1" (p.19)


2

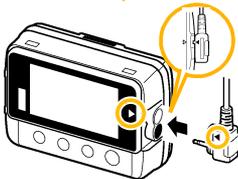

2

Connect the LR9801 Connection Cable to the logger.

See: "2.2" (p.22)

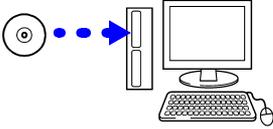**3****3** Install the LR5000 Utility Program on the computer.**See:** "2.3" (p.23)**4****4** Select the recording interval for the logger (in this case, 1 minutes).**See:** "Recording Interval Setting" (p.31)

(The setting can be made also from the LR5000 Utility Program.) (p.38)

**5****5** Set the logger to the correct date and time (in this case, 15 May 2010, 13:00).**See:** "Real-Time Clock Setting" (p.32)

(With the LR5000 Utility Program, the logger can be set to the computer time.) (p.41)

**6****6** Set the stop method to **[OFF]**.

(This setting provides one-time measurement: recording stops when memory becomes full.)

**See:** "Stop Method Setting (for when memory becomes full)" (p.33)

(The setting can be made also from the LR5000 Utility Program.) (p.38)

7



8




11



12



15

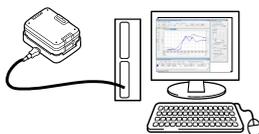

7

Set the recording mode to **[OFF]**.  
(This setting provides instantaneous measurement.)

**See:** "Recording Mode Setting" (p.34)  
(The setting can be made also from the LR5000 Utility Program.) (p.38)

8

Set the power save setting to **[ON]**.  
(The on (enabled) setting is recommended for long-term recording.)

**See:** "Power Save Setting" (p.34)  
(The setting can be made also from the LR5000 Utility Program.) (p.37)

9

Pre-measurement inspection (p.43)

10

Install the logger at the measurement site in the factory.

**See:** "4.2" (p.44)  
(It can be wall-mounted.)

11

Hold **REC/STOP** on the logger for two seconds to start recording.

(Confirm that the recording data count is incrementing and that recording is actually occurring.)

**See:** "4.3" (p.46)

12

Switch the logger display by pressing the (+) and (-) buttons to check maximum and minimum recorded values.

(Confirm that recording is actually occurring.)  
**See:** "4.4" (p.49)

13

After a month, hold **REC/STOP** on the logger again for two seconds to stop recording.

**See:** "4.3" (p.46)

14

Retrieve the logger from the measurement site.

15

Import recorded data from the logger to a connected computer. For analysis, display the data in a graph.

**See:** "4.5" (p.49)

(The data is automatically saved when imported to the computer. By default, it is also automatically displayed in a graph.)

16

Print recorded data as needed.

**See:** "4.8" (p.64)



# Overview


# Chapter 1

## 1.1 Product Overview and Features

This instrument is a compact portable data logger for measuring, displaying, and recording DC current.

- Data can be imported while recording.
- Records up to 60,000 measurements

**Splash-proof ingress protection (IP54)**

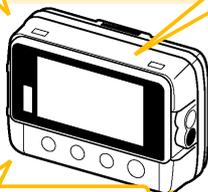

**Large display shows measured current value and recorded data count**

Measures DC current (one channel).



**Browse and manage data with LR5000 Utility Program on a PC.**

The LR5000 Utility Program PC application is very easy to install. After installation, data management and browsing is easy with auto-start, data display and saving.




- Data is preserved independently of battery state
- Recording continues (for approx. 30 s) during battery replacement

**Advanced functions included**

- Record statistical values (p.34), (p.38)
- Scaling (p.39), (p.67)
- Alarm display (p.40)

**Measures the output of various sensors in the factory**

Suitable for ESCO, ISO, and similar measurement applications.

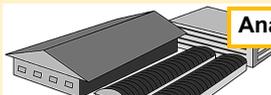

**Analysis Site**

**Measurement Sites**



## 1.2 Part Names/Functions and Display Indicators


### Front

#### LCD (p.15)

The display blanks after 30 seconds of operator inactivity (auto power save). The display reappears by pressing a button. When the display is visible, it refreshes about once per second.

#### IR Port (p.49)

Communicates with the LR5091 Communication Adapter or LR5092-20 Data Collector

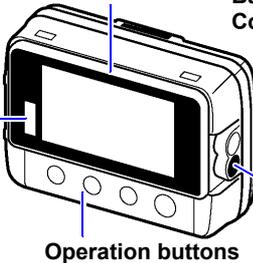


#### Battery Cover (p.19)

### Back

#### Stand/Strap Attachment Hole (p.44)

Attach the logger to a wall or other surface by hanging it on a screw. (Supported screw head dimensions: up to approx. 6.8 mm in diameter and approx. 2.5 mm in thickness)

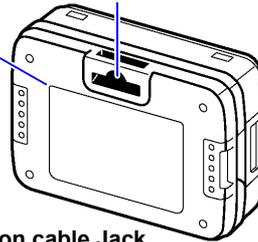

#### Connection cable Jack (p.22)

Connect a connection cable.


### Operation Buttons

#### SET button

Displays settings.

#### REC/STOP button


Hold for two seconds to start/stop recording. From a setting display, switches to measurement display.

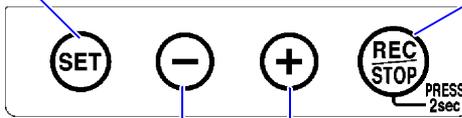

#### (-) button, (+) button

Changes Measurement display contents.  
Changes setting values on the Settings display.

### LR5091 Communication Adapter

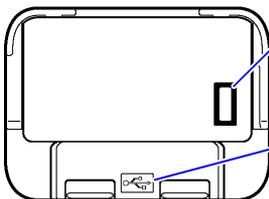

#### IR Port (p.49)

Communicates with the logger.

#### USB Port (p.35)

Connect a USB cable here to communicate with a computer. (Mini-B receptacle)

## Display Indicators

The display indicators provide the following information.

### REC Indicator

Indicates recording in progress. (Blinks when waiting to record.)

### AL indicator

When the alarm\* function is enabled, this indicates when a measured value is outside of the specified (upper/lower value\*) range.

### ENDLESS indicator

Indicates the Stop Method Setting display. Also appears on the Measurement display to indicate endless recording (p.33) is enabled.

### Battery Status Indicator

Indicates the battery charge status. (p.20)

### MAX indicator

Indicates that the value displayed at the right is the maximum.

### Measurement Channel

### MIN indicator

Indicates that the value displayed at the right is the minimum.

### DATA indicator


Indicates that the value displayed at the right is the data count.

### TIME indicator

Indicates the Date-Time Setting display.

### INTVL indicator

Indicates the Recording Interval Setting display.

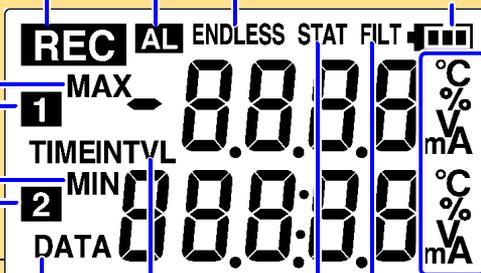

-Units  
Indicates the unit of measurement on each channel. (not displayed when scaling\* is enabled)

Not used by the logger.

### STAT indicator

Indicates the Recording Mode Setting display. Also appears on the Measurement display to indicate statistic recording (p.34) is enabled.

\* Setting is available from the LR5000 Utility Program or via the LR5092-20 Data Collector.


See: "3.3 Making Settings from the LR5000 Utility Program" (p.35), LR5092-20 Data Collector Instruction Manual

## 1.3 Display Organization

The logger has two general display types: Measurement and Settings.

### Measuring display

The (+) and (-) buttons switch the display type.

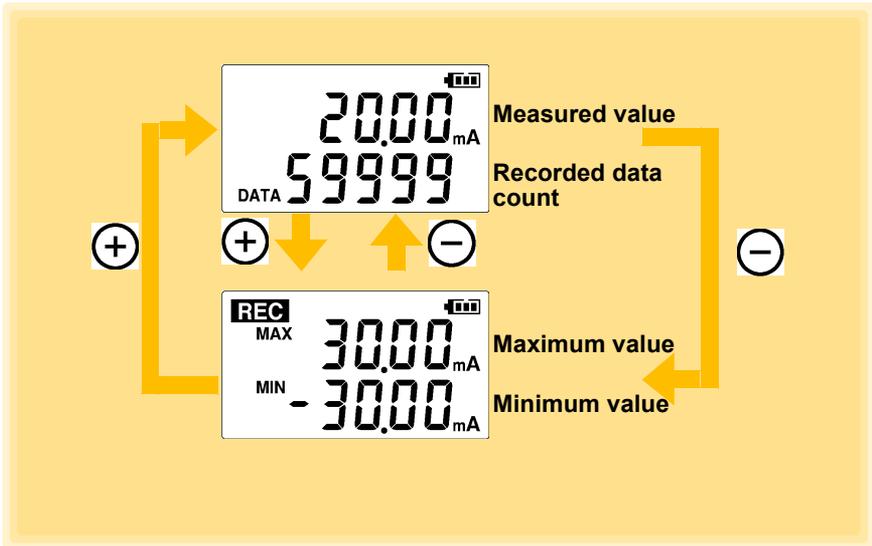


### NOTE

- For instantaneous recording, the maximum and minimum values are obtained from all the data measured at each recording interval.
- For statistical recording, the maximum and minimum values are obtained from all the data measured every second.
- The maximum and minimum values are not displayed when the recorded data count is 0.

## Setting display

Select the display with the **SET** button. Press **(+)** and **(-)** to change a setting. Press the **REC/STOP** button to switch to the Measurement display from any other.

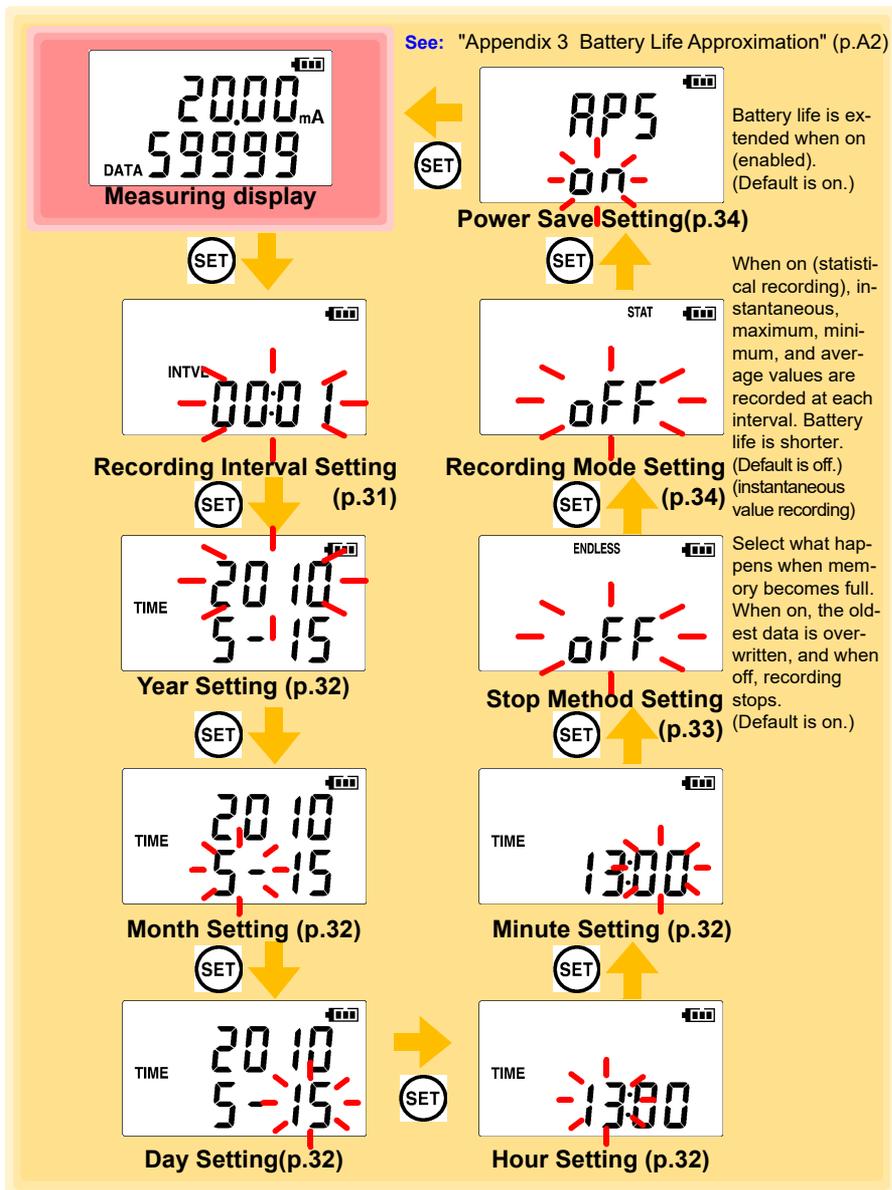

### **NOTE**

- When no operation occurs for 30 seconds with the Settings display, automatically switches to Measurement display.
  - When the  battery indicator appears, settings cannot be changed (although they can still be displayed).
  - Settings cannot be changed while recording. However, settings can still be displayed by pressing the **SET** button from the Measurement display.
-

# Measurement Preparations

## Chapter 2

2

### 2.1 Installing (or Replacing) the Battery



#### **WARNING**


- After replacing the battery, replace the cover before using the logger.
- Be sure to insert them with the correct polarity. Otherwise, poor performance or damage from battery leakage could result. Replace batteries only with the specified type.
- Battery may explode if mistreated. Do not short-circuit, recharge, disassemble or dispose of in fire.
- Handle and dispose of batteries in accordance with local regulations.

#### **NOTE**

- Data and settings stored in the logger are retained even when the battery is depleted, and during battery replacement.
- The clock can keep good time for several minutes even when the battery is removed during a battery change.
- Once the  battery indicator appears, operation can still continue for about 30 seconds when the battery is removed during recording.
- Testing monitor batteries installed in the unit may possibly be weak. Replace batteries before extended measurement usage.
- Use only LR6 alkaline battery. Using manganese batteries may not result in accurate measurements or proper communication with the LR5091 Communication Adapter and LR5092-20 Data Collector.
- After installing the batteries, the following displays appear, and the date and time need to be set. (p.32)



1. All segments

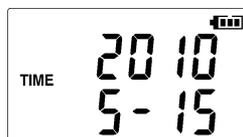

4. Year Setting display



2. Model name



3. Firmware version

## 2.1 Installing (or Replacing) the Battery

### NOTE

- When the  battery indicator appears, settings cannot be changed (although they can still be displayed).
- When battery voltage is too low to operate the logger, the following appears. Replace the battery to restore normal operation.



### Battery Status Indicator

This indicator is displayed at the top right corner.



Battery charge remains. Fewer blocks within the indicator signify weaker battery charge.



Replace the discharged battery as soon as possible. (Even when the battery is removed during recording, operation can continue for about 30 seconds.)



In this state, recording and communication with the LR5091 Communication Adapter and LR5092-20 Data Collector are not possible.

### Using a NiMH Battery

The battery status indicator does not accurately show the remaining battery capacity when using a NiMH battery. Moreover, the battery life will vary greatly with the capacity, charging conditions and repeated uses. Please take note of these points when using it.

The device's battery status display and battery life are based on the usage of a brand-new alkaline battery.






### When the logger will not be used for long time



To avoid corrosion and damage to this instrument from battery leakage, remove the batteries from the instrument if it is to be stored for a long time (1 week).

## Battery Replacement

Required Items: LR6 alkaline battery (1)

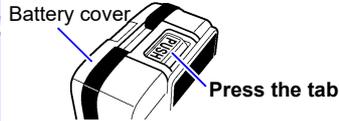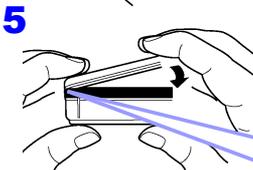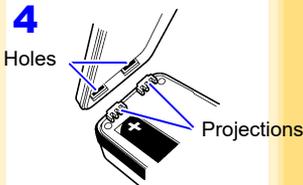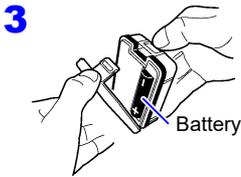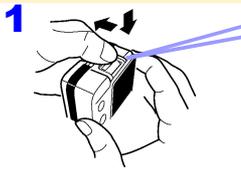

- 1** Press the PUSH tab as shown, and pull the battery cover back.
- 2** Hold the battery cover while separating it from the logger.
- 3** Install the battery as shown.
- 4** Align the holes in the battery cover with the projections on the back of the logger.
- 5** While confirming that there are no gaps, press with your fingers to close the battery cover.

When the battery is installed, the logger turns on.  
(there is no power switch)

**NOTE** Note that the battery cover is designed to seal tightly to preserve dust- and drip-resistance.

When the holes in the battery cover are properly aligned with the projections, the battery cover should close smoothly.



**NG**

The cover will not close correctly if there are any gaps.



**OK**

Never attempt to force the battery cover closed when not aligned properly. Doing so could cause damage.

## 2.2 Connecting the Connection Cable




Connect a connection cable to the logger's sensor jacks.

### **CAUTION**

- To avoid breaking the sensor, do not bend or pull it.
- Avoid stepping on or pinching cables, which could damage the cable insulation.
- A fuse is built into the logger to protect the internal circuit from excess power input. Do not connect it to a location with more than 2.5 V as the fuse will melt and measurements cannot be taken.

### Connection Method

Required Items: Hioki LR9801 Connection Cable

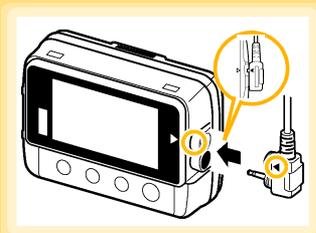

Align the triangles on the plug body and in front of the connection cable jacks, and insert the plug securely.

Correct values are not displayed unless the plug is inserted all the way in.




If values are not displayed correctly even when the plug is inserted properly, the logger or cable may be damaged. Repair may be necessary.

**See:** "Requesting repairs" (p.91)

### Connection Cable

LR9801 Connection Cable

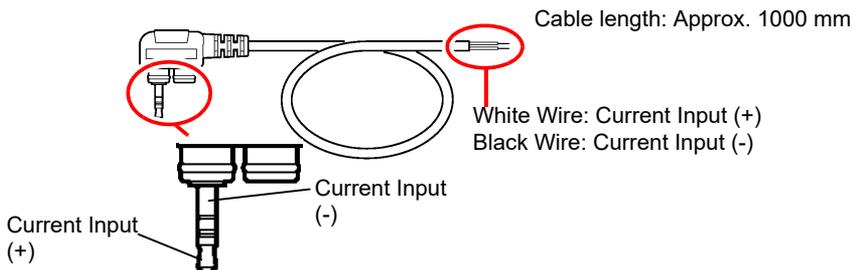

## 2.3 Installing the PC Application Program


To save, browse, or print data, or to make logger settings from a computer, first install the "LR5000 Utility Program".

### LR5000 Utility Program Operating Requirements


|                    |  |
|--------------------|--|
| CPU                | 1 GHz or faster processor clock  |
| RAM                | 1 GB or more (32-bit), 2 GB or more (64-bit)   |
| OS                 | Windows 7 or Windows 10  |
| Library            | .NET Framework 4.5.2 or later  |
| Interface          | USB  |
| Monitor Resolution | 1024×768 or higher   |
| Hard Disk          | At least 30 MB free space<br>(Additional space is required for storing recorded data.) |

### Installation Procedure

1. Start the computer.  
Administrator authority may be required for the installation.
2. Set the included CD to the CD-ROM drive.
3. Click **[Start]** to display the application list.  
Click **[Windows System]** - **[File Explorer]** to start Explorer.

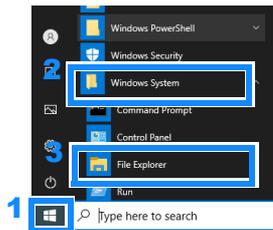


4. Click **[This PC]**, and then, double-click **[CD Drive (D)]** drive.

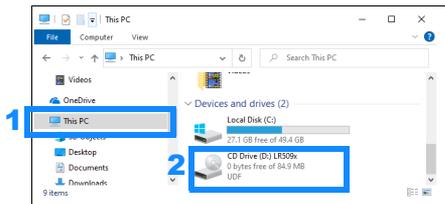


## 2.3 Installing the PC Application Program

5. Double-click the **[english]** folder.

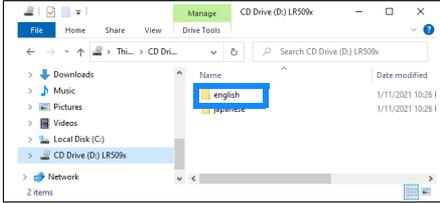

6. Double-click **[setup.exe]** (SET UP file).

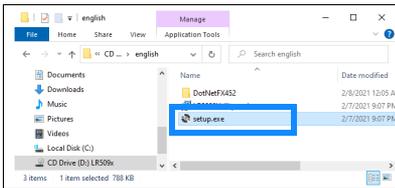

(The extension may not be displayed.) After the installer starts, follow the instruction to proceed with the installation.



### If the computer fails in the installation

- Some computers, depending on system environments including OS and security, can fail in the installation using the CD-R. In such a case, download the executable program from the “Drivers, Firmware, Software” page of Hioki’s website, and then install it again.
- The data logger series LR5000 programs consists of LR5000 Utility Program and LR5091/LR5092 Device Driver, both of which need to be installed.
- If the earlier version of LR5091/LR5092 Device Driver has been installed, uninstall it before installing the latest version of program.
- Ask your system administrator if installing application programs or changing system environments is prohibited for security reasons.



### How to start the program?

- The program starts automatically from the next Windows logon. (The icon appears in the task tray (notification area) (p.35).)
- Click the icon and click **[Show Main Screen]**.

## NOTE

For setting and importing recorded data from loggers other than the LR5000 series, use the Communication Utility program supplied with the model 3911 or 3912 Communication Base. You can browse the recorded data by using LR5000 Utility Program also.


**NOTE**

Settings and recorded data are not deleted when uninstalling or upgrading the program.

**Uninstall Procedure**

Follow this procedure to uninstall the LR5000 Utility Program.

- 1 Click **[Start]-[Settings]**.  
(The **[Windows Settings]** dialog box appears.)
- 2 Click **[Apps]**.  
(The **[Apps & features]** screen appears.)
- 3 Select the **[LR5000 Utility Program]**, and click the **[Uninstall]** button.
- 4 Click **[Uninstall]**.  
(The program is uninstalled.)

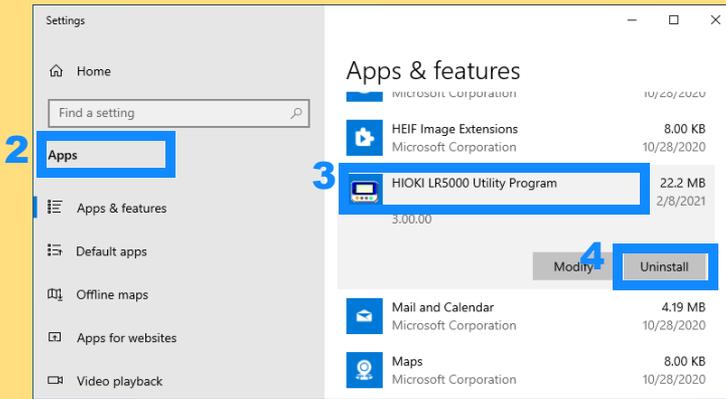**Version Upgrading**

Download the latest version of the LR5000 Utility Program from our website (<http://www.hioki.com>).

Follow the procedure on the download page to install the latest version. (The old version is uninstalled automatically.)

LR5000 Utility Program Screens

Main Screen (p.35)

Displays the data import screens:

- Logger data import

Displays Option screens


Displays Help.

Displays Setting Screens:

- Logger settings

Display Data Viewing screens


Display Data Sorting screens

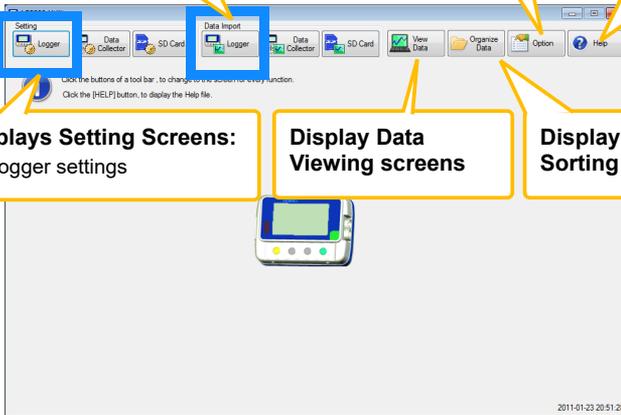

Setting Screens (p.36)

Make and export logger settings.

Example: Logger settings

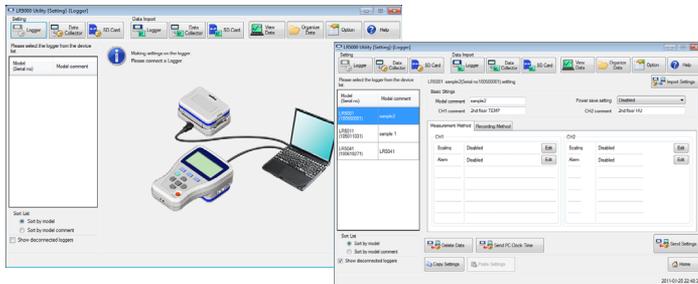




### Data Sorting Screens (p.75)

Sort imported data on these screens.  
You can copy, delete, move, combine, and extract data.


#### Example: Data Copy screen

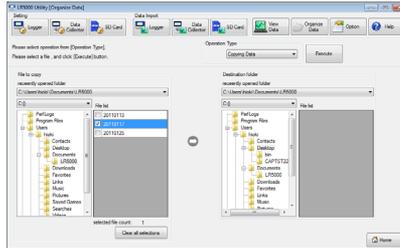

### Option Screens (p.81)

Make advanced settings on these screens.  
You can specify the data importing method.

#### Example: Import Method Setting screen

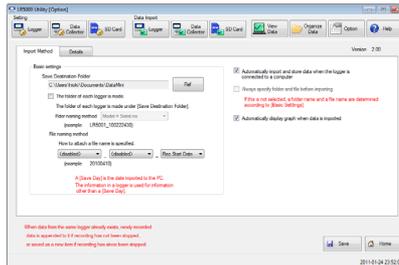

# Settings

## Chapter 3

Configure measurement settings before starting to record.

Logger settings can also be made from a PC running the LR5000 Utility Program. (p.35)

### 3.1 Settings List

Following is a list of all settings.

Although all settings are available from the LR5000 Utility Program, some settings are limited when made from the logger.

| Setting Item           | Setting Options  | Logger | Refer To | LR5000 Utility Program | Refer To                              |
|------------------------|--|--------|----------|------------------------|---------------------------------------|
| Recording Interval     | Sets the recording interval.   | Yes    | (p.31)   | Yes                    | (p.38)                                |
| Current Date and Time  | Set the current year, month, day, hour, and minute. (The LR5000 Utility Program can set the logger's clock to match the computer's.)   | Yes    | (p.32)   | Yes                    | (p.41)                                |
| Stop Method            | Select the processing method when memory becomes full.   | Yes    | (p.33)   | Yes                    | Included in the recording stop method |
| Recording Mode         | Selects instantaneous or statistical value recording (measurements are taken once per second, and instantaneous, maximum, minimum, and average values are saved at each recording interval). | Yes    | (p.34)   | Yes                    | (p.38)                                |
| Power Save             | Battery life is extended when on (enabled).  | Yes    | (p.34)   | Yes                    | (p.37)                                |
| Model Comment          | Enter a comment for the specified logger.  | No     | -        | Yes                    | (p.37)                                |
| Channel Comment        | Enter a comment for the specified measurement channel.   | No     | -        | Yes                    | (p.37)                                |
| Recording Start Method | Select the recording start method. (The start time can be specified.)  | No     | -        | Yes                    | (p.38)                                |

**3.1 Settings List**

---

| Setting Item          | Setting Options  | Logger | Refer To | LR5000<br>Utility<br>Program | Refer To |
|-----------------------|--|--------|----------|------------------------------|----------|
| Recording Stop Method | Select the recording stop method. (The stop time can be specified.)                            | No     | -        | Yes                          | (p.38)   |
| Scaling               | Use to scale measured values to display as adjusted values.                                    | No     | -        | Yes                          | (p.39)   |
| Alarm Thresholds      | Set upper and lower threshold values to display the alarm indicator <b>[AL]</b> on the logger. | No     | -        | Yes                          | (p.40)   |

## 3.2 Making Settings on the Logger

To return to the Measurement display from any Settings display, press the **REC/STOP** button.

### NOTE

- When the  battery indicator appears, settings cannot be changed (although they can still be displayed).
- When no operation occurs for 30 seconds with Settings displayed, automatically switches to Measurement display.
- Settings cannot be changed while recording. However, settings can still be displayed by pressing the **SET** button from the Measurement display.

### Recording Interval Setting



- 1 Press the **SET** button to display the interval setting. (The **[INTVL]** indicator appears, and the setting blinks.)
- 2 Press the **(+)** and **(-)** buttons to change the recording interval.  
Example of configuration:  
1sec 00:01, 1 minute 01:00
- 3 Press the **SET** button to accept the setting.  
(The year setting is displayed.)

**Recording Interval** 1(Default)/2/5/10/15/20/30 sec., 1/2 /5/10/15/20/30/60 min

**Real-Time Clock Setting****Year Setting display**

- 1** Press the **SET** button to display the time settings. ([**TIME**] is displayed, and the year setting blinks.)
- 2** Press the **(+)** and **(-)** buttons to change the year.
- 3** Press the **SET** button to accept the year setting.  
(The month setting starts blinking.)
- 4** Repeat this procedure to set the month, day, hour, and minute.
- 5** Press the **SET** button to accept the setting.  
(The stop method setting is displayed.)


**Setting Range**      01/01/2010, 00:00 to 12/31/2039, 23:59

Note: Seconds are not settable. However, seconds are set to zero at the instant the display is switched away from the minute setting.

**NOTE**

After the battery has been removed for a long time, or if the clock is incorrect, reset it.

### Stop Method Setting (for when memory becomes full)

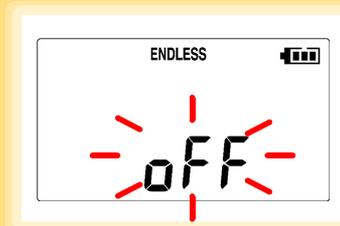

- 1 Press the **SET** button to display the stop method setting. (The **[ENDLESS]** indicator appears, and the setting blinks.)
- 2 Press the **(+)** and **(-)** buttons to select **[ON]** or **[OFF]**.
- 3 Press the **SET** button to accept the setting.  
(The recording mode setting is displayed.)

| Setting Options | Description   |
|-----------------|---|
| OFF             | Recording stops when memory becomes full (One-Time Recording).          |
| ON (Default)    | The oldest data is overwritten when memory is full (Endless Recording). |

#### NOTE

When memory becomes full during one-time recording, the recorded data count appears as follows.



(the Measurement display shows channel measurement value and recorded data count)

When memory becomes full during endless recording, the recorded data count (equal to the memory capacity) remains constant.




(instantaneous value recording display)



(statistical value recording display)

## 3.2 Making Settings on the Logger

### Recording Mode Setting

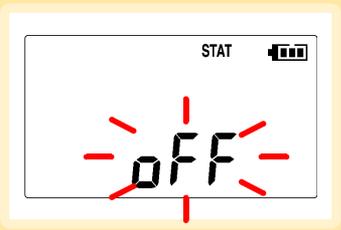

- 1 Press the **SET** button to display the recording mode setting. (The **[STAT]** indicator appears, and the setting blinks.)
- 2 Press the **(+)** and **(-)** buttons to select **[ON]** or **[OFF]**.
- 3 Press the **SET** button to accept the setting.  
(The power save setting is displayed.)


| Setting Options | Description   |
|-----------------|---|
| OFF (Default)   | The instantaneous value is recorded at each recording interval (instantaneous recording).   |
| ON              | When on, measurements are taken once per second, and instantaneous, maximum, minimum, and average values are recorded at each recording interval. (statistical recording).<br>(Up to 15,000 data values can be recorded.) |

#### NOTE

Statistical recording cannot be selected when the recording interval is set to one second.

### Power Save Setting

The power save function turns off the display 30 seconds after the last button is pressed. The display reappears upon the next button press.

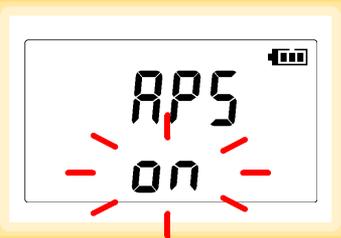

- 1 Press the **SET** button to display the power save setting (**[APS]** appears, and the setting blinks).
- 2 Press the **(+)** and **(-)** buttons to select **[ON]** or **[OFF]**.
- 3 Press the **SET** button to accept the setting.  
(The measurement display appears.)

| Setting Options | Description   |
|-----------------|---|
| ON (Default)    | Power save is enabled.                                |
| OFF             | Power save is disabled (the display remains visible). |

#### NOTE

The Auto Power Save feature consumes a small amount of current

See: "Appendix 3 Battery Life Approximation" (p.A2)


## 3.3 Making Settings from the LR5000 Utility Program

Logger settings can be made with the LR5000 Utility Program supplied with the LR5091 Communication Adapter and the LR5092-20 Data Collector. Install the Utility Program on the computer before connecting. (p.23)

### Connecting the Logger, LR5091, and Computer

Connect to the computer using the supplied USB cable.

Required Items: Logger, LR5091 Communication Adapter, USB cable, Computer

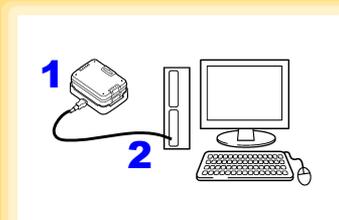

**1** Plug the USB cable into the USB port on the LR5091 (or LR5092-20), and into a USB port on the computer.


**2** Dock the logger in the LR5091 (or LR5092-20).

(When docking, be sure that the infrared ports are aligned.)

The main display appears automatically (by default).

When the logger contains recorded data, the import confirmation dialog appears. Click **[Yes]** to import the data automatically. (p.49)

### Logger Settings

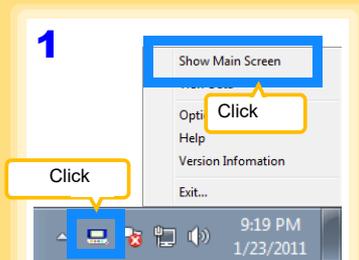


**1** If the main screen is not displayed on the computer, click the icon in the task tray (notification area), and click **[Show Main Screen]**.

The main screen appears.

### 3.3 Making Settings from the LR5000 Utility Program

2

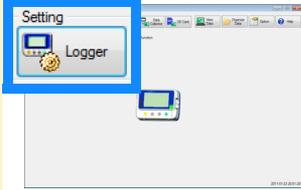

2 For the [Setting], click the [Logger] button.

The Logger Settings screen appears. (If the logger is not connected, you are prompted to connect it. Connect the logger.)

3 Select the logger from the device list\*, and edit the settings. (p.37)

4 Click the [Send Settings] button.

**Setting Options**  
 Note: The displayed settings are those previously made from the LR5000 Utility Program, which may be different from the current settings within the logger itself.

3 Click to select.  
 The currently selected logger's background is a different color.

4 Returns to the main screen.

Settings from other loggers can be applied. (p.37)

#### \* About the Device List

- Up to ten loggers can be displayed when connected to the computer.
- When [Show disconnected loggers] is selected, disconnected loggers that had settings previously saved appear in the list.
- The list can be sorted in ascending order ([Sort List]).



#### How can current settings be imported from the connected logger?

1. Click the [Import Settings] button at the upper right of screen. (A dialog appears.)
2. Click the [Import Settings to Computer] button. (The logger's settings are now reflected in the program.)



### How can the settings from one logger be copied to another?

1. From the device list, select a logger with settings to be copied, and click the **[Copy Settings]** button.
2. From the device list, select a logger as the destination for the settings, and click the **[Paste Settings]** button. (A dialog appears.)
3. Click the **[Paste]** button in the dialog box. (The settings are copied.)



### How can I learn more about changing settings?

## 1 Setting the **[Basic Settings]**.

|                           |  |
|---------------------------|--|
| <b>Model comment</b>      | Enter a comment to describe the logger as needed.  |
| <b>Power save setting</b> | Enable or disable the power save setting (p.34).<br><b>See:</b> "Appendix 3 Battery Life Approximation" (p.A2) |
| <b>CH1 comment</b>        | Enter a comment to describe the measurement channel as needed.   |

Note: Comments may consist of up to 20 characters.

The following characters are not allowed: \, /, :, \*, ?, ", <, >, and |.

## 2 Settings on the **[Recording Method]** tab.

### **NOTE**

The Auto Power Save feature consumes a small amount of current

### 3.3 Making Settings from the LR5000 Utility Program

#### Rec interval

Sets the recording interval.

|   |
|---|
| 1/2/5/10/15/20/30 sec., 1/2 /5/10/15/20/30/60 min |
|---|

#### Start Method

Select the recording start method.

When **[Scheduled Time]** is selected, specify the start date and time.

| Setting Options                 | Description  |
|---------------------------------|--|
| <b>Button Operation</b>         | Starts recording by pressing the button on the logger.                                   |
| <b>Start After Sent</b>         | Starts recording by pressing the <b>[Send Settings]</b> button.                          |
| <b>Scheduled Time</b>           | Starts recording at the scheduled time after pressing the <b>[Send Settings]</b> button. |
| <b>Valid setting time range</b> | 01/01/2010, 00:00 to 12/31/2039, 23:59   |

#### **NOTE**

When the **[Scheduled Time]** start method is enabled, the **[REC]** indicator on the logger display blinks until the scheduled start time.

#### Stop Method

Select the recording stop method.

When **[Scheduled Time (Endless)]** or **[Scheduled Time (One-Time)]** is selected, the date and time need to be set.

| Setting Options                    | Description   |
|------------------------------------|---|
| <b>Button Operation (endless)</b>  | Stops recording by pressing the button on the logger. The oldest data is overwritten when memory is full.   |
| <b>Button Operation (one-time)</b> | Stops recording by pressing the button on the logger. Recording also stops when memory becomes full.  |
| <b>Scheduled Time (Endless)</b>    | Stops recording at the scheduled time. The oldest data is overwritten when memory is full.  |
| <b>Scheduled Time (One-Time)</b>   | Stops recording at the scheduled time. Recording also stops when memory becomes full.   |
| <b>Hold Data at Scheduled Time</b> | Specify when setting <b>[Scheduled Time (Endless Recording)]</b> . Select this check box to record the data at the scheduled time and stop recording. |

#### Rec Mode

Select the recording mode.

| Setting Options      | Description  |
|----------------------|--|
| <b>Instantaneous</b> | The instantaneous value is recorded at each recording interval.  |
| <b>Statistical</b>   | Measurements are taken once per second, and instantaneous, maximum, minimum, and average values are recorded at each recording interval. (Up to 15,000 data values can be recorded.) |


**See:** Statistical recording results in shorter battery life. "Appendix 3 Battery Life Approximation" (p.A2)

#### **NOTE**

Statistical recording cannot be selected when the recording interval is set to one second.

### 3 Settings on the [Measurement Method] tab

Click the [Edit] button to display the setting dialog box.

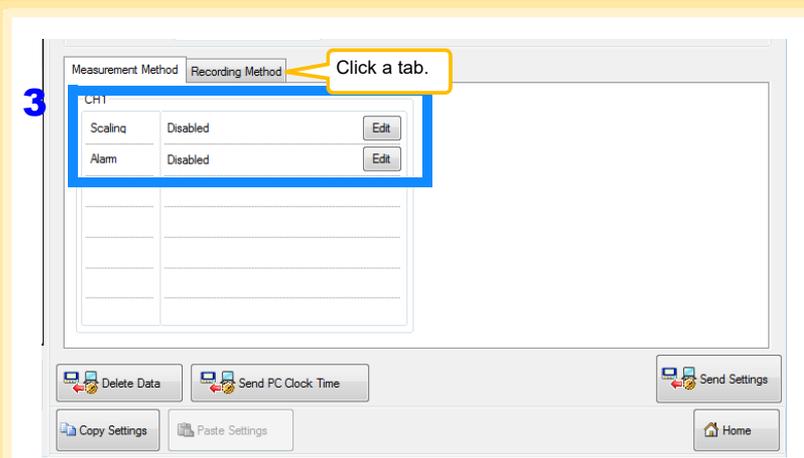


#### Scaling (set as needed) See: "What is Scaling?" (p.41)

The following scaling calculation is applied to measured values.

Scaled Result = Raw data (measured value) × A + B × SI prefix (multiplier)

The scaled result is displayed on the logger.

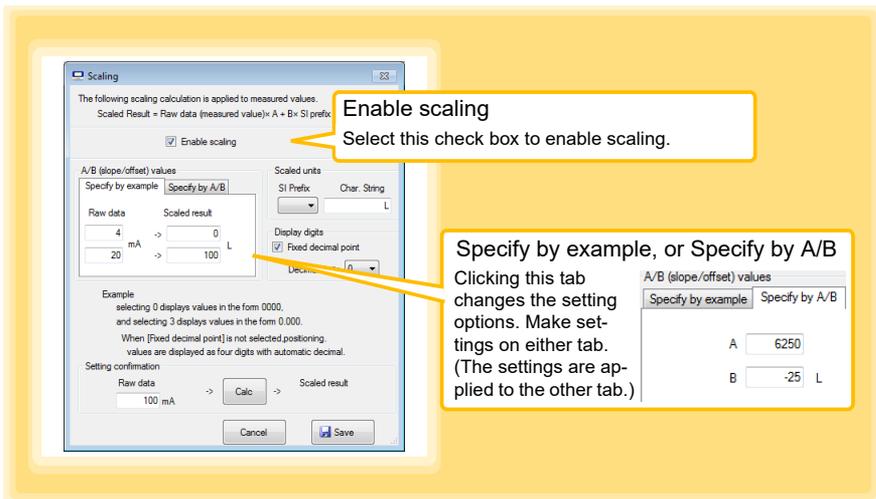

### 3.3 Making Settings from the LR5000 Utility Program

1. Set the following options.

| Setting Options           | Description  |
|---------------------------|--|
| <b>Specify by example</b> | Enter two known conversion points (up to ten digits each).   |
| <b>Specify by A/B</b>     | Enter the scaling coefficients (A and B, up to ten digits each).   |
| <b>Scaled units</b>       | <ul style="list-style-type: none"> <li>• Select the <b>[SI Prefix]</b>.<br/>(<b>[p]</b>=1E-12, <b>[n]</b>=1E-9, <b>[μ]</b>=1E-6, <b>[m]</b>=1E-3, blank =1E0, <b>[k]</b>=1E3, <b>[M]</b>=1E6, <b>[G]</b>=1E9, <b>[T]</b>=1E12)</li> <li>• Enter the <b>[Char. String]</b> to identify the scaled units.<br/>(Up to five characters, except \, /, :, *, ?, ", &lt;, &gt;, and  .)</li> </ul>  |
| <b>Display digits</b>     | <ul style="list-style-type: none"> <li>• Select <b>[Fixed decimal point]</b> and specify the <b>[Decimal digits]</b> to be displayed to the right of the decimal point. Valid settings are 0 to 3.<br/>(Examples: selecting 0 displays values in the form 0000, and selecting 3 displays values in the form 0.000)</li> <li>• When <b>[Fixed decimal point]</b> is not selected, values are displayed as four digits (0.000 to ±9999) with automatic decimal positioning.</li> </ul> |

2. Confirm settings.

|                             |  |
|-----------------------------|--|
| <b>Setting confirmation</b> | Confirm that scaling is performed properly.<br>Enter any numerical value as raw data, and click the <b>[Calc]</b> button to display the scaled result. |
|-----------------------------|--|


3. Click the **[Save]** button.

(Scaling settings are saved, and the display returns to the Logger Settings screen.)

Note: If you click the **[Cancel]** button without saving the settings, the display still returns to the Logger Settings screen.

### Alarm Thresholds (set as needed)

Set the upper and lower alarm threshold values. When a measurement is outside of the specified area, the **[AL]** (alarm) indicator is displayed on the logger.

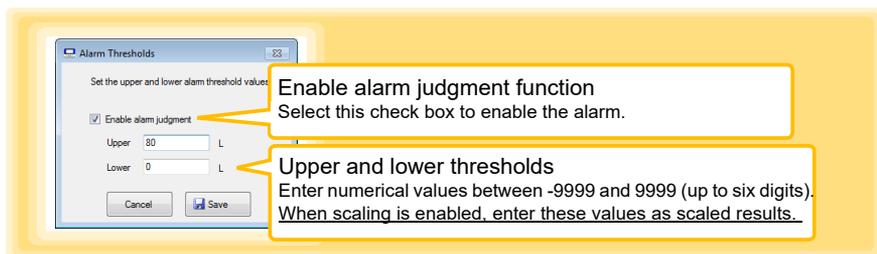

Click the **[Save]** button to save your settings.

(The display returns to the Logger Settings screen.)

Note: If you click the **[Cancel]** button without saving the settings, the display still returns to the Logger Settings screen.

Note: Alarm judgment is performed at every recording interval during instantaneous recording, and once per second during statistical recording.

Note: Alarm judgment is performed using measurement values with a larger number of digits than the values (4 digits) indicated in the LR5031 display.

Note: The **[AL]** indicator appears when the measured value is out of range (OF/UF displayed), and when a sensor anomaly occurs (--- displayed).

## Other Settings on the Logger Settings Screen

**Delete Data**  
Deletes recorded data in the selected logger (only while connected).

**Send PC Clock Time**  
Set the logger's clock to match the computer's clock (after confirming the computer's clock is correct).

**Copy Settings**  
Settings can be copied from another logger. (p.37)

**Paste Settings**

**Save Settings \***  
Saves settings to a computer file. In the dialog box that appears, specify the location and name of the destination file (extension .conf).

**Open Settings \***  
Loads settings from a computer file. In the dialog box that appears, specify the location and name of the saved settings file (extension .conf).


\* Appears only when [Show the settings of the [Save Settings] and [Open Settings] buttons.] is selected on the Options screen.

## What is Scaling?

Scaling converts actual measurement values to their corresponding values in arbitrarily determined units for display. This is convenient for converting the current values provided by the logger for display as the corresponding physical values the sensor is intended to measure.

For example, if a flow sensor provides a 4 to 20 mA output signal corresponding to 0 to 100 liters flow measurement, set as follows.

## To specify by conversion examples

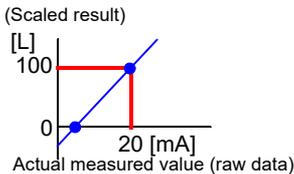


| A/B (slope/offset) values |                | Scaled units  |              |
|---------------------------|----------------|---|--------------|
| Specify by example        | Specify by A/B | SI Prefix   | Char. String |
| Raw data                  | Scaled result  |   | L            |
| 4                         | 0              |   |              |
| 20                        | 100            |   |              |
|                           |                | Display digits  |              |
|                           |                | <input checked="" type="checkbox"/> Fixed decimal point |              |
|                           |                | Decimal digits 0  |              |

## To specify by A/B slope values directly

Slope = increase in scaled result ÷ increase in measured value

For the example case,  $(100 \text{ L} - 0 \text{ L}) \div (0.02 \text{ A} - 0.004 \text{ A}) = 6250$

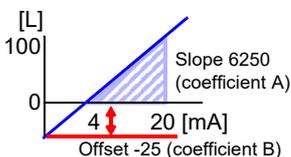

| A/B (slope/offset) values |                | Scaled units  |              |
|---------------------------|----------------|---|--------------|
| Specify by example        | Specify by A/B | SI Prefix   | Char. String |
| A                         | 6250           |   | L            |
| B                         | -25            |   |              |
|                           |                | Display digits  |              |
|                           |                | <input checked="" type="checkbox"/> Fixed decimal point |              |
|                           |                | Decimal digits 0  |              |




# Measurement and Analysis

## Chapter 4

### 4.1 Pre-Measurement Inspection

Inspect the following items before starting measurement.

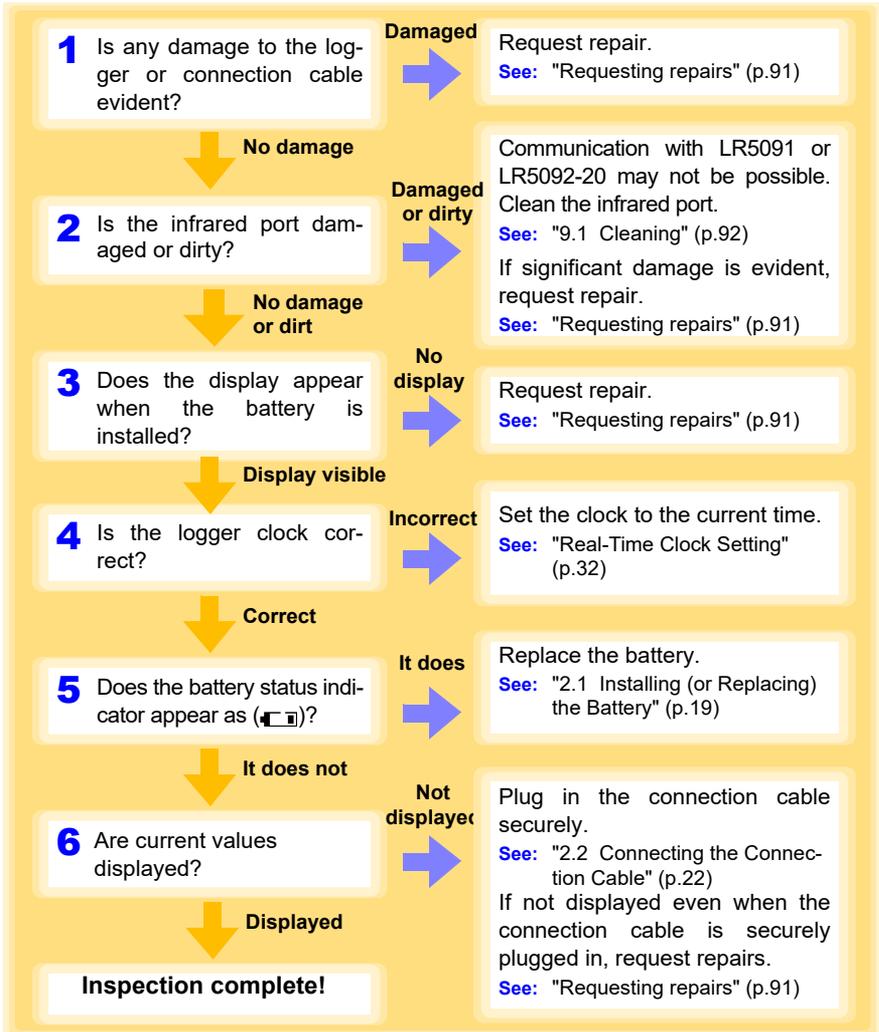

## 4.2 Installing the Logger

After inspection, install the logger at the measurement site.

Be sure to read the "Installation Precautions" (p.7) before installing.

Install the logger as necessary according to the following procedure.

### **! WARNING**

Persons wearing electronic medical devices such as a pacemaker should not use the Z5004 strap with magnet. Such persons should avoid even proximity to the Z5004, as it may be dangerous. Medical device operation could be compromised, presenting a hazard to human life.

### **! CAUTION**

Do not apply heavy downward pressure with the stand extended. The stand could be damaged.

### **NOTE**

- Avoid shocking the Z5004, such as by dropping. Shock can cause it to be chipped or cracked.
- Do not use the Z5004 where it may be subject to rain, dust, or condensation. Use in such conditions may cause corrosion or deterioration of the magnet.
- If the Z5004 is brought near a magnetic memory device such as a floppy disk, credit/debit card, or pre-paid card or ticket, the device may become unusable due to data corruption. It can also cause damage if brought near a precision electronic device such as a computer, TV, or electronic wristwatch.

## Using the Stand

Required Items: Stand (Accessory)

- 1** Strap/stand attachment hole



**2**




- 1** Attach the stand to the strap/stand attachment hole.

- 2** Stand up the logger.

### Wall Mounting with the LR9901 Wall-Mounted Holder

Required Items: LR9901 (Option), 2 screws (supplied with the LR9901), screwdriver, etc. (as needed)

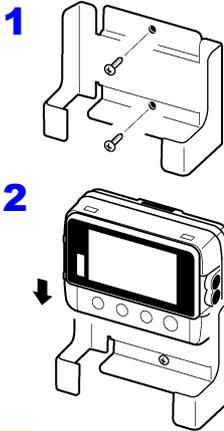

**1** Mount the LR9901 to the wall using the two screws.


**2** Insert the logger into the LR9901.



The logger can also be attached to a wall or other surface by hanging the strap or attachment hole on a screw. (Supported screw head dimensions: up to approx. 6.8 mm in diameter and approx. 2.5 mm in thickness)

### Wall Mounting with the Z5004 strap with magnet

Required Items: Z5004 (Option)

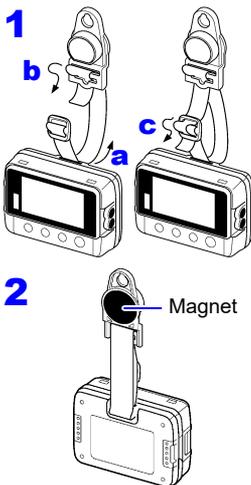

**1** Attach the Z5004 to the strap/stand attachment hole.  
(feed the strap through a, b, and c)

**2** Attach the magnet to the wall (ferrous material).

## 4.3 Starting and Stopping Recording

After installing the logger, connect the leads to the measurement object, and start recording.

### **WARNING**

- In order to prevent electric shock and short-circuit accidents, shut off the power to the line to be measured before connecting the connection cable.
- To avoid electrical accidents, remove power from the circuit before connecting the connection cable.
- Ensure that the input does not exceed the maximum rated current to avoid logger damage, short-circuiting and electric shock resulting from heat building.
- The maximum rated voltage between input terminals and ground is 60 VDC. Attempting to measure voltages exceeding 60 V with respect to ground could damage the logger and result in personal injury.

### **CAUTION**

- To avoid damage to the instrument, do not apply voltage to connection cable jack.
- Note that the instrument may be damaged if the applied current exceeds the measurement range.

### **NOTE**

Recording cannot start when the battery is depleted. When the battery becomes exhausted during recording, recording stops.

**See:** "2.1 Installing (or Replacing) the Battery" (p.19)

---

### Start

The diagram illustrates the 'Start' process in three stages:

- Initial state: Measurement display shows 20.00 mA, DATA shows 0.
- Pressing REC/STOP: The REC indicator blinks, and the DATA 0 blinks.
- Recording starts: The REC indicator becomes solid, and the measurement display reappears.

### Stop

The diagram illustrates the 'Stop' process in two stages:

- Pressing REC/STOP: The REC indicator blinks, the measurement display shows 20.00 mA, and DATA shows 50000.
- Recording stops: The REC indicator disappears, the measurement display shows 20.00 mA, and DATA shows 50000.

**Start** From the Measurement display, hold the **REC/STOP** button for two seconds.

---

The **[REC]** indicator and the data count blink.  
 Note: Continue pressing the button until the **[REC]** indicator changes from a blinking to on state.

When the blinking stops and the data count is zeroed, recording starts.

Logger memory contains the data for two recording sessions. (Be aware that old data is erased when starting recording after two recording sessions.)

---

After one second, the measurement display reappears.

---

**Stop** Hold the **REC/STOP** button for two seconds while recording (while **[REC]** is displayed).

**[REC]** blinks.  
 Note: Continue pressing the button until the **[REC]** indicator changes from a blinking to off state.

**Data can be imported to a computer without stopping recording.**  
**See:** "4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display" (p.49)

---

**[REC]** disappears when recording stops.

**If the stop method is set to [OFF] (one-time recording), recording stops automatically when memory becomes full. (p.33)**


**4.3 Starting and Stopping Recording**

**Automatic Recording Start at Convenient Times**

Depending on the selected recording interval, recording start is automatically delayed until the next convenient clock time.

| Recording Interval | Recording Start Time                                       |
|--------------------|--|
| 1 sec.             | 00 to 59 s (1-second interval)                             |
| 2 sec.             | 00 to 58 s (2-seconds interval)                            |
| 5 sec.             | 00 to 55 s (5-seconds interval)                            |
| 10 sec.            | 00 to 50 s (10-seconds interval)                           |
| 15 sec.            | 00 to 45 s (15-seconds interval)                           |
| 20 sec.            | 00 to 40 s (20-seconds interval)                           |
| 30 sec.            | 00 to 30 s (30-seconds interval)                           |
| 1 min              | 00 min, 00 s to 59 min, 00 s (1-minute interval)           |
| 2 min              | 00 min, 00 s to 58 min, 00 s (2-minutes interval)          |
| 5 min              | 00 min, 00 s to 55 min, 00 s (5-minutes interval)          |
| 10 min             | 00 min, 00 s to 50 min, 00 s (10-minutes interval)         |
| 15 min             | 00 min, 00 s to 45 min, 00 s (15-minutes interval)         |
| 20 min             | 00 min, 00 s to 40 min, 00 s (20-minutes interval)         |
| 30 min             | 00 min, 00 s to 30 min, 00 s (30-minutes interval)         |
| 60 min             | 00 h, 00 min, 00 s to 23 h, 00 min, 00 s (1-hour interval) |


**Example: When the button is pushed to start recording at 12:01:00, and the recording interval is 10 minutes**

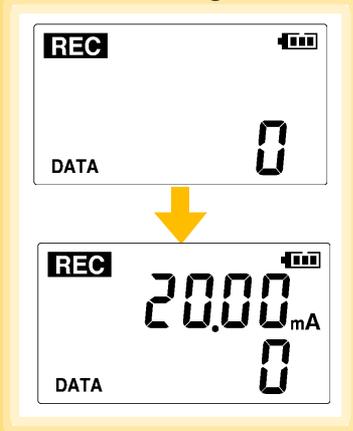

At 12:01:00, you press the **REC/STOP** button.

The **[REC]** indicator in the display turns on, but recording does not start yet.

**If you try starting at 12:00 but are one minute late**  
Actual recording starts at 12:10, which is considered the next convenient time.

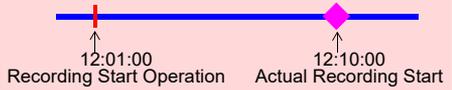

At 12:10:00  
Recording starts.

In the case of instantaneous value recording, the number of data soon becomes 1.

In the case of statistical value recording, the number of data becomes 1 at 12:20:00.

## 4.4 Confirming Currently Measured Values and Data Recording

Confirm data recording on the Measurement display (p.16).

You can browse current measurement values (instantaneous), the count of recorded data items, and maximum and minimum values.

The (+) and (-) buttons select the type of value displayed.



### How to switch from a Setting display to Measurement display?

To switch to the Measurement display from any other display, press **REC/STOP**.


### NOTE

- When power saving (p.34) is enabled, the display blanks after no operation occurs for 30 seconds. To browse measurement values (instantaneous) and verify each recorded data value, press any button to turn on the Measurement display.
- The currently displayed instantaneous measurement value is refreshed about once per second, regardless of the recording interval setting.

## 4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

Data recorded in the logger can be imported to the computer. Install the LR5000 Utility Program on the computer beforehand. (p.23)

**Required Items:** Logger, LR5091 Communication Adapter(or LR5092-20 Data Collector), USB cable, Computer

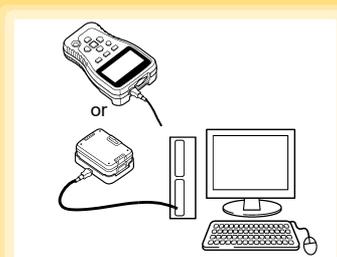

**1** Plug the USB cable into the USB port on the LR5091 (or LR5092-20), and into a USB port on the computer.

**2** Dock the logger in the LR5091 (or LR5092-20).

(When docking, be sure that the infrared ports are aligned.)



## 4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

The main screen appears automatically.

If newly recorded data exists, the import confirmation dialog appears.

If the data import screen is displayed before connecting the logger, the import confirmation dialog does not appear. Import manually. (p.59)


### 3 Click [Yes].

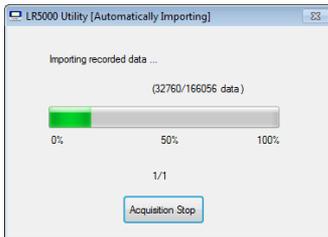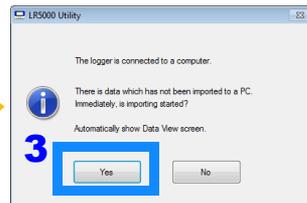

The data recorded in the logger is imported to the computer automatically.

Imported data is saved to a file (Auto Import).

Note: By default, **[Automatically import and store data when the logger is connected to a computer]** (on the Options screen) is enabled. (p.82)

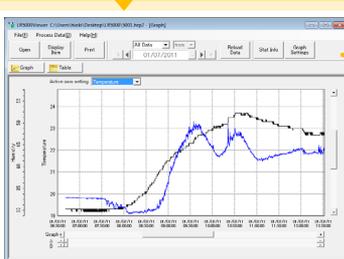

The viewer opens to display the graph (Auto Graph Display).

Note: By default, **[Automatically display graph when data is imported]** (on the Options screen) is enabled. (p.82)

### How is recorded data saved?

Recorded data is automatically saved when imported to a computer.

The save destination and file name are specified as a basic setting on the Options screen.

## 4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

### Viewer Screen

The viewer screen appears as follows.

Opens a file containing recorded data.

Items to be displayed are selectable. (p.58)

Displayed graphs and tables can be printed. (p.64)

The displayed time span can be specified.

See: "Menu Bar Items" (p.52)

Reloads and refreshes recorded data from a file.

Displays the [Statistical Information and Item Settings] dialog box when a graph is displayed. (p.56)

Click the buttons to switch between graph and table displays.

Displays the [Graph Settings] dialog box when a graph is displayed. (p.54)

The graph or table is displayed.

The screenshot shows the LR5000Viewer application window. The title bar reads "LR5000Viewer (Users\hioki\Desktop\LR5000\5001.hrp2 - [Graph...". The menu bar contains "File(F)", "Process Data(D)", and "Help(H)". The toolbar includes "Open", "Display Item", "Print", "Reload Data", "Stat Info", and "Graph Settings". A date selector shows "01/07/2011". Below the toolbar are "Graph" and "Table" buttons. The main area has an "Active axis setting" dropdown set to "Temperature". The graph plots "Humidity" (y-axis, 30-45) and "Temperature" (y-axis, 19-23) against time (x-axis, 01/07/11 06:30:00 to 12:30:00). A "Graph" window at the bottom shows "A" and "B" with zoom controls. Callouts point to various UI elements with descriptive text.

## Menu Bar Items

| Menu               | Item   | Contents  |
|--------------------|--|---|
| File               | Open   | Opens a file containing recorded data.                            |
|                    | Recently opened recording files  | Opens recently used files.  |
|                    | Save recording file as   | Currently displayed recording data is saved as a new file.        |
|                    | Print graph  | Prints data in graphic format. (p.64)                             |
|                    | Paste to Microsoft Excel®  | Pastes displayed data into Microsoft Excel®.                      |
|                    | Export CSV file  | Exports displayed data as a CSV file.                             |
|                    | Exit   | Closes the program.   |
| Process Data       | Scaling  | Applies scaling to data on one channel. (p.67)                    |
|                    | Power Calculation  | Performs approximate electric power calculation. (p.68)           |
|                    | Energy Cost  | Performs approximate energy cost calculation. (p.69)              |
|                    | Operating Rate   | Performs approximate operating rate calculation. (p.70)           |
|                    | Integration  | Performs data integration. (p.71)                                 |
|                    | Dew Point  | Performs dew-point temperature calculation. (p.72)                |
|                    | Two-Data-Item Arithmetic   | Performs approximate two-data-item arithmetic calculation. (p.73) |
| OVER Data Revision | Converts data outside of the upper and lower threshold settings to specified values, and saves as new data. (p.74) |   |
| Help               | Help   | Displays the help file.   |
|                    | Version  | Displays LR5000 Utility Program version information.              |

## 4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

### Main Graph Features

The main graph features are shown below.

Displays the **[Stat Info]** dialog box. (p.56)

Click the buttons to switch between graph and table displays.

Displays the **[Graph Settings]** dialog box. (p.54)

When there are two or more axes, select the one displayed closest to the graph.

Scroll Bar (scrolls the graph)

A/B cursors

| Item | Serial no | CH | CH comment  | Property      | Cursor A | Cursor B | Maximum           | Minimum |
|------|-----------|----|-------------|---------------|----------|----------|-------------------|---------|
| 1    | 100618237 | 1  | Temperature | Instant value | 19.3     | 22.9     | 01/07/11 10:30:36 | 23.7    |
| 2    | 100618237 | 2  | Humidity    | Instant value | 31.8     | 45.2     | 01/07/11 14:58:58 | 56.1    |



**How can the displayed area be magnified?**

- 1 Drag over the area to be enlarged to enclose it in a dotted box.
- 2 Right click to open the pop-up menu, and click **[Magnify selected area]**.

Dotted Box

2 Click

Magnify selected area

Return to previous picture

Save scale(No.1) 1/7/2011 6:37:30

Save scale(No.2)



**How can graph line color and display be switched?**

Change settings on the **[Item settings]** tab in the **[Statistical Information and Item Settings]** dialog box. (p.56)




**How can graph details be set?**

Detailed settings are available in the **[Graph Settings]** dialog box. (p.54)

### [Graph Settings] dialog box


Graph details can be set as follows. Click each tab to access various settings.

#### [Common] tab

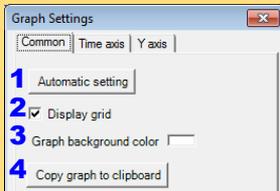

- 1 Automatically sets the time axis and Y-axis to the optimum scale.
- 2 Select to display the grid.
- 3 Changes the graph background color.
- 4 Copies the graph to the clipboard. The graph can then be pasted into Microsoft Word etc.

#### [Time axis] tab

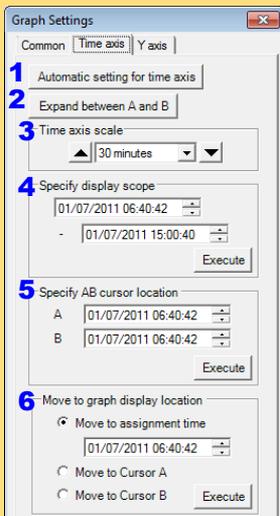

- 1 Automatically sets the time axis to the optimum scale.
- 2 Zooms the display to show only the time span between A/B cursors.
- 3 Changes the time base scale.
- 4 Specifies the displayed time span on the time axis. Click **[Execute]** to apply the settings.
- 5 Specifies cursor positions. Click **[Execute]** to apply the settings.
- 6 Specifies the graph start position (time). Click **[Execute]** to apply the settings.



## 4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

### [Statistical Information and Item Settings] dialog box

The following items appear on the [Statistical information] tab.

- Item no.
- Serial no.
- Channel no.
- Channel comments
- Property (Type of measurement value)
- Measured values at A/B cursors
- Statistical data
- Units

**[Statistical information] tab**

Times at A/B cursors

Select to calculate and display maximum, minimum, average, and integration values between A/B cursors. Integration values are displayed only for integrable items.

| Item | Serial no | CH | CH comment  | Property      | Cursor A | Cursor B | Maximum                | Minimum                |
|------|-----------|----|-------------|---------------|----------|----------|------------------------|------------------------|
| 1    | 100618237 | 1  | Temperature | Instant value | 19.3     | 22.9     | 01/07/11 10:30:36 23.7 | 01/07/11 06:49:18 19.2 |
| 2    | 100618237 | 2  | Humidity    | Instant value | 31.8     | 45.2     | 01/07/11 14:58:58 56.1 | 01/07/11 08:06:04 29.2 |

The following items appear on the [Item Settings] tab.

- Display on/off
- Graph line colors and thickness
- Bar graph display on/off

**[Item settings] tab**

| Display On/Off                      | Color | Thickness | Item | Measurement item | Bar graph                |
|-------------------------------------|-------|-----------|------|------------------|--------------------------|
| <input checked="" type="checkbox"/> | Black | 1         | 1    | Temperature      | <input type="checkbox"/> |
| <input checked="" type="checkbox"/> | Blue  | 1         | 2    | Humidity         | <input type="checkbox"/> |

## Main Table Features

The main table features are shown below.

Shows the item no., serial no., model comment, channel comment, property, measurement units, and average, maximum, minimum, and integration values of all data.

Double click a maximum or minimum numerical value to jump to the relevant cell (or to the first if there are multiple relevant cells).

Time of Recording

Recorded Values  
Blue indicates minimum values, and red indicates maximum values.

| Item no.      | 1             | 2             |
|---------------|---------------|---------------|
| Serial no     | 100618237     | 100618237     |
| Model comment | LR5001        | LR5001        |
| CH comment    | Temperature   | Humidity      |
| Property      | Instant value | Instant value |
| Unit          | °C            | %             |
| Average       | 21.9          | 41.2          |
| Maximum       | 23.7          | 56.1          |
| Minimum       | 19.2          | 29.2          |
| Integration   | 327973.2      | 617488.4      |

## Convenient Table Functions

Use the following operations to scroll the table and copy data to the clipboard.

| Item  | Contents  |
|---|---|
| Press <b>Ctrl</b> and <b>Home</b> keys simultaneously | Moves to the upper left corner of the table.                      |
| Press <b>Ctrl</b> and <b>End</b> keys simultaneously  | Moves to the lower right corner of the table.                     |
| <b>Home</b> key                                       | Scrolls to display the left edge of the table.                    |
| <b>End</b> key  | Scrolls to the right edge of the table.                           |
| Press <b>Ctrl</b> and <b>C</b> keys simultaneously    | Copies the value of the currently selected cell to the clipboard. |

## 4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display

### Selecting Items for Display

Click the **[Display Item]** button in the viewer to display the **[Select Items for Display]** screen.

**1** Select up to 600 items for display.

**2** Click the **[OK]** button.

### Menu Bar Items

| Menu                      | Items                           | Contents   |
|---------------------------|---------------------------------|--|
| Select Items              | Check selection range           | Add and clear selection of multiple items (display in blue) selected with the mouse. |
|                           | Clear checks of selection range |  |
|                           | Select all selections           | When there are 600 item in the above list, click to select or clear all items.       |
|                           | Clear all selections            |  |
|                           | Select all instant values       | Select all items (up to 600) of the same property.                                   |
|                           | Select all maximum values       |  |
| Select all minimum values |                                 |  |
| Select all average values |                                 |  |
| Sort Items                | Sort by model name              | Sort by model name, serial no., or model comment.                                    |
|                           | Sort by serial no               |  |
|                           | Sort by model comment           |  |
|                           | Move selected item up           | Move blue mouse-selected items up or down.   |
|                           | Move selected item down         |  |
|                           | Restore original order          | Restore original order.  |


## 4.6 Manually Importing (Saving) Recorded Data to a Computer, and Graph Display

You can manually import (save) recorded data to a computer, and display it in a graph.



- 1 If the LR5000 Utility Program is not running on the computer, click the icon in the task tray (notification area), and click **[Show Main Screen]**.

The main screen appears.

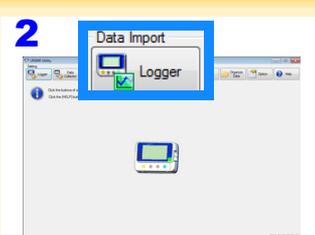

- 2 For the **[Data Import]** device, click the **[Logger]** button.


The Data Import screen appears. If the logger is not connected, you are prompted to connect it. Connect the logger.

- 3 Select the logger in the list of devices, and click the **[Start Importing]** or **[Next]\*** button.

\* If **[Always specify folder and file before importing]** on the Options screen is enabled (p.82).

(If you click the **[Start Importing]** button, data importing starts ("Screen after importing data" (p.61)).

If you click **[Next]**, the Save Method screen appears (p.60).

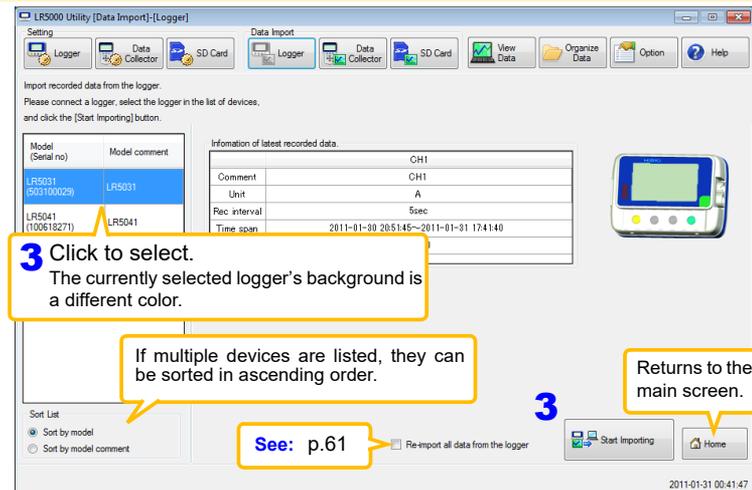

- 3 Click to select.  
The currently selected logger's background is a different color.

If multiple devices are listed, they can be sorted in ascending order.

See: p.61

Returns to the main screen.

## 4.6 Manually Importing (Saving) Recorded Data to a Computer, and Graph Display

LR5000 Utility [Data Import]-[Logger]

Setting Data Import

Logger Data Collector SD Card

View Data Organize Data Option Help

Import recorded data from the logger.  
Please connect a logger, select the logger in the list of devices,  
and click the [Start Importing] button.

| Model (Serial no)  | Model comment |
|--------------------|---------------|
| LR5031 (503100029) | LR5031        |
| LR5041 (100618271) | LR5041        |

Information of latest recorded data.

|   |
|---|
| CH1   |
| Comment CH1                                       |
| Unit A  |
| Rec interval 5sec                                 |
| Time span 2011-01-30 20:51:45~2011-01-31 17:41:40 |
| Count 15000                                       |

Information of last recorded data.

|  |
|--|
| CH1  |
| Comment CH1                                  |
| Unit A                                       |
| Rec interval 1sec                            |
| Length 2010-11-1 15:00:00~2010-11-1 15:01:00 |
| Count 60                                     |

Import Data Selection

latest data only  
 last data only  
 Both

Start Importing Home

2011-01-31 00:41:47

**If the previous data has not been imported, information is displayed along with the latest data. After making the [Import Data Selection], click the [Start Importing] or [Next] button.**

### Save Method Screen

LR5000 Utility [Data Import]-[Logger]

Setting Data Import

Logger Data Collector SD Card

View Data Organize Data Option Help

Use (basic settings) on the upper screen.

Save Destination C:\Users\hiko\Documents\LR5000

The folder of each logger is made. Model + Serial no

(Disabled) (Disabled) Start recording date Edit

Specify the file name

C:\Users\hiko\Documents\LR5000\data File

Latest file name

Specify the file naming method

(Disabled) (Disabled) save date

(Example 20100411)

Save Destination F:\C:\Users\hiko\Documents\LR5000

Display graph automatically after importing data See: p.61

Back Start Importing Home

2011-01-31 00:40:24

**4** Select the save method. Three methods are available.

**Method 1**  
Edit the save destination (basic setting).  
Note: The Options screen settings (p.82) are refreshed.

**Method 2**  
Specify an existing file.\*

**Method 3**  
Specify the file naming method and save destination folder.\*

**5** Click

\* When data from the same logger already exists, newly recorded data is appended to it if recording has not been stopped, or saved as a new item if recording has since been stopped.

The Save Method screen will appear when the **[Always specify folder and file before importing]** checkbox on the optional screen is selected.

See: "7.1 Changing the Saving Method for Imported Data" (p.82)

## 4.6 Manually Importing (Saving) Recorded Data to a Computer, and Graph Display



### How is automatic importing performed?

On the Options screen, enable **[Automatically import and store data when the logger is connected to a computer]**. (p.82)



### How can all data be imported from the logger?

Select **[Re-import all data from the logger]**.

(All data in the logger (including any previously imported) is imported to the computer, and duplicated data is overwritten.)

#### Data Import screen(p.59)

Re-import all data from the logger



Home



### How is the graph automatically displayed after importing data?

Select **[Display graph automatically after importing data]**. (When not selected, the file list is saved and displayed when importing is finished.)

#### Save Method Screen(p.60)

Display graph automatically after importing data

### Screen after importing data

The screenshot shows the 'LR5000 Utility (Data Import)-(Logger)' window. The interface includes a menu bar with options like Logger, Data Collector, SD Card, View Data, Organize Data, Option, and Help. The main area displays recorded data details, including destination folder, file name, and a table of recorded data. Callouts provide instructions for the 'Display Graph' and 'Display Table' buttons, the 'Change Settings' button, and the 'Back' and 'Home' buttons.

**Click the button to display the graph.**  
(If there are more than 16 items to display, the display item selection screen appears. Select the items to be displayed in the graph. (p.58))

**Click the button to display the table.**

**The Logger Settings screen appears.**


**Returns to the main screen.**

**Displays the Data Import screen. (p.59)**


| CH           | CH1                                     |
|--------------|---|
| CH1          | CH1                                     |
| Unit         | A                                       |
| Rec interval | 5sec                                    |
| Time span    | 2011-01-17 16:18:25~2011-01-31 18:02:05 |
| Count        |   |

## 4.7 Displaying a Graph of Saved Recording Data

Use the LR5000 Utility Program to display saved recording data as a graph.

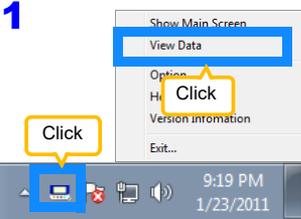

Note: If the LR5000 Utility Program is running, click **[View Data]** on the main screen.

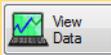

- 1 If the LR5000 Utility Program is not running on the computer, click the icon in the task tray (notification area), and click **[View Data]**.\*

The Data View screen appears.

The **[View latest data]** tab shows a list of the loggers with data saved on the computer.

- 2 Select the logger from the list.

Information about the latest data appears.

- 3 Click the **[Display Graph]** button.

The viewer opens to display the graph (p.51). (If there are more than 16 items to display, the display item selection screen appears. Select the items to be displayed in the graph (p.58).

Information about the latest data

| Model                      | Serial no | Model comment |
|----------------------------|-----------|---------------|
| LR5001 Humidity Logger     | 100500001 | sample.2      |
| LR5011 Temperature Log...  | 105011031 | sample 1      |
| LR5041 Voltage Logger(5... | 100618271 | LR5041        |

Information about the latest data

Folder  
C:\Users\hicki\Documents\LR5000

File name  
20110125

Information of recorded data

|                | 1                  | 2               |
|----------------|--------------------|-----------------|
| Model          | LR5011             | LR5001          |
| Name           | Temperature Logger | Humidity Logger |
| Serial no      | 105011031          | 100500001       |
| Model comment  | sample 1           | sample.2        |
| Rec start date | 2011-01-25         | 2011-01-25      |

2 Click to select.  
The currently selected logger's background is a different color.

3 Display Graph

## Other Data Viewing Screen Functions

Filter displayed data

Show all data  
 Filter by model LR5001 Humidity Logger  
 Filter by Serial no 100500001  
 Filter by Model Comment sample2

Refresh List

|                |            |            |
|----------------|------------|------------|
| Model comment  | sample 1   | sample2    |
| Rec start date | 2011-01-25 | 2011-01-25 |

Display Graph Display Table Home

## Filter displayed data

You can filter which loggers appear in the list. Specify the desired filtering criteria, and click the **[Refresh List]** button.

Note: You can enter up to 20 characters for **[Filter by Model Comment]**.

## Display Table

Opens the viewer to display the table of imported (or selected) data.



## How can past data be viewed?

On the **[Search Folders]** tab, select the folder and file name to display.

1 Click

2 Select the drive

3 Select the folder

4 Select the file

Recently opened files  
The last ten folders containing data that was displayed as a graph or table are listed.

File information

Folder C:\Users\hisaki\Documents\LR5000

File name 20110125

|                              |                                    |
|------------------------------|------------------------------------|
| Information of recorded data |                                    |
| Model                        | LR5011 LR5001                      |
| Name                         | Temperature Logger Humidity Logger |
| Serial no                    | 105011031 100500001                |
| Model comment                | sample 1 sample2                   |
| Rec start date               | 2011-01-25 2011-01-25              |

Display Graph Display Table Home


2011-01-25 07:34:47

## 4.8 Printing Recorded Data

Saved recording data can be printed as a graph. Graphs displayed in the LR5000 Utility Program can be printed on A3, A4, or B4-size paper.

With the desired graph displayed, click the **[Print]** button.

See: Graph Display Methods: "4.5" (p.49), "4.6" (p.59), and "4.7" (p.62)

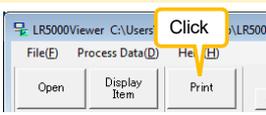


### How can I print only part of a graph?

Specify the time span to print, and click **[Print]** button. Times that are not displayed are not printed.

See: "Viewer Screen" (p.51)


### Example Graph Printout

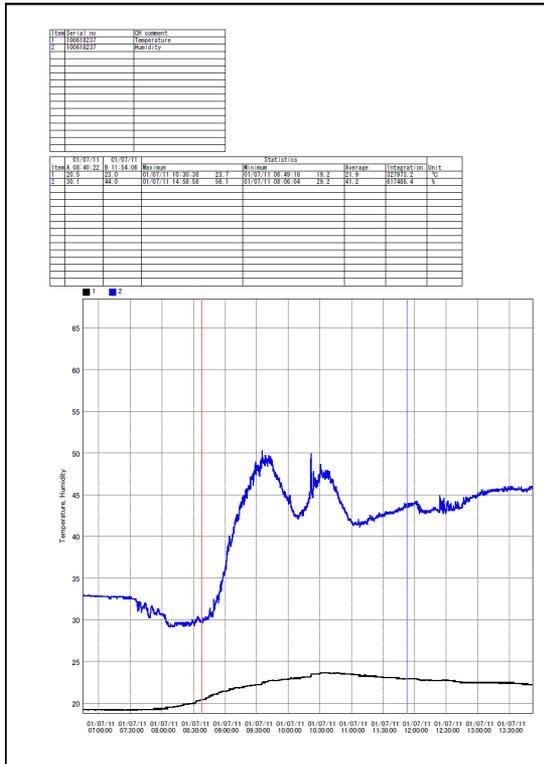

# Processing Recorded Data

## Chapter 5

Recorded data saved on the computer can be processed by scaling, electric power calculation, energy cost calculation, operating rate calculation, integration, dew-point temperature calculation, two-item arithmetic calculation, and out-of-range data revision. The LR5000 Utility Program performs the calculations.

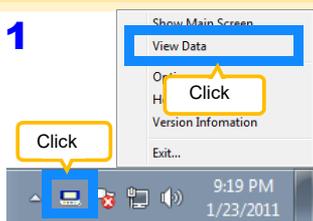

- 1 If the LR5000 Utility Program is not running on the computer, click the icon in the task tray (notification area), and click **[View Data]**.

The Data View screen appears. The **[View latest data]** tab shows a list of the loggers with data saved on the computer.



- 2 Select the logger from the list.

Information about the latest data appears.


- 3 Click the **[Display Graph]** button.

The viewer opens to display the graph (If there are 16 or more items to display, the display item selection screen appears. Select the data items for processing.) (p.58).

Note: If the LR5000 Utility Program is running, click **[View Data]** on the main screen.

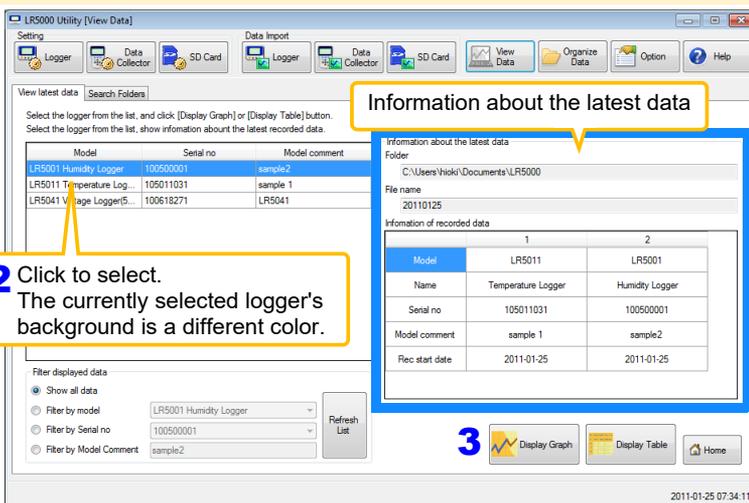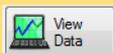

- 4 Click **[Process Data]** in the menu bar, and select the desired items.

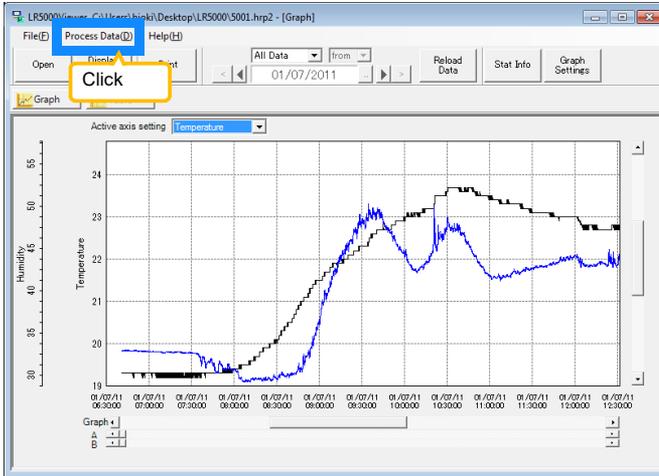

### [Process Data] Items

| Items                    | Contents  | See    |
|--------------------------|---|--------|
| Scaling                  | Performs scaling on the data of one channel.  | (p.67) |
| Power Calculation        | Performs approximate electric power calculation.  | (p.68) |
| Energy Cost              | Performs approximate energy cost calculation.   | (p.69) |
| Operating Rate           | Performs approximate operating rate calculation.  | (p.70) |
| Integration              | Integrates displayed data.  | (p.71) |
| Dew Point                | Performs dew-point temperature calculation.   | (p.72) |
| Two-Data-Item Arithmetic | Performs approximate two-data-item arithmetic calculation.  | (p.73) |
| OVER Data Revision       | Converts data outside of the upper and lower threshold settings to specified values, and saves as new data items. | (p.74) |

## 5.1 Scaling

The following scaling calculation is applied to measured values.

Scaled Result = Raw data (measured value) × A + B × SI prefix (multiplier)

Scaled results are saved as a new item in the recording file.

The screenshot shows the 'Scaling' dialog box with the following sections and callouts:

- Item and range settings:** A callout points to the 'Item for calculation' dropdown (set to 'LR5001 - Temperature') and the 'Time span for calculation' (set to '2011-01-07' to '2011-01-07').
- A/B (slope/offset) values:** A callout points to the 'Specify by A/B' tab, which shows a table with 'Raw data' (0.2, 50.6 °C) and 'Scaled Result' (0, 50 °C). Another callout points to the 'SI Prefix' dropdown (set to 'C') and the 'units' field (set to '°C').
- Setting confirmation:** A callout points to the 'Raw data' field (0.2 °C) and the 'Calculate' button.
- Execute/Finish:** A callout points to the 'Execute' and 'Finish' buttons.

Additional callouts on the right side of the dialog box:

- Item and range settings:** Select the item to be scaled, and the time span.
- A/B (slope/offset) values:** Clicking this tab changes the setting options. Make settings on either tab. (The settings are applied to the other tab.)

1. Select the items, time span, and the following options.

| Setting Options             | Description   |
|-----------------------------|---|
| <b>Specify by example *</b> | Enter two known conversion points (up to ten digits each).  |
| <b>Specify by A/B *</b>     | Enter the scaling coefficients (A and B, up to ten digits each).  |
| <b>Scaled units</b>         | <ul style="list-style-type: none"> <li>• Select the <b>[SI Prefix]</b>. ([p]=1E-12, [n]=1E-9, [u]=1E-6, [m]=1E-3, blank =1E0, [k]=1E3, [M]=1E6, [G]=1E9, [T]=1E12)</li> <li>• Enter a character string to identify the scaled units.</li> <li>• (Up to five characters, except \, /, :, *, ?, ", &lt;, &gt;, and  .)</li> </ul> |

\* Set either one.

2. Confirm settings.

|                             |  |
|-----------------------------|--|
| <b>Setting confirmation</b> | Confirm that scaling is performed properly. Enter any numerical value as raw data, and click the <b>[Calculate]</b> button to display the scaled result. |
|-----------------------------|--|

3. Click the **[Execute]** button.

(The scaled results are saved.)

Note: Click the **[Finish]** button to close the **[Scaling]** dialog box.

## 5.2 Calculating Electric Power

Approximate electric power is calculated using current measurement data from a clamp logger.

Calculation results are saved as a new item in the recording file.

### **NOTE**

- Electric power calculations are only approximate, so results do not always equal the true electric power value. Use a wattmeter if accurate power measurements are required.
- There is no way to confirm that a specified data item is really a current value. Calculation occurs regardless of data type.

The screenshot shows the 'Power Calculation' dialog box with the following sections and callouts:

- Item and range settings:** Callout: 'Item and range settings. Specify two measured current values and the time span for calculation.' This section includes dropdowns for 'Current1' (Test machine - Current1) and 'Current2' (Test machine - Current1), and date pickers for 'Time span for calculation' (2011-01-07 ~ 2011-01-07) and 'Time span of the recording file' (2011-01-07 - 2011-01-07).
- Calculation formula:** Callout: 'Calculation formula. [Electric Power Type]. Choose [1P2W], [1P3W] or [3P3W] to select the appropriate calculation formula.' This section has a dropdown for 'Electric Power Type' set to '1P2W' and a formula display showing 'Current1 \* Voltage1 \* PowerFactor'.
- Settings of voltage, power factor, and unit:** This section includes input fields for 'Voltage1' (100) and 'Voltage2' (100), a dropdown for 'Power factor' (0.8), and a dropdown for 'Unit' (W). It also has a 'Registered settings' table with 'Setting1' selected, and 'Register' and 'Delete' buttons.
- Execute/Finish:** At the bottom, there are 'Execute' and 'Finish' buttons.


1. Select the items, time span, and calculation formula to be used.
2. Specify the voltage, power factor, and units.
  - To save the settings, click the **[Register]** button.
  - To apply a registered setting, double click it ("Setting1" in the above screenshot).
  - To delete a setting, click it then click the **[Delete]** button.
3. Click the **[Execute]** button.  
(Calculation results are saved.)  
Note: Click the **[Finish]** button to close the **[Power Calculation]** dialog box.

## 5.3 Calculating Energy Cost

Approximate energy cost is calculated using current measurement data from a clamp logger.

### **NOTE**

- Energy cost calculations are only approximate, so results do not always equal the true energy cost.
- There is no way to confirm that a specified data item is really an electric power value. Calculation occurs regardless of data type.

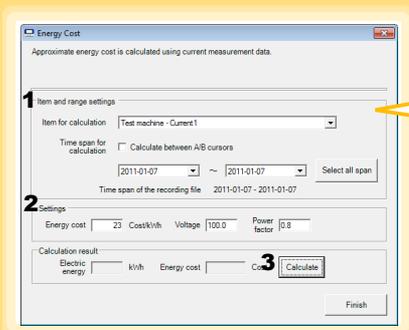

The screenshot shows the 'Energy Cost' dialog box. It has a title bar with 'Energy Cost' and standard window controls. Below the title bar, it says 'Approximate energy cost is calculated using current measurement data.' The dialog is divided into sections: '1 Item and range settings' with a dropdown for 'Item for calculation' (set to 'Test machine - Current 1') and a date range for 'Time span for calculation' (2011-01-07 to 2011-01-07); '2 Settings' with input fields for 'Energy cost' (23), 'Voltage' (100.0), and 'Power factor' (0.8); and 'Calculation result' with fields for 'Electric energy' and 'Energy cost', and a 'Calculate' button. A yellow callout box points to the 'Item for calculation' dropdown with the text: 'Item and range settings Specify the measured current value and the time span for calculation. The time span can also be specified by setting the A/B cursors (p.53) on a graph and selecting [Calculate between A/B cursors].'


1. Select the item and time span.
2. Specify the cost per kWh, voltage, and power factor.
3. Click the **[Calculate]** button.  
(Electric power consumption and energy cost values are calculated and displayed.)  
Note: Click the **[Finish]** button to close the **[Energy Cost]** dialog box.

## 5.4 Calculating Operating Rate

The approximate operating rate of the measured value is calculated.

The total amount of time during which data exceeds the **[Upper threshold]** is considered operating time, and the operating rate is calculated as the ratio of the operating time to the total calculation time span.

**Example: The time during which a device consumes 20 A or more is considered the operating time.**

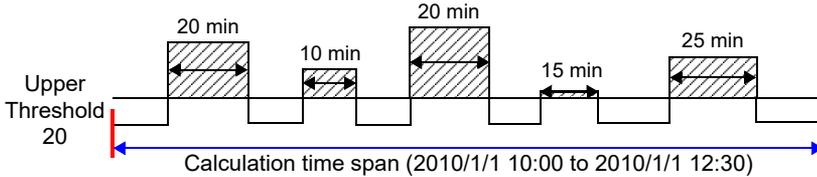

The sum of the times depicted by (  ) is the operating time. (In the above diagram, operating time is 1.5 hours.)

Operating time (1.5 h) ÷ calculation time span (2.5 h) × 100 = 60% operating rate

### Item and range settings


Select the item for operating rate calculation, and the time span.

The time span can also be specified by setting the A/B cursors (p.53) on a graph and selecting **[Calculate between A/B cursors]**.

1. Select the item and time span.
2. Set the upper threshold.
3. Click the **[Calculate]** button.  
(Operating hours and operating rate values are calculated and displayed.)  
Note: Click the **[Finish]** button to close the **[Operating Rate]** dialog box.

## 5.5 Integration

Measurement data can be integrated over a specified time span. Integration results are saved as a new item in the recording file.

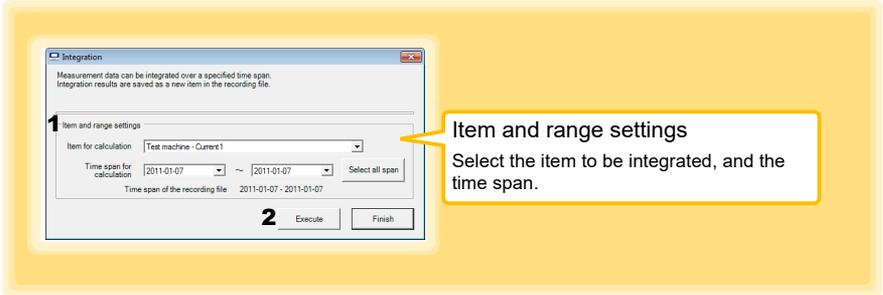

1. Select the item and time span.
2. Click the **[Execute]** button.  
(Integration results are saved.)  
Note: Click the **[Finish]** button to close the **[Integration]** dialog box.

## 5.6 Calculating Dew-Point Temperature

Dew-point temperature is calculated from the temperature and humidity measurement data from the logger.

Calculation results are saved as a new item in the recording file.

### NOTE

- There is no way to confirm that a specified data item is really a temperature or humidity value. Dew-point calculation occurs regardless of data type.
- Only the specified temperature and humidity data measured during the specified recording time span is applied to calculations and saved.
- The valid range for calculation input measurement data is -100 to 100 degrees, and 0 to 100% humidity. Values outside of these ranges are replaced with the maximum or minimum value within the valid range.

#### Item and range settings

Specify the temperature and humidity values, and the time span for calculation.

1. Select the items and time span.

2. Click the **[Execute]** button.  
(Calculation results are saved.)


Note: Click the **[Finish]** button to close the **[Dew Point]** dialog box.

## 5.7 Two-Data-Item Arithmetic Calculations

Simple arithmetic operations (+, -, \*, and /) can be applied to two data items. Calculation results are saved as a new item in the recording file.

### **NOTE**

Only the values of data items measured during the specified recording time span are applied to calculations and saved.

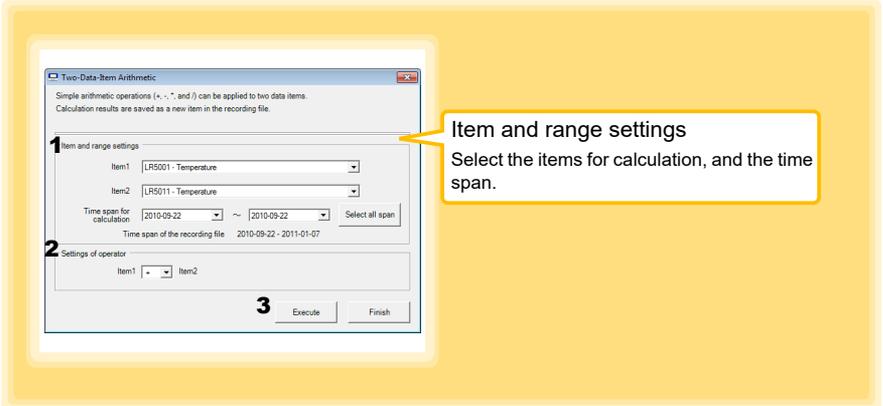

1. Select the items and time span.
2. Select the calculation operator.
3. Click the **[Execute]** button.  
(Calculation results are saved.)  
Note: Click the **[Finish]** button to close the **[Two-Data-Item Arithmetic]** dialog box.

## 5.8 Converting Over-Threshold Data Values

Data values larger than the upper threshold and smaller than the lower threshold can be converted to specified values.

Converted results are saved as new data items in the recording file.

OVER Data Revision

Over-threshold data values can be converted to specified values.  
Converted results are saved as new data items in the recording file.

**1** Item and range settings

Item for calculation: [LR5001 - Humidity]

Time span for calculation: [2011-01-07] ~ [2011-01-07] [Select all span]

Time span of the recording file: 2011-01-07 - 2011-01-07

**2** Settings

Upper threshold [90] > Conversion value [100]

Lower threshold [10] > Conversion value [0]

**3** [Execute] [Finish]

### Item and range settings

Select the items for conversion, and the time span.

1. Select the items and time span.
2. Set the upper and lower threshold values, and their corresponding conversion values.
3. Click the **[Execute]** button.  
(Conversion results are saved.)  
Note: Click the **[Finish]** button to close the **[OVER Data Revision]** dialog box.

# Organizing Data

# Chapter 6

The LR5000 Utility Program can reorganize (copy, delete, move, combine, and extract) imported data.

- If the LR5000 Utility Program is not running on the computer, click the icon in the task tray (notification area), and click **[Show Main Screen]**.

The main screen appears.
- Click the **[Organize Data]** button.

The data reorganization screen appears.
- Select the **[Operation Type]**.

See: "6.1 Copying and Moving Data" (p.76)  
 "6.2 Deleting Data" (p.77)  
 "6.3 Combining Data" (p.78)  
 "6.4 Extracting Data" (p.79)
- Select the working folder or recording file, and click the **[Execute]** button.

**3 Select** **4 Click**

Recently opened folder  
 The last ten folders containing data that was displayed as a graph or table are listed.

**4 Select the desired file.**

**4 Select**


Returns to the main screen.

Clears all selections (removes check marks).

## 6.1 Copying and Moving Data

The selected logger recording files can be copied or moved to any folder.


**Example: Copy a file from the folder C:\Users\hioki\Documents\LR5000 to C:\Users\hioki\Desktop.**

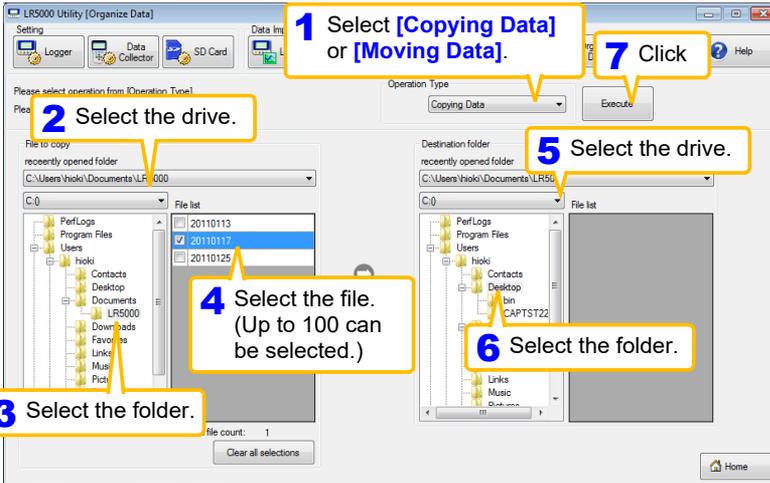

## 6.2 Deleting Data

Select and delete logger recording files as follows.

**Example:** Delete a file from the folder C:\Users\hioki\Documents\LR5000.

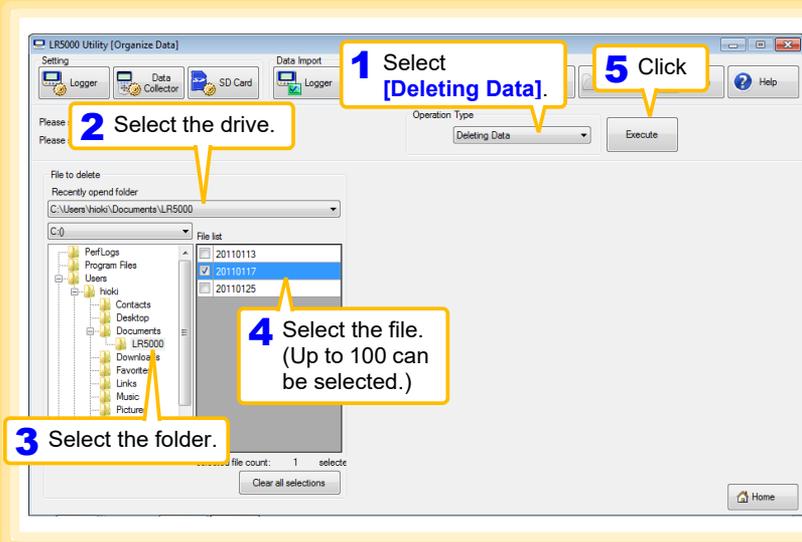


**How can I delete data from the logger's memory?**

**See:** "Delete Data" (p.41)

## 6.3 Combining Data

Separate logger recording files can be combined into one set of recording data.

**Example:** Combine file 20110117 with other files in C:\Users\hioki\Documents\LR5000, and save the combined data file in C:\Users\hioki\Desktop.

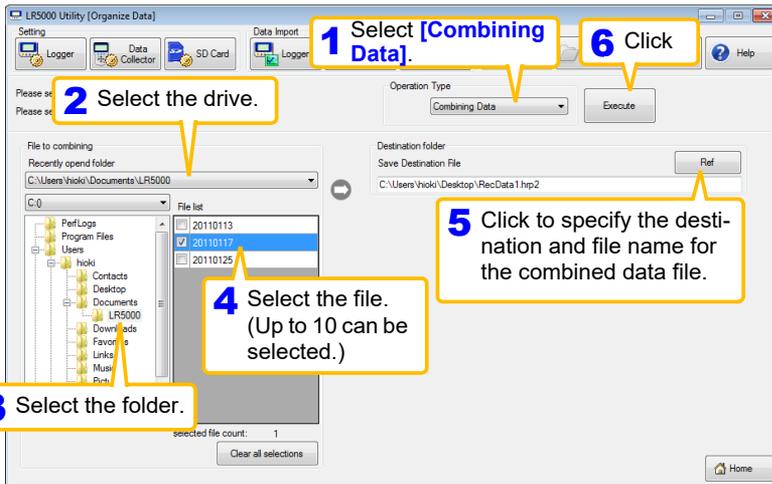

## 6.4 Extracting Data

Data in a logger recording file can be extracted to a specified time span and saved with a different file name.

**Example:** Extract the data of January 25th from the file 20110117, and save to a different file.

The screenshot shows the LRS5000 Utility (Organize Data) window. The interface includes a 'File list' on the left, a 'Destination folder' section, and an 'Extracting data' table. Numbered callouts provide the following instructions:

- 1 Select [Extracting Data].
- 2 Select the drive.
- 3 Select the folder.
- 4 Select the file. (one only)
- 5 Specify the extracting time span and extracted data (model).
- 6 Click to specify the destination and file name for the extracted data file.
- 7 Click [Execute].


The 'Extracting data' table is as follows:

|                                     | Model  | Model comment | Serial no | CH1 comment   |
|-------------------------------------|--------|---------------|-----------|---------------|
| <input checked="" type="checkbox"/> | LR5011 | "sample 1"    | 105011031 | floor 5       |
| <input checked="" type="checkbox"/> | LR5001 | "sample 2"    | 100500001 | 2nd floor TEM |
| *                                   |        |               |           |               |




# Options Settings (LR5000 Utility Program) Chapter 7

These settings determine the saving method for imported logger data, device connection monitoring, and logger setting display functions.

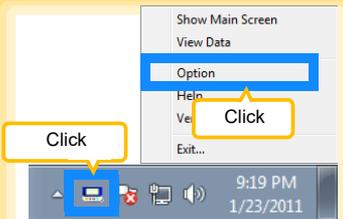

Note: If the LR5000 Utility Program is running, click **[Option]** on the main screen.

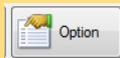


- 1 If the LR5000 Utility Program is not running on the computer, click the icon in the task tray (notification area), and click **[Option]**.

The Options screen appears.

- 2 Change the settings as needed.

**See:** "7.1 Changing the Saving Method for Imported Data" (p.82)  
"7.2 Changing the Connection Monitoring Method, and Logger Settings Displays" (p.83)

- 3 Click the **[Save]** button.

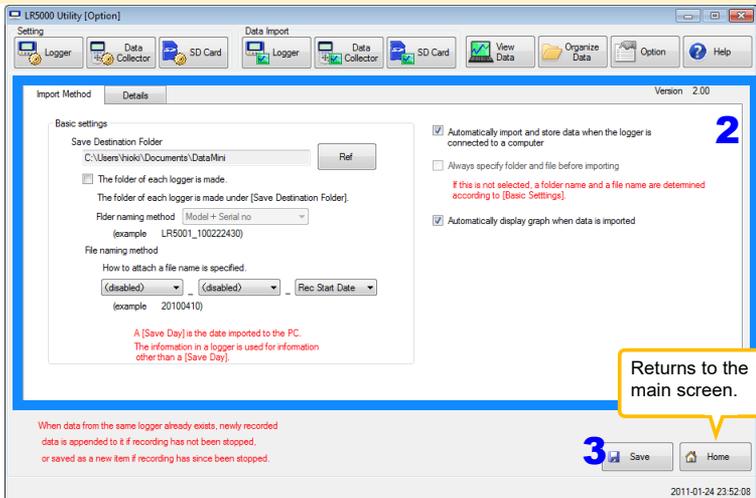

Select the **[Automatically import and store data when the logger is connected to a computer]** checkbox and clear the **[Always specify folder and file before importing]** check box to display the Data Import screen (p.60).

## 7.1 Changing the Saving Method for Imported Data


The saving method for imported logger data can be changed as follows.

**?** How can the save destination folder be changed?

**1** Click the **[Import Method]** tab.


**2** Click to specify the save destination folder.

**3** If you select the check box, select the folder name.

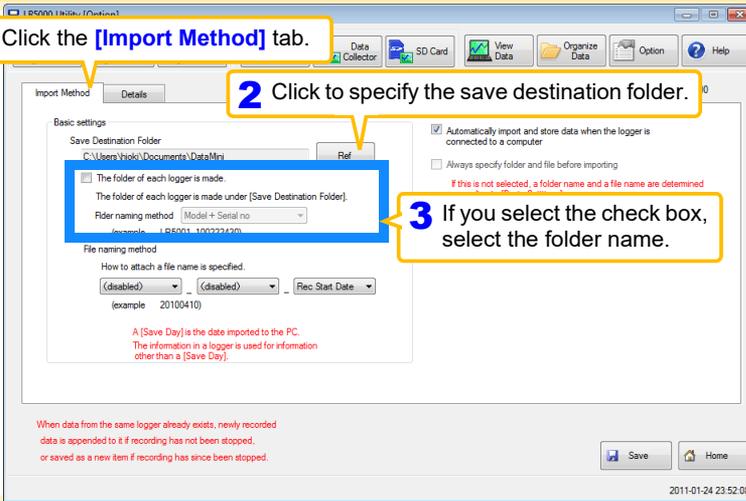

**?** How can the file naming method be changed?

Set Auto Import and Auto Graph Display functions, if desired.  
See: "4.5" (p.49)

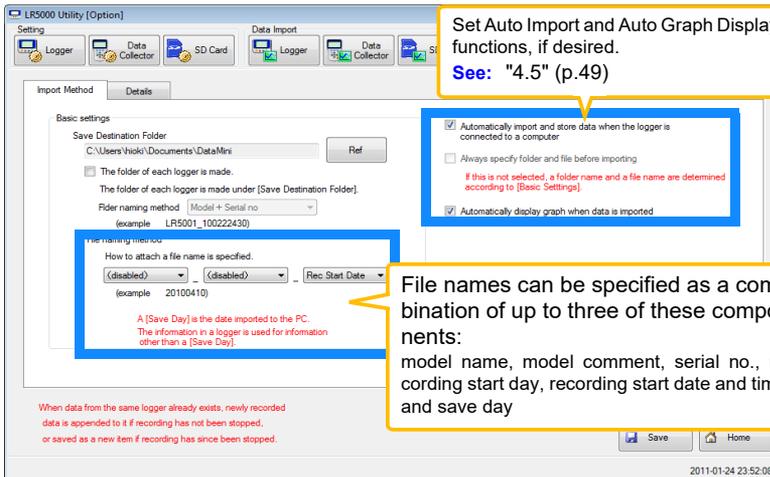


File names can be specified as a combination of up to three of these components:  
model name, model comment, serial no., recording start day, recording start date and time, and save day


## 7.2 Changing the Connection Monitoring Method, and Logger Settings Displays

Change the device connection monitoring settings and the functions on the logger settings displays as follows.

 How can the device connection monitoring setting be changed?

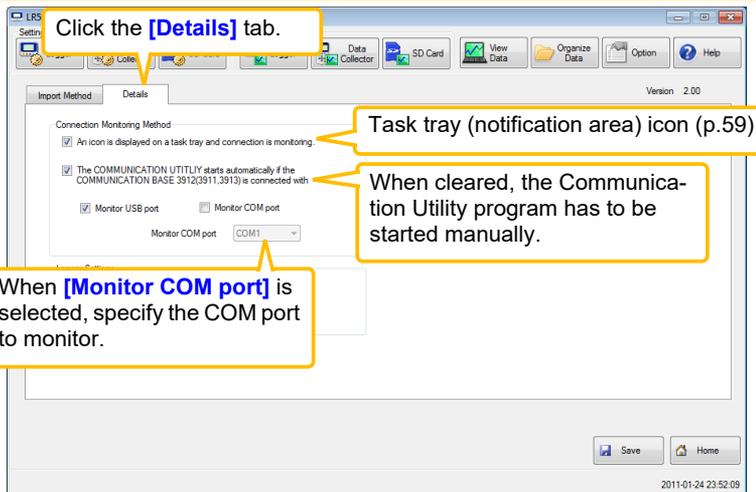

 How can the function settings of the logger's settings displays be changed?

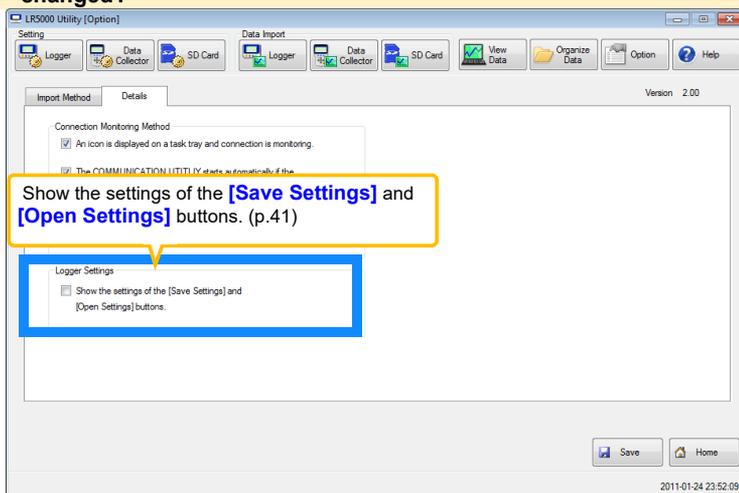



# Specifications

# Chapter 8

## 8.1 Measurement Specifications

|   |  |
|---|--|
| Input   | DC current (1 channel)   |
| Input impedance                                 | 10 $\Omega$ ±10%   |
| Measurement ranges                              | ±30.00 mA ("UF" or "OF" indicates out-of-range measurement)  |
| Measurement accuracy                            | ±0.5%rdg.±5dgt.  |
| Accuracy guarantee for temperature and humidity | <ul style="list-style-type: none"> <li>• Temperature: 23±5°C (73±9°F)</li> <li>• Humidity: 80%RH or less (non-condensating)</li> </ul> |
| Temperature coefficient                         | Measurement accuracy × 0.05/°C (add to measurement accuracy when outside of the range 23±5°C (73±9°F))                                 |
| Guaranteed accuracy period                      | 1 year   |
| Product warranty period                         | 3 years  |
| Maximum ratings                                 | Maximum rated current: ±40mA<br>Maximum rated voltage to earth: 60 VDC   |

## 8.2 Functional Specifications

|                             |   |
|-----------------------------|---|
| Display type                | LCD   |
| Display contents            | Measured value, units (mA), recording (REC), endless recording (ENDLESS), statistical recording (STAT), recording interval (INTVL), date and time (TIME), alarm (AL), battery status, recorded data count (DATA), maximum value (MAX), minimum value (MIN), auto power saving (APS)   |
| Operation button            | Four ("SET", "REC/STOP", "+", "-")  |
| Recording interval          | 1/2/5/10/15/20/30sec., 1/2/5/10/15/20/30/60 min.  |
| Recording modes             | <ul style="list-style-type: none"> <li>• Instantaneous recording:<br/>The instantaneous value is recorded at each recording interval</li> <li>• Statistical recording:<br/>Measurements are taken once per second, and instantaneous, maximum, minimum, and average values are saved at each recording interval (cannot be selected when the recording interval is set to one second).</li> </ul> |
| Recording capacity          | <ul style="list-style-type: none"> <li>• Instantaneous recording: 60,000 values</li> <li>• Statistical recording: 15,000 instantaneous, maximum, minimum, and average values</li> </ul>   |
| Recording start method      | <ul style="list-style-type: none"> <li>• Logger button operation</li> <li>• Instant or scheduled time (set by computer/Data Collector)</li> </ul>   |
| Recording stop method       | <ul style="list-style-type: none"> <li>• Logger button operation (endless recording)</li> <li>• Logger button operation (one-time recording)</li> <li>• Scheduled time (endless recording)</li> <li>• Scheduled time (one-time recording)</li> </ul> <p>Scheduled time is set by computer/Data Collector</p>  |
| Retained recording sessions | Two sessions (each from recording start to stop)  |
| Alarm                       | Indicates when measured values are outside of the range defined by upper and lower thresholds set from a computer or the Data Collector   |
| Scaling                     | Scales and displays measured values according to settings made from a computer or the Data Collector  |
| Power save setting          | The measurement data display turns off about 30 seconds after the last button operation (cancel power save for continuous display)  |
| Real-time clock             | Provided  |

## 8.3 Miscellaneous

|                                  |  |
|----------------------------------|--|
| Clock accuracy                   | ±50ppm (@25°C (@77°F))±4.32 s/day  |
| Backup                           | Recorded data and settings (independent of battery)  |
| Interface                        | Half-duplex start/stop synchronous infrared serial communication between the logger and Communication Adapter or Data Collector  |
| Power supply                     | <ul style="list-style-type: none"> <li>• Rated supply voltage: 1.5 VDC</li> <li>• One LR6 alkaline battery</li> <li>• Recording and clock operation, and maximum and minimum values are retained for about 30 seconds during battery replacement</li> </ul>  |
| Maximum rated power              | 0.1 VA   |
| Battery life                     | <ul style="list-style-type: none"> <li>• Approx. 2 year (instantaneous recording, with 1-minute recording interval and auto power saving, @20°C (@68°F))</li> <li>• Approx. 2 month (with 1-second recording interval, @20°C)</li> </ul>   |
| Dimensions                       | Approx. 79W×57H×28D mm (3.11"W×2.24"H×1.10"D)  |
| Mass                             | Approx. 105 g (w/battery) (3.7 oz.)  |
| Dust and water protection rating | IP54 (EN60529)<br>(with connection cable connected, but not including cable tip)   |
| Accessories                      | <ul style="list-style-type: none"> <li>• LR6 alkaline battery .....1 (Internal in the logger)</li> <li>• LR9801 Connection Cable .....1</li> <li>• Instruction Manual.....1</li> <li>• Operation Manual.....1</li> <li>• Stand.....1</li> </ul>  |
| Options                          | <ul style="list-style-type: none"> <li>• LR5091 Communication Adapter</li> <li>• LR5092-20 Data Collector</li> <li>• LR9801 Connection Cable</li> <li>• LR9901 Wall-Mounted Holder</li> <li>• Z5004 Magnetic Strap</li> </ul>  |
| Environmental conditions         | <ul style="list-style-type: none"> <li>• Operating environment: indoors, pollution degree 2, up to 2000 m ASL</li> <li>• Operating temperature and humidity: -20 to 70°C (-4 to 158°F), 80%RH or less (non-condensating)</li> <li>• Storage temperature and humidity: -20 to 70°C (-4 to 158°F), 80%RH or less (non-condensating)</li> </ul> |
| Applicable Standards             | <ul style="list-style-type: none"> <li>• Safety: EN61010</li> <li>• EMC : EN61326</li> </ul>   |

## 8.4 LR5091 Communication Adapter Specifications

### Main Unit General Specifications

|                                    |   |
|------------------------------------|---|
| Functions                          | Converts between the logger's infrared signals and USB signals to support communications between the logger and a computer (USB port).  |
| Compatible loggers                 | LR5001 Humidity Logger, LR5011 Temperature Logger, LR5031 Instrumentation Logger, LR5041 Voltage Logger (50 mV), LR5042 Voltage Logger (5 V), LR5043 Voltage Logger (50 V), LR5051 Clamp Logger<br>Note: Communication with LR5051 is supported by LR5000 Utility Program version 1.01 and later.<br>Communication with LR5031 is supported by LR5000 Utility Program version 1.05 and later. |
| Operating temperature and humidity | Temperature: 0 to 40°C (32 to 104°F),<br>Humidity: 80%RH or less (non-condensating)   |
| Storage temperature and humidity   | Temperature: -10 to 50°C (14 to 122°F),<br>Humidity: 80%RH or less (non-condensating)   |
| Product warranty period            | 3years  |
| Operating environment              | Indoors, pollution degree 2, up to 2000 m ASL   |
| Power supply                       | 5 VDC (USB bus-powered)   |
| Maximum rated power                | 0.5 VA  |
| Dimensions                         | Approx. 83W×61H×19D mm (3.27"W×2.40"H×0.75"D) (without projections)   |
| Mass                               | Approx. 43 g (1.5 oz.) (without USB cable)  |
| Applicable Standards               | <ul style="list-style-type: none"> <li>• Safety: EN61010</li> <li>• EMC : EN61326</li> </ul>  |
| USB standard                       | USB 2.0 compliant, Full Speed support   |
| Connector                          | Mini B series receptacle  |
| Connectable device                 | Computer  |
| Communication speed                | 115,200bps  |
| Communication method               | Half-duplex start/stop synchronous infrared serial communication  |
| Communication speed                | 115,200bps  |

### Accessories

|                                   |   |
|-----------------------------------|---|
| USB cable (1 m) .....             | 1 |
| LR5000 Utility Program (CD) ..... | 1 |

## Supplied LR5000 Utility Program Specifications

|                             |   |
|-----------------------------|---|
| Supplied medium             | CD..... 1   |
| Operating environment       | <p>Personal computer meeting the following specifications</p> <ul style="list-style-type: none"> <li>• CPU: 1 GHz or faster processor clock</li> <li>• RAM: 1 GB or more (32-bit), 2 GB or more (64-bit)</li> <li>• Operating system: Windows 7 or Windows 10</li> <li>• Library: .NET Framework 4.5.2 or later</li> <li>• Interface: USB (or COM port for models 3910, 3911, or 9612)</li> <li>• Monitor resolution: 1024 x 768 or higher</li> <li>• Hard disk: At least 30 MB free space<br/>(Additional space is required for storing recorded data.)</li> </ul>   |
| Model communication support | <p>All LR5000-series loggers</p> <p>Note1: Communication with LR5051 is supported by LR5000 Utility Program version 1.01 and later.<br/>Communication with LR5031 is supported by LR5000 Utility Program version 1.05 and later.</p> <p>Note2: The Communication Utility program supports the following models' settings and data import functions. A computer COM port and 9612 RS-232C cable are required when using the model 3910 or 3911 Communication Base.</p> <ul style="list-style-type: none"> <li>• All "Data Logger" models 363x to 364x</li> <li>• Communication Base models 3910, 3911, and 3912</li> </ul>   |
| Communication connections   | <p>Communication with LR5000-series loggers:</p> <ul style="list-style-type: none"> <li>• Computer, USB cable, LR5091 Communication Adapter, and LR5000-series logger</li> <li>• Computer, USB cable, LR5092-20 Data Collector, and LR5000-series logger</li> </ul> <p>Communication with the LR5092-20 Data Collector:<br/>Computer, USB cable, and LR5092-20 Data Collector</p>   |
| Setting functions           | <ul style="list-style-type: none"> <li>• Export/import settings by communication with the LR5000 series</li> <li>• Settings exported from each LR5000 are stored on the computer (the following functions are supported by the supplied PC Utility version 2.00, or later)</li> <li>• Export/import settings by communication using the LR5092-20 Data Collector</li> <li>• Import and save logger settings using the LR5092-20 Data Collector via communication or SD memory card Import and save logger settings on an SD memory card using the LR5092-20 Data Collector</li> <li>• Settings exported to the LR5092-20 Data Collector are stored on the computer</li> </ul> |
| Auto-start function         | <p>A small resident program (icon in the task tray/notification area) detects when a logger or the Data Collector is connected to the computer, and automatically starts the LR5000 Utility Program.</p>  |

## 8.4 LR5091 Communication Adapter Specifications

|                             |  |
|-----------------------------|--|
| Data import functions       | <ul style="list-style-type: none"> <li>• Communicates with the LR5000-series loggers, and imports recorded data</li> <li>• Combines recorded data</li> <li>• Incorporates new data when an LR5000-series logger holds data not previously imported</li> </ul> <p>(the following functions are supported by the supplied PC Utility version 2.00, or later)</p> <ul style="list-style-type: none"> <li>• Communicates with the LR5092-20 Data Collector, and imports recorded data saved in the Data Collector</li> <li>• Imports data saved to an SD memory card in the LR5092-20 Data Collector</li> </ul>                                    |
| Graph display functions     | <ul style="list-style-type: none"> <li>• Displays up to 16 channels in a graph</li> <li>• Displays up to 16 Y-axes</li> <li>• Displays one time base axis</li> <li>• Set line colors for each channel, and display/hide lines and bar graphs for each channel</li> </ul> <ul style="list-style-type: none"> <li>• Auto setting of time base and vertical axis</li> <li>• Display/hide Y-axis grid lines, and set grid display density</li> <li>• Select display background color</li> <li>• Copy graph images to the clipboard</li> <li>• A/B cursor functions</li> <li>• Displays statistical data (maximum, minimum, and average)</li> </ul> |
| Data list display functions | <ul style="list-style-type: none"> <li>• Browse recorded data in tabular format</li> <li>• Displays up to 600 channels</li> <li>• Displays statistical data (maximum, minimum, and average)</li> </ul>   |
| Export functions            | <ul style="list-style-type: none"> <li>• Export all recorded data displayed in a table in CSV format</li> <li>• Paste to Excel® all recorded data displayed in a data table</li> <li>• Export all recorded data between A/B cursors in CSV format</li> <li>• Paste to Excel® all recorded data between A/B cursors</li> </ul>  |
| Import functions            | <p>(the following functions are supported by the supplied PC Utility version 2.00, or later)</p> <p>Import text files from the 3169 Clamp-On Power HiTester</p> <p>Note: Only electric energy data recorded at one-second or longer interval can be imported</p>   |
| Printing functions          | <ul style="list-style-type: none"> <li>• Prints graphs and statistical data</li> <li>• Supports A3, A4, and B4 paper sizes</li> </ul>  |
| Data processing functions   | <p>Scaling (<math>y=ax+b</math>), electric power calculation, energy cost calculation, operating rate calculation, integration, dew-point temperature calculation, arithmetic calculations, out-of-range data revision</p>   |
| File management functions   | <ul style="list-style-type: none"> <li>• Copy and delete data saved on the computer</li> </ul> <p>(the following functions are supported by the supplied PC Utility version 2.00, or later)</p> <ul style="list-style-type: none"> <li>• Delete data saved to an SD memory card in the LR5092-20 Data Collector</li> </ul>   |
| Help function               | <p>Displays helpful operating instructions</p>   |

# Maintenance and Service

## Chapter 9

### Requesting repairs

- Use the original packing materials when transporting the instrument, if possible.
- Pack the instrument so that it will not sustain damage during shipping, and include a description of existing damage. We do not take any responsibility for damage incurred during shipping.
- Please contact your dealer or Hioki representative for information on where to submit products for repair.

### When the logger will not be used for long time

**CAUTION** To avoid corrosion and damage to this instrument from battery leakage, remove the batteries from the instrument if it is to be stored for a long time (1 week).

### Replaceable part and service life

A part used in the instrument is characterized by performance that degrades over years of use. It is recommended to replace this part regularly to ensure instrument functionality over the long term.

To order a replacement, please contact your Hioki distributor.

Part service life varies with the operating environment and frequency of use.

| Part                            | Service life  |
|---------------------------------|---|
| Electric double-layer capacitor | The instrument uses an electric double-layer capacitor to back up internal components, including the clock. Even if it takes only a short time (about 30 s or less) to replace the batteries, the internal clock may not be backed up, with the result that all segments of the screen may be displayed when the instrument is started. In this case, the life of the capacitor has expired. Especially in high-temperature environments, the life of the capacitor may be significantly shortened. |

## 9.1 Cleaning

Wipe the LCD gently with a soft, dry cloth.

To clean the instrument, wipe it gently with a soft cloth moistened with water or mild detergent.

### IMPORTANT

Never use solvents such as benzene, alcohol, acetone, ether, ketones, thinners or gasoline, as they can deform and discolor the case.

## 9.2 Disposing of the Logger

Obey local regulations for disposal of electronic equipment.

## 9.3 Troubleshooting

If damage is suspected, check the "Before requesting repairs" section before contacting your dealer or Hioki representative.

### Before requesting repairs

| Problem Symptom                                 | Probable Causes   | Remedies and References  |
|---|---|--|
| The LR5000 Utility Program cannot be installed. | <ul style="list-style-type: none"> <li>The computer operating environment may be incompatible.</li> <li>The installation procedure may be incorrect.</li> </ul> | <p>Check the operating environment requirements, and try installing in (another) compatible computer.</p> <p><b>See:</b> "LR5000 Utility Program Operating Requirements" (p.23)</p> <p>Refer to the installation procedure, and try again.</p> <p>Pay particular attention to the following:</p> <ul style="list-style-type: none"> <li>Be sure to log in with an Administrator account.</li> <li>Before installing, be sure to close any applications running on the computer.</li> <li>If the installation screen does not appear, execute X:\English\Setup.exe.</li> </ul> <p><b>See:</b> "Installation Procedure" (p.23)</p> |

## Before requesting repairs

| Problem Symptom   | Probable Causes  | Remedies and References  |
|---|--|--|
| <ul style="list-style-type: none"> <li>No measured value is displayed.</li> </ul>  <ul style="list-style-type: none"> <li>Displays polarity conflicting with actual current value (e.g., negative display when actual current is 10 mA)</li> </ul> | <ul style="list-style-type: none"> <li>The connection cable plug is not inserted all the way in.</li> <li>The measurement cable may be connected incorrectly.</li> </ul> <p><b>NOTE</b></p> <p>The maximum and minimum values are not displayed when the recorded data count is 0.</p> | <p>Verify the correct plug orientation, and insert it as far as possible.</p> <p>If the values are not displayed despite these measures, the connection cable and logger need to be inspected and repaired. Please contact your dealer or Hioki representative.</p> <p><b>See:</b> "Requesting repairs" (p.91)</p>   |
| The battery is depleted too quickly.  | <ul style="list-style-type: none"> <li>The battery supplied with the logger is still being used.</li> <li>A zinc-manganese battery is being used.</li> </ul>   | <p>Install a new AA-size (LR6) alkaline battery.</p> <p><b>See:</b> "2.1 Installing (or Replacing) the Battery" (p.19)</p>   |
| How can recorded values be reorganized?   | —  | <p>Enable scaling.</p> <p><b>See:</b> "5.1 Scaling" (p.67)</p> <p>Scaling settings can be made before recording.</p> <p><b>See:</b> "Scaling (set as needed)" (p.39)</p>   |
| How can the logger's memory be erased?  | —  | <p>Logger memory can be erased using the LR5000 Utility Program.</p> <p><b>See:</b> "Other Settings on the Logger Settings Screen" (p.41)</p> <p>Note that data recorded prior to the last recording is automatically erased whenever recording starts. (The logger retains the data from both current and most recent prior recording operation.)</p> <p><b>See:</b> "4.3 Starting and Stopping Recording" (p.46)</p> |
| Recorded data has disappeared.  | Recording was restarted after stopping.  | <p>Note that if recording is accidentally restarted after stopping, data recorded prior to the last recording is automatically erased. (The logger retains the data from both current and most recent prior recording operations.)</p>   |
| The display is blank.   | Power save is enabled.   | <p>Press any button or send a communication signal to turn on the display.</p> <p><b>See:</b> "1.2 Part Names/Functions and Display Indicators" (p.14)</p>   |


## Before requesting repairs

| Problem Symptom   | Probable Causes  | Remedies and References   |
|---|--|---|
| <p>The <b>[REC]</b> indicator disappears even though recording has not been stopped.</p>  | <p>The one-time recording stop method is selected.</p>                             | <p>With one-time recording, recording stops automatically when memory becomes full. Change the stop method to endless recording.</p> <p><b>See:</b> Making Settings on the Logger: "Stop Method Setting (for when memory becomes full)" (p.33)</p> <p><b>See:</b> Making Settings from the LR5000 Utility Program: "Stop Method" (p.38)</p> <p>(With endless recording, the oldest data is overwritten when memory is full, so be sure to save data to a computer periodically during long-term recording. Data can be saved to a computer without stopping recording.)</p> <p><b>See:</b> "4.5 Automatically Importing (Saving) Recorded Data to a Computer, and Graph Display" (p.49)</p> |
| <p>The logger cannot communicate with the new LR5091 (LR5092).</p>  | <p>The installation of the device driver to the LR5091 (LR5092) failed.</p>        | <p>For Window XP, the driver may be required to be installed to each LR5091 (LR5092). Open Windows® Device Manager and re-install the driver.</p>   |
| <p>The <b>[Failed to read data partially.]</b> message appears.</p>   | <p>The instrument can display up to 84000 data sets per measurement parameter.</p> | <p>The LR5000 viewer places a limit on the number of data sets displayed on graphs and tables. Change the duration to be displayed. Change from <b>[All Data]</b> to <b>[1day]</b>.</p>   |

## 9.4 Error Displays

The display appears as follows when an error occurs on the logger.

### Logger Error Displays
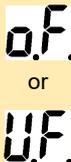
| Error Displays  | Meaning  | Remedies and References   |
|---|--|---|
|  | Calibration data error:<br>A fault occurred with the internal calibration data.    | Inspection and repair is required. Please contact your dealer or Hioki representative.  |
|  | Microcomputer error:<br>A fault occurred in microcomputer ROM/RAM.                 | <b>See:</b> "Requesting repairs" (p.91)   |
|  | Data recording error:<br>A fault occurred in recording data or accessing settings. |   |
|  | Battery voltage is too low for normal logger operation.                            | Replace the battery.<br><b>See:</b> "2.1 Installing (or Replacing) the Battery" (p.19)  |
|  | A measured value is out of range.  | Out-of-range values cannot be displayed.<br>[OF] or [UF] is displayed when this data is imported by the LR5000 Utility Program. |

### LR5000 Utility Program Error Displays

| Error Displays | Meaning                           | Remedies and References                  |
|----------------|-----------------------------------|--|
| OF             | A measured value is out of range. | Out-of-range values cannot be displayed. |
| UF             |                                   |  |




# Appendix

## Appendix 1 About Recording Modes

The recording method depends on the selected recording mode. The recording modes are as follows.

### Instantaneous Recording


Measurements are recorded in internal memory at each recording interval.

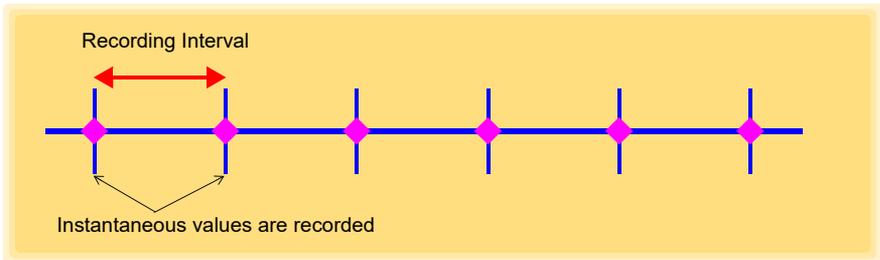

### Statistical Recording

Measurements are taken once per second, and instantaneous, maximum, minimum, and average values are saved to internal memory at each recording interval.

Data at the recording start time is not recorded (in the following case, data at 10:00:00 is not recorded).

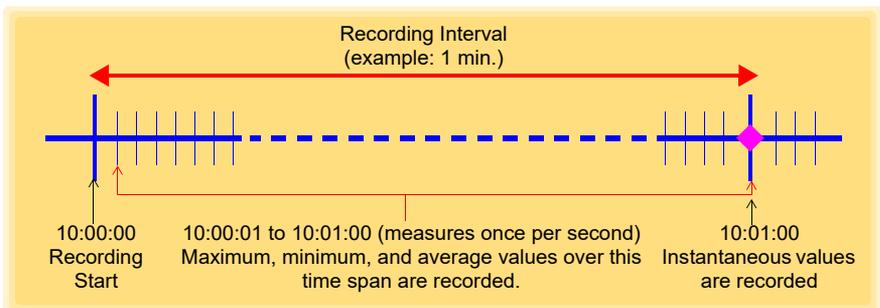

### **NOTE**

Statistical recording cannot be selected when the recording interval is set to one second.

## Appendix 2 Recording Intervals and Recording Times

The maximum recording time is calculated according to the recording capacity.

### **NOTE**

The maximum recording time is limited by the remaining battery capacity.

### Instantaneous Recording

Up to 60,000 values can be recorded.

| Recording Interval | Maximum Recording Time | Recording Interval | Maximum Recording Time |
|--------------------|------------------------|--------------------|------------------------|
| 1 sec.             | 16 h, 40 min           | 1 min              | 41 d, 16 h             |
| 2 sec.             | 1 d, 9 h, 20 min       | 2 min              | 83 d, 8 h              |
| 5 sec.             | 3 d, 11 h, 20 min      | 5 min              | 208 d, 8 h             |
| 10 sec.            | 6 d, 22 h, 40 min      | 10 min             | 416 d, 16 h            |
| 15 sec.            | 10 d, 10 h             | 15 min             | 625 d                  |
| 20 sec.            | 13 d, 21 h, 20 min     | 20 min             | 833 d, 8 h             |
| 30 sec.            | 20 d, 20 h             | 30 min             | 1250 d                 |
|                    |                        | 60 min             | 2500 d                 |

### Statistical Recording

Up to 15,000 values can be recorded.

| Recording Interval     | Maximum Recording Time | Recording Interval | Maximum Recording Time |
|------------------------|------------------------|--------------------|------------------------|
| 1 sec. (Cannot be set) | -                      | 1 min              | 10 d, 10 h             |
| 2 sec.                 | 8 h, 20 min            | 2 min              | 20 d, 20 h             |
| 5 sec.                 | 20 h, 50 min           | 5 min              | 52 d, 2 h              |
| 10 sec.                | 1 d, 17 h, 40 min      | 10 min             | 104 d, 4 h             |
| 15 sec.                | 2 d, 14 h, 30 min      | 15 min             | 156 d, 6 h             |
| 20 sec.                | 3 d, 11 h, 20 min      | 20 min             | 208 d, 8 h             |
| 30 sec.                | 5 d, 5 h               | 30 min             | 312 d, 12 h            |
|                        |                        | 60 min             | 625 d                  |

## Appendix 3 Battery Life Approximation

Battery life depends on the recording interval.

The following table shows battery life when power saving (p.34) is enabled. Battery life is approximately two months when power saving is disabled or when the statistical recording mode is enabled.

| Recording Interval | Battery Life    | Recording Interval | Battery Life     |
|--------------------|-----------------|--------------------|------------------|
| 1 sec.             | Approx. 60 days | 30 sec.            | Approx. 1.5 year |
| 10sec              | Approx. 1 year  | 1 min or more      | Approx. 2 year   |

# Index

## Symbols

|     |    |
|-----|----|
| (-) | 14 |
| (+) | 14 |

## A

|                    |        |
|--------------------|--------|
| AL indicator       | 15, 40 |
| Alarm thresholds   | 15, 40 |
| APS                | 34     |
| Auto graph display | 50, 61 |
| Auto import        | 50, 82 |

## B

|                                 |        |
|---------------------------------|--------|
| Battery is depleted too quickly | 93     |
| Battery life approximation      | A 2    |
| Battery status indicator        | 15, 20 |

## C

|                            |            |
|----------------------------|------------|
| CD handling                | 8          |
| Changing the saving method | 82         |
| Cleaning                   | 92         |
| Clock setting              | 17, 32, 41 |
| Combining                  | 78         |
| Connect to the computer    | 35         |
| Connection cable           | 22         |

## D

|                                      |        |
|--------------------------------------|--------|
| Damage                               | 92     |
| Data                                 |        |
| Combine                              | 78     |
| Copy                                 | 76     |
| Delete                               | 41, 77 |
| Extract                              | 79     |
| Move                                 | 76     |
| Data import screen (PC application)  | 59     |
| DATA indicator                       | 15     |
| Data view screen (PC application)    | 62, 65 |
| Delete                               | 41, 77 |
| Device connection monitoring setting | 83     |
| Dew-point temperature calculation    | 72     |
| Display indicators                   | 15     |
| Display refresh time                 | 14     |

|  |    |
|--|----|
| Display the graph                          | 65 |
| Display value refresh time                 | 14 |
| Displaying a graph of saved recording data | 62 |
| Disposing                                  | 92 |

## E

|                             |        |
|-----------------------------|--------|
| Electric power calculations | 68     |
| ENDLESS indicator           | 15, 33 |
| Endless recording           | 33, 38 |
| Energy cost calculations    | 69, 70 |
| Error display               | 95     |
| Extracting                  | 79     |

## F

|          |    |
|----------|----|
| Features | 13 |
|----------|----|

## G

|                |            |
|----------------|------------|
| Graph display  | 49         |
| Graph settings | 54, 61, 62 |

## H

|   |    |
|---|----|
| How can past data be viewed?  | 63 |
| How can the displayed area be magnified?                                    | 53 |
| How can the file naming method be changed?                                  | 82 |
| How can the function settings of the logger's settings displays be changed? | 83 |
| How can the logger's memory be erased?                                      | 93 |
| How can the save destination folder be changed?                             | 82 |
| How can the settings from one logger be copied to another?                  | 37 |
| How to switch from a setting display to measurement display?                | 49 |

## I

|                          |    |
|--------------------------|----|
| Installation precautions | 7  |
| Installing               | 44 |

# Index 2

## Index

---

|                               |        |
|-------------------------------|--------|
| Installing the battery .....  | 19     |
| Instantaneous .....           | A 1    |
| Instantaneous recording ..... | 34, 38 |
| Integration .....             | 57, 71 |
| INTVL indicator .....         | 15, 31 |

## L

---

|   |        |
|---|--------|
| Logger settings screen (PC application) ..... | 36     |
| Lower threshold .....                         | 40     |
| LR5091 Communication Adapter .....            | 14, 88 |

## M

---

|                                  |       |
|----------------------------------|-------|
| Main screen .....                | 26    |
| Maintenance .....                | 91    |
| Markings on the logger .....     | 5     |
| MAX indicator .....              | 15    |
| Measurement .....                | 43    |
| Measurement channel .....        | 15    |
| Measurement preparation .....    | 9, 19 |
| Measuring display (Logger) ..... | 16    |
| MIN indicator .....              | 15    |
| Model comment .....              | 37    |
| Moving .....                     | 76    |

## N

---

|                                      |    |
|--------------------------------------|----|
| No measured value is displayed. .... | 93 |
|--------------------------------------|----|

## O

---

|  |            |
|--|------------|
| One-time recording .....                           | 33, 38, 47 |
| Operation buttons .....                            | 14         |
| Operation flow .....                               | 9          |
| Options .....                                      | 4, 45, 87  |
| Options settings<br>(PC application program) ..... | 81         |
| Organizing data .....                              | 75         |
| Overview .....                                     | 13         |

## P

---

|                              |     |
|------------------------------|-----|
| Package contents .....       | 3   |
| Part names/functions .....   | 14  |
| PC application               |     |
| Operating requirements ..... | 23  |
| Screens .....                | 26  |
| Version upgrading .....      | 25  |
| PC application program       |     |
| Uninstall .....              | 25  |
| Power save setting .....     | 37  |
| Battery life .....           | A 2 |

|                                  |        |
|----------------------------------|--------|
| Power saving .....               | 49     |
| Power saving setting .....       | 17, 34 |
| Preliminary checks .....         | 8      |
| Pre-Measurement inspection ..... | 43     |
| Printing .....                   | 64     |
| Product overview .....           | 13     |

## R

---

|  |                 |
|--|-----------------|
| Real-time clock setting .....            | 32              |
| REC indicator .....                      | 15, 47          |
| REC indicator disappears .....           | 94              |
| REC/STOP button .....                    | 14              |
| Recorded data count .....                | 16              |
| Recorded data to a computer .....        | 49              |
| Recording interval .....                 | 17, 31, 38, 48  |
| Recording mode .....                     | 17, 34, 38, A 1 |
| Recording start method .....             | 38              |
| Recording stop method .....              | 38              |
| Recording times .....                    | A 2             |
| Re-import all data from the logger ..... | 61              |
| Repairs .....                            | 91, 92          |

## S

---

|   |             |
|---|-------------|
| Safety Information .....                                    | 5           |
| Save method screen (PC application) ...                     | 61          |
| Saving recorded data to a computer .....                    | 49          |
| Scaling .....   | 39, 41, 67  |
| Scheduled Time .....  | 38          |
| Service .....   | 91          |
| SET button .....  | 14          |
| Setting (PC application) .....                              | 36          |
| Setting display (Logger) .....                              | 17          |
| Settings List .....   | 29          |
| Show main screen .....                                      | 59, 75      |
| Specifications .....  | 85          |
| Stand .....   | 44          |
| Starting and stopping recording .....                       | 46          |
| STAT indicator .....  | 15, 34      |
| Statistical recording .....                                 | 34, 38, A 1 |
| Stop method setting .....                                   | 17, 33      |
| Stop method setting (for when memory<br>becomes full) ..... | 33          |
| Strap with magnet .....                                     | 45          |

## T

---

|                                |        |
|--------------------------------|--------|
| TIME indicator .....           | 15, 32 |
| Time setting .....             | 17, 41 |
| Transporting precautions ..... | 4      |
| Troubleshooting .....          | 92     |

---

**U**

---

|                       |    |
|-----------------------|----|
| Uninstall .....       | 25 |
| Upper threshold ..... | 40 |

**V**

---

|                         |                    |
|-------------------------|--------------------|
| Version upgrading ..... | 25                 |
| View data .....         | 62, 65             |
| View latest data .....  | 62, 65             |
| Viewer .....            | 50, 51, 62, 63, 65 |

**W**

---

|   |        |
|---|--------|
| Wall mounting .....                                     | 45     |
| Wall-mounted holder .....                               | 45     |
| When the logger will not be used for<br>long time ..... | 20, 91 |



# Warranty Certificate

# HIOKI

|       |               |  |
|-------|---------------|--|
| Model | Serial number | Warranty period<br>Three (3) years from date of purchase ( ___ / ___ ) |
|-------|---------------|--|

Customer name: \_\_\_\_\_

Customer address: \_\_\_\_\_

## Important

- Please retain this warranty certificate. Duplicates cannot be reissued.
- Complete the certificate with the model number, serial number, and date of purchase, along with your name and address. The personal information you provide on this form will only be used to provide repair service and information about Hioki products and services.

This document certifies that the product has been inspected and verified to conform to Hioki's standards.

Please contact the place of purchase in the event of a malfunction and provide this document, in which case Hioki will repair or replace the product subject to the warranty terms described below.

## Warranty terms

1. The product is guaranteed to operate properly during the warranty period (three [3] years from the date of purchase).  
If the date of purchase is unknown, the warranty period is defined as three (3) years from the date (month and year) of manufacture (as indicated by the first four digits of the serial number in YYYY format).
2. If the product came with an AC adapter, the adapter is warranted for one (1) year from the date of purchase.
3. The accuracy of measured values and other data generated by the product is guaranteed as described in the product specifications.
4. In the event that the product or AC adapter malfunctions during its respective warranty period due to a defect of workmanship or materials, Hioki will repair or replace the product or AC adapter free of charge.
5. The following malfunctions and issues are not covered by the warranty and as such are not subject to free repair or replacement:
  - 1. Malfunctions or damage of consumables, parts with a defined service life, etc.
  - 2. Malfunctions or damage of connectors, cables, etc.
  - 3. Malfunctions or damage caused by shipment, dropping, relocation, etc., after purchase of the product
  - 4. Malfunctions or damage caused by inappropriate handling that violates information found in the instruction manual or on precautionary labeling on the product itself
  - 5. Malfunctions or damage caused by a failure to perform maintenance or inspections as required by law or recommended in the instruction manual
  - 6. Malfunctions or damage caused by fire, storms or flooding, earthquakes, lightning, power anomalies (involving voltage, frequency, etc.), war or unrest, contamination with radiation, or other acts of God
  - 7. Damage that is limited to the product's appearance (cosmetic blemishes, deformation of enclosure shape, fading of color, etc.)
  - 8. Other malfunctions or damage for which Hioki is not responsible
6. The warranty will be considered invalidated in the following circumstances, in which case Hioki will be unable to perform service such as repair or calibration:
  - 1. If the product has been repaired or modified by a company, entity, or individual other than Hioki
  - 2. If the product has been embedded in another piece of equipment for use in a special application (aerospace, nuclear power, medical use, vehicle control, etc.) without Hioki's having received prior notice
7. If you experience a loss caused by use of the product and Hioki determines that it is responsible for the underlying issue, Hioki will provide compensation in an amount not to exceed the purchase price, with the following exceptions:
  - 1. Secondary damage arising from damage to a measured device or component that was caused by use of the product
  - 2. Damage arising from measurement results provided by the product
  - 3. Damage to a device other than the product that was sustained when connecting the device to the product (including via network connections)
8. Hioki reserves the right to decline to perform repair, calibration, or other service for products for which a certain amount of time has passed since their manufacture, products whose parts have been discontinued, and products that cannot be repaired due to unforeseen circumstances.

**HIOKI E.E. CORPORATION**

<http://www.hioki.com>

18-07 EN-3

# HIOKI

[www.hioki.com/](http://www.hioki.com/)



**All regional  
contact  
information**

## **HEADQUARTERS**

81 Koizumi  
Ueda, Nagano 386-1192 Japan

## **HIOKI EUROPE GmbH**

Helfmann-Park 2  
65760 Eschborn, Germany  
[hioki@hioki.eu](mailto:hioki@hioki.eu)

2111 EN

---

Edited and published by HIOKI E.E. CORPORATION

Printed in Japan

- CE declarations of conformity can be downloaded from our website.
- Contents subject to change without notice.
- This document contains copyrighted content.
- It is prohibited to copy, reproduce, or modify the content of this document without permission.
- Company names, product names, etc. mentioned in this document are trademarks or registered trademarks of their respective companies.