

USER GUIDE

BITE5 Advanced

Battery tester

Megger®



Register →
megger.com/register



User Guide →



Support →
megger.com/support



EN
ENGLISH

This document is copyright of:

Megger Limited, Archcliffe Road, Dover, Kent CT17 9EN. ENGLAND
T +44 (0)1304 502101 F +44 (0)1304 207342 www.megger.com

Megger Limited reserves the right to alter the specification of its products from time to time without notice. Although every effort is made to ensure the accuracy of the information contained within this document it is not warranted or represented by Megger Limited to be a complete and up-to-date description.

For Patent information about this instrument refer to the following web site:
megger.com/patents

This manual supersedes all previous issues of this manual. Please ensure that you are using the most recent issue of this document. Destroy any copies that are of an older issue.

Declaration of Conformity

Hereby, Megger Instruments Limited declares that radio equipment manufactured by Megger Instruments Limited described in this user guide is in compliance with Directive 2014/53/EU. Other equipment manufactured by Megger Instruments Limited described in this user guide is in compliance with Directives 2014/30/EU and 2014/35/EU where they apply.

The full text of Megger Instruments EU declarations of conformity are available at the following internet address:
megger.com/eu-dofc

Contents

1. Introduction	6
1.1 Product description	6
1.2 Included with the BITE5	6
1.3 Applications	6
1.4 Company web site	6
2. Safety Warnings and Standards.....	7
2.1 Warnings, Cautions and Notes	7
2.2 Safety warnings	7
2.3 Installation category definitions:.....	8
2.4 Safety, Hazard and Warning symbols on the instrument.....	8
3. Instrument Overview	9
3.1 Instrument layout.....	9
4. Zero adjustment	10
4.1 Zero adjustment procedure	10
5. Configuration of BITE5 ADVANCED	11
6. Configuration of string	12
7. Performing a quick test (Meter Mode)	13
8. Performing an impedance test on a battery string.	15
9. Performing a NERC terminal mode impedance test on a battery string.....	17
10. Performing an impedance test on a parallel battery string.....	20
11. Performing a conductance test on a battery string.....	24
12. Performing an impedance test on a battery pack.	27
13. Measuring battery (DC) float and (AC) ripple voltages and currents	29
13.1 VA Meter Mode	29
14. Adding a Ripple (AC) Voltage, Ripple (AC)Current or a Float (DC) Current value to a string..	32
15. Measuring voltages only on a battery string.....	34
16. Performing a discharge test	37
17. Performing an impedance and discharge test (special testing).....	40
18. Trending recorded data.....	43
18.1 Trending String Test Data	43
19. Trending Cell Test Data	45
20. Viewing a record	47
20.1 Viewing records.....	47
21. Deleting recorded meter data	49
21.1 Deleting Meter Ω and Meter VA Ω data.....	49
21.2 Deleting recorded string data	50
21.3 Deleting a string configuration.....	52

22. Data Logging	53
22.1 Logging Data	53
22.2 Viewing a Recorded Data Log	55
23. RFID Tags	57
23.1 Configuring a RFID tag. for new battery string configuration.	57
23.2 Configuring a RFID tag. for an existing battery string configuration.	59
24. Saving a screen snapshot	61
25. Noisy Strings.	62
26. Specifications	63
27. Accessories and Equipment	65
27.1 Included accessories.....	66
27.2 Optional accessories for Model A.....	66
27.3 Optional accessories for Model B	66
28. Maintenance	67
28.1 Battery charging.....	67
28.1.1 Battery charging status icon	67
28.2 Cleaning and Storage.....	67
28.2.1 Unit Cleaning.....	67
28.2.2 Storage	67
28.2.3 Cleaning probes	67
29. Calibration, Repair and Warranty	68
29.1 Calibration, Service and Spare Parts	68
29.2 Approved Repair Companies	69
29.3 Return procedure	69
30. Decommissioning	70
30.1 WEEE Directive	70
30.2 Battery disposal	70
31. Worldwide Sales Offices	71

1. Introduction

This document is the user guide for the Megger BITE5 ADVANCED Battery Tester. It provides a description of the operation of the unit as well as operating instructions. Read this manual before installing or using the equipment. Special emphasis should be placed on all safety discussions.

1.1 Product description

The Megger BITE5 ADVANCED Battery Tester has been designed with emphasis on reliability, simplicity, and ease of use. It will provide you with the information you need to reliably test batteries.

1.2 Included with the BITE5

- BITE5 ADVANCED battery tester
- Duplex probes
- Voltage leads
- Charger
- microSD card
- microSD card reader
- Mini USB cable
- Neck strap
- Zero bar
- Stylus

1.3 Applications

- Battery testing

1.4 Company web site

Occasionally an information bulletin may be issued via the Megger web site. This may concern new accessories, new usage instructions or a software update. Please occasionally check on the Megger web site for anything applicable to your Megger instruments.

www.megger.com

2. Safety Warnings and Standards




WARNING : Death, serious injury, or fire hazard could result from improper use/installation of this instrument. Read and understand this user guide before installing this instrument.

Installation of this instrument MUST be performed in compliance with the National Electric Code and any additional safety requirements applicable to your installation.

Installation, operation, and maintenance of this instrument MUST be performed by qualified personnel only. The National Electrical Code defines a qualified person as one familiar with the construction and operation of the equipment and the hazards involved.

2.1 Warnings, Cautions and Notes

This user guide follows the internationally recognised definition. These instructions must be adhered to at all times.

Description	
DANGER :	Indicates a dangerous situation which, if ignored, could lead to death, serious injury or health problems.
WARNING :	Indicates a potentially dangerous situation which, if ignored, could lead to death, serious injury or health problems.
ATTENTION :	Indicates a dangerous situation which, if ignored, could lead to injuries or health problems.
CAUTION :	Indicates a situation which could lead to damage of the equipment or environment
NOTE :	Indicates important instructions to be followed to perform the relevant process safely and efficiently.
Icon	Description
	EN ISO 7010 P007 Interference to the operation of or damage to active implanted cardiac devices from this equipment which generates strong electromagnetic fields. No access for people with active implanted cardiac devices.
	EN ISO 7010 W006 Warning of the presence of strong magnetic field.
	EN ISO 7010 W001 Warning to consult the user instructions. Caution is necessary when operating the device or control close to where this symbol is placed, or to indicate that an operation needs operator awareness and protective action in order to avoid hazardous situations.
	HIGH VOLTAGE, Risk of electric shock
	Earth/Ground

2.2 Safety warnings

The following safety precautions MUST be taken whenever the instrument is installed:

- Wear safety glasses and insulated gloves when making connections to power circuits
- Hands, shoes, floor/ground must be dry when making any connection to a powered line

2.3 Installation category definitions:

CAT IV - Measurement category IV: Equipment connected between the origin of the low-voltage mains supply and distribution panel.









CAT III - Measurement category III: Equipment connected between the distribution panel and electrical outlets.

CAT II - Measurement category II: Equipment connected between the electrical outlets and user's equipment.

Measurement equipment may be safely connected to circuits at the marked rating or lower. The connection rating is that of the lowest rated component in the measurement circuit.

2.4 Safety, Hazard and Warning symbols on the instrument

This paragraph details the various safety and hazard icons on the instrument's outer case.

Icon	Description
	Warning: High Voltage, risk of electric shock
	Caution: Refer to user guide.
	UK conformity. This equipment complies with current UK legislation
	EU conformity. Equipment complies with current EU directives.
	Conforms to relevant Australian Safety and EMC standards
	Do not dispose of to landfill, in sewage systems or by fire.
	Equipment protected throughout by double insulation.
	Reference earth connection. Not a protective earth terminal

3. Instrument Overview

3.1 Instrument layout

One or more relevant viewpoints of the instrument with numbered arrows to reference the table below



Item	Description	Item	Description
1	Voltage lead input -	8	Lock and unlock screen
2	Current probe input	9	Ohmic testing
3	Mini USB input and micro SD card slot	10	VA testing
4	DC power adapter input	11	Data and string records
5	ON/OFF switch	12	Recorded data charts
6	Impedance probe inputs	13	Instrument configuration
7	Voltage lead input +		




4. Zero adjustment

For accurate ohmic measurements, it is recommended that a zero adjust is performed when changing probes. To perform a zero adjust, use the included zero bar.



When performing a zero adjustment, place the source pin on the outer copper surface of the zero bar and place the sensor pin in one of the holes of the zero adjust bar.

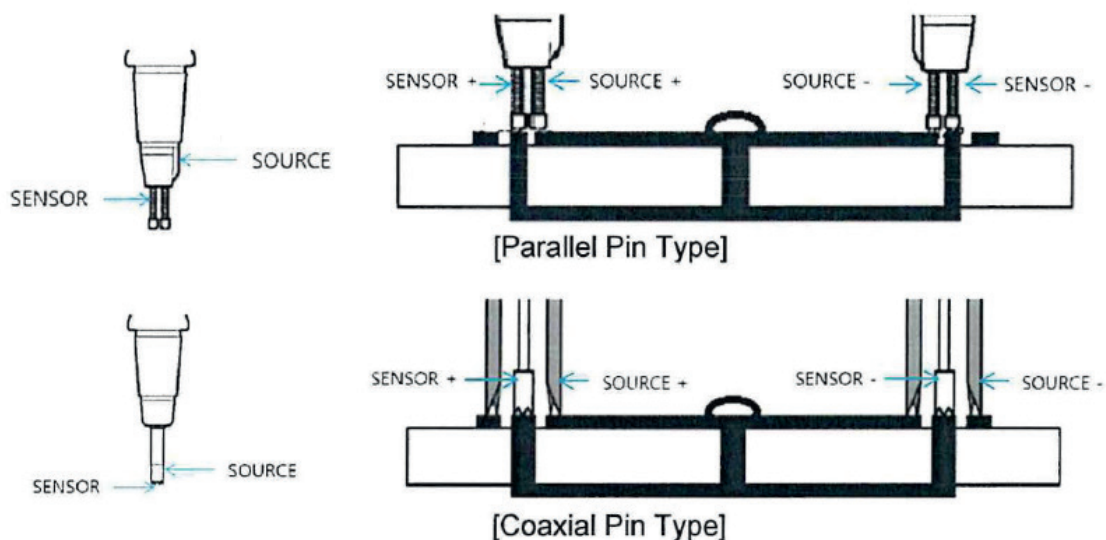



4.1 Zero adjustment procedure

Select "0-ADJ".

The BITE5 ADVANCED will prompt you to make a zero adjustment bar. Select YES.

NOTE: Place the probes on the zero adjustment bar as shown within 10 seconds of selecting YES, or the BITE5 ADVANCED will time out.


This zero adjustment will begin. Hold probes on zero bar until adjustment is complete.

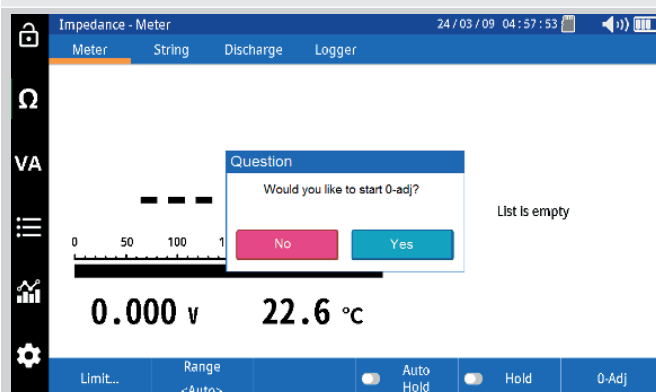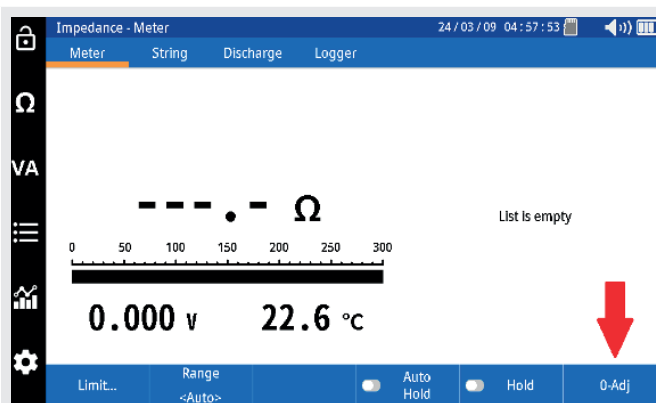

5. Configuration of BITE5 ADVANCED


The BITE5 ADVANCED allows you to customize the unit for your needs.

To configure the unit, select the CONFIGURATION ICON.

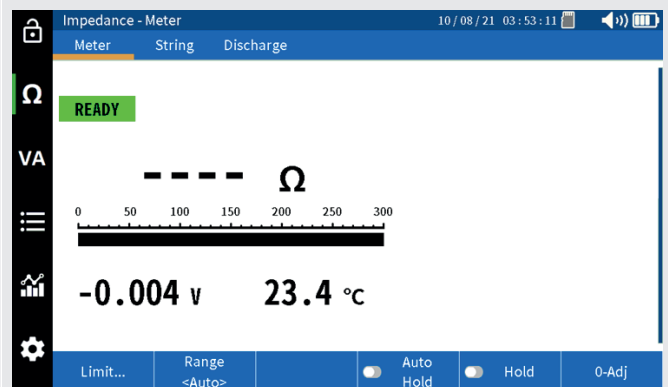


IMPEDANCE TAB

Display Units	Set measured ohmic values to ohms or siemens.
CT Source	Set to internal for series strings or parallel for parallel strings.
High Current	Set test current to 700mA or 100mA.
Temperature	Set temperature units to either Celsius or Fahrenheit.
Voltage Polarity	Set unit to record or disregard voltage polarity.
Noise Avoidance	Alter the test frequency to reduce effect of noisy strings.

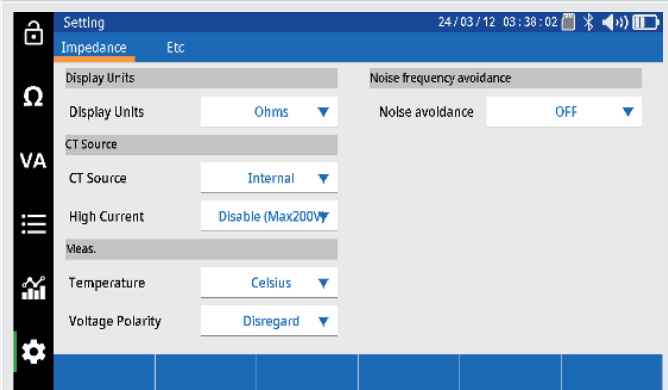

ETC TAB


Language	Select desired language.
Date Format	Select desired date format.
Brightness	Adjust the brightness of the display.
Display Off	Set automatic display turn off time.
Time	Set the date and time.
Buzzer	Set the buzzer volume.
Auto P Off	Set automatic power down time.
SD Card	Format SD Card
Reset Settings	Reset BITE5.

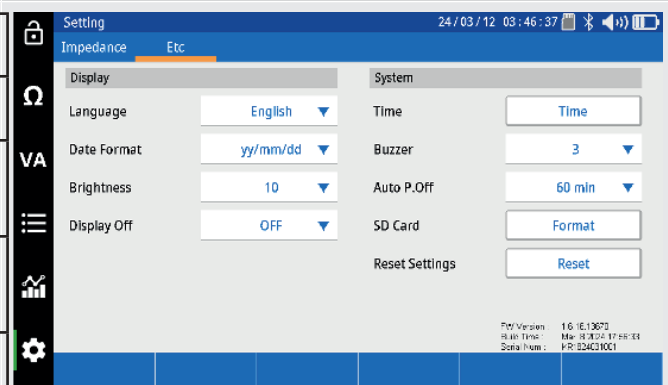


6. Configuration of string

The BITE5 ADVANCED allows you to configure strings to be tested.


To configure a new battery string press the RECORD ICON.

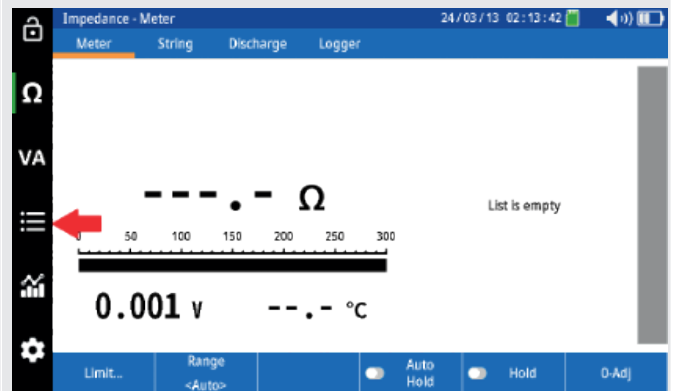

Select "String Ω".

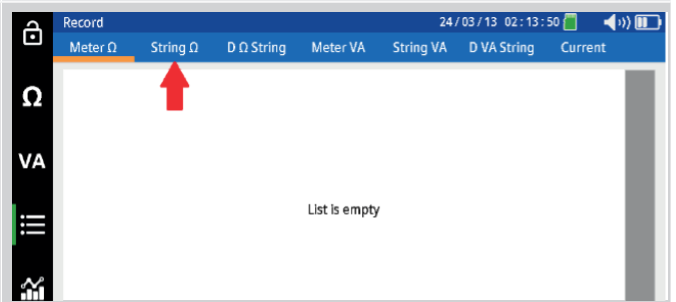


Select "Add..."

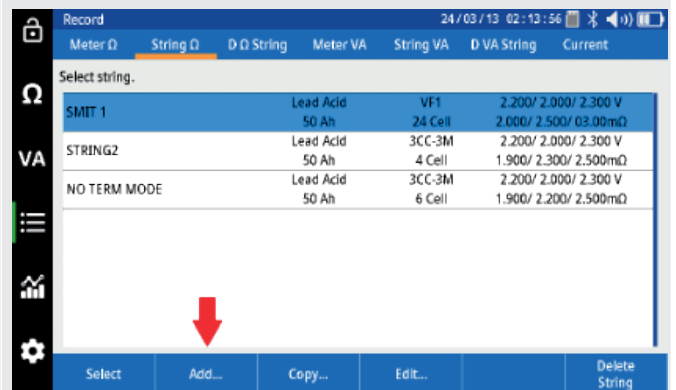

This will open the String Configuration screen.

Idx	Sets a file index number (Set automatically).
Type	Select battery chemistry
Cell	Number of Cells to test
Name	Name of string
Model	Model number of batteries
Capacity	Battery capacity in Ah or mAh
Ref Ω	Baseline reference value
Warning	Warning upper ohmic limit
Alarm	Alarm upper ohmic limit
Ref V	Cell float voltage
Lower	Low voltage limit
Upper	Upper voltage limit
RFID	Scanned RFID tag number

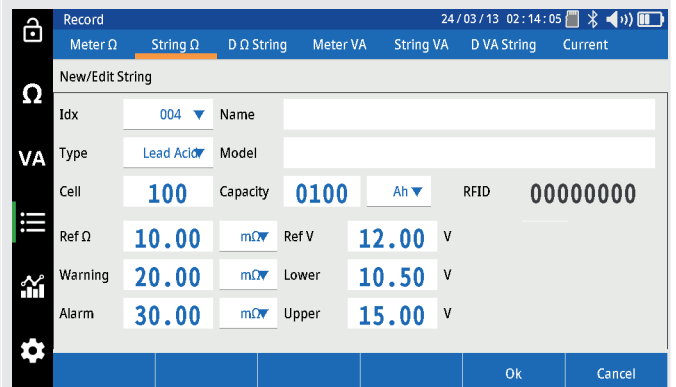


7. Performing a quick test (Meter Mode)

In the meter mode the BITE5 will take ohmic measurements but will not save the recordings to a programmed string configuration.

Select the Ohm (Ω) ICON.

When the Ohm (Ω) ICON is selected it configures the unit to record ohmic values, voltage, and temperature.

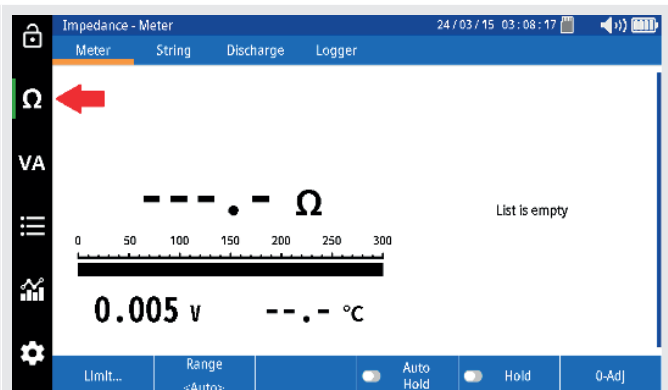


When the Ohm (Ω) ICON is selected the BITE5 Advanced will use the Duplex inputs.




Connect the duplex probes to the BITE5 ADVANCED.



Select "Meter"

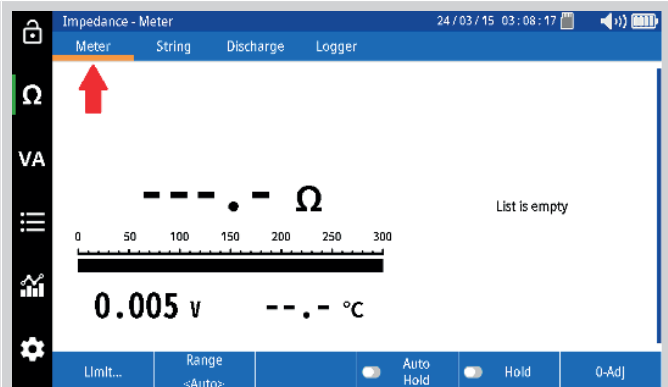


Select "Limit" if you would like to program impedance and voltage limits for the measurement.

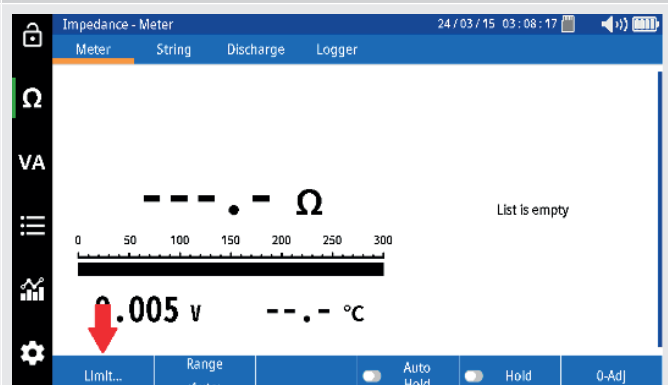

Performing a quick test (Meter Mode)


This screen will allow you to program a warning and alarm limit for the impedance value and a lower limit for the voltage. This is an optional step. Select OK when done.

Note: This feature can be disabled as well by selecting OFF.

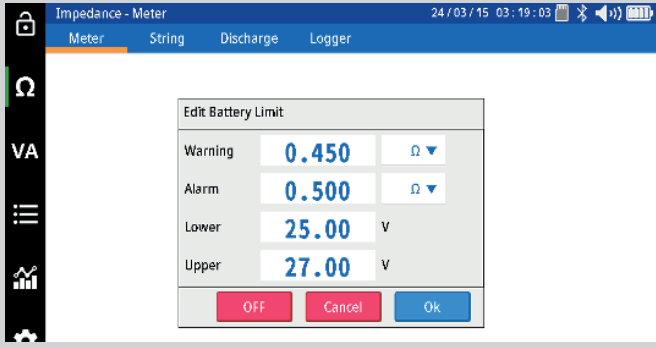


Start testing by placing the probes across the battery.


The BITE5 ADVANCED will beep when the measurement is complete.

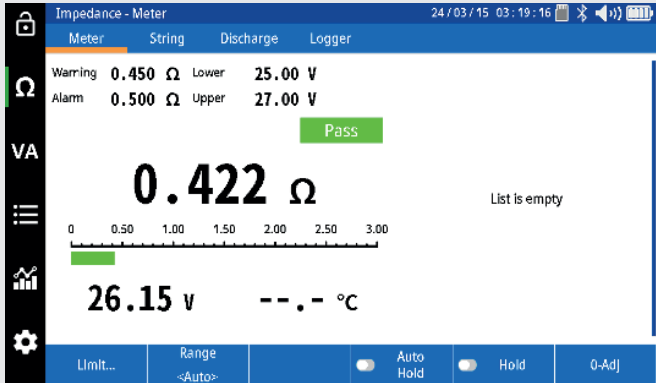

Press "Hold" to freeze the value on the screen.

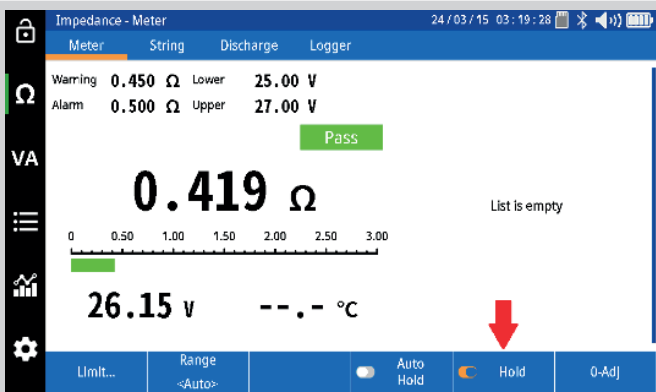

Select "Auto Hold" and the BITE5 ADVANCED will automatically save any measurement with a date and time stamp.

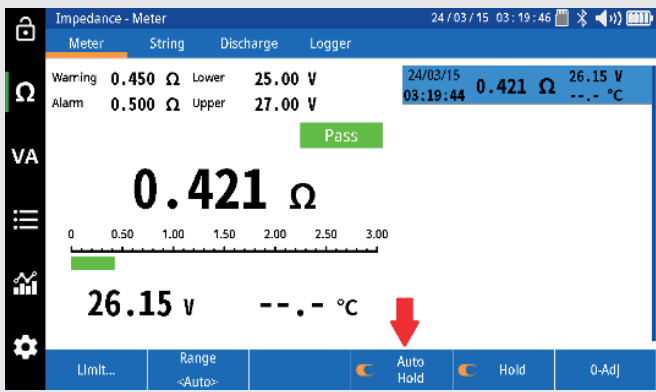


8. Performing an impedance test on a battery string.

In this mode the BITE5 will take impedance measurements and will save the record values to a programmed string configuration.

Select the Ohm (Ω) ICON.

When the Ohm (Ω) ICON is selected it configures the unit to record ohmic values, voltage and temperature

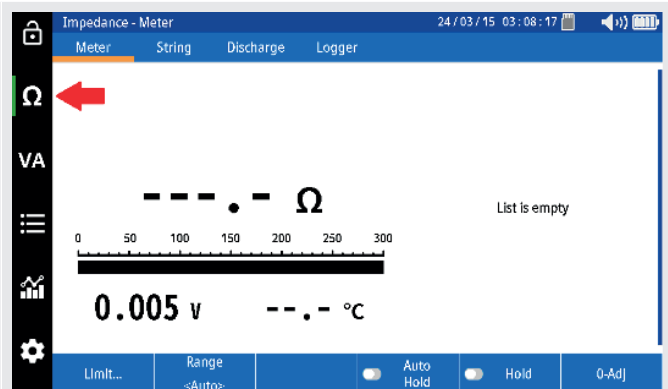


When the Ohm (Ω) ICON is selected the BITE5 Advanced will use the Duplex inputs.




Connect the duplex probes to the BITE5 ADVANCED.



Select "String"

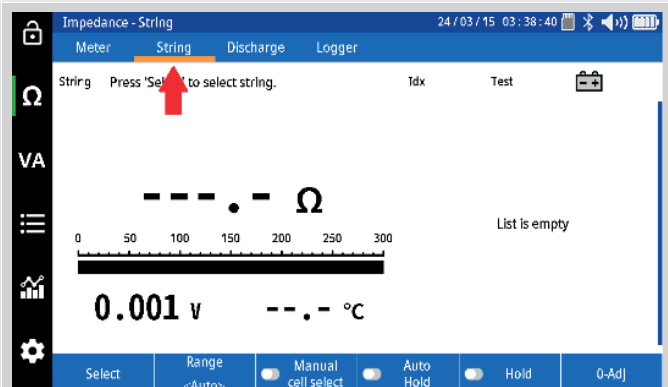

Select "Select".

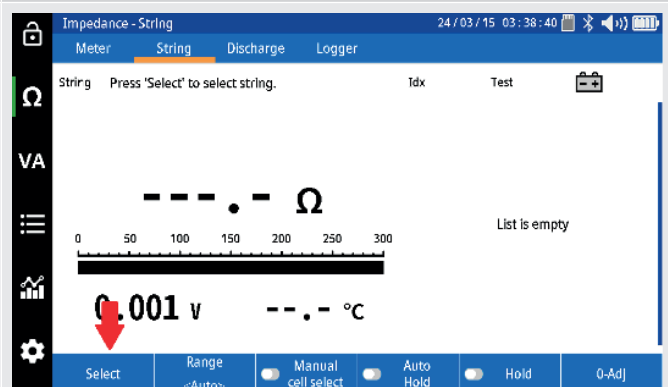

Performing an impedance test on a battery string.


Select desired string or scan the RFID tag, if used.	
Select "New Test" to start a new test on the selected string.	
Start testing by placing the probes on the first cell. The unit will beep when the measurement is complete and save the measured values to memory. The results will be displayed on the screen.	
Move to the next battery or strap. The BITE5 ADVANCED will automatically identify if it is on a cell or a strap and take the measurement. The recorded values will be displayed on the screen.	
Continue taking measurement of each cell and strap in sequence until you reach the last cell in the string. When the BITE5 ADVANCED measures the last cell in the string, it will display a summary.	

9. Performing a NERC terminal mode impedance test on a battery string.

This is a NERC compliance test. In this mode the BITE5 will take the terminal impedance measurements in addition to the cell and strap impedance measurements. All values will be saved to the selected string configuration.

Select the Ohm (Ω) ICON.

When the Ohm (Ω) ICON is selected it configures the unit to record ohmic values, voltage and temperature.

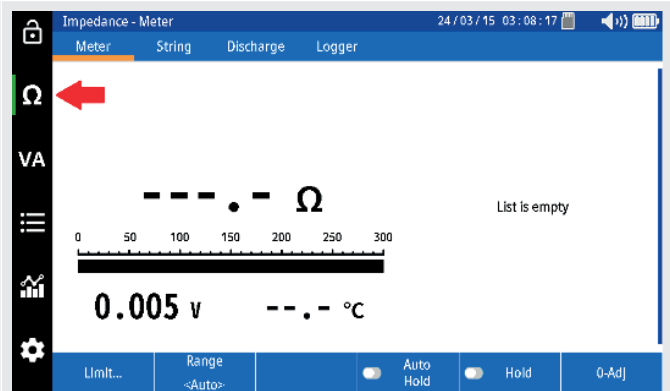


When the Ohm (Ω) ICON is selected the BITE5 Advanced will use the Duplex inputs.




Connect the duplex probes to the BITE5 ADVANCED.



Select "String"

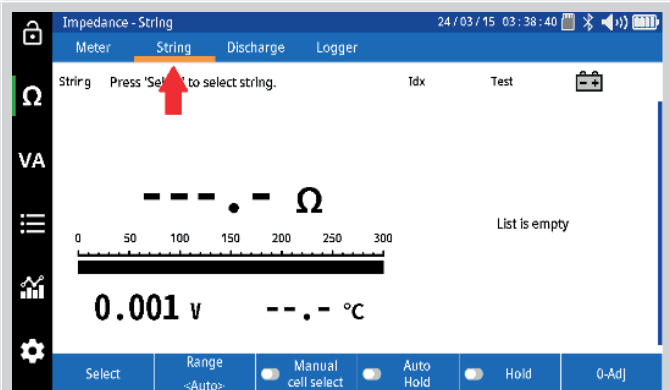

Select "Select".

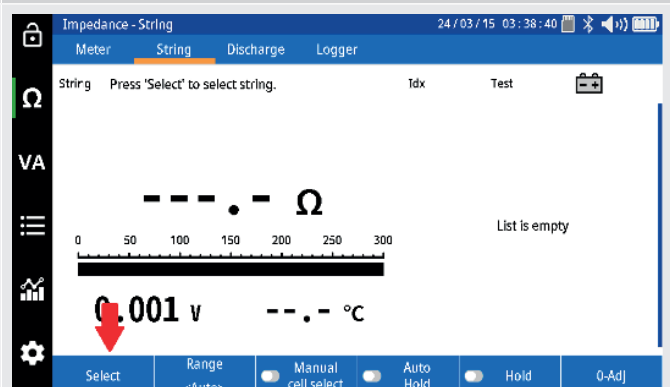

Performing a NERC terminal mode impedance test on a battery string.


Select desired string. or scan the RFID tag, if used.

Select “New Test” to start a new test on the selected string.

Start testing by placing the probes on positive terminal connection. This is the connection from the end of the charger leads to the first positive battery terminal. The BITE5 ADVANCED will automatically identify this as a strap. The value will be saved as strap 0A. The results will be displayed on the screen.


Move to the next battery or strap. The BITE5 ADVANCED will automatically identify if it is on a cell or a strap and take the measurement.

The recorded values will be displayed on the screen.

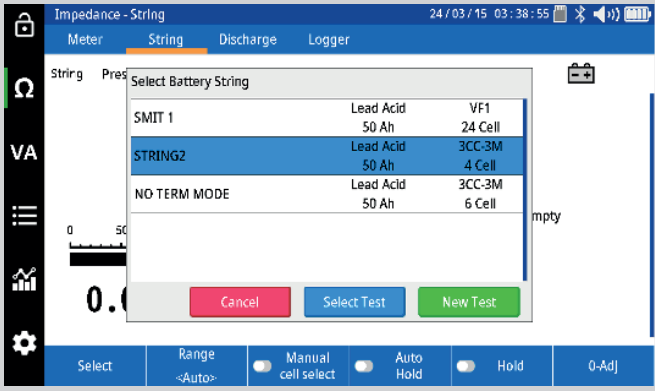


The screenshot shows the 'Impedance - String' menu with the 'String' tab selected. A 'Select Battery String' dialog box is open, displaying a table of battery strings. The 'STRING2' entry is highlighted. Below the table are 'Cancel', 'Select Test', and 'New Test' buttons. The 'New Test' button is highlighted with a red arrow.

String	Lead Acid	VF1
SMIT 1	50 Ah	24 Cell
STRING2	50 Ah	3CC-3M
NO TERM MODE	50 Ah	4 Cell

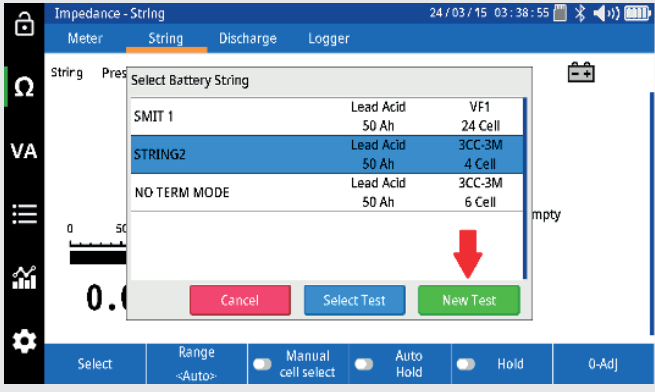

The screenshot shows the test results for 'STRING2'. The main display shows '0.400mΩ' and '0.000 V'. The 'Pass' button is highlighted. The 'New Test' button is highlighted with a red arrow.

String	Lower	Upper	TDx	Test	001
STRING2	2.000 V	2.300 V	002	08	001

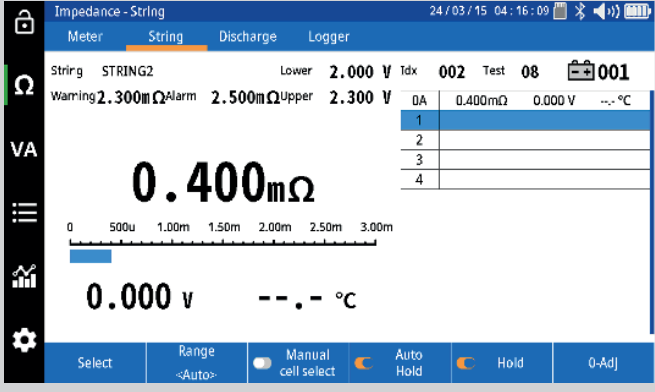


The screenshot shows the test results for 'STRING2'. The main display shows '1.970mΩ' and '2.252 V'. The 'Pass' button is highlighted. The 'New Test' button is highlighted with a red arrow.


String	Lower	Upper	TDx	Test	002
STRING2	2.000 V	2.300 V	002	08	002

Performing a NERC terminal mode impedance test on a battery string.

Continue taking measurement of each cell and strap in sequence until you reach the last cell in the string. When the BITE5 ADVANCED measures the last cell in the string, it will display a summary.



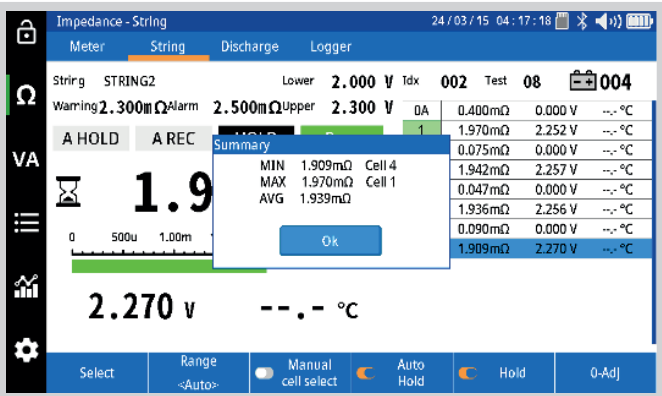



To record the negative terminal connection, close the summary and measure from the end of the negative charger lead to the last post on the last battery. This value will be saved as a strap.

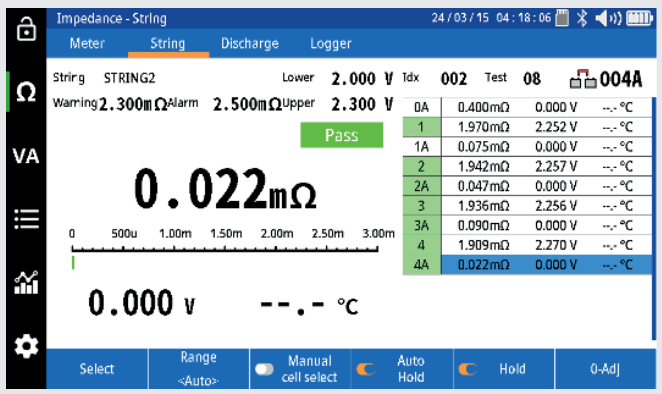

10. Performing an impedance test on a parallel battery string.

When performing a ohmic test on a parallel string some of the test current escapes through the parallel path. This leads to inaccuracies in the measurement. In this mode the BITE5 will take impedance measurements, while recording the escape current, through the parallel path. This will provide accurate measurements avoiding the need to segment the string. The recorded values will be saved to the selected string configuration.

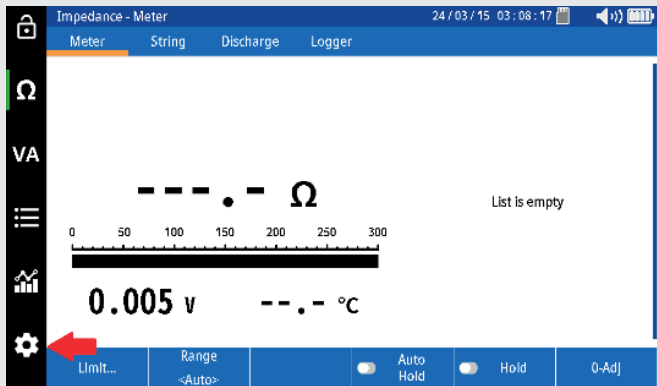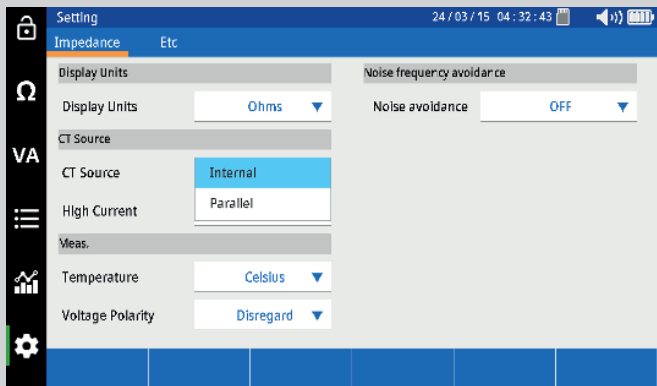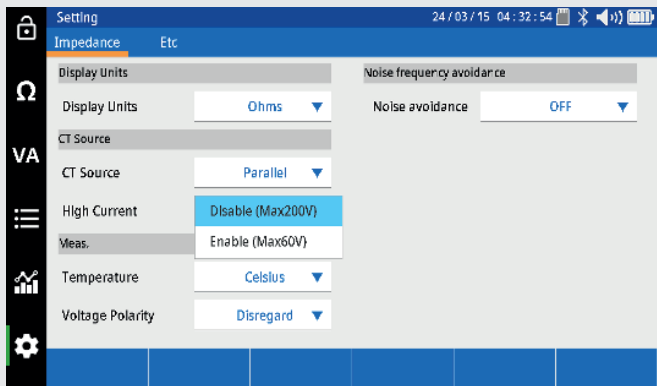Select the "Setting" ICON.	
Set the CT Source to "Parallel"	
Set the High Current to 700mA.	
Plug the AC CT into the BITE5 ADVANCED	


Performing an impedance test on a parallel battery string.

Place the AC Current clamps on the parallel path.



Select the Ohm (Ω) ICON.

When the Ohm (Ω) ICON is selected it configures the unit to record ohmic values, voltage, and temperature.

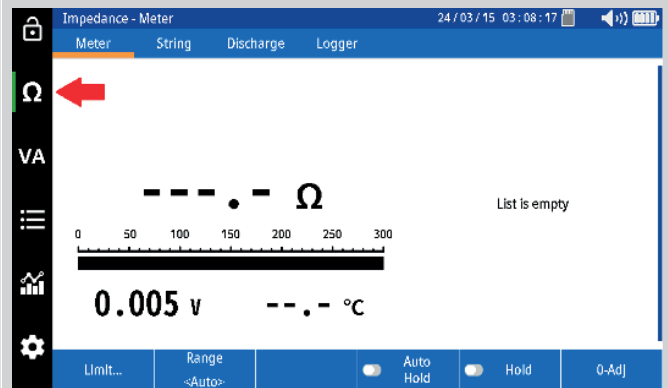


When the Ohm (Ω) ICON is selected the BITE5 Advanced will use the Duplex inputs.



Connect the duplex probes to the BITE5 ADVANCED to voltage inputs of the BITE5 ADVANCED.




Select "String"

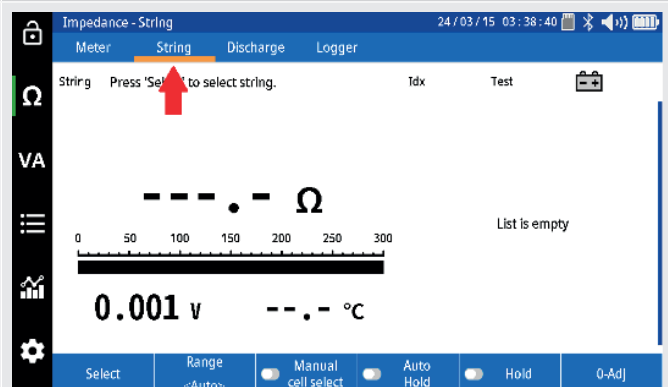


Performing an impedance test on a parallel battery string.

Select "Select".

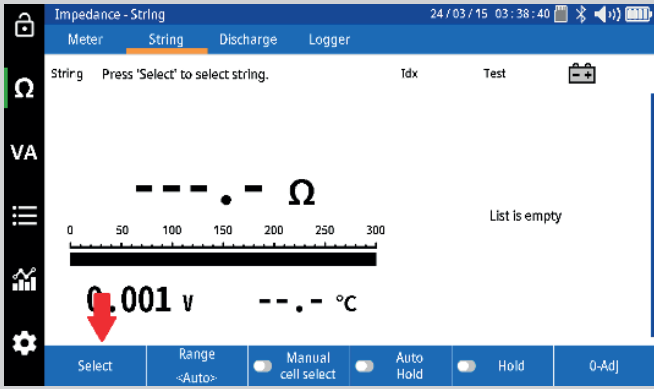

The screenshot shows the 'Impedance-String' menu with tabs for Meter, String, Discharge, and Logger. The 'String' tab is active. Below the tabs, there's a prompt 'String Press "Select" to select string.' and a large 'Select' button at the bottom left. A red arrow points to this button. Other buttons include Range, Manual cell select, Auto Hold, Hold, and 0-Adj.


Select desired string. or scan the RFID tag, if used.

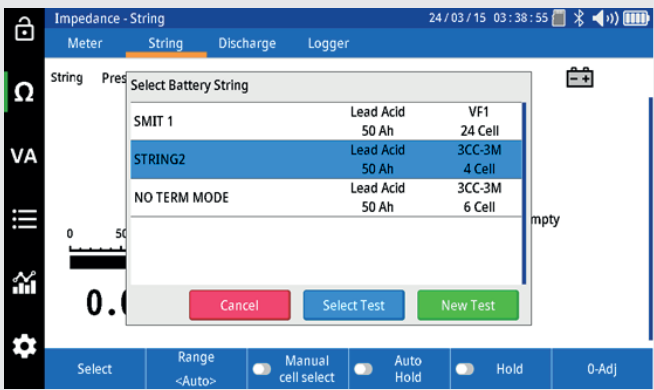

The screenshot shows the 'Select Battery String' dialog box. It contains a table with columns for string name, battery type, capacity, and cell count. The strings listed are SMIT 1, STRING2, and NO TERM MODE. STRING2 is highlighted. At the bottom, there are 'Cancel', 'Select Test', and 'New Test' buttons.


String	Battery Type	Capacity	Cell Count
SMIT 1	Lead Acid	50 Ah	24 Cell
STRING2	Lead Acid	50 Ah	4 Cell
NO TERM MODE	Lead Acid	50 Ah	6 Cell

Select "New Test" to start a new test on the selected string.

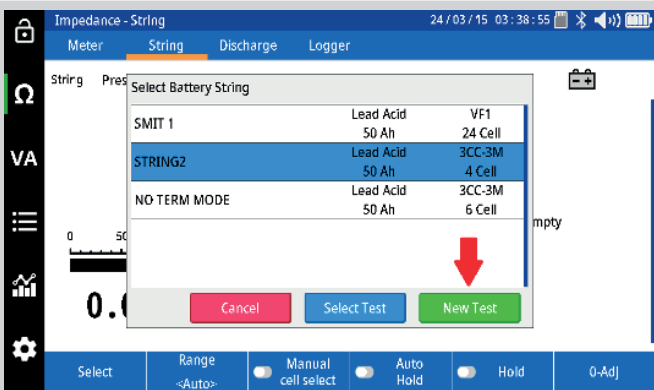

This screenshot is identical to the previous one, but with a red arrow pointing to the 'New Test' button at the bottom right of the dialog box.

Start testing by placing the probes on the first cell. The unit will beep when the measurement is complete and save the measured values to memory. The results will be displayed on the screen.

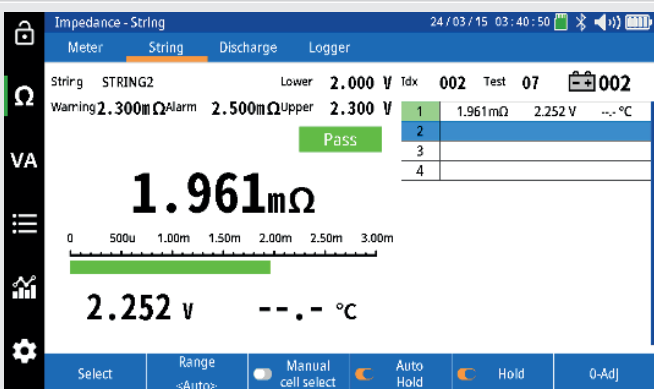


The screenshot shows the test results screen. It displays the measured impedance as 1.961 mΩ and the voltage as 2.252 V. A 'Pass' indicator is shown. The screen also shows a table of results for the selected string (STRING2).

String	Impedance (mΩ)	Voltage (V)	Temperature (°C)
1	1.961	2.252	---
2			
3			
4			

Performing an impedance test on a parallel battery string.

Move to the next battery or strap. The BITE5 ADVANCED will automatically identify if it is on a cell or a strap and take the measurement.


The recorded values will be displayed on the screen.

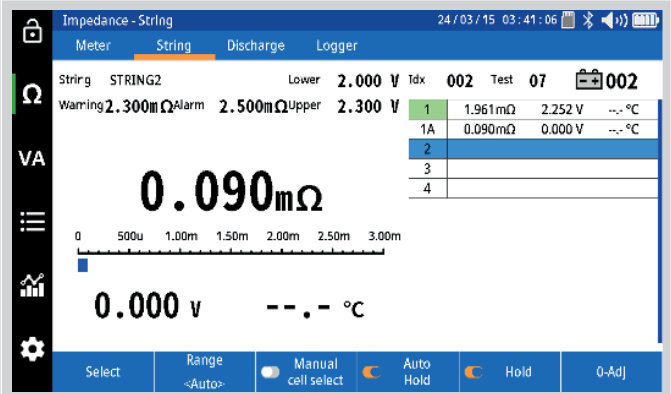

Continue taking measurements until the parallel string is reached. At this point move the AC CT to the path that was just measured and then continue measuring the cells and straps if the parallel string.



Continue taking measurements of each cell and strap in sequence until you reach the last cell in the string. When the BITE5 ADVANCED measures the last cell in the string, it will display a summary.

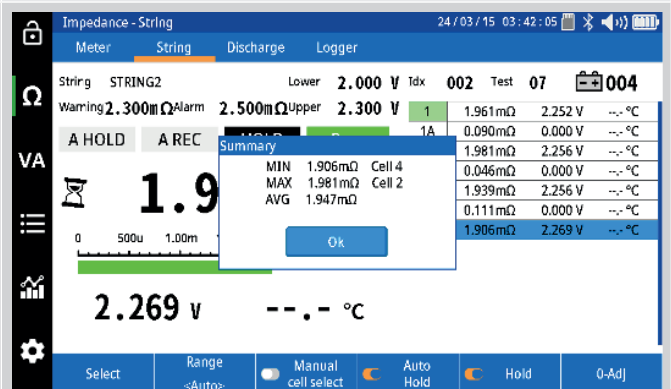


11. Performing a conductance test on a battery string.


The BITE5 can record the measured data as either milliohms or in Siemens. This test will record the data in Siemens. All the data will be saved to the selected string.

NOTE: All limits in the selected string will need to be in Siemens.

Select the "Setting" ICON.

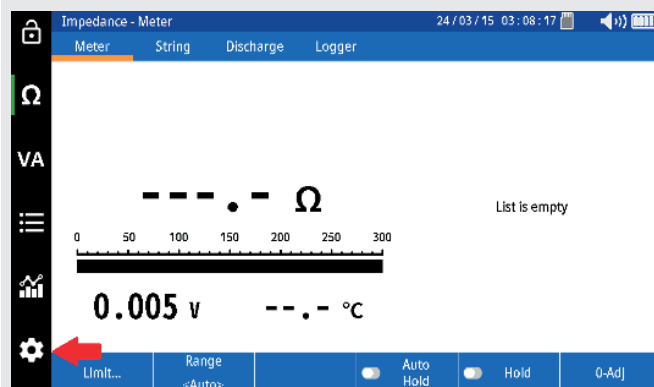


Set the Display units to "Siemens"

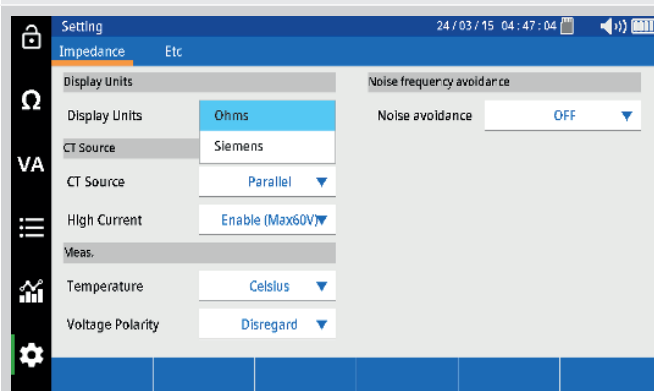

Select the Siemens (S) ICON.

When the Siemens (S) ICON is selected it configures the unit to record Siemens, voltage and temperature

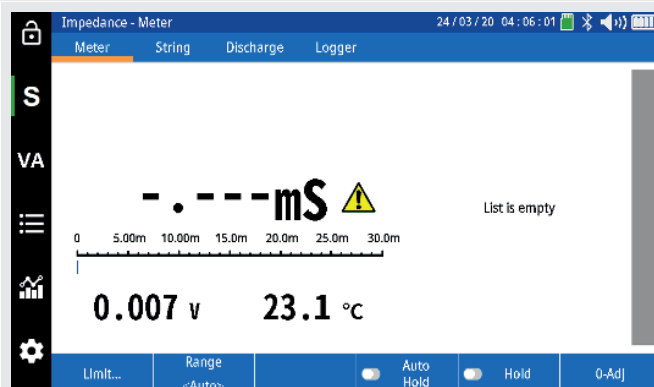

When the Siemens (S) ICON is selected the BITE5 Advanced will use the Duplex inputs.




Performing a conductance test on a battery string.


Connect the duplex probes to the BITE5 ADVANCED.
to voltage inputs of the BITE5 ADVANCED.




Select "String"

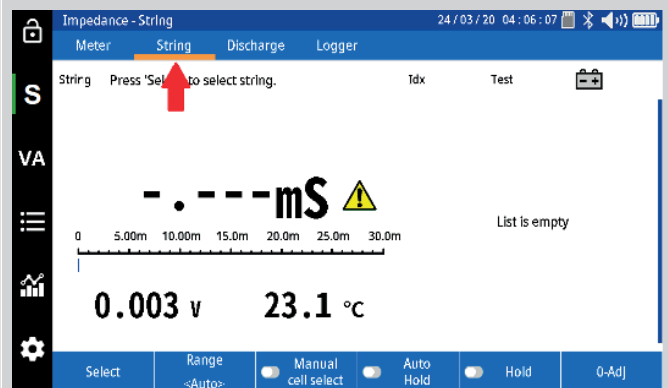





Select "Select".

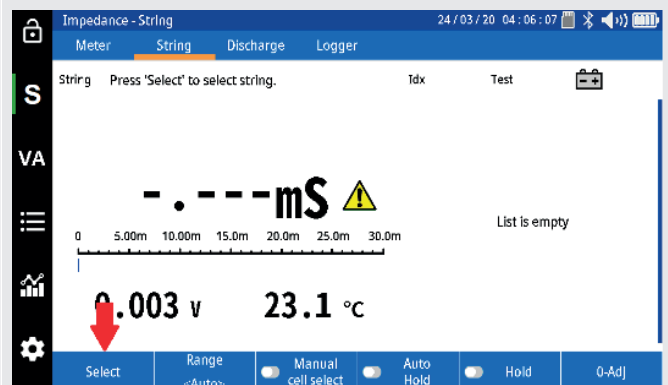

Select desired string. or scan the RFID tag, if used.

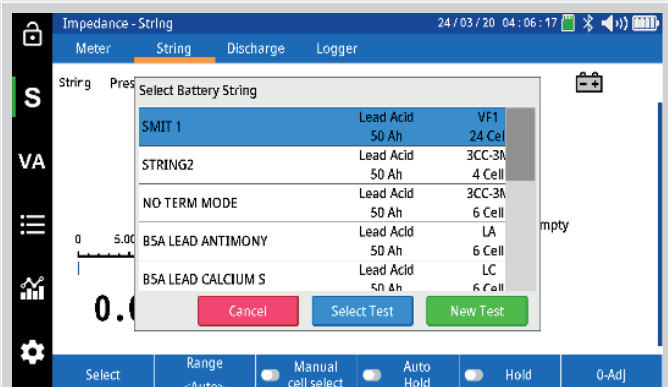


Performing a conductance test on a battery string.

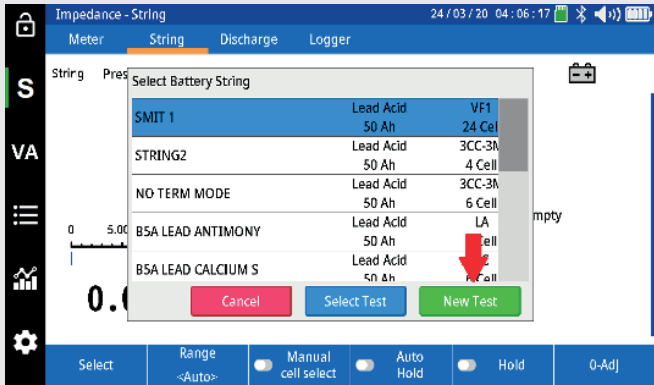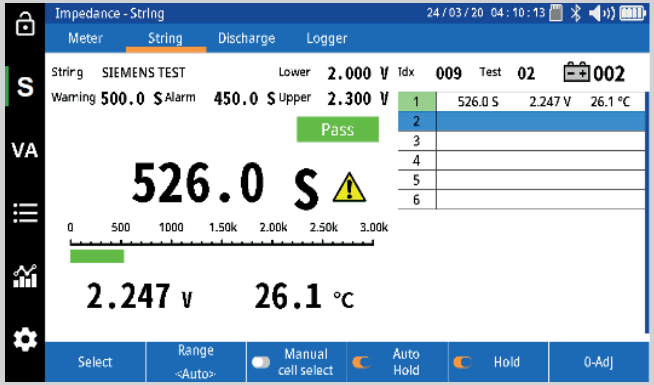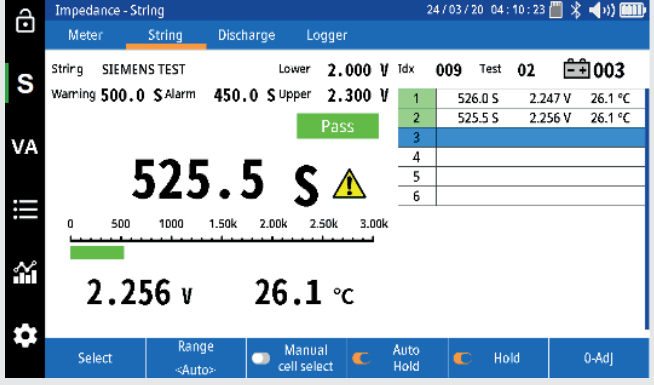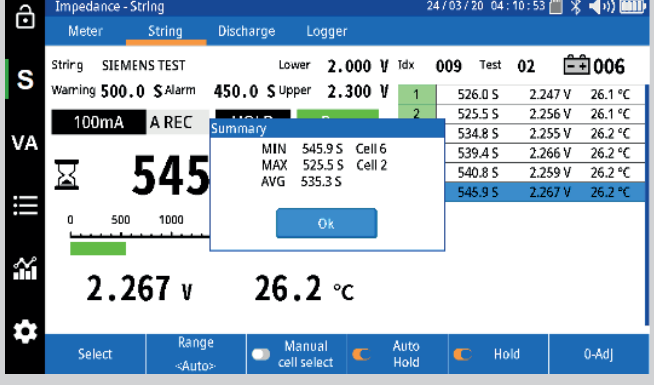Select "New Test" to start a new test on the selected string.	
Start testing by placing the probes on the first cell. The unit will beep when the measurement is complete and save the measured values to memory. The results will be displayed on the screen.	
Move to the next battery. The recorded values will be displayed on the screen. NOTE: The unit can be used to measure intercell connections is Siemens, however it is not recommended. Since Siemens is the reciprocal of resistance, the measured values of the straps will be very high. This may be seen as an OL.	
Continue taking measurement of each cell and strap in sequence until you reach the last cell in the string. When the BITE5 ADVANCED measures the last cell in the string, it will display a summary.	

12. Performing an impedance test on a battery pack.


In this mode the BITE5 will take a single impedance measurement across a battery pack or across an entire battery string (UP to 500Vdc) This test is applicable to mobile battery packs, such as in forklifts. The batteries do need to be fully charged.

In the string configuration verify the number of cells is set to 1.

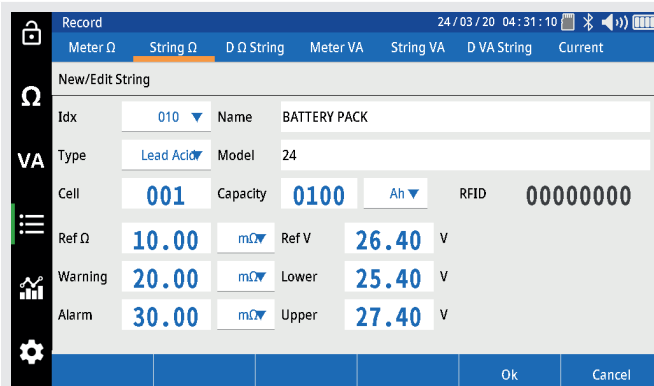

Select the Ohm (Ω) ICON.

When the Ohm (Ω) ICON is selected it configures the unit to record ohmic values, voltage and temperature

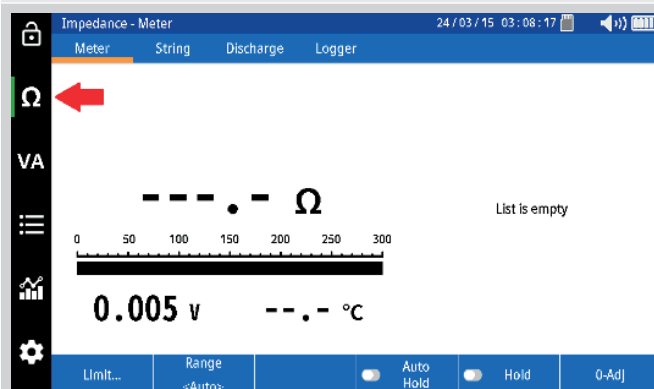


When the Ohm (Ω) ICON is selected the BITE5 Advanced will use the Duplex input.



Connect the Duplex Kelvin Clips to the BITE5. This measurement can be made with the Duplex probes, however the Kelvin Clips may be easier.



Select "String"

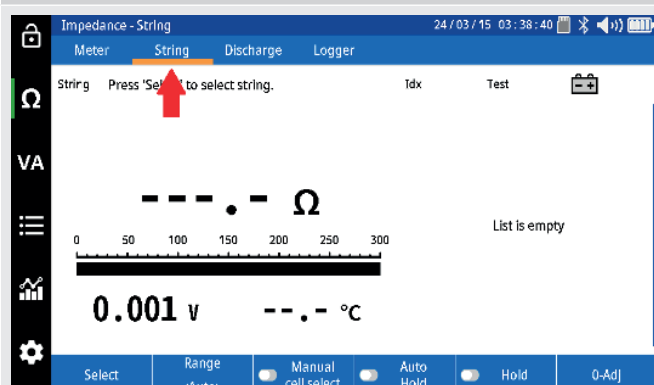


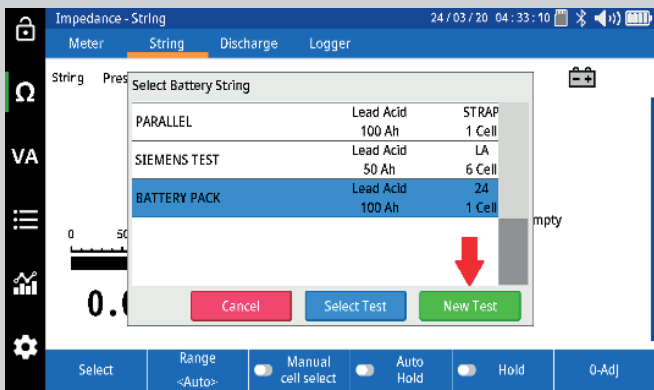
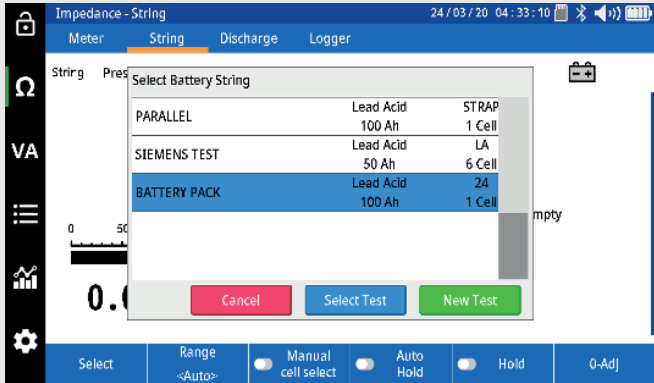
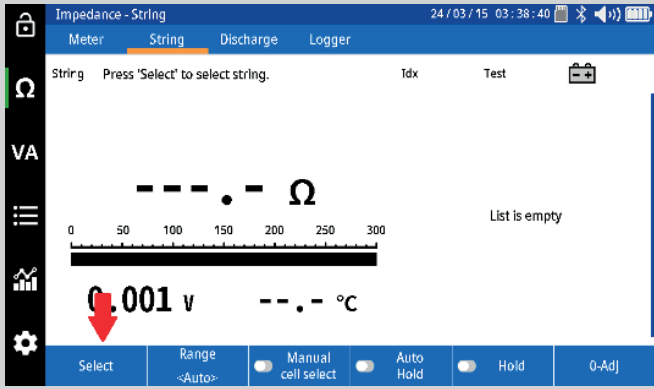
Performing an impedance test on a battery pack.

Select "Select".

Select desired battery pack / string. or scan the RFID tag, if used.

Select "New Test" to start a new test on the selected string.

Place the kelvin clips across the battery pack or the battery string. The BITE5 Advanced will automatically take the measurement and save it to memory.



13. Measuring battery (DC) float and (AC) ripple voltages and currents

The BITE5 ADVANCED can be used to measure and record any of the following,


1. DC Voltage (Up to 1000Vdc)
2. AC Voltage (Up to 600Vac)
3. DC Current from 1A to 1000A.
4. AC Current 1A to 100A

13.1 VA Meter Mode

In the meter mode the BITE5 will take the above measurements but will not save the data to a programmed string configuration.

Select the VA ICON.

When the VA ICON is selected it configures the unit to record voltage and current.

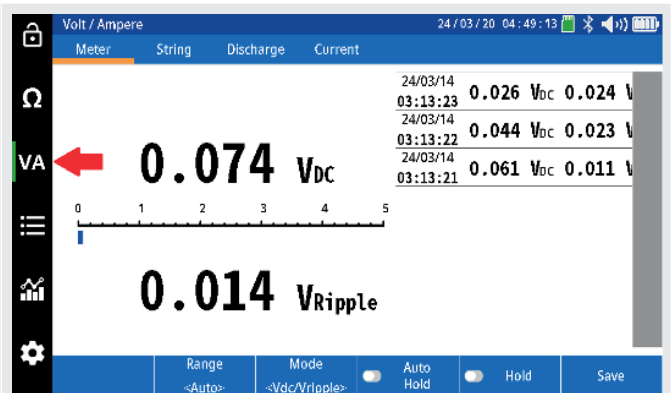


When the VA ICON is selected the BITE5 Advanced will use the banana jack inputs and the current clamp input.



Connect the banana leads and or the CT to the BITE5.



Select "Meter"

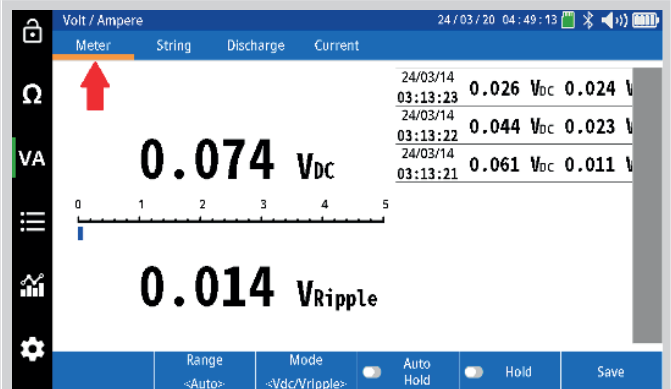

Measuring battery (DC) float and (AC) ripple voltages and currents

Select "Mode"

Select the type of measurement.

Select "Range"

Set the desired range.





Start testing by place the banana leads or the CT on what is to be measured.

For measuring AC (ripple) current the AC CT is required.

For measuring DC (float) current the AC/DC CT is required.


The BITE5 ADVANCED will beep when the measurement is complete.

Press "Hold" to freeze the value on the screen.

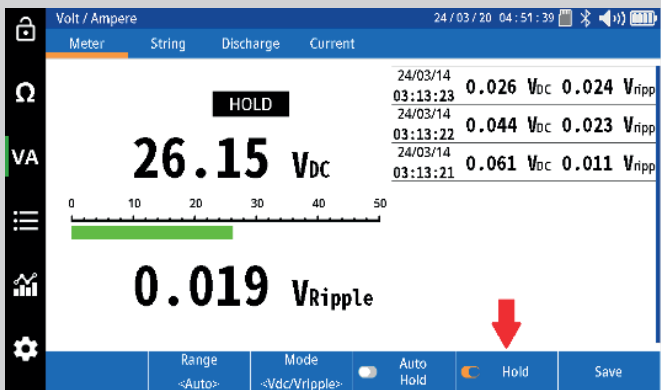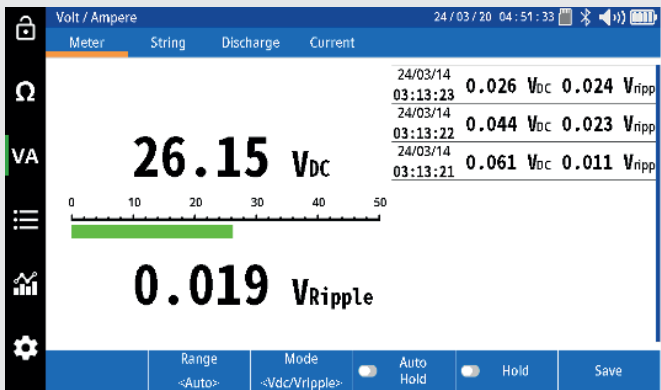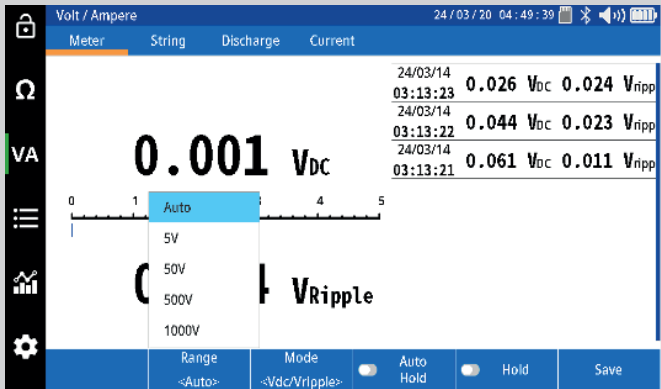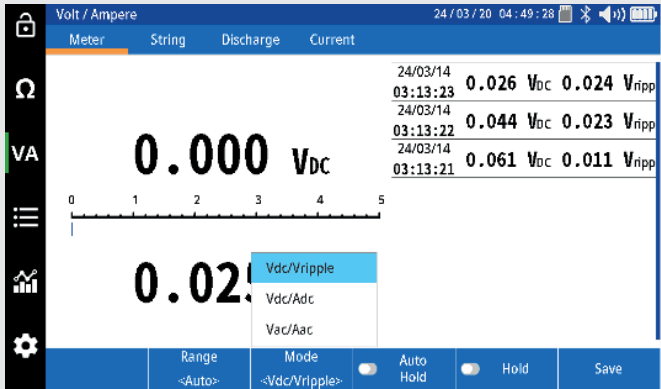

Measuring battery (DC) float and (AC) ripple voltages and currents

Press "Save" to save the measured value.

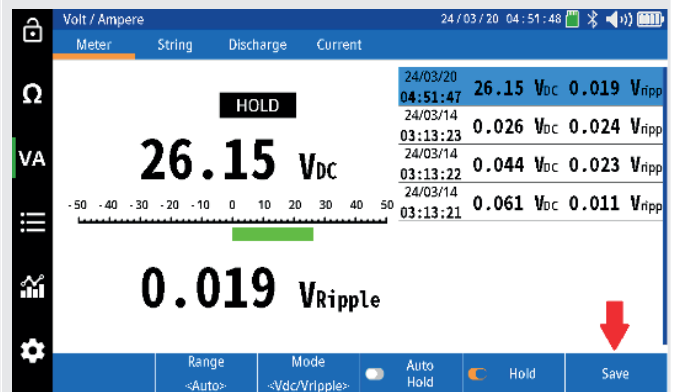

Select "Auto Hold" and the BITE5 ADVANCED will automatically save any measurement with a date and time stamp.




Adding a Ripple (AC) Voltage, Ripple (AC) Current or a Float (DC) Current value to a string.

14. Adding a Ripple (AC) Voltage, Ripple (AC) Current or a Float (DC) Current value to a string.


In this mode the BITE5 ADVANCED will allow take a ripple or float measurement and add that measurement to the selected string.

Select the VA ICON.


When the VA ICON is selected it configures the unit to record voltage and current.

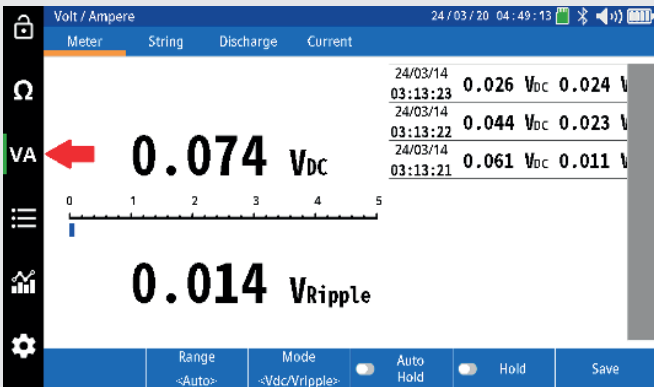


When the VA ICON is selected the BITE5 Advanced will use the banana jack inputs and the current clamp input.




Connect the banana leads and or the CT to the BITE5



Select "Current"

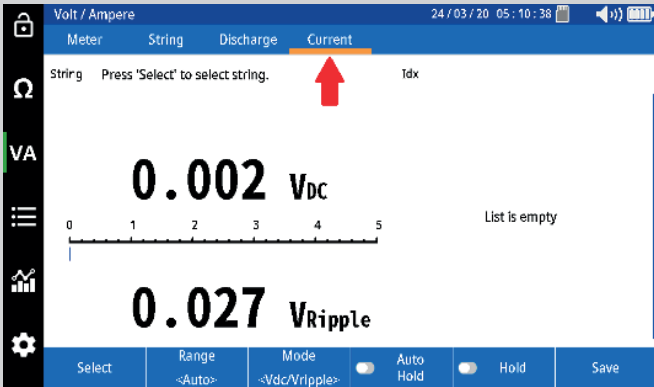


Select "Select".

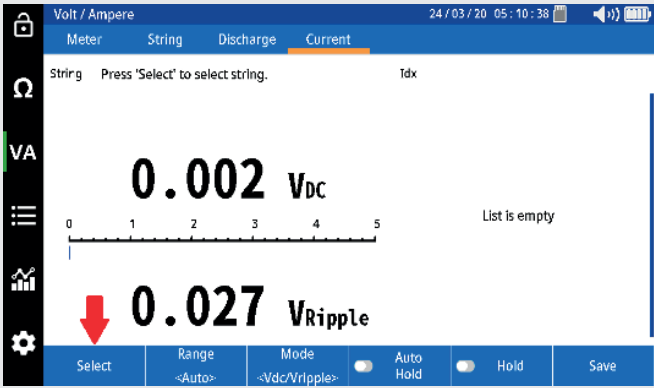


Adding a Ripple (AC) Voltage, Ripple (AC) Current or a Float (DC) Current value to a string.

Select desired string. or scan the RFID tag, if used.

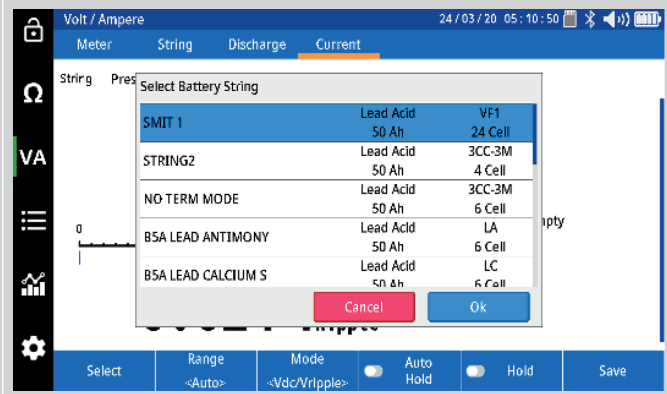


Select "Mode"

Select the type of measurement.

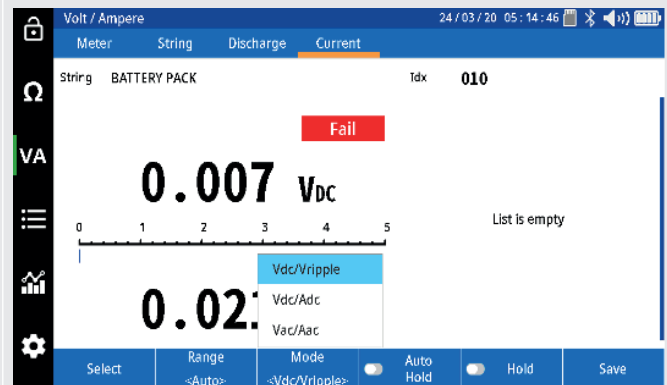


Select "Range"

Set the desired range.

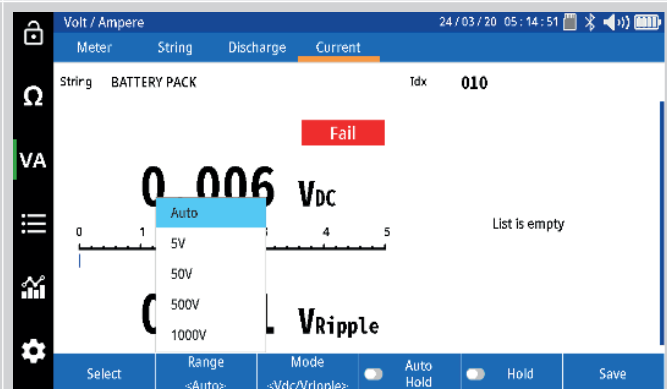

Select "Auto Hold".

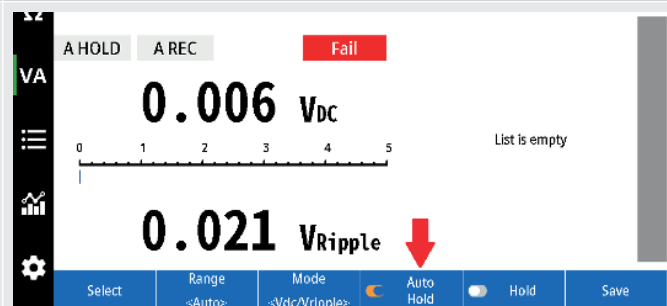


Start testing by place the banana leads or the CT on what is to be measured.

For measuring AC (ripple) current the AC CT is required.

For measuring DC (float) current the AC/DC CT is required.

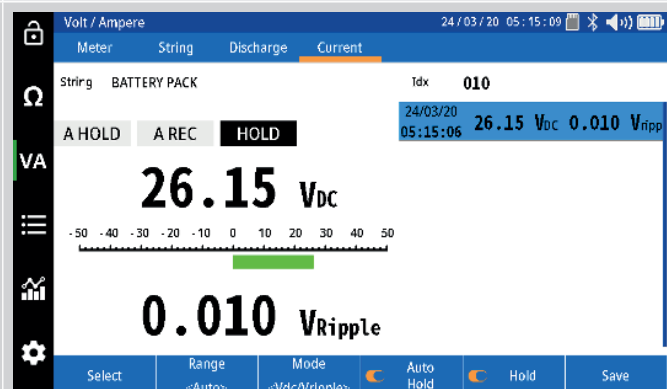




The BITE5 ADVANCED will beep when the measurement is complete.



Measuring voltages only on a battery string.


15. Measuring voltages only on a battery string.

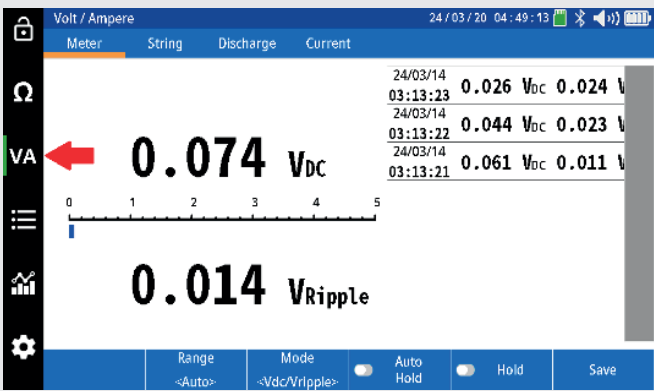The BITE5 ADVANCED can be used to measure and record voltage only on a battery string. The recorded data will be saved to the selected string configuration.

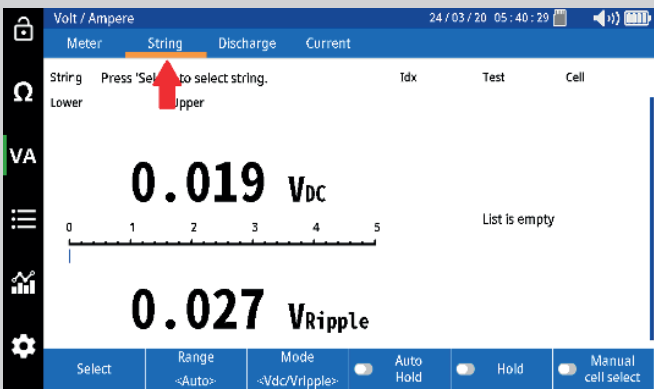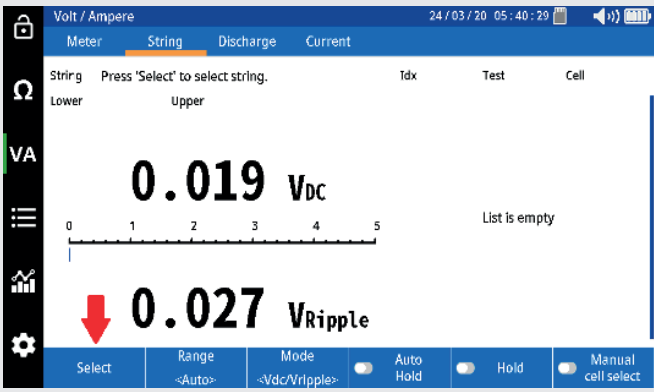
<p>Select the VA ICON.</p> <p>When the VA ICON is selected it configures the unit to record voltage and current.</p>	
<p>When the VA ICON is selected the BITE5 Advanced will use the banana jack inputs and the current clamp input. (if desired)</p>	
<p>Connect the banana leads and or the CT to the BITE5</p>	
<p>Select "String"</p>	
<p>Select "Select"</p>	

Measuring voltages only on a battery string.


Select desired string. or scan the RFID tag, if used.

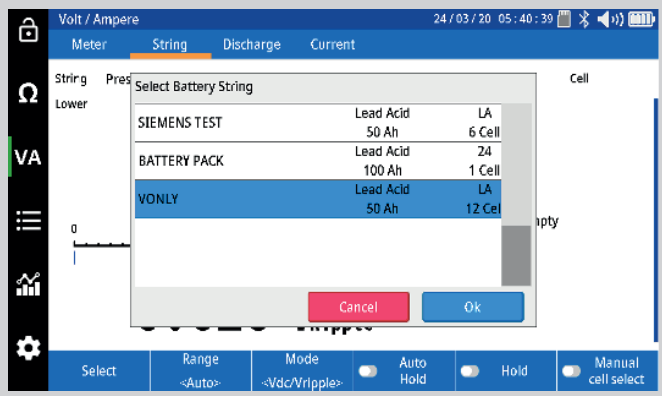


Select "New Test" to start a new test on the selected string.

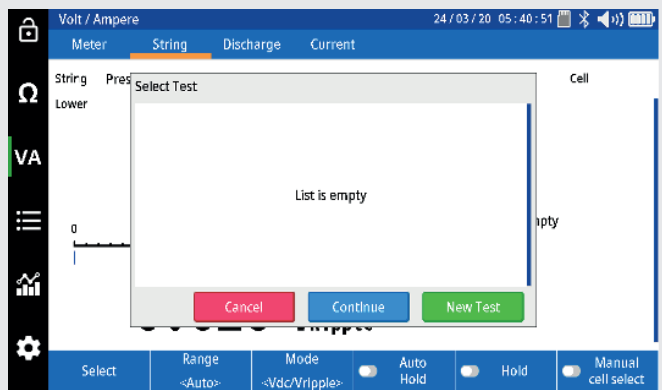

Select "Mode"
Select the type of measurement.

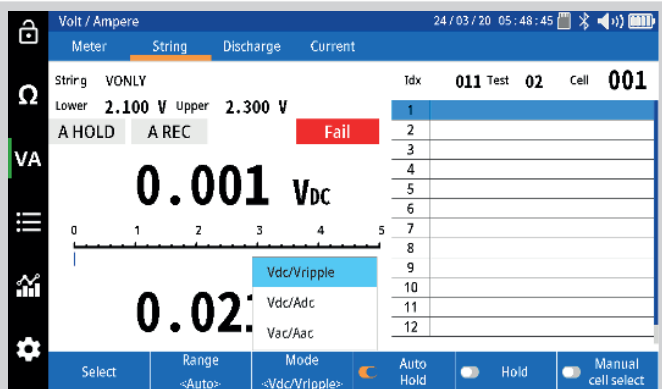

Select "Range"
Set the desired range.

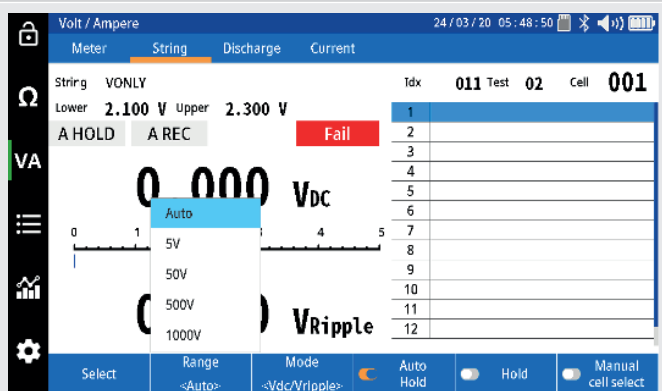

Measuring voltages only on a battery string.

Start testing by place the banana probes across the first cell. The BITE5 ADVANCED will automatically save the value.

Proceed to the next cell. The BITE5 ADVANCED will automatically save and number the measured values.

Continue through the string until the last cell is measured. At this point the BITE5 will display a summary of the test.

The screenshots show the BITE5 ADVANCED device interface for measuring voltages on a battery string. The interface includes a top menu bar with 'Volt / Ampere', 'Meter', 'String', 'Discharge', and 'Current'. The 'String' menu is selected. The device displays the string name 'VONLY', the test ID '011', the test number '01', and the cell number '002'. The lower voltage range is set to '2.100 V' and the upper range to '2.300 V'. The device shows the measured voltage '2.247 VDC' and the ripple voltage '0.021 VRipple'. The device also displays a table of measured values for each cell in the string.

Cell	Vdc	Vripple	Time
1	2.247 Vdc	0.021 Vripple	05:42:06
2	2.252 Vdc	0.026 Vripple	05:42:13
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			

The third screenshot shows the final summary screen for Cell 012. The device displays the measured voltage '2.2' and the ripple voltage '0.028 VRipple'. A summary window is open, showing the following data:

Parameter	Value	Cell
MIN	2.240 V	Cell 7
MAX	2.264 V	Cell 4
AVG	2.252 V	
Total	27.02 V	

The device also displays a table of measured values for each cell in the string.

Cell	Vdc	Vripple	Time
1	2.247 Vdc	0.021 Vripple	05:42:06
2	2.252 Vdc	0.026 Vripple	05:42:13
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			


16. Performing a discharge test

The BITE5 ADVANCED can be used in conjunction with the Megger Torkel discharge tester. Program the Torkel for the desired discharge test. Place the Torkel across the battery string and start the discharge test. The BITE5 ADVANCED can then be used to take manual measurements of the cell voltage throughout the discharge process.

In this mode, the unit will record the DC voltage of each cell as well as the DC current through the string if the optional Hall Effect CT is used.

Select the VA ICON.

When the VA ICON is selected it configures the unit to record voltage and current.

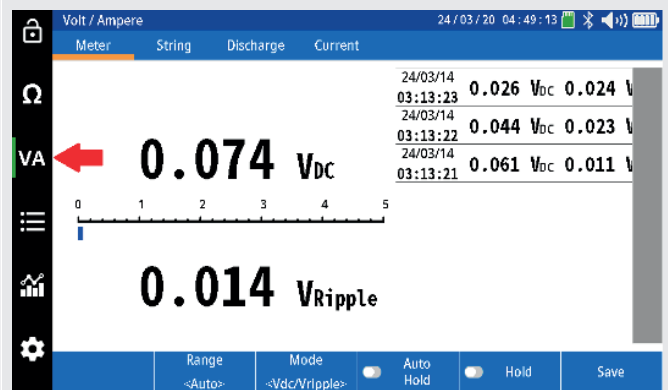

When the VA ICON is selected the BITE5 Advanced will use the banana jack inputs and the current clamp input. (if desired)




Connect the voltage leads to voltage inputs of the BITE5 ADVANCED.

If measuring current, then plug the CT into the BITE5 ADVANCED CT input.




Select "Discharge."

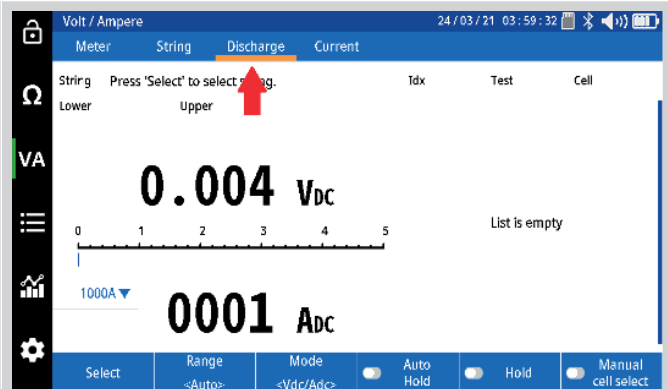


Performing a discharge test


Select "Select"

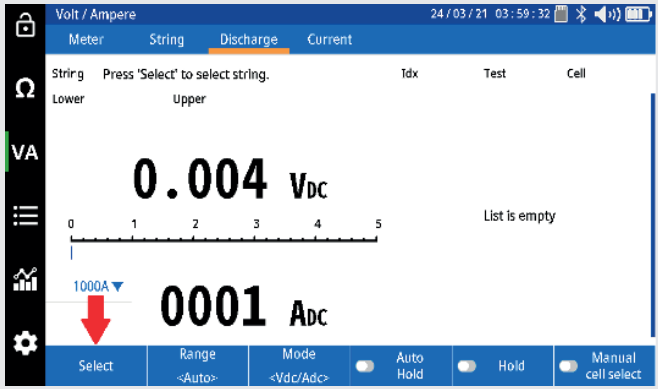


Select desired string. or scan the RFID tag, if used.

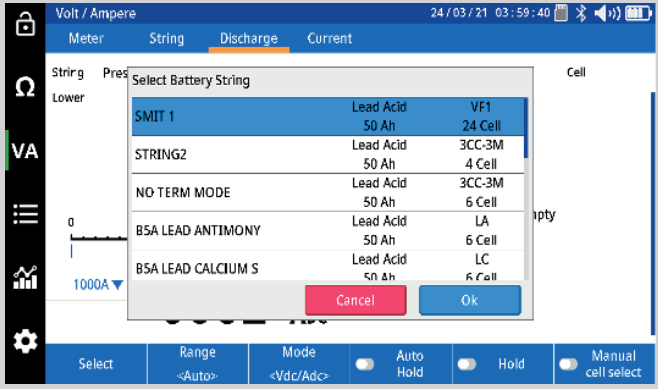

Select "New Test" to start a new test on the selected string.

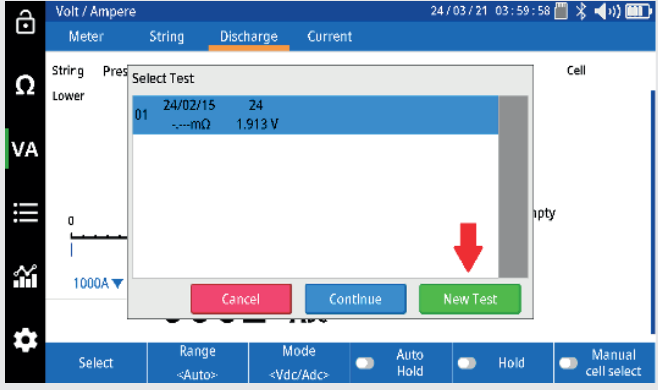


If using the CT, set the correct range on the BITE5 ADVANCED.

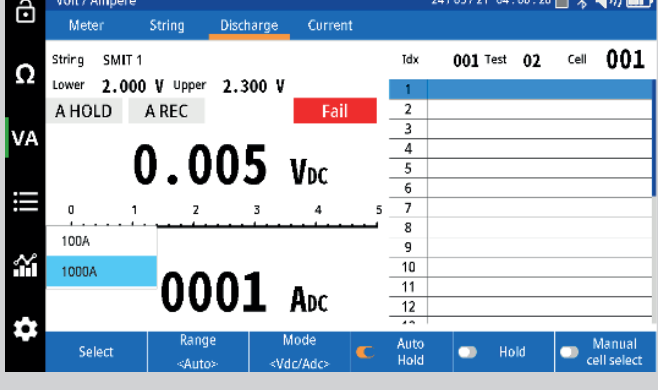


Start the discharge on the load bank.


Take measurement of the first cell. The measurements will be saved with a date and time stamp.

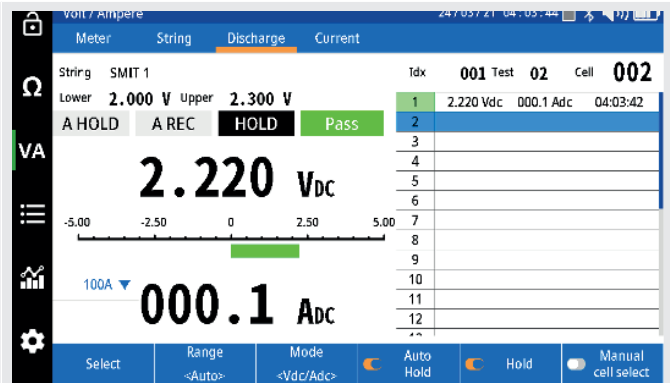


Take measurement of each following cell. Each measurement shall be saved in sequence with a cell number, date, and time stamp.

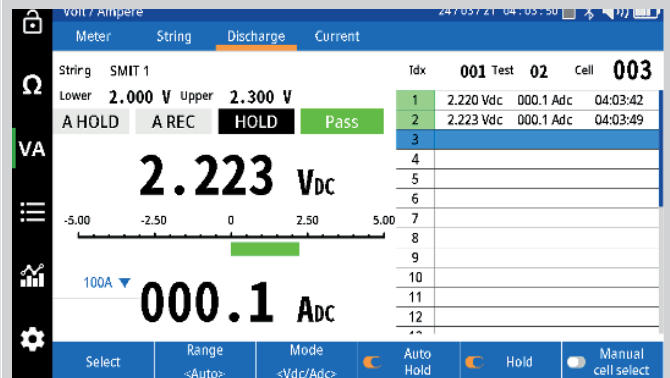

Continue through the string until the last cell is measured. At this point the BITE5 will display a summary of this pass through the string.

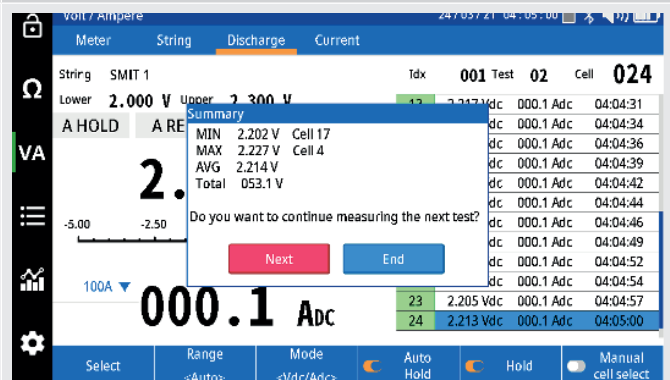

The unit will then prompt the user to either end the test or select "next" to perform the next pass through the string. Press when ready to perform another pass through the string. Press END to end the test.

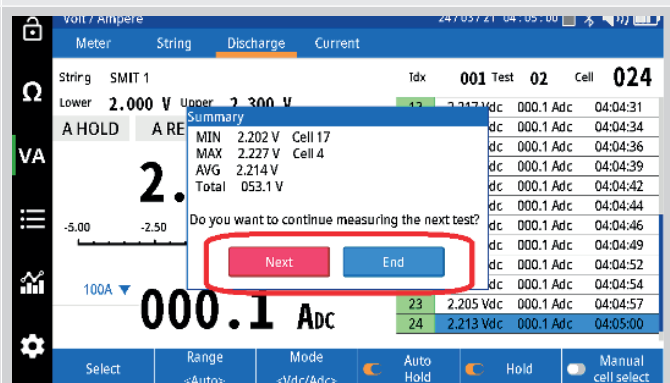

17. Performing an impedance and discharge test (special testing)


The BITE5 ADVANCED can measure the voltage and temperature and impedance throughout a discharge test. Performing this test will allow the trending of the cell impedance throughout the discharge process. This will allow the operator to establish an ohmic value that correlates with the discharged battery. This value can then be set as the ohmic alarm limit for the string.

Program the Torkel for the desired discharge test. Place the Torkel across the battery string and start the discharge test. The BITE5 ADVANCED can then be used to take manual measurements of the cell voltage throughout the discharge process.

In this mode, the BITE5 ADVANCED will record the DC voltage of each cell as cell impedance and cell temperature.

Select the Ohm (Ω) ICON.

When the Ohm (Ω) ICON is selected it configures the unit to record ohmic values, voltage and temperature

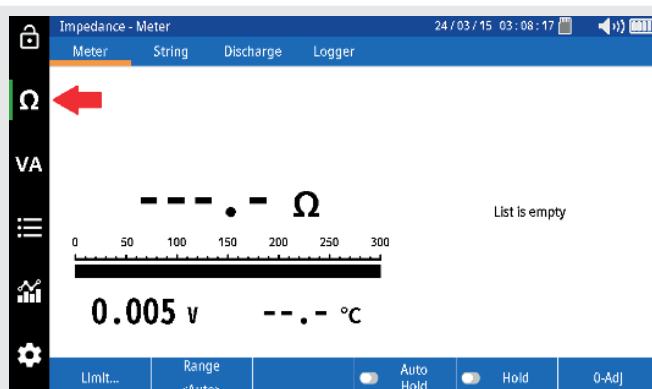


When the Ohm (Ω) ICON is selected the BITE5 Advanced will use the Duplex input.



Connect the duplex probes to the BITE5 ADVANCED. to voltage inputs of the BITE5 ADVANCED.




Select "Discharge."

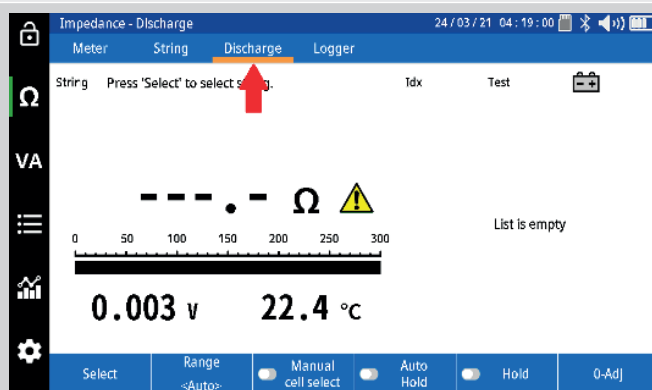


Performing an impedance and discharge test (special testing)


Select "Select"

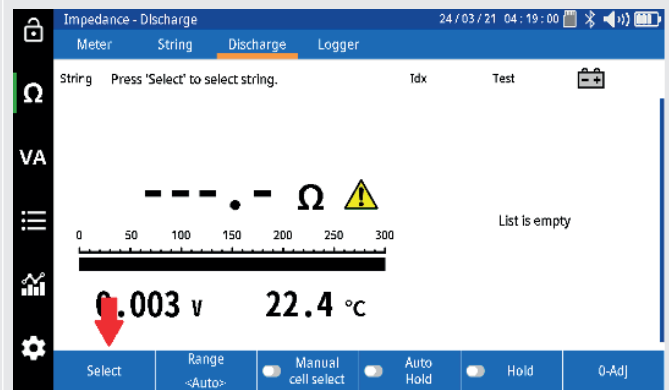


Select desired string. or scan the RFID tag, if used.

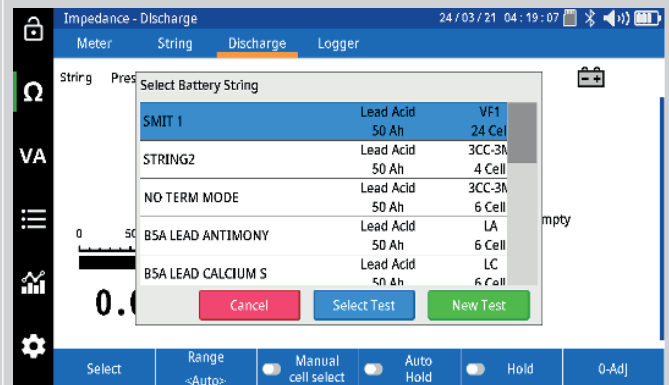

Select "New Test" to start a new test on the selected string.

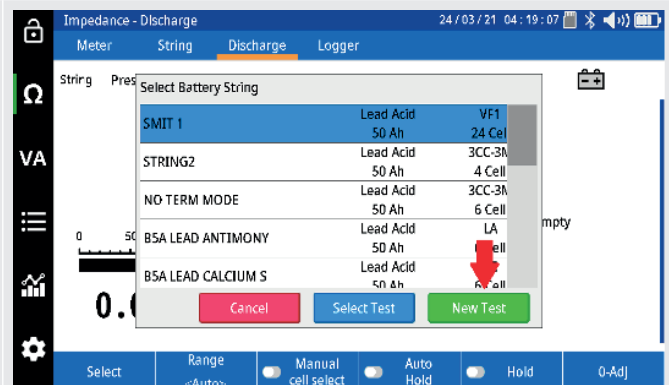


Start discharge test on load box. Take measurement of the first cell. The measurements will be saved with a date and time stamp.

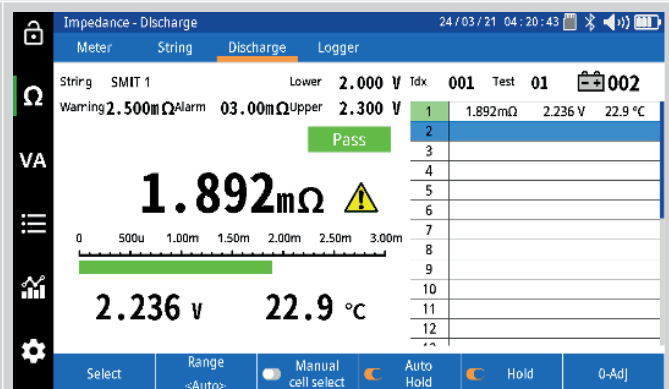


Performing an impedance and discharge test (special testing)


Take measurement of each following cell. Each measurement shall be saved in sequence with a cell number, date and time stamp.

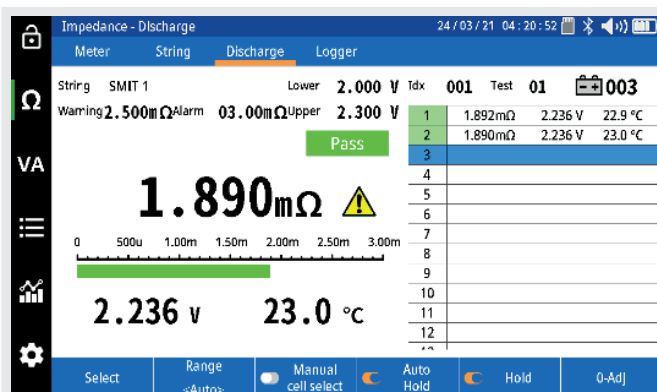

Continue through the string until the last cell is measured. At this point the BITE5 will display a summary of this pass through the string.

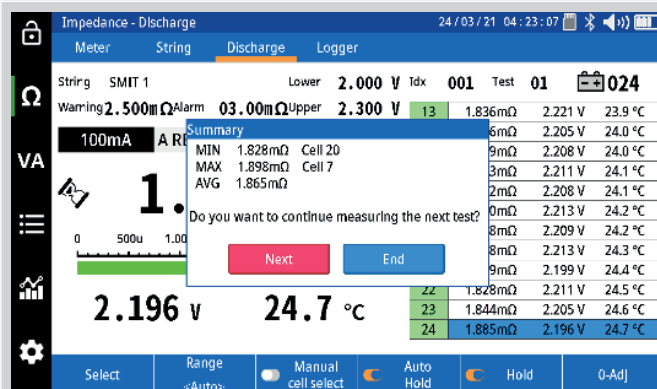

The unit will then prompt the user to either end the test or select "next" to perform the next pass through the string. Press when ready to perform another pass through the string. Press END to end the test.

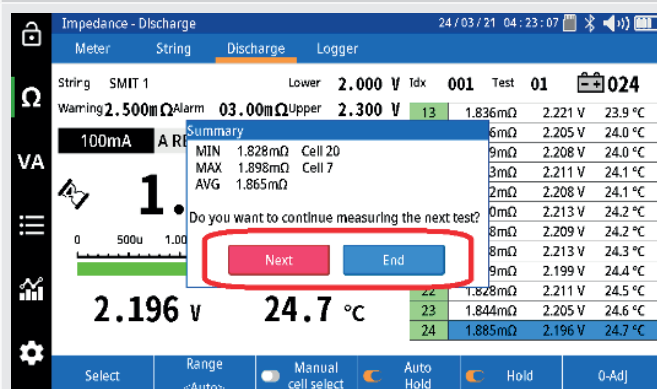

NOTE : This value will be associated with the internal impedance changes associated with sulfated plates. It may not correlate with other causes of cell aging such as plate corrosion.





NOTE : In this mode the BITE5 ADVANCED will also measure the cell temperature during the discharge. The temperature will be taken off the negative plate. This will be valid only for sealed batteries. Flooded cells the temperature should be taken from the electrolyte.

18. Trending recorded data

The BITE5 ADVANCED will allow trending of all recorded string data. The BITE5 ADVANCED will trend string data; the value of each cell during a single test. The BITE5 ADVANCED can also trend the all the historical test data for each individual cell.

18.1 Trending String Test Data

Trending string data will trend all the cells on the X axis for each individual test.

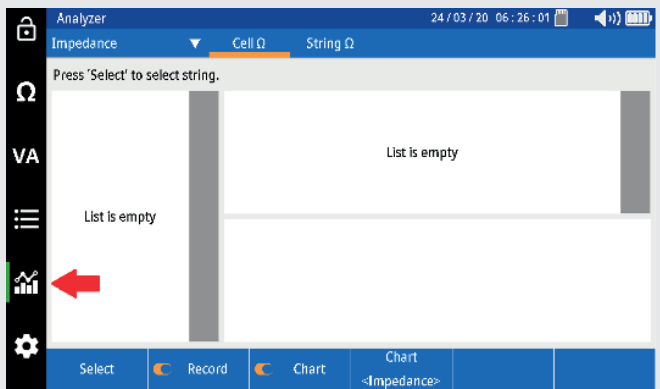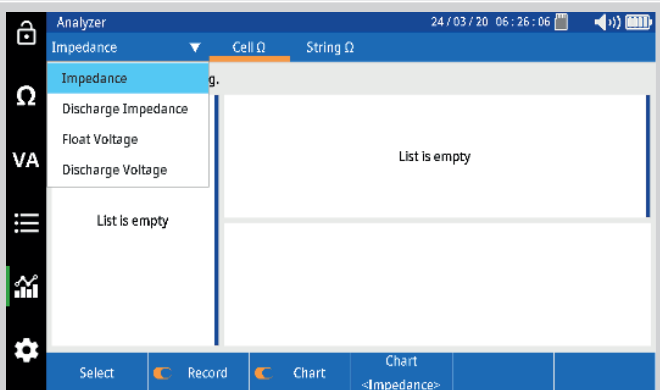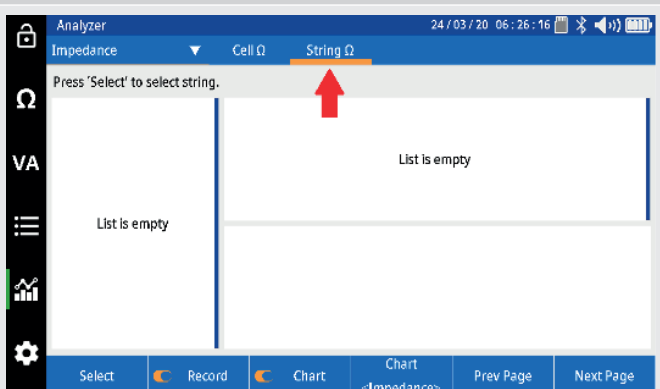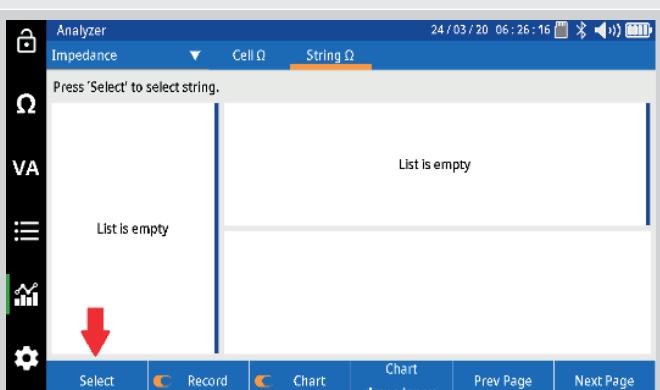On the BITE5 ADVANCED select the chart ICON.	
On the drop down menu select the desired tested trend to view. Impedance: Trends data for impedance tests. Discharge Impedance: Trends data for impedance data recorded during a discharge test. Float Voltage: Trends data for a voltage only string test. Discharge Voltage: Trends voltage data that was recorded during each pass through a discharge test.	
Select "String".	
Select "Select".	

Trending recorded data

Select the desired battery string to view. Then press OK.

Select desired test in the left column.

Select "Chart" to change the parameter being trended.

Analyzer
Impedance

Cell Ω

String Ω

Press "Select"

Select Battery String

SMIT 1	Lead Acid	VF1
	50 Ah	24 Cel
STRING2	Lead Acid	3CC-3M
	50 Ah	4 Cell
NO TERM MODE	Lead Acid	3CC-3M
	50 Ah	6 Cell
B5A LEAD ANTIMONY	Lead Acid	LA
	50 Ah	6 Cell
B5A LEAD CALCIUM S	Lead Acid	LC
	50 Ah	6 Cell

CancelOk

Select

Record

Chart

Chart

Impedance

Prev Page

Next Page

Analyzer
Impedance

Cell Ω

String Ω

002 STRING2

08	24/03/15	4	1	1.970mΩ	2.252 V	---	°C	24/03/15 04:16:21
	1.939mΩ	2.259 V						
07	24/03/15	4	2	1.942mΩ	2.257 V	---	°C	24/03/15 04:16:39
	1.947mΩ	2.258 V						
	24/03/08	4	3	1.936mΩ	2.256 V	---	°C	24/03/15 04:16:59
06	24/03/08	4	4	1.909mΩ	2.270 V	---	°C	24/03/15 04:17:18
	1.986mΩ	2.253 V						
05	24/03/08	4						
	1.985mΩ	2.253 V						
04	24/03/08	4						
	1.978mΩ	2.253 V						
03	24/03/08	4						
	1.978mΩ	2.253 V						
02	24/03/08	4						

2.500m
2.000m
1.500m
1.000m

5 10 15 20 25 30 35 40 45 50 55 60

SelectRecordChartChartImpedancePrev PageNext Page

Analyzer
Impedance

Cell Ω

String Ω

002 STRING2

08	24/03/15	4	1	1.970mΩ	2.252 V	---	°C	24/03/15 04:16:21
	1.939mΩ	2.259 V						
07	24/03/15	4	2	1.942mΩ	2.257 V	---	°C	24/03/15 04:16:39
	1.947mΩ	2.258 V						
	24/03/08	4	3	1.936mΩ	2.256 V	---	°C	24/03/15 04:16:59
06	24/03/08	4	4	1.909mΩ	2.270 V	---	°C	24/03/15 04:17:18
	1.986mΩ	2.253 V						
05	24/03/08	4						
	1.985mΩ	2.253 V						
04	24/03/08	4						
	1.978mΩ	2.253 V						
03	24/03/08	4						
	1.978mΩ	2.253 V						
02	24/03/08	4						

2.500m
2.000m
1.500m
1.000m




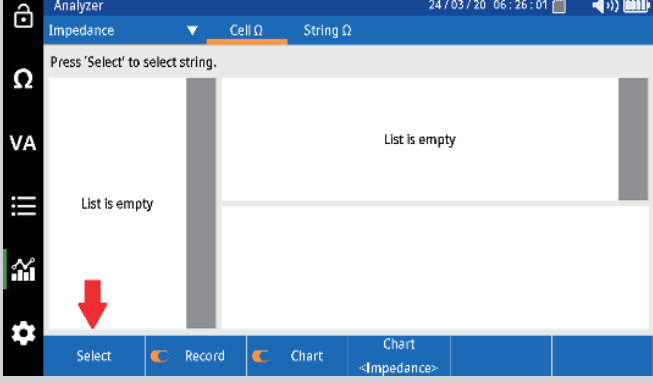
5 10 15 20 25 30 35 40 45 50 55 60

Impedance
Voltage
Temperature
Strap

SelectRecordChartChartImpedancePrev PageNext Page

19. Trending Cell Test Data

Trending cell data will trend all the measured historical values on the X axis for each cell in the string..
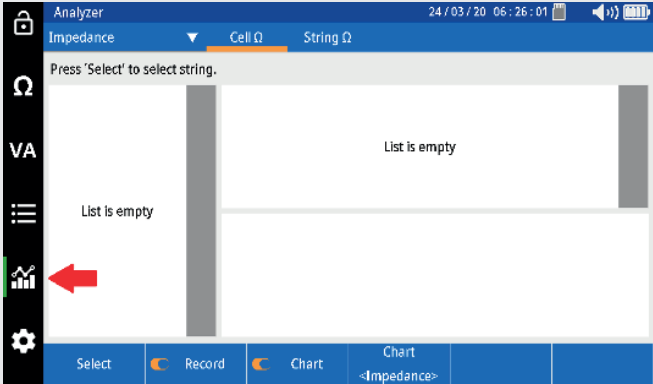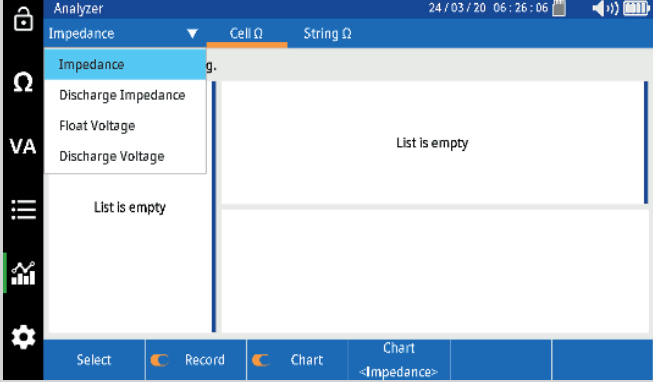
<p>On the BITE5 ADVANCED select the chart ICON.</p>	 The screenshot shows the BITE5 ADVANCED software interface. The top bar indicates 'Analyzer' and 'Impedance' is selected. The sidebar on the left contains icons for various functions: a lock, a resistor symbol (Ω), a voltage symbol (VA), a list icon, a chart icon (highlighted with a red arrow), and a gear icon. The main area displays 'Press 'Select' to select string.' and 'List is empty'. The bottom bar has buttons for 'Select', 'Record', 'Chart', and 'Chart <Impedance>'.
<p>On the drop-down menu select the desired tested trend to view.</p> <p>Impedance: Trends data for impedance tests.</p> <p>Discharge Impedance: Trends data for impedance data recorded during a discharge test.</p> <p>Float Voltage: Trends data for a voltage only string test.</p> <p>Discharge Voltage: Trends voltage data that was recorded during each pass through a discharge test.</p>	 The screenshot shows the BITE5 ADVANCED software interface with the 'Impedance' drop-down menu open. The menu options are 'Impedance', 'Discharge Impedance', 'Float Voltage', and 'Discharge Voltage'. 'Impedance' is selected and highlighted. The main area displays 'Press 'Select' to select string.' and 'List is empty'. The bottom bar has buttons for 'Select', 'Record', 'Chart', and 'Chart <Impedance>'.
<p>Select "Cell"</p>	 The screenshot shows the BITE5 ADVANCED software interface with the 'Cell' option selected in the drop-down menu. The main area displays 'Press 'Select' to select string.' and 'List is empty'. The bottom bar has buttons for 'Select', 'Record', 'Chart', and 'Chart <Impedance>'.
<p>Select "Select".</p>	 The screenshot shows the BITE5 ADVANCED software interface with the 'Select' button highlighted in the bottom bar with a red arrow. The main area displays 'Press 'Select' to select string.' and 'List is empty'. The bottom bar has buttons for 'Select', 'Record', 'Chart', and 'Chart <Impedance>'.

Trending Cell Test Data

Select the desired battery string to view. Then press OK.

Select desired cell in the left column.

Select "Chart" to change the parameter being trended.

Analyzer

Impedance

Cell Ω

String Ω

24 / 03 / 20 06 : 28 : 45

Press "Select"

Select Battery String

SMIT 1

Lead Acid

VF1

50 Ah

24 Cell

STRING2

Lead Acid

3CC-3M

50 Ah

4 Cell

NO TERM MODE

Lead Acid

3CC-3M

50 Ah

6 Cell

B5A LEAD ANTIMONY

Lead Acid

LA

50 Ah

6 Cell

B5A LEAD CALCIUM S

Lead Acid

LC

50 Ah

6 Cell

Cancel

Ok

Select

Record

Chart

Chart

Impedance

Analyzer

Impedance

Cell Ω

String Ω

24 / 03 / 20 06 : 28 : 52

002 STRING2

001

8

1.970mΩ

2.252 V

...

°C

24/03/15 04:16:21

002

7

1.961mΩ

2.252 V

...

°C

24/03/15 03:40:49

003

6

1.981mΩ

2.244 V

30.4 °C

24/03/08 04:31:51

004

5

1.977mΩ

2.244 V

30.0 °C

24/03/08 04:30:38

4

1.971mΩ

2.244 V

29.5 °C

24/03/08 04:28:46

3

1.970mΩ

2.244 V

29.9 °C

24/03/08 04:27:32

2.500m

2.000m

1.500m

1.000m

5

10

15

20

25

30

35

40

45

50

55

60

Select

Record

Chart

Chart

Impedance

Analyzer

Impedance

Cell Ω

String Ω

24 / 03 / 20 06 : 28 : 57

002 STRING2

001

8

1.970mΩ

2.252 V

...

°C

24/03/15 04:16:21

002

7

1.961mΩ

2.252 V

...

°C

24/03/15 03:40:49

003

6

1.981mΩ

2.244 V

30.4 °C

24/03/08 04:31:51

004

5

1.977mΩ

2.244 V

30.0 °C

24/03/08 04:30:38

4

1.971mΩ

2.244 V

29.5 °C

24/03/08 04:28:46

3

1.970mΩ

2.244 V

29.9 °C

24/03/08 04:27:32

2.500m

2.000m

1.500m

1.000m

5

10

15

20

25

30

35

40

45

50

55

60

Select

Record

Chart

Chart

Impedance

Impedance

Voltage

Temperature

Strap

20. Viewing a record

The BITE5 ADVANCED allows the viewing of various recorded values or records. These records include the following:

Meter Ω - These will be the individual recorded impedance measurements that were made with the BITE5 ADVANCED. These recorded values are not associated with any battery strings.

String Ω - These will be the recorded values of individual impedance tests made on strings.

D Ω String - These will be the recorded values of individual impedance measurements made during a discharge test on a string.

Meter VA - These will be the individual recorded voltage and current measurements that were made with the BITE5 ADVANCED. These recorded value are not associated with any battery strings.


String VA - These will be the recorded values of voltage and current measurements made on strings.

D VA String - These will be the recorded values of the voltage and current measurements made during a discharge test on a string.


Current – Will display current measurements made on a string.

20.1 Viewing records

On the BITE5 ADVANCED select the record ICON.

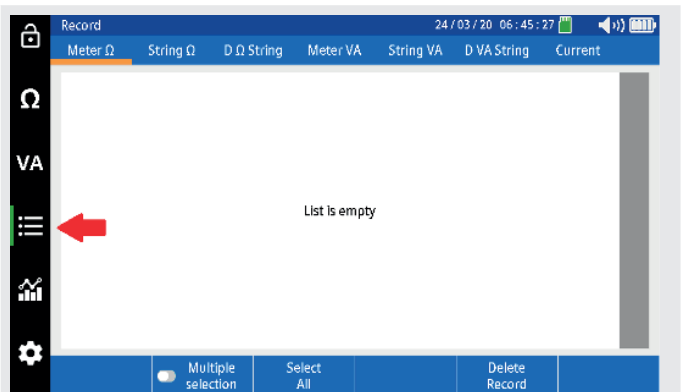

Select desired type of data to view. (See above for data types.)

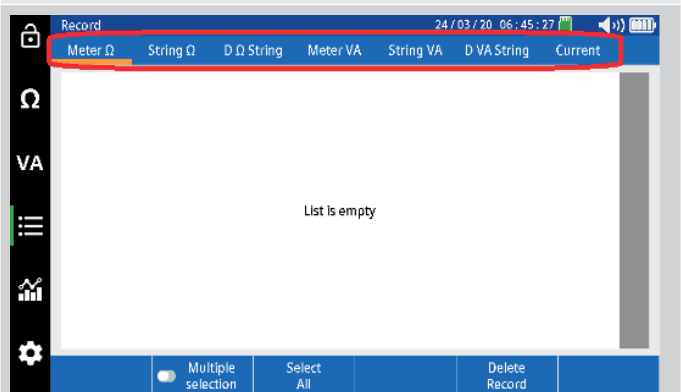

Viewing a record

Select the desired string.

NOTE: If “Meter Ω” or “Meter VA” was selected no string needs to be selected. Recorded Meter data is not associated with a string. Therefore, all recorded meter data is displayed.

Press “Select”.

Select desired test in the left column.

Record 24 / 03 / 20 06:45:38

Meter Ω String Ω D Ω String Meter VA String VA D VA String Current

Select string.

SMIT 1	Lead Acid	VF1	2.200/ 2.000/ 2.300 V
	50 Ah	24 Cell	2.000/ 2.500/ 03.00mΩ
STRING2	Lead Acid	3CC-3M	2.200/ 2.000/ 2.300 V
	50 Ah	4 Cell	1.900/ 2.300/ 2.500mΩ
NO TERM MODE	Lead Acid	3CC-3M	2.200/ 2.000/ 2.300 V
	50 Ah	6 Cell	1.900/ 2.200/ 2.500mΩ
B5A LEAD ANTIMONY	Lead Acid	LA	2.200/ 2.000/ 2.300 V
	50 Ah	6 Cell	1.900/ 2.500/ 03.00mΩ
B5A LEAD CALCIUM S	Lead Acid	LC	2.200/ 2.000/ 2.300 V
	50 Ah	6 Cell	10.00/ 20.00/ 030.0mΩ
B5A LEAD CALCIUM P	Lead Acid	LC	2.200/ 2.000/ 2.300 V
	50 Ah	6 Cell	10.00/ 20.00/ 030.0mΩ
B5A NICKD	NI-Cd	NICD	1.300/ 1.000/ 1.500 V

Select Add... Copy... Edit... Delete String

Record 24 / 03 / 20 06:45:38

Meter Ω String Ω D Ω String Meter VA String VA D VA String Current

Select string.

SMIT 1	Lead Acid	VF1	2.200/ 2.000/ 2.300 V
	50 Ah	24 Cell	2.000/ 2.500/ 03.00mΩ
STRING2	Lead Acid	3CC-3M	2.200/ 2.000/ 2.300 V
	50 Ah	4 Cell	1.900/ 2.300/ 2.500mΩ
NO TERM MODE	Lead Acid	3CC-3M	2.200/ 2.000/ 2.300 V
	50 Ah	6 Cell	1.900/ 2.200/ 2.500mΩ
B5A LEAD ANTIMONY	Lead Acid	LA	2.200/ 2.000/ 2.300 V
	50 Ah	6 Cell	1.900/ 2.500/ 03.00mΩ
B5A LEAD CALCIUM S	Lead Acid	LC	2.200/ 2.000/ 2.300 V
	50 Ah	6 Cell	10.00/ 20.00/ 030.0mΩ
B5A LEAD CALCIUM P	Lead Acid	LC	2.200/ 2.000/ 2.300 V
	50 Ah	6 Cell	10.00/ 20.00/ 030.0mΩ
B5A NICKD	NI-Cd	NICD	1.300/ 1.000/ 1.500 V

Select Add... Copy... Edit... Delete String

Record 24 / 03 / 20 06:45:50

Meter Ω String Ω D Ω String Meter VA String VA D VA String Current

003 STRING2

08	24/03/15	4	Min	1.909mΩ	Cell	4	24/03/15 04:17:18
	1.939mΩ	2.259 V	Max	1.970mΩ	Cell	1	24/03/15 04:16:21
07	24/03/15	4	Avg	1.939mΩ			
	1.947mΩ	2.258 V	0A	0.400mΩ	0.000 V	---	24/03/15 04:16:06
06	24/03/08	4	1	1.970mΩ	2.252 V	---	24/03/15 04:16:21
	1.986mΩ	2.253 V	1A	0.075mΩ	0.000 V	---	24/03/15 04:16:31
05	24/03/08	4	2	1.942mΩ	2.257 V	---	24/03/15 04:16:39
	1.985mΩ	2.253 V	2A	0.047mΩ	0.000 V	---	24/03/15 04:16:49
04	24/03/08	4	3	1.936mΩ	2.256 V	---	24/03/15 04:16:59
	1.978mΩ	2.253 V	3A	0.090mΩ	0.000 V	---	24/03/15 04:17:07
03	24/03/08	4	4	1.909mΩ	2.270 V	---	24/03/15 04:17:18
	1.978mΩ	2.253 V	4A	0.022mΩ	0.000 V	---	24/03/15 04:18:03
02	24/03/08	4					


Select Multiple selection Select All Delete Test Delete Record

21. Deleting recorded meter data


21.1 Deleting Meter Ω and Meter VA Ω data

This refers to recorded ohmic or voltage measurements that are not associated with a battery string.

On the BITE5 ADVANCED select the record ICON.

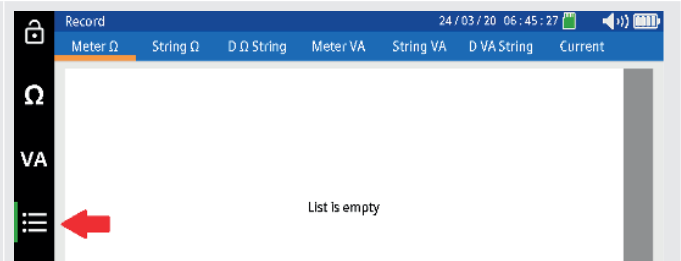


Select either Meter Ω or Meter VA.

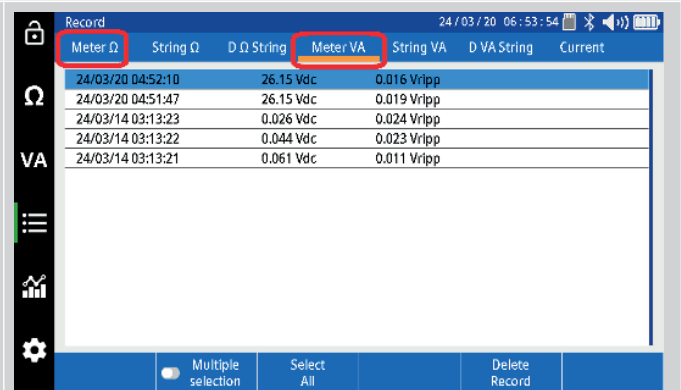


Select the desired measurement to delete.


NOTE: To deleted all measurements, select "Select All".

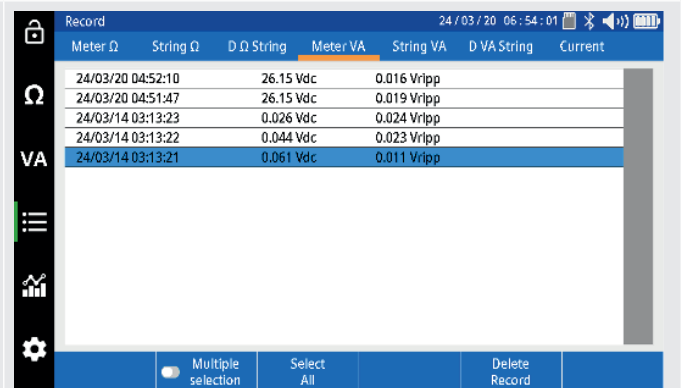

Press "Delete Record"

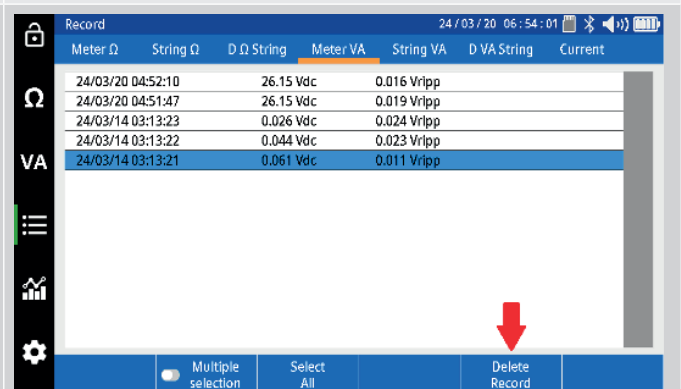

A window will open asking "Delete Record?". Select "Yes" to delete record.

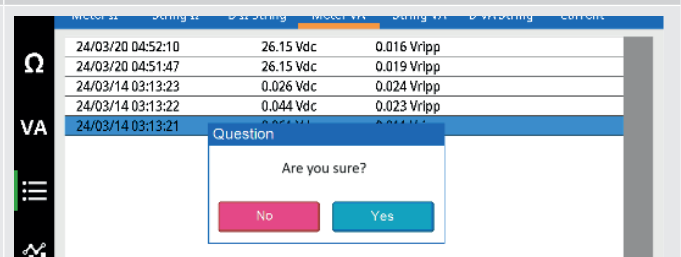


21.2 Deleting recorded string data

This refers to measurements that are saved to a configured string


This can include the following.

- String Ω** These will be the recorded values of individual impedance tests made on strings.
- D Ω String** These will be the recorded values of individual impedance measurements made during a discharge test on a string.
- String VA** These will be the recorded values of voltage and current measurements made on strings.
- D VA String** These will be the recorded values of the voltage and current measurements made during a discharge test on a string.
- Current** Will display current measurements made on a string.


On the BITE5 ADVANCED select the record ICON.

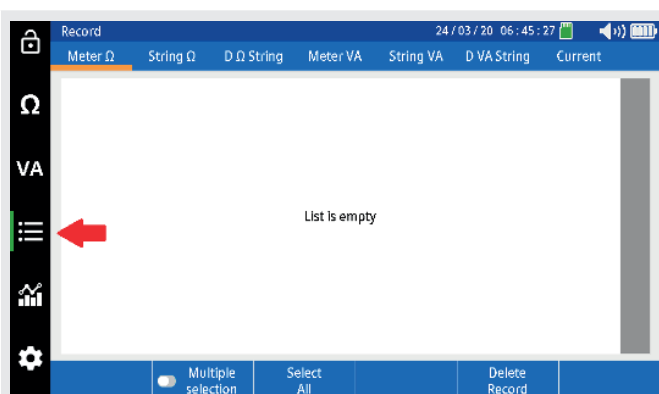


Select the desired type of data to delete. (See above).

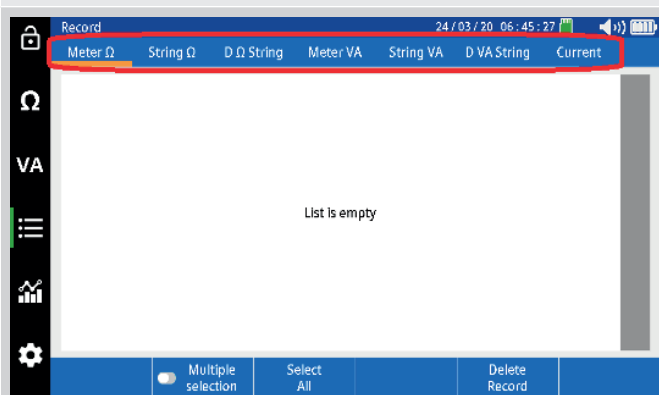

Select the desired string the data is to be deleted from.

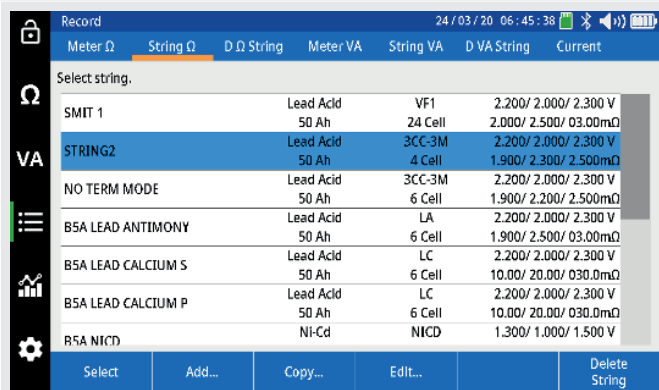


Press "Select"

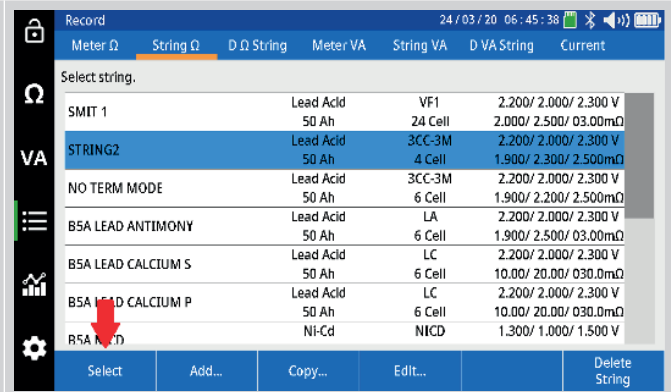


Select the desired test to delete


NOTE: To delete all tests select "Select All".

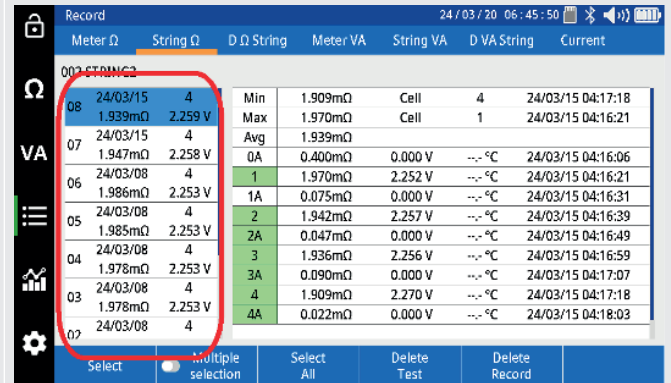

Press "Delete Test"

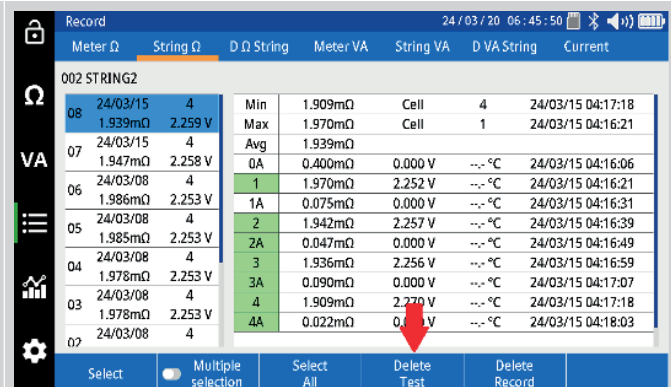


A window will open asking "Do you want to delete test?". Select "Yes" to delete the test.

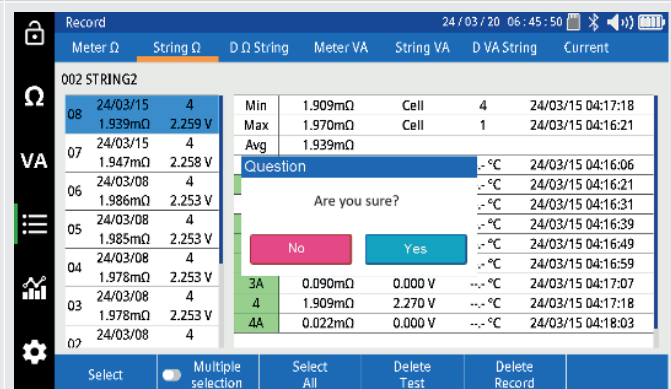


21.3 Deleting a string configuration

This allows deletion of an entire string configuration.


On the BITE5 ADVANCED select the record ICON.

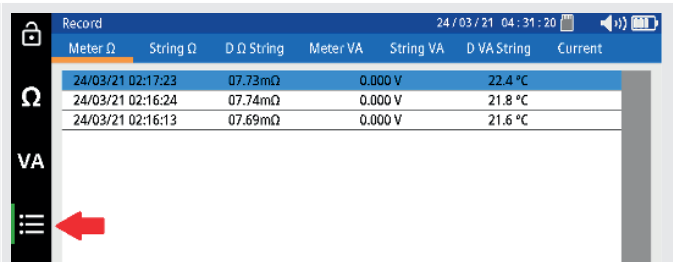


Select "String Ω "

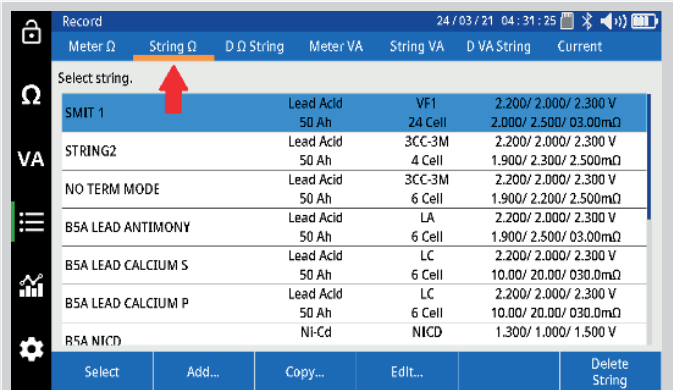


Select desired string to delete.

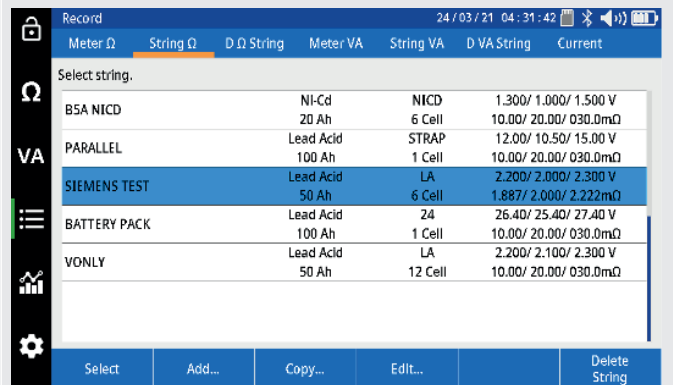

Select "Delete String"

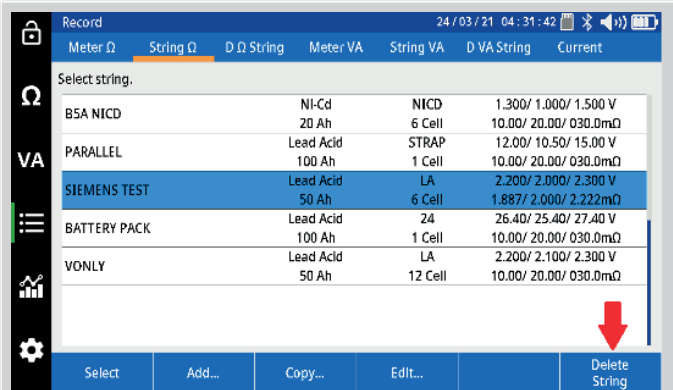

A window will open asking "Do you want to delete the string?". Select "Yes" to delete the test.

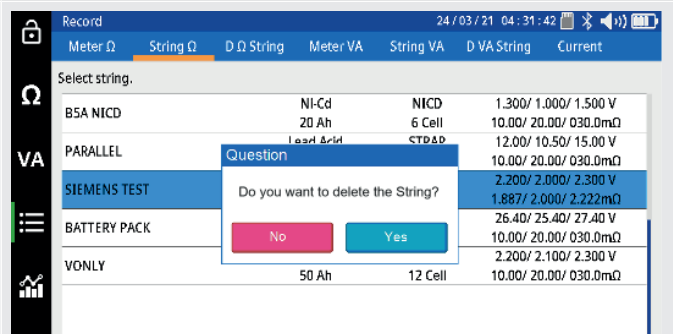


22. Data Logging

The BITE5 Advanced provides data logging capabilities. This allows for prolonged automatic logging of impedance, voltage and temperature values.

22.1 Logging Data

Select the Ohm (Ω) ICON.

When the Ohm (Ω) ICON is selected it configures the unit to record ohmic values, voltage and temperature.

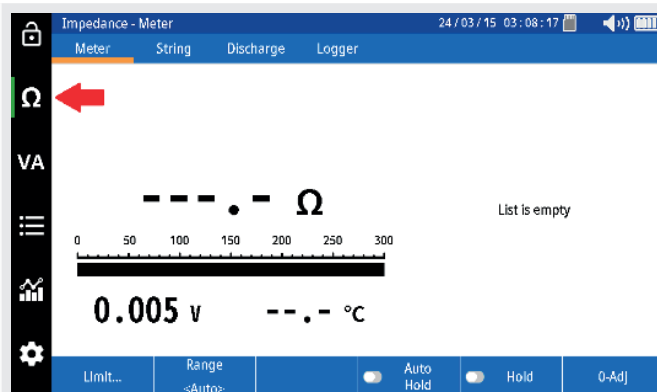


When the Ohm (Ω) ICON is selected the BITE5 Advanced will use the Duplex input.




Connect the Duplex Kelvin leads to the BITE5.




Select "Logger"

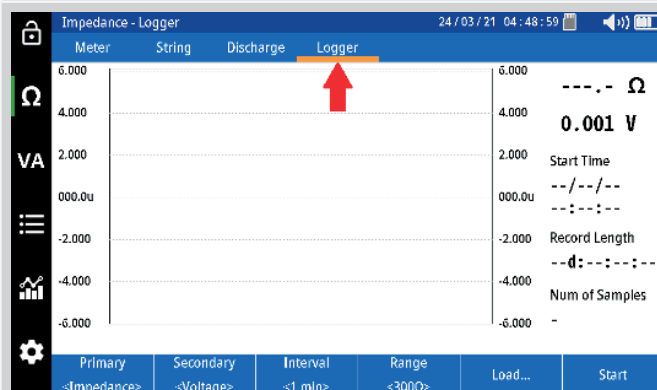


Select the "Primary" value to record. (Impedance, Voltage or Temperature)

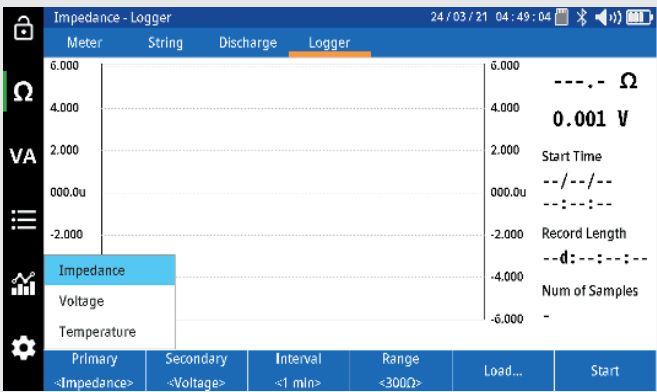


Select the "Secondary" value to record. (Impedance, Voltage or Temperature)

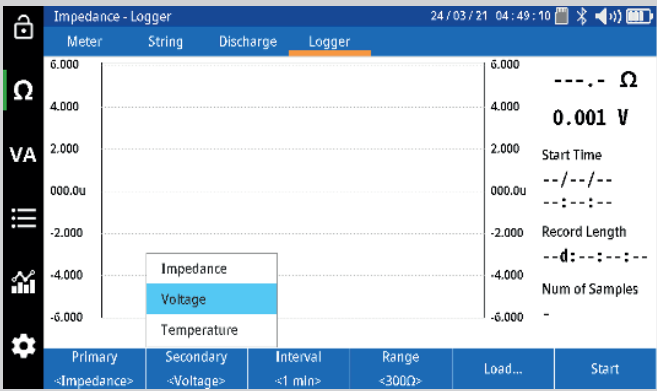

Select "Interval" and then desired recording interval.

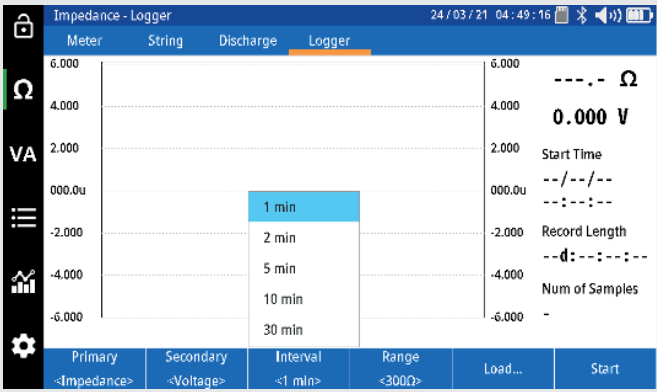


Select "Range" and then desired recording range.

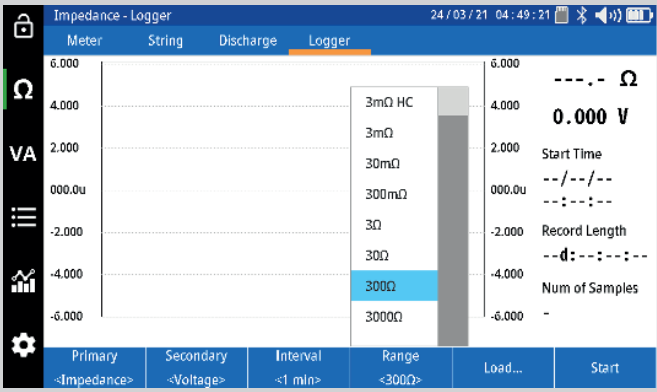

Place the Duplex Kelvin Leads across the load.
Press "Start" to begin recording.




Press "Stop" when complete.

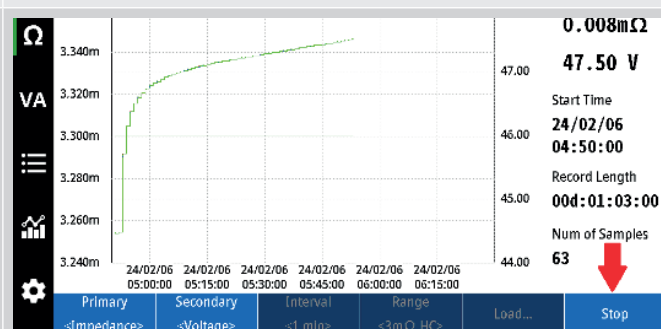


22.2 Viewing a Recorded Data Log


Select the Ohm (Ω) ICON.
When the Ohm (Ω) ICON is selected to configures the unit to record ohmic values, voltage and temperature.

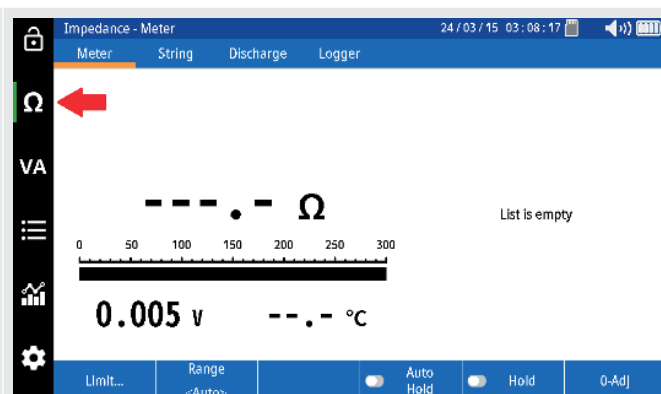


Select "Logger"

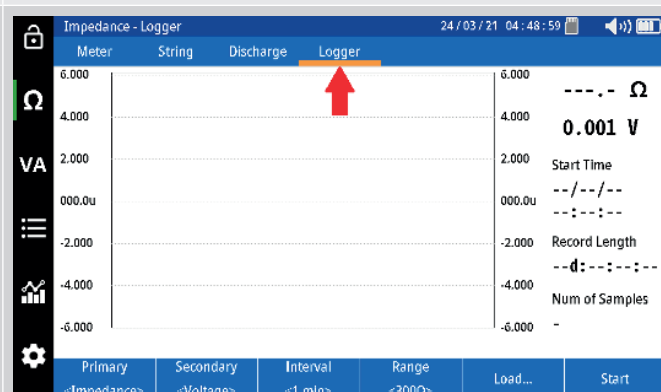


Select "Load"

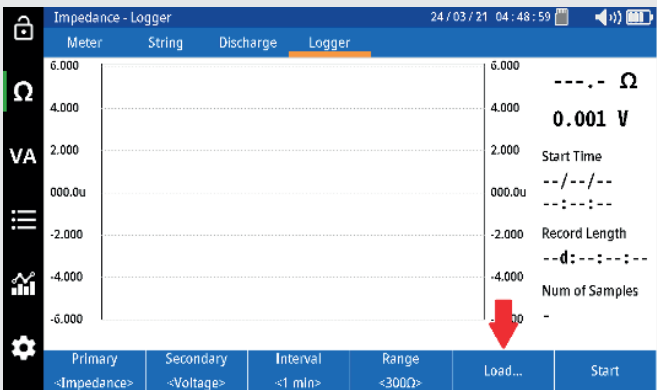


Select the date of the recording.

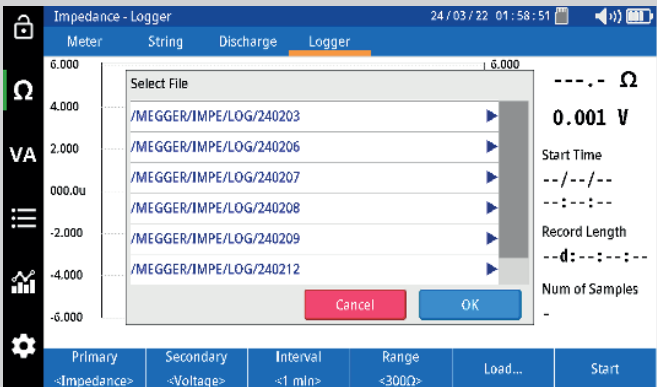

Select the desired recording.

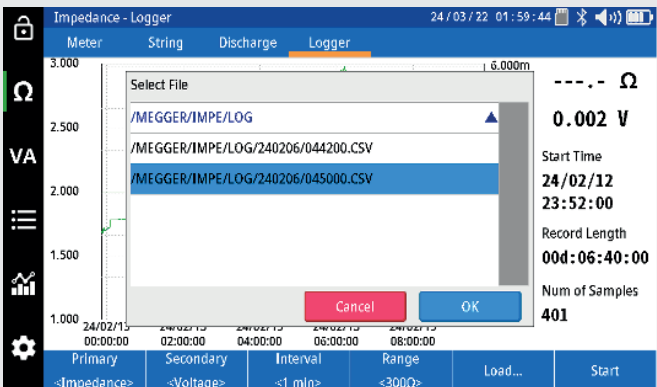

Select "OK"

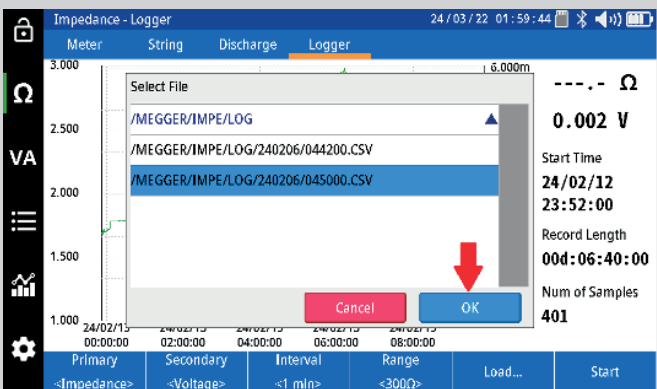


23. RFID Tags

The BITE5 ADVANCED supports the use of RFID tags. A tag can be configured and placed on a battery string. The operator can then scan the RFID tag with the BITE5 ADVANCED and then proceed to start testing.

23.1 Configuring a RFID tag. for new battery string configuration.


Select the RECORD ICON.

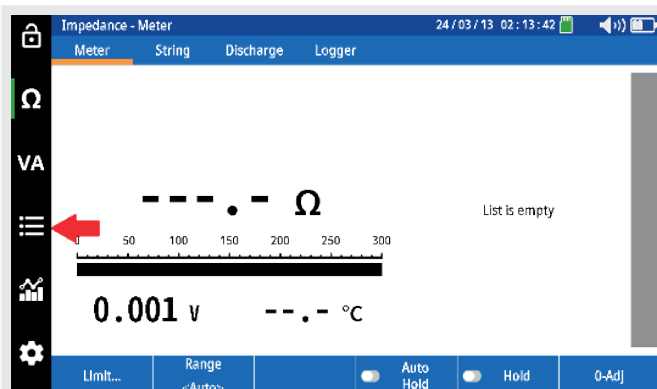


Select "String Ω".



Select "Add..."

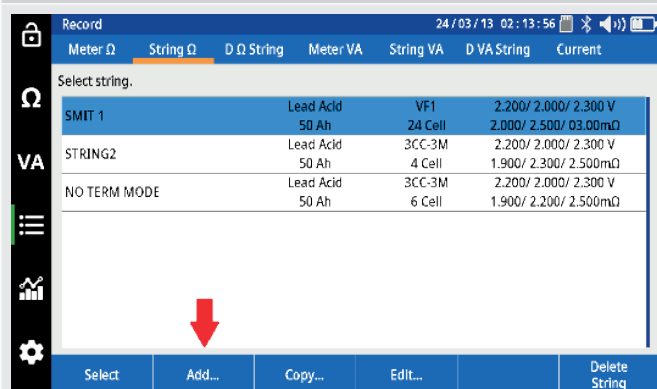

Program the fields in the in the string configuration (See the String Configuration Section of this manual for details)

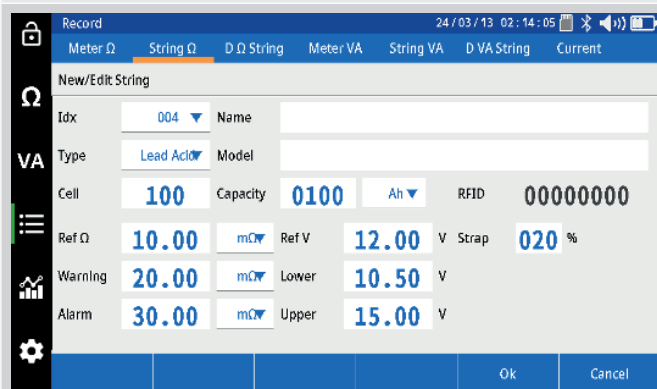

RFID Tags

When complete scan the RFID tag by placing near the back on the BITE5 ADVANCED. An audible beep will be made when the tag is read.



The RFID tag number will now show up on the configuration screen. Now when this tag is scanned this battery string configuration will be called.

Record 24 / 03 / 22 02:27:26

Meter Ω String Ω D Ω String Meter VA String VA D VA String Current

New/Edit String

Idx 001 Name SMIT 1

Type Lead Acid Model VF1

Cell 024 Capacity 0050 Ah RFID 02242543

Ref Ω 2.000 m Ω Ref V 2.200 V Strap 100 %

Warning 2.500 mV Lower 2.000 V

Alarm 3.000 mV Upper 2.300 V

Ok Cancel

Select "OK" to save.

Record 24 / 03 / 22 02:27:26

Meter Ω String Ω D Ω String Meter VA String VA D VA String Current

New/Edit String

Idx 001 Name SMIT 1

Type Lead Acid Model VF1

Cell 024 Capacity 0050 Ah RFID 02242543

Ref Ω 2.000 m Ω Ref V 2.200 V Strap 100 %


Warning 2.500 mV Lower 2.000 V

Alarm 3.000 mV Upper 2.300 V


Ok Cancel

23.2 Configuring a RFID tag. for an existing battery string configuration.


Select the RECORD ICON.

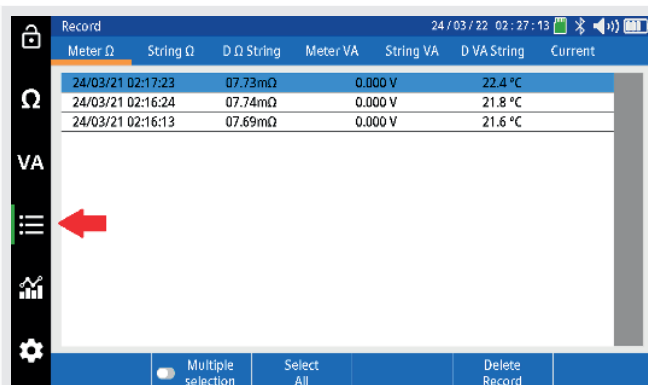


Select "String Ω ".

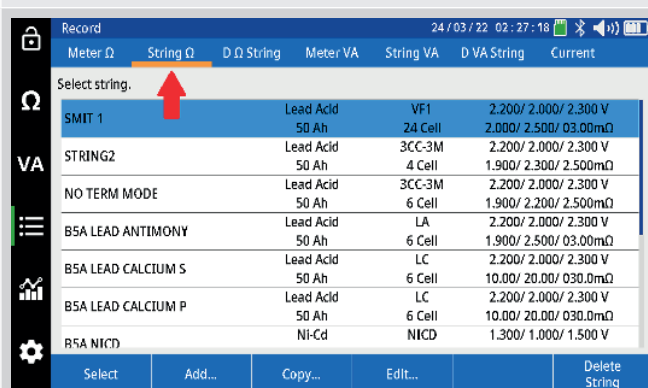

Select the desired sting.

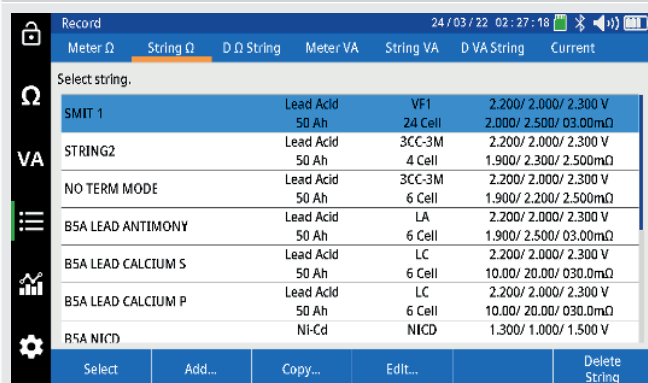

Select "Edit..."

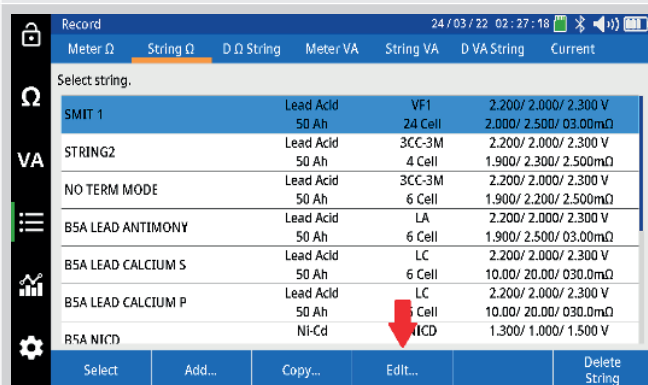

RFID Tags

When complete scan the RFID tag by placing near the back on the BITE5 ADVANCED. An audible beep will be made when the tag is read.



The RFID tag number will now show up on the configuration screen. Now when this tag is scanned this battery string configuration will be called.

A screenshot of the BITE5 ADVANCED configuration screen. The 'New/Edit String' dialog is open, showing the following fields: Idx (003), Name (NO TERM MODE), Type (Lead Acid), Model (3CC-3M), Cell (006), Capacity (0050 Ah), RFID (02218333), Ref Ω (1.900 mΩ), Ref V (2.200 V), Warning (2.200 mΩ), Lower (2.000 V), Alarm (2.500 mΩ), Upper (2.300 V), and Strap (000 %). The 'Ok' button is highlighted.

Select "OK" to save.

A screenshot of the BITE5 ADVANCED configuration screen, identical to the one above, but with a red arrow pointing to the 'Ok' button at the bottom right of the dialog.

24. Saving a screen snapshot

The BITE5 ADVANCED allows you to save screen images as bitmaps.

To do this, momentarily press and release the Power ON/OFF button.



The displayed screen shall be saved to the SD card as a bitmap file. The bitmap will be located at the following path.

MEGGER / SCREENS

Noisy Strings.


25. Noisy Strings.

Excessive electrical noise on strings can cause interference to the battery ohmic measurements. This can be typical on UPS systems.


Noise can cause extended measurement times due to elongated settling times. In extreme cases high signal to noise ratios may not allow a measurement.

To address this situation a noise avoidance feature can be enabled on the BITE5 ADVANCED.


Select the Setting ICON

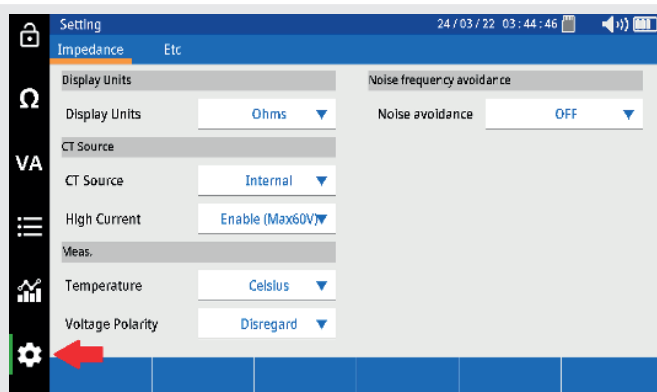

Select "Noise Avoidance"

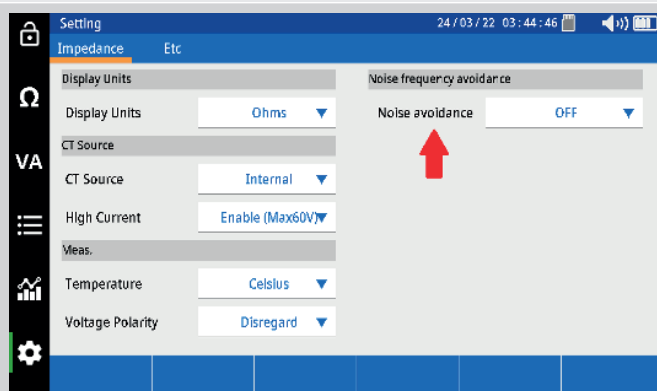

Select "ON" This changes injected frequency. This should have a minimal effect on the measurement but may allow the instrument to better distinguish the signal from the system noise.

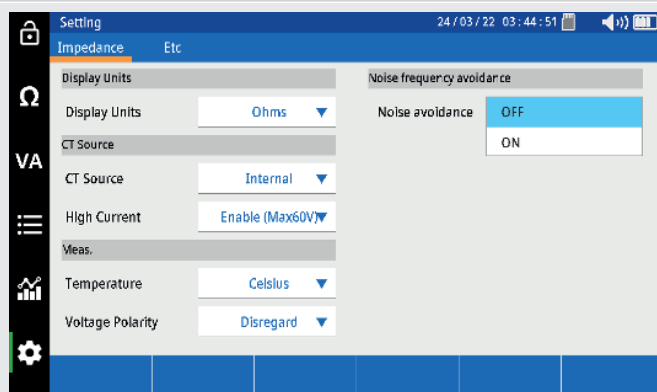

26. Specifications

Specification			Detail
Input power			
AC/Adapter			
Input			100 – 240 V AC (50/60 Hz)
Output			12 V DC at 2.5 A
Battery			
Li-ion rechargeable pack > 5.2Ah			
Voltage rating			7.2 V
Charge time			4 hrs
Battery life			> 8 hrs
			300 charge/discharge cycles
Internal impedance			
Range	Resolution	Accuracy	
3 mΩ	1 μΩ	+/- 1 % of reading +/- 10 digits	
30 mΩ	10 μΩ	+/- 0.8 % of reading +/- 10 digits	
300 mΩ	100 μΩ	+/- 0.8 % of reading +/- 10 digits	
3 Ω	1 mΩ	+/- 0.8 % of reading +/- 10 digits	
30 Ω	10 mΩ	+/- 0.8 % of reading +/- 10 digits	
300 Ω	100 mΩ	+/- 0.8 % of reading +/- 10 digits	
Voltage DC/AC			
Range	Resolution	Accuracy	
5 V DC	0.001 V	+/- 0.5 % of reading +/- 5 digits	
50 V DC	0.01 V		
500 V DC	0.1 V		
1000 V DC	1 V		
5 V AC	0.001 V	+/- 0.75 % of reading +/- 10 digits (40 Hz – 100 Hz)	
50 V AC	0.01 V		
500 V AC	0.1V		
600 V AC	1 V		
Current DC/AC			
Range	Resolution	Accuracy	
4 A DC	0.001 A	+/- 0.5 % of reading +/- 1 digit + (CT Tolerance)	
40 A DC	0.01 A		
400 A DC	0.1 A	+/- 0.5 % of reading +/- 5 digits + (CT Tolerance)	
1000 A DC	1 A		
4 A AC	0.001 A	+/- 0.75 % of reading +/- 1 digit + (CT Tolerance)	
40 A AC	0.01 A		
400 A AC	0.1 A	+/- 0.75 % of reading +/- 10 digits + (CT Tolerance)	
1000 A AC	1 A		
Temperature			
Range	Resolution	Accuracy	
10 °C ~ 100 °C	0.1 °C	+/-1 °C +/- 2 digits	
Ripple voltage			
Range	Resolution	Accuracy	
0–5 V	0.001 V	+/- 0.5 % of reading +/- 10 digits (40 Hz – 10 KHz)	


Specifications

Test Current	1 Khz @ 100 mA / 700 mA
Repeatability	0.1 %, 2 σ
Record Capacity	
Memory	8 GB up to 16 GB flash storage Impedance record: Max 1000 records VA record: Max 512 records
Environmental	
Operating	0 ~50 °C (32~122 °F)
Storage	-20 ~50 °C (-4~122 °F)
Charging temperature:	10 ~40 °C (50~104 °F)
Relative humidity	10 ~ 85 % NC non-condensing
Altitude Operational	0 ~ 2000 m
Ingress protection	IP54
Display (transmitter and receiver)	160 x 90 mm touch screen
Safety/EMC/Vibration/Compliance	
Meets the requirements of IEC61010-1, CE, UKCA	
CAT Rating:	600 V CAT III, Pollution Degree 2
Shock and vibration	EN61010-1 EN60529
IEC61010-1:2010 (3rd Ed)	
EN61010-1:2010 (3rd Ed)	
IEN61326-1:2013	
EN55011/A1:2010 (Class A)	
EN61000-3-2:2014	
EN61000-3-3:2013	
Weight/Dimensions	
Dimensions	240 x 160 x 65 mm (9.45" x 6.30" x 2.56")
Weight	0.9 kg (1.98 lbs)

27. Accessories and Equipment

OPTIONAL ACCESSORIES		
	<p>Concentric Probe – The concentric probe allows for battery testing on batteries with safety caps or safety lugs. Users can easily access the terminals through the access hole. The concentric probe comes in two styles. One probe comes with a 11.75 mm (1/2") tip the other has a 25.4 mm (1") tip. This allows access to terminals even on batteries with the deepest safety lugs.</p>	90043-242 (11.75mm tip)
		90043-243 (25.4mm tip)
	<p>0 to 100 A AC CT. Used for measuring and recording AC ripple current. Jaw opening 0.96" ID (24.5mm)</p>	MCV-100B5B
	<p>1 to 1000 A AC/DC CT. Used for measuring and recording DC float current and discharge current. Jaw opening 2 inches (52.0 mm)</p>	MCCV-1KDC-B5B
	<p>BITE5 extension kit for probes. Allow operator to take measurements while being able to stand safely back from the voltages being measured. Available with straight and 90 degree probes.</p>	See ordering information for options
	<p>3 meter right angle probe. For use with BITE5 extension kit.</p>	90043-244
	<p>3 meter straight probe. For use with BITE5 extension probes.</p>	90043-245

Accessories and Equipment

	3 meter clip on probes. Ideal for taking measurements across entire strings.	90043-246
---	--	-----------

27.1 Included accessories

Item	Order No.
Duplex probes (with temperature probe)	90043-241
Voltage test leads	90037-576
Charger	90039-077
Neck strap	90037-529
Zero bar	90037-575
16 GB microSD card	90037-572
microSD card USB reader	90037-571
USB cable	90037-569
Stylus	90037-570
Carry bag	90037-573
Pouch bag	90037-574

27.2 Optional accessories

Item	Order No.
Concentric probe (1/2" tip)	90043-242
Concentric probe (1" tip)	90043-243
100 A AC current clamp	MCV-100B5B
1000 A AC/DC current clamp	MCCV-1KDC-B5B
3 meter right angle probe	90043-244
3 meter straight probe	90043-245
3 meter clip on probe	90043-246
Extension kit with straight probe	1016-066
Extension kit with 90 degree probe	1016-064
Extension kit with straight and 90 degree probes	1016-067







28. Maintenance

Do not leave the instrument connected to the system under test when not in use. Do not use the instrument or connect it to any external system if it shows any visible signs of damage, malfunction, or if it has been stored in unfavorable conditions. If this equipment is used in the manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

28.1 Battery charging

The BITE5 ADVANCED uses rechargeable Li-ion batteries. Only recharge batteries using the supplied power adapter. Battery charging starts once the power adapter is connected and plugged into AC. The battery charge will take approx. 4 hours to complete. If the unit is operated off of the AC adapter, then the charging time will be longer. The BITE5 ADVANCED can be left connected to the charging adapter for extended periods. The batteries will not be damaged even after full charge.

28.1.1 Battery charging status icon

Icon	Description
	Battery charging amount more than 85 %
	Battery charging amount more than 70 %
	Battery charging amount more than 50 %
	Battery charging amount more than 25 %
	Battery is fully discharged (after warning sounds, unit will shut off)
	Adapter connected, unit charging

28.2 Cleaning and Storage

Do not leave the instrument connected to the system under test when storing or cleaning.

28.2.1 Unit Cleaning

Clean with wet cloth and soft soap. Do not use organic solvents or alcohol as markings on the unit may be damaged.

28.2.2 Storage

When storing for long periods of time, there is no need to remove the battery pack. However, all batteries experience self-discharge. This will lead to a gradually draining of the batteries. For best battery life, it is recommended that batteries are charged once a month. Batteries need to be charged a minimum of once every 6 months.

28.2.3 Cleaning probes

Clean with wet cloth and soft soap. Do not use organic solvents or alcohol.

29. Calibration, Repair and Warranty

Megger operate fully traceable calibration and repair facilities to make sure your instrument continues to provide the high standard of performance and workmanship that is expected. These facilities are complemented by a worldwide network of approved repair and calibration companies, which offer excellent in-service care for your Megger products.

For service requirements for Megger instruments contact:

Megger Limited Archcliffe Road Dover Kent CT17 9EN U.K. Tel: +44 (0) 1304 502 243 Fax: +44 (0) 1304 207 342	OR	Megger Valley Forge 400 Opportunity Way Phoenixville PA 19460 U.S.A. Tel: +1 610 676 8579 Fax: +1 610 676 8625
--	----	--

If the protection of an instrument has been impaired it should not be used, but sent for repair by suitably trained and qualified personnel. The protection is likely to be impaired if, for example, the instrument shows visible damage, fails to perform the intended measurements, has been subjected to prolonged storage under unfavourable conditions, or has been exposed to severe transport stresses.

New instruments are covered by a two year warranty from the date of purchase by the User, the second year being conditional on the free registration of the product on www.megger.com. You will need to log in, or first register and then login to register your product. The second year warranty covers faults, but not recalibration of the instrument which is only warranted for one year. Any unauthorised prior repair or adjustment will automatically invalidate the warranty.

These products contain no User repairable parts and if defective should be returned to your supplier in original packaging or packed so that it is protected from damage during transit. Damage in transit is not covered by this warranty and replacement / repair is chargeable.

Megger warrants this instrument to be free from defects in materials and workmanship, where the equipment is used for its proper purpose. The warranty is limited to making good this instrument (which shall be returned intact, carriage paid, and on examination shall disclose to their satisfaction to have been defective as claimed).

Any unauthorised prior repair or adjustment will invalidate the warranty. Misuse of the instrument, from connection to excessive voltages, fitting incorrect fuses, or by other misuse is excluded from the warranty. The instrument calibration is warranted for one year.

This Warranty does not affect your statutory rights under any applicable law in force, or your contractual rights arising from a sale and purchase contract for the product. You may assert your rights at your sole discretion.

29.1 Calibration, Service and Spare Parts

For service requirements for Megger Instruments contact **Megger** or your local distributor or authorised repair centre.

Megger operates fully traceable calibration and repair facilities, to make sure your instrument continues to provide the high standard of performance and workmanship you expect. These facilities are complemented by a worldwide network of approved repair and calibration companies to offer excellent in-service care for your Megger products.

See the **last page** of this User Guide for Megger contact details.

To find your local Authorised Service Centre email Megger on **ukrepairs@megger.com** and give details of your location.

29.2 Approved Repair Companies

A number of independent instrument repair companies have been approved to do repair work on most Megger instruments, complete with genuine Megger spare parts.

Consult the Appointed Distributor / Agent about spare parts, repair facilities and advice.

29.3 Return procedure

WARNING : DO NOT Remove the battery cells before shipping this instrument. The battery pack MUST be inside the BITE5 when it is packed for shipping.

UK and USA Service Centres

1. When an instrument requires recalibration, or in the event of a repair being necessary, a Returns Authorisation (RA) number must first be obtained from one of the addresses shown above. The following information is to be provided to enable the Service Department to prepare in advance for receipt of your instrument and to provide the best possible service to you:
 - Model (for example, BITE5).
 - Serial number (found on the display under settings, device information, or on the rear cover and by the batteries or on the calibration certificate).
 - Reason for return (for example, calibration required, or repair).
 - Details of the fault if the instrument is to be repaired.
2. Make a note of the RA number. A returns label can be emailed or faxed to you if required.
3. Pack the instrument carefully to prevent damage in transit.
4. Before the instrument is sent to Megger, freight paid, make sure that the returns label is attached or that the RA number is clearly marked on the outside of the package and on any correspondence. Copies of the original purchase invoice and packing note should be sent simultaneously by airmail to expedite clearance through customs. In the case of instruments which require repair outside the warranty period, an immediate quotation can be provided when obtaining the RA number.
5. Track the progress online at **www.megger.com**.

30. Decommissioning

30.1 WEEE Directive



The crossed out wheeled bin symbol placed on Megger products is a reminder not to dispose of the product at the end of its life with general waste.

Megger is registered in the UK as a Producer of Electrical and Electronic Equipment. The Registration No is WEE/ HE0146QT.

For further information about disposal of the product consult your local Megger company or distributor or visit your local Megger website.

30.2 Battery disposal



The crossed out wheeled bin symbol placed on a battery is a reminder not to dispose of batteries with general waste when they reach the end of their usable life.

For disposal of batteries in other parts of the EU contact your local Megger branch or distributor.

Megger is registered in the UK as a producer of batteries (registration No.: BPRN00142).

For further information see www.megger.com

31. Worldwide Sales Offices

Sales Office	Telephone	Email
UK	T. +44 (0)1 304 502101	E. UKsales@megger.com
USA – Dallas	T. +1 214 333 3201	E. USSales@megger.com
USA – Valley Forge	T. +1 214 333 3201	E. USSales@megger.com
USA – Dallas	T. +1 214 333 3201	E. USSales@megger.com
DEUTSCHLAND – Aachen	T. +49 (0) 241 91380 500	E. info@megger.de
SVERIGE	T. +46 08 510 195 00	E. seinfo@megger.com
AUSTRALIA	T. + 61 2 9397 5900	E. ausales@megger.com
中国	T. +86 512 6556 7262	E. meggerchina@megger.com
中国 - 香港	T. +852 26189964	E. meggerchina@megger.com
ČESKÁ REPUBLIKA	T. +420 222 520 508	E. info.cz@megger.com
AMÉRICA LATINA	T. +1 214 330 3293	E. csasales@megger.com
ESPAÑA	T. +34 916 16 54 96	E. info.es@megger.com
SUOMI	T. +358 08 510 195 00	E. seinfo@megger.com
LA FRANCE	T. +01 30 16 08 90	E. infos@megger.com
ΕΛΛΑΔΑ	T. +49 (0) 9544 68 0	E. sales@sebakmt.com
MAGYARORSZÁG	T. +36 1 214-2512	E. info@megger.hu
ITALIA	T. +49 (0) 9544 68 0	E. sales@sebakmt.com
日本	T. +44 (0)1 304 502101	E. UKsales@megger.com
한국	T. +1-800-723-2861	E. sales@megger.com
ضاي رل ابي رل	T. +966 55 111 6836	E. MESales@megger.com
نبح رل ابي رل	T. +973 17440620	E. MESales@megger.com
NEDERLAND	T. +46 08 510 195 00	E. seinfo@megger.com
NORGE	T. +46 08 510 195 00	E. seinfo@megger.com
POLSKA	T. +48 22 2809 808	E. info.pl@megger.com
PORTUGAL	T. +34 916 16 54 96	E. info.es@megger.com
ROMÂNIA	T. +40 21 2309138	E. info.ro@megger.com
РОССИЯ	T. +7 495 2 34 91 61	E. sebaso@sebaspectrum.ru
SLOVENSKO	T. +421 2 554 23 958	E. info.sk@megger.com
SOUTH AFRICA	T. + 27 (031) 576 0360	E. sales.rsa@megger.com
TÜRKIYE	T. +46 08 510 195 00	E. seinfo@megger.com

Local Sales office

Megger Baker Instruments
4812 McMurry Ave., Suite 100
Fort Collins, Colorado 80525
USA

T. 1-970-282-1200 or 1-800-752-8272

F. 1-282-1010

E. baker.sales@megger.com

Megger USA - Dallas
4545 West Davis Street
Dallas TX 75237
USA

T. 800 723 2861 (USA only)

T. +1 214 333 3201

F. +1 214 331 7399

E. USsales@megger.com

Megger Valley Forge
400 Opportunity Way
Phoenixville,
PA 19460
USA

T. +1 610 676 8500

F. +1 610 676 8610

Manufacturing sites

Megger Limited
Dover, ENGLAND
T. +44 (0)1 304 502101
E. uksales@megger.com

Megger AB
Danderyd, SWEDEN
T. +46 08 510 195 00
E. seinfo@megger.com

Megger Valley Forge
Phoenixville, PA USA
T. +1 610 676 8500
E. USsales@megger.com

Megger USA - Dallas
Dallas, TX USA
T. +1 214 333 3201
E. USsales@megger.com

Megger USA - Fort Collins
Fort Collins, CO USA
T. +1 970 282 1200

Megger GmbH
Aachen, GERMANY
T. +49 (0) 241 91380 500
E. info@megger.de

Megger Germany GmbH
Baunach, GERMANY
T. +49 (0) 9544 68 - 0
E. baunach@megger.com

Megger Germany GmbH
Radeburg, GERMANY
T. +49 (0) 35208 84-0
E. radeburg@megger.com

This instrument is manufactured in the United Kingdom.

The company reserves the right to change the specification or design without prior notice.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and are used under licence.