






UM-21551-Z

DT9836 Series User's Manual



Trademark and Copyright Information

Measurement Computing Corporation, InstaCal, Universal Library, and the Measurement Computing logo are either trademarks or registered trademarks of Measurement Computing Corporation. Refer to the Copyrights & Trademarks section on mccdaq.com/legal for more information about Measurement Computing trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies.

© 2015 Measurement Computing Corporation. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form by any means, electronic, mechanical, by photocopying, recording, or otherwise without the prior written permission of Measurement Computing Corporation.

Notice

Measurement Computing Corporation does not authorize any Measurement Computing Corporation product for use in life support systems and/or devices without prior written consent from Measurement Computing Corporation. Life support devices/systems are devices or systems that, a) are intended for surgical implantation into the body, or b) support or sustain life and whose failure to perform can be reasonably expected to result in injury. Measurement Computing Corporation products are not designed with the components required, and are not subject to the testing required to ensure a level of reliability suitable for the treatment and diagnosis of people.

Radio and Television Interference

This equipment has been tested and found to comply with CISPR EN55022 Class A and EN61000-6-1 (CE) requirements and also with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Changes or modifications to this equipment not expressly approved by Data Translation could void your authority to operate the equipment under Part 15 of the FCC Rules.

Note: This product was verified to meet FCC requirements under test conditions that included use of shielded cables and connectors between system components. It is important that you use shielded cables and connectors to reduce the possibility of causing interference to radio, television, and other electronic devices.

Canadian Department of Communications Statement

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la class A prescrites dans le Règlement sur le brouillage radioélectrique édicté par le Ministère des Communications du Canada.

Table of Contents

About this Manual	11
Intended Audience	11
How this Manual is Organized	11
Conventions Used in this Manual	12
Related Information	12
Where To Get Help	13
Chapter 1: Overview	15
DT9836 Hardware Features	16
Supported Software	19
Accessories	22
Getting Started Procedure	24
Part 1: Getting Started	25
Chapter 2: Setting Up and Installing the Module	27
Unpacking	29
System Requirements	30
Applying Power to the Module	31
Attaching Modules to the Computer	32
Connecting Directly to the USB Ports	32
Connecting to an Expansion Hub	33
Configuring the DT9836 Series Device Driver	35
Chapter 3: Wiring Signals to the BNC Connection Box	37
Preparing to Wire Signals	39
Wiring Recommendations	39
High-Performance Considerations	39
Wiring to the BNC Box	40
Wiring Signals to the BNC Connectors	41
Wiring Signals to the D-Sub Connectors	41
Digital In/Out Connector	42
CT/Enc In, Analog Out, Clk/Trig Connector	43
Connecting Analog Input Signals	44
Connecting Analog Output Signals	45
Connecting Digital I/O Signals	46
Connecting Counter/Timer Signals	47
Event Counting	47
Up/Down Counting	48
Frequency Measurement	49

Period/Pulse Width Measurement	49
Edge-to-Edge Measurement	50
Continuous Edge-to-Edge Measurement	50
Pulse Output	51
Connecting Quadrature Decoder Signals	52
Chapter 4: Verifying the Operation of a Module	53
Running the Quick DataAcq Application	55
Testing Single-Value Analog Input	56
Testing Single-Value Analog Output	57
Testing Continuous Analog Input	58
Testing Continuous Analog Output	59
Testing Single-Value Digital Input	60
Testing Single-Value Digital Output	61
Testing Frequency Measurement	62
Testing Pulse Output	63
Part 2: Using Your Module	65
Chapter 5: Principles of Operation	67
Analog Input Features	69
Input Resolution	69
Analog Input Channels	69
Specifying a Single Analog Input Channel	70
Specifying One or More Analog Input Channels	70
Specifying the Digital Input Port in the Analog Input Channel List	72
Specifying Counter/Timers in the Analog Input Channel List	72
Specifying Quadrature Decoders in the Analog Input Channel List	73
Input Ranges	74
Input Sample Clock Sources	74
Analog Input Conversion Modes	75
Single-Value Mode	75
Continuous Scan Mode	75
Input Triggers	76
Data Format and Transfer	77
Error Conditions	77
Analog Output Features	78
Output Resolution	78
Analog Output Channels	78
Specifying a Single Analog Output Channel	79
Specifying Multiple Analog Output Channels and/or the Digital Output Port	79
Output Ranges and Gains	79

Output Triggers	80
Output Clocks	80
Output Conversion Modes	80
Streaming Analog Output	81
Waveform Generation	81
Data Format and Transfer	82
Error Conditions	83
Digital I/O Features	84
Digital I/O Lines	84
Operation Modes	84
Counter/Timer Features	86
C/T Channels	86
C/T Clock Sources	87
Gate Types	87
Pulse Output Types and Duty Cycles	88
Counter/Timer Operation Modes	88
Event Counting	89
Up/Down Counting	89
Frequency Measurement	90
Edge-to-Edge Measurement	91
Continuous Edge-to-Edge Measurement	92
Rate Generation	93
One-Shot	93
Repetitive One-Shot	94
Quadrature Decoder Features	95
Chapter 6: Supported Device Driver Capabilities	97
Data Flow and Operation Options	99
Buffering	100
Triggered Scan Mode	100
Data Encoding	100
Channels	101
Gain	102
Ranges	102
Resolution	102
Current and Resistance Support	103
Thermocouple, RTD, and Thermistor Support	104
IEPE Support	105
Bridge and Strain Gage Support	105
Start Triggers	106
Reference Triggers	106
Clocks	107

Counter/Timers	108
Tachometers.....	109
Chapter 7: Troubleshooting	111
General Checklist	112
Technical Support	114
If Your Module Needs Factory Service	115
Chapter 8: Calibration	117
Using the Calibration Utility	119
Calibrating the Analog Input Subsystem	120
Connecting a Precision Voltage Source	120
Using the Auto-Calibration Procedure	120
Using the Manual Calibration Procedure	121
Calibrating the Analog Output Subsystem	122
Appendix A: Specifications	123
Analog Input Specifications	124
Analog Output Specifications.....	126
Digital I/O Specifications	127
Counter/Timer Specifications	128
External Trigger Specifications.....	129
Clock Specifications	130
Power, Physical, and Environmental Specifications	131
Mating Connector Specifications.....	132
Regulatory Specifications	133
External Power Supply Specifications.....	134
Appendix B: Connector Pin Assignments and LED Status Indicators	135
OEM Version Connectors	136
OEM J2 Connector.....	137
OEM J3 Connector.....	138
OEM Wiring Methods	139
OEM TB1 Connector	140
BNC Box Connectors	141
Digital I/O Connector	141
CT/Enc In, Analog Out, Clk/Trig Connector.....	142
EP353 Accessory Panel Connectors	144
Connector J1.....	144
Connector J2.....	145
EP356 Accessory Panel Connectors	148
Connector J1.....	148
Connector J2.....	150

EP355 Screw Terminal Assignments 152

LED Status Indicators 153

Appendix C: Ground, Power, and Isolation 155

Secondary Power Connector 156

Ground, Power, and Isolation Connections 157

Index 159

About this Manual

The first part of this manual describes how to install and set up your DT9836 Series module and device driver, and verify that your module is working properly.

The second part of this manual describes the features of the DT9836 Series modules, the capabilities of the DT9836 Series Device Driver, and how to program the DT9836 Series modules using the DT-Open Layers for .NET Class Library™ software. Troubleshooting information is also provided.

Note: For more information on the class library, refer to the *DT-Open Layers for .NET Class Library User's Manual*. If you are using the DataAcq SDK or a software application to program your device, refer to the documentation for that software for more information.

Intended Audience

This document is intended for engineers, scientists, technicians, or others responsible for using and/or programming the DT9836 Series modules for data acquisition operations in the Microsoft® Windows Vista®, Windows 7, or Windows 8 operating system. It is assumed that you have some familiarity with data acquisition principles and that you understand your application.

Note: The DT9836 Series module is available either installed in a metal BNC connection box, or as a board-level OEM version that you can install in your own custom application. If the information in this manual applies to all versions of the DT9836 Series module, the manual uses the product name "DT9836 Series module." Otherwise, the specific product name is mentioned

How this Manual is Organized

This manual is organized as follows:

- [Chapter 1, "Overview,"](#) describes the major features of the DT9836 Series module, as well as the supported software and accessories for the modules.
- [Chapter 2, "Setting Up and Installing the Module,"](#) describes how to install a DT9836 Series module, how to apply power to the module, and how to configure the device driver.
- [Chapter 3, "Wiring Signals to the BNC Connection Box,"](#) describes how to wire signals to a DT9836 Series BNC connection box.
- [Chapter 4, "Verifying the Operation of a Module,"](#) describes how to verify the operation of the DT9836 Series module with the Quick DataAcq application.

- [Chapter 5, “Principles of Operation,”](#) describes all of the features of the DT9836 Series module and how to use them in your application.
- [Chapter 6, “Supported Device Driver Capabilities,”](#) lists the data acquisition subsystems and the associated features accessible using the DT9836 Series Device Driver.
- [Chapter 7, “Troubleshooting,”](#) provides information that you can use to resolve problems with the DT9836 Series module and device driver, should they occur.
- [Chapter 8, “Calibration,”](#) describes how to calibrate the analog I/O circuitry of the DT9836 Series modules.
- [Appendix A, “Specifications,”](#) lists the specifications of the DT9836 Series modules.
- [Appendix B, “Connector Pin Assignments and LED Status Indicators,”](#) shows the pin assignments for the connectors and the screw terminal assignments for the screw terminals on the DT9836 Series modules.
- [Appendix C, “Ground, Power, and Isolation,”](#) describes the electrical characteristics of the DT9836 Series module.
- An index completes this manual.

Conventions Used in this Manual

The following conventions are used in this manual:

- Notes provide useful information or information that requires special emphasis, cautions provide information to help you avoid losing data or damaging your equipment, and warnings provide information to help you avoid catastrophic damage to yourself or your equipment.
- Items that you select or type are shown in **bold**.

Related Information

Refer to the following documents for more information on using the DT9836 Series modules:

- *Benefits of the Universal Serial Bus for Data Acquisition*. This white paper describes why USB is an attractive alternative for data acquisition. It is available on the Data Translation web site (www.mccdaq.com).
- *QuickDAQ User's Manual* (UM-24774). This manual describes how to create a QuickDAQ application to acquire and analyze data from DT-Open Layers data acquisition devices.
- *DT-Open Layers for .NET User's Manual* (UM-22161). For programmers who are developing their own application programs using Visual C# or Visual Basic .NET, this manual describes how to use the DT-Open Layers for .NET Class Library to access the capabilities of Data Translation data acquisition devices.
- *DataAcq SDK User's Manual* (UM-18326). For programmers who are developing their own application programs using the Microsoft C compiler, this manual describes how to use the DT-Open Layers DataAcq SDK™ to access the capabilities of Data Translation data acquisition devices.

- *LV-Link Online Help*. This help file describes how to use LV-Link™ with the LabVIEW™ graphical programming language to access the capabilities of Data Translation data acquisition devices.
- Microsoft Windows Vista, Windows 7, or Windows 8 documentation.
- USB web site (<http://www.usb.org>).

Where To Get Help

Should you run into problems installing or using a DT9836 Series module, the Data Translation Technical Support Department is available to provide technical assistance. Refer to [Chapter 7](#) for more information. If you are outside the United States or Canada, call your local distributor, whose number is listed on our web site (www.mccdaq.com).



Overview

DT9836 Hardware Features	16
Supported Software	19
Accessories	22
Getting Started Procedure.....	24

DT9836 Hardware Features

The DT9836 Series is a family of high-performance, multifunction data acquisition modules, shown in [Figure 1](#), for the USB (Ver. 2.0 or Ver. 1.1) bus.



Figure 1: DT9836 Series Module (BNC Box Shown)

The key hardware features of the DT9836 Series modules are as follows:

- Available either installed in a metal BNC connection box, or as a board-level OEM version that you can install in your own custom application.
- Simultaneous operation of analog input, analog output, digital I/O, and counter/timer subsystems.
- Analog input subsystem:
 - 16-bit A/D converters.
 - Throughput rate of up to 225 kS/s or 800 kS/s depending on the model you purchase
 - Either 12 or 6 single-ended separate, simultaneous analog input channels. The number of channels provided depend on the model you purchase.
 - Input ranges of ± 10 and ± 5 V.
 - 6-, 17-, or 23-location channel list, depending on the model you purchase. You can read digital inputs, the two 32-bit counters, and/or the three 32-bit quadrature decoders using the A/D subsystem and the A/D clock. This synchronizes digital, counter, and quadrature decoder inputs with the analog measurements.
- Analog output subsystem:
 - Two or four 16-bit D/A converters (if your module includes D/A converters).
 - Simultaneously update the output channels at up to 500 kSamples/s.
 - Output range of ± 10 V.

- The analog output channels are deglitched to prevent noise from interfering with the output signal.
- Output channel list. You can cycle through the output channel list using continuous output mode or waveform generation mode.
- Digital I/O subsystem:
 - One digital input port, consisting of 16 digital input lines. You can program any of the first eight digital input lines to perform interrupt-on-change operations. You can read the value of the digital input port using the analog input channel-gain list.
 - One digital output port, consisting of 16 digital output lines. For modules that support analog output channels, you can update the value of the digital output port using the output channel list.
- Two 32-bit counter/timer (C/T) channels that perform event counting, up/down counting, frequency measurement, edge-to-edge measurement, continuous pulse output, one-shot, and repetitive one-shot operations. You can read the value of one or more of the C/T channels using the analog input channel list.
- Three 32-bit quadrature decoders that can provide relative or absolute position of quadrature encoder input and calculate rotational speed. You can read the value of one or more of the quadrature decoder channels using the analog input channel list.
- External or internal clock source.
- Trigger operations using a software command, an analog threshold value, or an external digital trigger.
- 500 V galvanic isolation barrier that prevents ground loops to maximize analog signal integrity and protect your computer.

The key differences among the DT9836 Series modules are summarized in [Table 1](#). Note that all modules provide 16 digital input lines, 16 digital output lines, 16-bit resolution, two counter/timers, and three quadrature decoders.

Table 1: Summary of DT9836 Series Modules

Module	Analog Inputs	Analog Input Sampling Rate	Analog Outputs	Packaging
DT9836-12-2-OEM	12 single-ended	225 kSamples/s	2	OEM
DT9836-12-2-BNC	12 single-ended	225 kSamples/s	2	BNC
DT9836-12-0-OEM	12 single-ended	225 kSamples/s	0	OEM
DT9836-12-0-BNC	12 single-ended	225 kSamples/s	0	BNC
DT9836-6-4-OEM	6 single-ended	225 kSamples/s	4	OEM
DT9836-6-4-BNC	6 single-ended	225 kSamples/s	4	BNC
DT9836-6-2-OEM	6 single-ended	225 kSamples/s	2	OEM
DT9836-6-2-BNC	6 single-ended	225 kSamples/s	2	BNC
DT9836-6-0-OEM	6 single-ended	225 kSamples/s	0	OEM

Table 1: Summary of DT9836 Series Modules (cont.)

Module	Analog Inputs	Analog Input Sampling Rate	Analog Outputs	Packaging
DT9836-6-0-BNC	6 single-ended	225 kSamples/s	0	BNC
DT9836S-6-2-OEM	6 single-ended	800 kSamples/s	2	OEM
DT9836S-6-2-BNC	6 single-ended	800 kSamples/s	2	BNC
DT9836S-6-0-OEM	6 single-ended	800 kSamples/s	0	OEM
DT9836S-6-0-BNC	6 single-ended	800 kSamples/s	0	BNC

Note: *OEM* packaging refers to the board-level version; the power supply is not included.

BNC packaging refers to a connection box with BNCs for the specified number of analog inputs, 2 BNCs for analog outputs (if included), 1 BNC for an external A/D clock, 1 BNC for an external DAC clock, 1 BNC for an external A/D trigger, and 1 BNC for an external DAC trigger.

Supported Software

The following software is available for use with the DT9836 Series modules and is on the Data Acquisition OMNI CD:

- **DT9836 Series Device Driver** – The device driver allows you to use a DT9836 Series module with any of the supported software packages or utilities.
- **QuickDAQ Base Version** – The base version of QuickDAQ is free-of-charge and allows you to acquire and analyze data from all Data Translation USB and Ethernet devices, except the DT9841 Series, DT9817, DT9835, and DT9853/54. Using the base version of QuickDAQ, you can perform the following functions:
 - Discover and select your devices.
 - Configure all input channel settings for the attached sensors.
 - Load/save multiple hardware configurations.
 - Generate output stimuli (fixed waveforms, swept sine waves, or noise signals).
 - On each supported data acquisition device, acquire data from all channels supported in the input channel list.
 - Choose to acquire data continuously or for a specified duration.
 - Choose software or triggered acquisition.
 - Log acquired data to disk in an .hpf file.
 - Display acquired data during acquisition in either a digital display using the Channel Display window or as a waveform in the Channel Plot window.
 - Choose linear or logarithmic scaling for the horizontal and vertical axes.
 - View statistics about the acquired data, including the minimum, maximum, delta, and mean values and the standard deviation in the Statistics window.
 - Export time data to a .csv or .txt file; you can open the recorded data in Microsoft Excel® for further analysis.
 - Read a previously recorded .hpf data file.
 - Customize many aspects of the acquisition, display, and recording functions to suit your needs, including the acquisition duration, sampling frequency, trigger settings, filter type, and temperature units to use.

- **QuickDAQ FFT Analysis Option** – When enabled with a purchased license key, the QuickDAQ FFT Analysis option includes all the features of the QuickDAQ Base version plus basic FFT analysis features, including the following:
 - The ability to switch between the Data Logger time-based interface and the FFT Analyzer block/average-based interface.
 - Supports software, freerun, or triggered acquisition with accept and reject controls for impact testing applications.
 - Allows you to perform single-channel FFT (Fast Fourier Transform) operations, including AutoSpectrum, Spectrum, and Power Spectral Density, on the acquired analog input data. You can configure a number of parameters for the FFT, including the FFT size, windowing type, averaging type, integration type, and so on.
 - Allows you to display frequency-domain data as amplitude or phase.
 - Supports dB or linear scaling with RMS (root mean squared), peak, and peak-to-peak scaling options
 - Supports linear or exponential averaging with RMS, vector, and peak hold averaging options.
 - Supports windowed time channels.
 - Supports the following response window types: Hanning, Hamming, Bartlett, Blackman, Blackman Harris, and Flat top.
 - Supports the ability to lock the waveform output to the analysis frame time.
 - Allows you to configure and view dynamic performance statistics, including the input below full-scale (IBF), total harmonic distortion (THD), spurious free dynamic range (SFDR), signal-to-noise and distortion ratio (SINAD), signal-to-noise ratio (SNR), and the effective number of bits (ENOB), for selected time-domain channels in the Statistics window.
 - Supports digital IIR (infinite impulse response) filters.
- **QuickDAQ Advanced FFT Analysis Option** – When enabled with a purchased software license, the QuickDAQ Advanced FFT Analysis option includes all the features of the QuickDAQ Base version with the FFT Analysis option plus advanced FFT analysis features, including the following:
 - Allows you to designate a channel as a Reference or Response channel.
 - Allows you to perform two-channel FFT analysis functions, including Frequency Response Functions (Inertance, Mobility, Compliance, Apparent Mass, Impedance, Dynamic Stiffness, or custom FRF) with H1, H2, or H3 estimator types, Cross-Spectrum, Cross Power Spectral Density, Coherence, and Coherent Output Power.
 - Supports the Exponential response window type.
 - Supports the following reference window types: Hanning, Hamming, Bartlett, Blackman, Blackman Harris, FlatTop, Exponential, Force, and Cosine Taper windows.
 - Supports real, imaginary, and Nyquist display functions.
 - Allows you to save data in the .uff file format.

- **Quick DataAcq application** – The Quick DataAcq application provides a quick way to get up and running using a DT9836 Series module. Using this application, you can verify key features of the modules, display data on the screen, and save data to disk.
- **DT-Open Layers for .NET Class Library** – Use this class library if you want to use Visual C# or Visual Basic for .NET to develop your own application software for a DT9836 Series module using Visual Studio 2003 to 2012; the class library complies with the DT-Open Layers standard.
- **DataAcq SDK** – Use the Data Acq SDK if you want to use Visual Studio 6.0 and Microsoft C or C++ to develop your own application software for a DT9836 Series module using Windows Vista, Windows 7, or Windows 8; the DataAcq SDK complies with the DT-Open Layers standard.
- **DAQ Adaptor for MATLAB** – Data Translation’s DAQ Adaptor provides an interface between the MATLAB Data Acquisition (DAQ) subsystem from The MathWorks and Data Translation’s DT-Open Layers architecture.
- **LV-Link** – A link to LV-Link is included on the Data Acquisition OMNI CD. Use LV-Link if you want to use the LabVIEW graphical programming language to access the capabilities of the DT9836 Series modules.

Refer to the Data Translation web site (www.mccdaq.com) for information about selecting the right software package for your needs.

Accessories

You can purchase the following optional items from Data Translation for use with a DT9836 Series module:

Table 2: Accessories for the DT9836 Series









Accessory		Description
BNC DIN Rail Kit		Kit for mounting USB modules in a BNC enclosure to a DIN rail. Includes mounting clips, screws, and instructions. Rail not included
EP361		For OEM configurations only, +5 V power supply and cable. The power supply comes with BNC box versions.
EP353		For OEM configurations only, accessory panel that provides one 37-pin, D-sub connector for attaching analog input signals and one 26-pin connector for attaching a 5B Series signal conditioning backplane. Refer to page 144 for connection information.
EP355		For OEM configurations only, screw terminal panel that provides 14-position screw terminal blocks for attaching counter/timer, digital I/O, trigger, and clock signals. (Not for analog input use with this module.) Refer to page 152 for connection information.
EP356		For OEM configurations only, accessory panel that provides two 37-pin, D-sub connectors for attaching digital I/O, analog output, counter/timer, trigger, and clock signals. Refer to page 148 for connection information.

Table 2: Accessories for the DT9836 Series

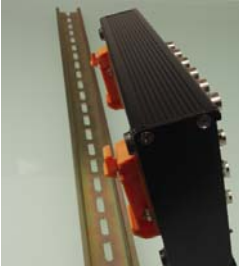Accessory	Image	Description
<p>STP37</p>		<p>Screw terminal panel for connecting to the Digital I/O or Counter/Timer, Analog Output, External Clock and Trigger connector on the BNC box version using the EP333 cable.</p> <p>For OEM versions, screw terminal panel that connects to the EP353 accessory panel using the EP360 cable or to the EP356 accessory panel using the EP333 cable. Refer to page 146, page 149, and page 150 for connection information.</p>
<p>EP333</p>		<p>A 2-meter shielded cable with two 37-pin connectors for connecting to an STP37 screw terminal panel.</p> <p>For OEM versions, connects the STP37 to the EP356 accessory panel. Refer to page 149 and page 150 for connection information.</p>
<p>EP360</p>		<p>For OEM configurations only, a 2-meter shielded cable with two 37-pin connectors that connect an EP353 accessory panel to an STP37 screw terminal panel. Refer to page 146 for connection information.</p>

Getting Started Procedure

The flow diagram shown in [Figure 2](#) illustrates the steps needed to get started using the DT9836 Series module. This diagram is repeated in each Getting Started chapter; the shaded area in the diagram shows you where you are in the getting started procedure.

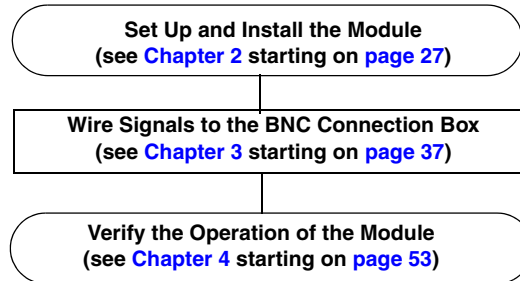



Figure 2: Getting Started Flow Diagram

Part 1: Getting Started



Setting Up and Installing the Module

Unpacking	29
System Requirements	30
Applying Power to the Module	31
Attaching Modules to the Computer	32
Configuring the DT9836 Series Device Driver	35

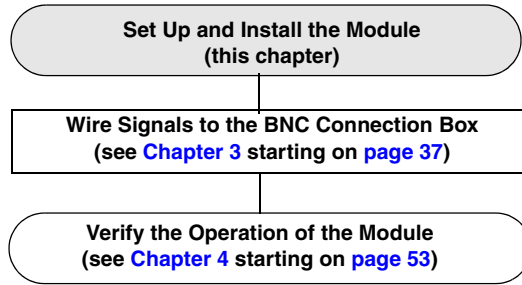

Unpacking

Open the shipping box and verify that the following items are present:

- BNC connection box or OEM version of the DT9836 Series module
- Data Acquisition OMNI CD

Note that if you purchased a BNC connection box, a USB cable and an EP361 power supply and power cable should also be included.

If an item is missing or damaged, contact Data Translation. If you are in the United States, call the Customer Service Department at (508) 946-5100. An application engineer will guide you through the appropriate steps for replacing missing or damaged items. If you are located outside the United States, call your local distributor, listed on Data Translation's web site (www.mccdaq.com).

Note: The DT9836 Series module is factory-calibrated. If you decide that you want to recalibrate the analog input or analog output circuitry, refer to the instructions in [Chapter 8](#).

System Requirements

For reliable operation, ensure that your computer meets the following system requirements:

- Processor: Pentium 4/M or equivalent
- RAM: 1 GB
- Screen Resolution: 1024 x 768 pixels
- Operating System: Windows 8, Windows 7, Windows Vista (32- and 64-bit)
- Disk Space: 4 GB

Applying Power to the Module

The BNC connection box is shipped with an EP361 +5V power supply and cable. For the OEM version of the DT9836 Series module, you must provide your own +5 V power source or purchase the EP361 power supply and cable from Data Translation.

To apply power to the module, do the following:

1. Connect the +5 V power supply to the power connector on the DT9836 Series module. Refer to [Figure 3](#).



Figure 3: Attaching a +5 V Power Supply to the DT9836 Series Module

2. Plug the power supply into a wall outlet.

For more detailed information about ground, power, and isolation connections on a DT9836 Series module, refer to [Appendix C](#) starting on [page 155](#).

Attaching Modules to the Computer

This section describes how to attach DT9836 Series modules to the host computer.

Note: Most computers have several USB ports that allow direct connection to USB devices. If your application requires more DT9836 Series modules than you have USB ports for, you can expand the number of USB devices attached to a single USB port by using expansion hubs. For more information, refer to [page 33](#).

You can unplug a module, then plug it in again, if you wish, without causing damage. This process is called hot-swapping. Your application may take a few seconds to recognize a module once it is plugged back in.

You must install the device driver before connecting your DT9836 Series module(s) to the host computer.

Connecting Directly to the USB Ports

To connect a DT9836 Series module directly to a USB port on your computer, do the following:

1. Make sure that you have attached a power supply to the module.
2. Attach one end of the USB cable to the USB port on the module.
3. Attach the other end of the USB cable to one of the USB ports on the host computer, as shown in [Figure 4](#).

The operating system automatically detects the USB module and starts the Found New Hardware wizard.

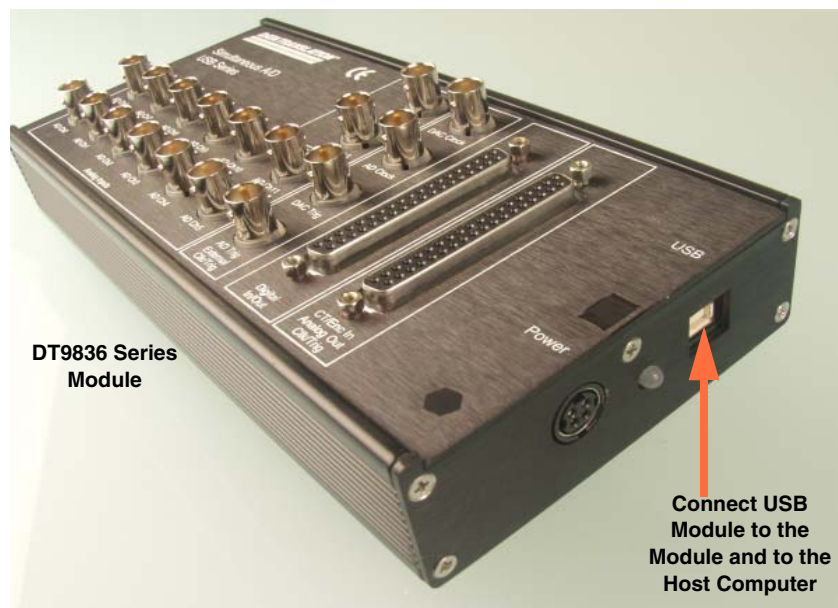


Figure 4: Attaching the Module to the Host Computer

4. For Windows Vista:
 - a. Click **Locate and install driver software (recommended)**.
The popup message "Windows needs your permission to continue" appears.
 - b. Click **Continue**.
The Windows Security dialog box appears.
 - c. Click **Install this driver software anyway**.
The LED on the module turns green.

Note: Windows 7 and Windows 8 find the device automatically.

5. Repeat these steps to attach another DT9836 Series module to the host computer, if desired.

Connecting to an Expansion Hub

Expansion hubs are powered by their own external power supply. The practical number of DT9836 Series modules that you can connect to a single USB port depends on the throughput you want to achieve.

To connect multiple DT9836 Series modules to an expansion hub, do the following:

1. Make sure that you have attached a power supply to the module.
2. Attach one end of the USB cable to the module and the other end of the USB cable to an expansion hub.
3. Connect the power supply for the expansion hub to an external power supply.
4. Connect the expansion hub to the USB port on the host computer using another USB cable.
The operating system automatically detects the USB module and starts the Found New Hardware wizard.
5. For Windows Vista:
 - a. Click **Locate and install driver software (recommended)**.
The popup message "Windows needs your permission to continue" appears.
 - b. Click **Continue**.
The Windows Security dialog box appears.
 - c. Click **Install this driver software anyway**.
The LED on the module turns green.

Note: Windows 7 and Windows 8 find the device automatically.

6. Repeat these steps until you have attached the number of expansion hubs and modules that you require. Refer to [Figure 5](#).
The operating system automatically detects the USB devices as they are installed.

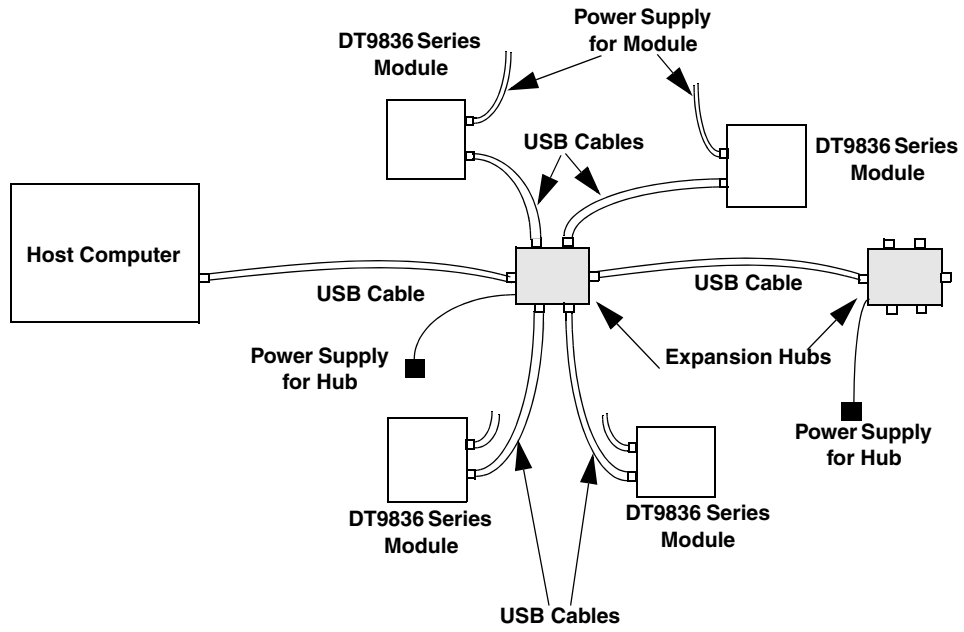


Figure 5: Attaching Multiple Modules Using Expansion Hubs

Configuring the DT9836 Series Device Driver

Note: In Windows 7, Windows 8, and Vista, you must have administrator privileges to run the Open Layers Control Panel. When you double-click the Open Layers Control Panel icon, you may see the Program Compatibility Assistant. If you do, select **Open the control panel using recommended settings**. You may also see a Windows message asking you if you want to run the Open Layers Control Panel as a "legacy CPL elevated." If you get this message, click **Yes**.

If you do not get this message and have trouble making changes in the Open Layers Control Panel, right click the DTOLCPL.CPL file and select **Run as administrator**. By default, this file is installed in the following location:

Windows 7, Windows 8, and Vista (32-bit)

C:\Windows\System32\Dtolcpl.cpl

Windows 7, Windows 8, and Vista (64-bit)

C:\Windows\SysWOW64\Dtolcpl.cpl

To configure the device driver for the DT9836 Series module, do the following:


1. If you have not already done so, power up the host computer and all peripherals.
2. From the Windows Start menu, select **Settings | Control Panel**.
3. From the Control Panel, double-click **Open Layers Control Panel**.
The Data Acquisition Control Panel dialog box appears.
4. Click the DT9836 Series module that you want to configure, and then click **Advanced**.
The Configurable Board Options dialog box appears.
5. If required, select the digital input line(s) that you want to use for interrupt-on-change operations. When any of the selected lines changes state, the module reads the entire 16-bit digital input value and generates an interrupt.
6. Click **OK**.
7. If you want to rename the module, click **Edit Name**, enter a new name for the module, and then click **OK**. The name is used to identify the module in all subsequent applications.
8. Repeat steps 4 to 7 for the other modules that you want to configure.
9. When you are finished configuring the modules, click **Close**.

Continue with the instructions on wiring in [Chapter 3](#) starting on [page 37](#).



Wiring Signals to the BNC Connection Box

Preparing to Wire Signals	39
Connecting Analog Input Signals	44
Connecting Analog Output Signals	45
Connecting Digital I/O Signals	46
Connecting Counter/Timer Signals	47
Connecting Quadrature Decoder Signals	52

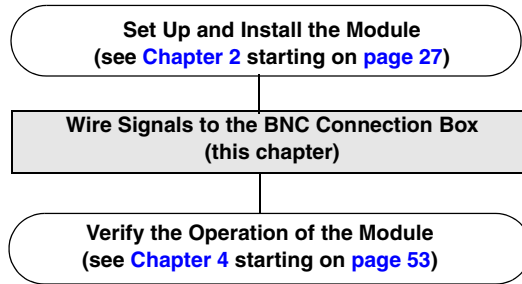

Preparing to Wire Signals

This section provides recommendations and information about wiring signals to the BNC connection box.

Note: If you are using the D-sub connectors on the BNC box or the OEM version of the DT9836 Series module, use this chapter for conceptual information, and then refer to [Appendix B](#) starting on [page 135](#) for connector pin assignments and accessory panel information.

Wiring Recommendations

Keep the following recommendations in mind when wiring signals to a BNC connection box:

- Ensure that you follow standard ESD procedures when wiring signals to the module.
- Separate power and signal lines by using physically different wiring paths or conduits.
- To avoid noise, do not locate the box and cabling next to sources that produce high electromagnetic fields, such as large electric motors, power lines, solenoids, and electric arcs, unless the signals are enclosed in a mumetal shield.
- Prevent electrostatic discharge to the I/O while the box is operational.
- Connect all unused analog input channels to analog ground.

High-Performance Considerations

Cables have a characteristic impedance, which can add amplitude and phase errors to signals (typically > 1 LSB at 10 kHz for a 6-foot cable) due to reflection, if the impedance is unmatched on both ends of a connection. For optimal performance, particularly at high frequencies, do the following:

- Pay attention to cable matching from the source to the DT9836 Series module and between channels.
- Place a resistor with the same impedance in series with the cable at your source.
- Add termination with matched impedance at the module.

For example, if your cable has an impedance of 50 Ω , place a 50 ohm resistor in series with a 1000 pF NPO capacitor to common, as shown in [Figure 6](#).

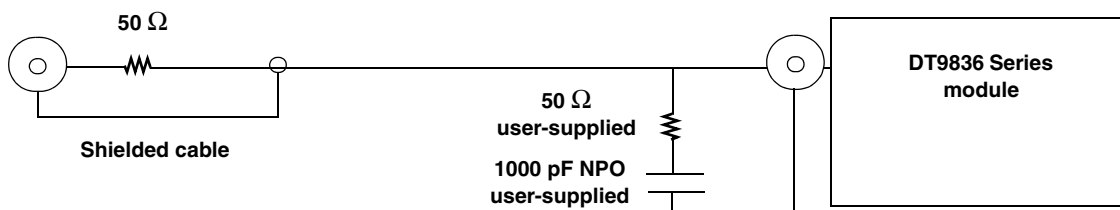


Figure 6: Example of Cable Matching

Wiring to the BNC Box

The BNC connection box contains both BNC connectors and 37-pin, D-sub connectors. An example of a BNC connection box is shown in [Figure 7](#).

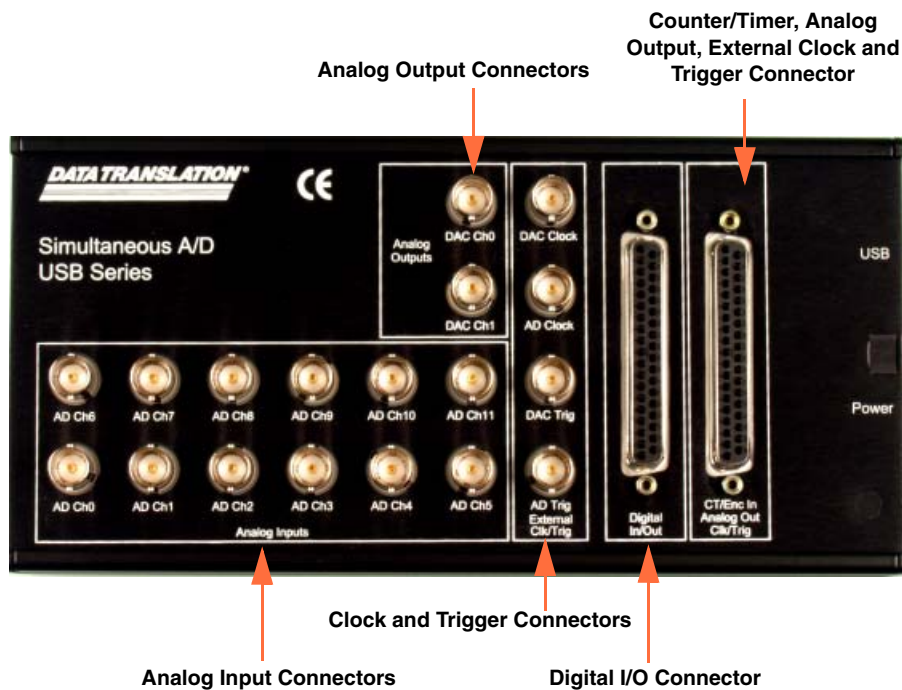


Figure 7: BNC Connection Box

You can wire signals to the BNC connection box as follows. Refer to [Appendix A](#) for information about the required D-sub mating connectors if you choose to use the D-sub connectors.

- **Analog input signals** – You can wire analog input signals using the BNC connectors labelled AD Ch0 to AD Ch11.
- **Analog output signals** – You can wire analog output signals (if your DT9836 model supports them) in one of the following ways:
 - Using the BNC connectors labelled DAC Ch0 to DAC Ch1.
 - Using the appropriate pins on the CT/Enc In, Analog Output, Clk/Trig connector. You can access the pins by building your own cable/panel. Refer to [page 43](#) for connector pin assignments.
- **Digital I/O signals** – To wire digital I/O signals, you must use the appropriate pins on the Digital I/O connector. You can access the pins by using the STP37 screw terminal panel (with the EP333 cable) or by building your own cable/panel. Refer to [page 42](#) for connector pin assignments.

- **Counter/timer signals** – To wire counter/timer signals, you must use the appropriate pins on the CT/Enc In, Analog Output, Clk/Trig connector. You can access the pins by using the STP37 screw terminal panel (with the EP333 cable) or by building your own cable/panel. Refer to [page 43](#) for connector pin assignments.
- **External A/D clock or trigger signal** – You can wire external clock/trigger signals in one of the following ways:
 - Using the BNC connectors labelled AD Clock for A/D clock signals and AD Trig for A/D trigger signals.
 - Using the appropriate pins on the CT/Enc In, Analog Output, Clk/Trig connector. You can access the pins by using the STP37 screw terminal panel (with the EP333 cable) or by building your own cable/panel. Refer to [page 43](#) for connector pin assignments.
- **External DAC clock or trigger signal** – If your version of the DT9836 module supports analog output operations, you can wire external clock/trigger signals in one of the following ways:
 - Using the BNC connectors labelled DAC Clock for D/A clock signals and DAC Trig for D/A trigger signals.
 - Using the appropriate pins on the CT/Enc In, Analog Output, Clk/Trig connector. You can access the pins by using the STP37 screw terminal panel (with the EP333 cable) or by building your own cable/panel. Refer to [page 43](#) for connector pin assignments.

The following sections describe how to wire signals using the BNC or D-sub connectors.

Wiring Signals to the BNC Connectors

To wire signals using the BNC connectors, connect the appropriate BNC connector to the appropriate input/output using a BNC cable.

The number of BNC connectors available on the box varies, depending on the version of the box that you are using. For example, the DT9836-12-2-BNC version, shown in [Figure 7](#) above, contains 18 BNC connectors (12 BNC connectors for single-ended analog inputs, two BNC connectors for analog outputs, and four BNC connectors for external clocks and triggers).

Wiring Signals to the D-Sub Connectors

If want to connect digital I/O or counter/timer signals to the BNC connection box, you can use the 37-pin, D-sub connectors. These connectors are described in the following sections.

Note: D-sub connectors are not available on the BNC connection box for analog input.

Digital In/Out Connector

The Digital In/Out connector allows you to access the digital I/O signals. [Table 3](#) lists the pin assignments for the Digital In/Out connector on the BNC connection box.

Table 3: Digital In/Out Connector Pin Assignments

Pin	Signal Description	Pin	Signal Description
1	Digital Input 0	20	Digital Output 0
2	Digital Input 1	21	Digital Output 1
3	Digital Input 2	22	Digital Output 2
4	Digital Input 3	23	Digital Output 3
5	Digital Input 4	24	Digital Output 4
6	Digital Input 5	25	Digital Output 5
7	Digital Input 6	26	Digital Output 6
8	Digital Input 7	27	Digital Output 7
9	Digital Input 8	28	Digital Output 8
10	Digital Input 9	29	Digital Output 9
11	Digital Input 10	30	Digital Output 10
12	Digital Input 11	31	Digital Output 11
13	Digital Input 12	32	Digital Output 12
14	Digital Input 13	33	Digital Output 13
15	Digital Input 14	34	Digital Output 14
16	Digital Input 15	35	Digital Output 15
17	Digital Ground	36	Reserved
18	Digital Ground	37	Digital Ground
19	No Connect		

CT/Enc In, Analog Out, Clk/Trig Connector

The CT/Enc In, Analog Output, Clk/Trig connector lets you access the counter/timer, quadrature decoder, analog output, external clock, and external trigger signals. [Table 4](#) lists the pin assignments for this connector on the BNC connection box.

Table 4: CT/Enc In, Analog Out, Clk/Trig Connector

Pin	Signal Description	Pin	Signal Description
1	Analog Output 0	20	Analog Output 0 Return
2	Analog Output 1	21	Analog Output 1 Return
3	Analog Output 2 ^a	22	Analog Output 2 Return ^a
4	Analog Output 3 ^a	23	Analog Output 3 Return ^a
5	Digital Ground	24	Digital Ground
6	External DAC Clock	25	External DAC Trigger
7	External ADC Clock	26	External ADC Trigger
8	Counter 0 Clock	27	Digital Ground
9	Counter 0 Out	28	Counter 0 Gate
10	Counter 1 Clock	29	Digital Ground
11	Counter 1 Out	30	Counter 1 Gate
12	Quad Dec 0 A	31	Digital Ground
13	Quad 0 Index	32	Quad Dec 0 B
14	Quad Dec 1 A	33	Digital Ground
15	Quad 1 Index	34	Quad Dec 1 B
16	Quad Dec 2 A	35	Digital Ground
17	Quad 2 Index	36	Quad Dec 2 B
18	Digital Ground	37	Digital Ground
19	No Connect		

a. Supported on the DT9836-6-4-OEM and DT9836-6-4-BNC modules only. For all other modules, these signals are reserved.

Connecting Analog Input Signals

The BNC connection box supports voltage inputs. You can connect analog input signals to a BNC connection box in **single-ended** mode. In this mode the source of the input should be close to the module, and all the input signals are referred to the same common ground.

Figure 8 shows how to connect single-ended voltage inputs (channels 0 and 1, in this case) to the BNC connectors on the BNC connection box.

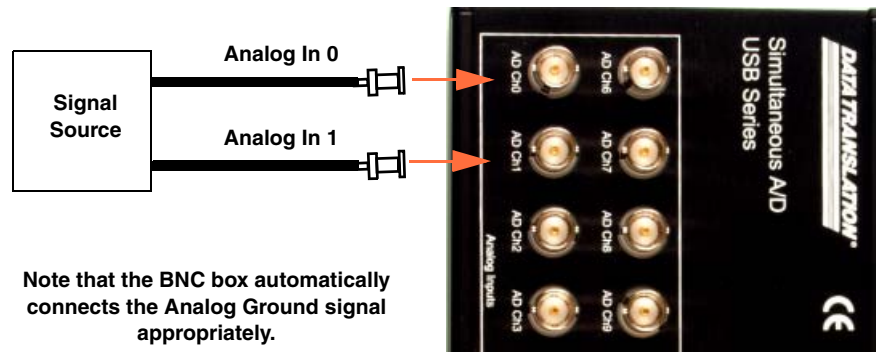


Figure 8: Connecting Single-Ended Inputs to the BNC Connection Box

Connecting Analog Output Signals

Figure 9 shows how to connect an analog output voltage signal (channel 0, in this case) to the BNC connectors on the BNC connection box.

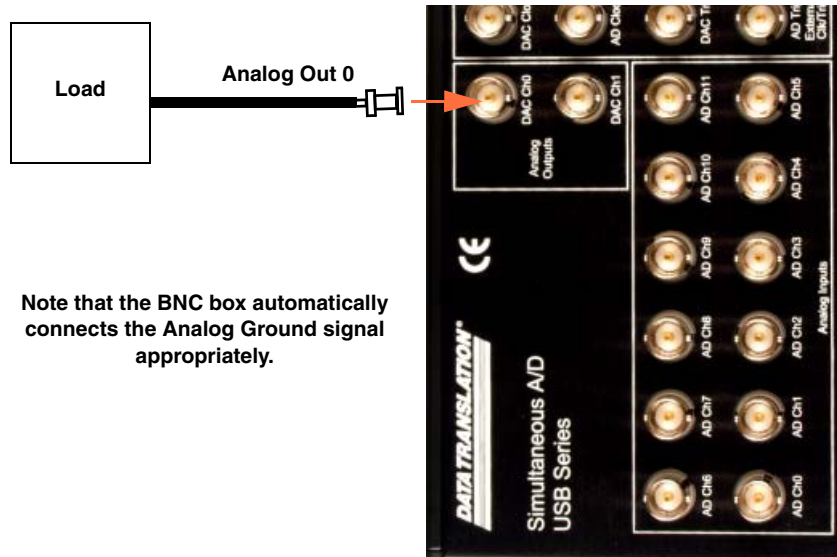


Figure 9: Connecting Analog Outputs to the BNC Connector Box

Connecting Digital I/O Signals

Figure 10 shows how to connect digital input signals (lines 0 and 1, in this case) to the pins of the Digital I/O connector.


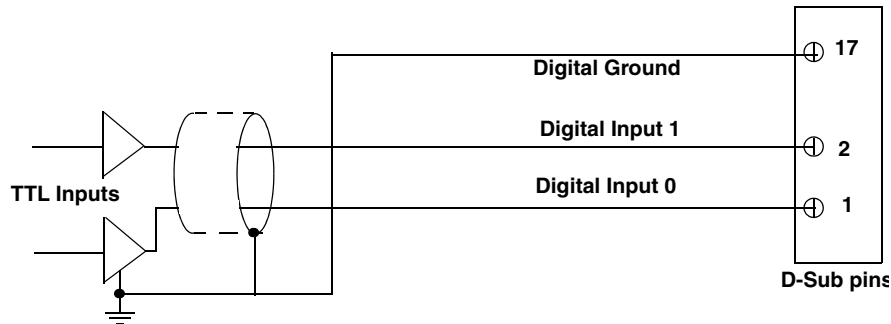


Figure 10: Connecting Digital Inputs to the D-Sub Pins

Figure 11 shows how to connect a digital output (line 0, in this case) to the pins of the Digital I/O connector.

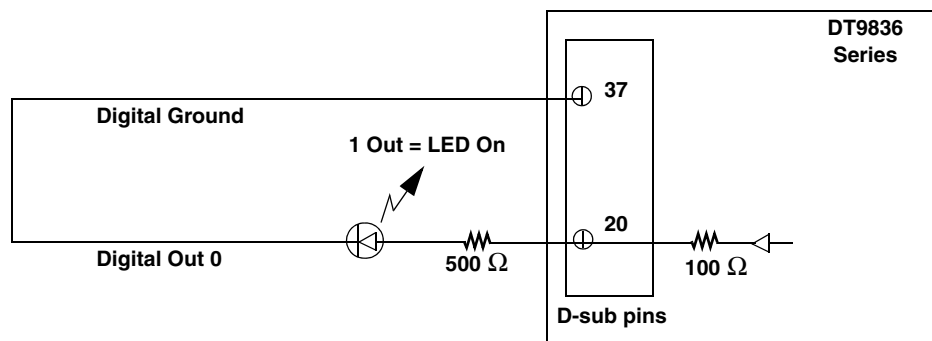

The output current is determined using the following equation:

$$Current_{Out} = \frac{Voltage_{Out}}{R_{Internal} + R_{External}}$$

In this example, if the maximum output voltage is 3.3 V, the internal resistor is 100 Ω and the external resistor is 500 Ω , the maximum output current is 5.5 mA. Using the minimum output voltage of 2.4 V with the same resistor values, the minimum current output current is 4 mA.

Figure 11: Connecting Digital Outputs to the D-Sub Pins

Connecting Counter/Timer Signals

The BNC connection box provides two counter/timer channels that you can use to perform the following operations:

- Event counting
- Up/down counting
- Frequency measurement
- Pulse width/period measurement
- Edge-to-edge measurement
- Continuous edge-to-edge measurement
- Pulse output (continuous, one-shot, and repetitive one-shot)

This section describes how to connect counter/timer signals. Refer to [page 86](#) for more information about using the counter/timers.

Event Counting

[Figure 12](#) shows how to connect counter/timer signals to the CT/Enc In, Analog Output, Clk/Trig D-sub pins to perform an event counting operation on counter/timer 0 using an external gate.

The counter counts the number of rising edges that occur on the Counter 0 Clock input when the Counter 0 Gate signal is in the active state (as specified by software). Refer to [page 89](#) for more information.

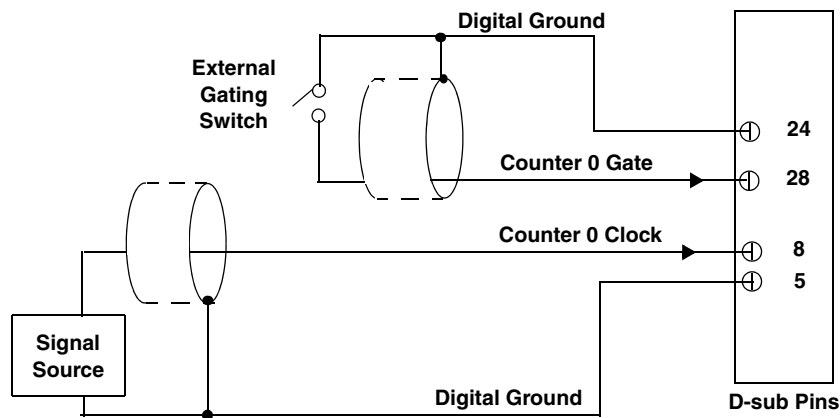


Figure 12: Connecting Counter/Timer Signals to the D-Sub Pins for an Event Counting Operation Using an External Gate

Figure 13 shows how to connect counter/timer signals to the CT/Enc In, Analog Output, Clk/Trig D-sub pins to perform an event counting operation on counter/timer 0 without using a gate. The counter counts the number of rising edges that occur on the Counter 0 Clock input.

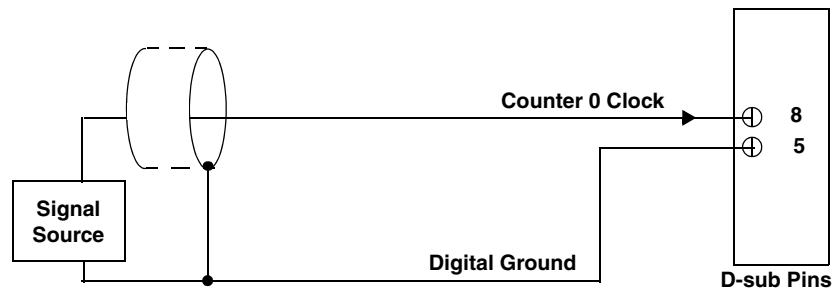


Figure 13: Connecting Counter/Timer Signals to the D-Sub Pins for an Event Counting Operation Without Using a Gate

Up/Down Counting

Figure 14 shows how to connect counter/timer signals to the CT/Enc In, Analog Output, Clk/Trig D-sub pins to perform an up/down counting operation on counter/timer 0. The counter keeps track of the number of rising edges that occur on the Counter 0 Clock input. The counter increments when the Counter 0 Gate signal is high and decrements when the Counter 0 Gate signal is low.

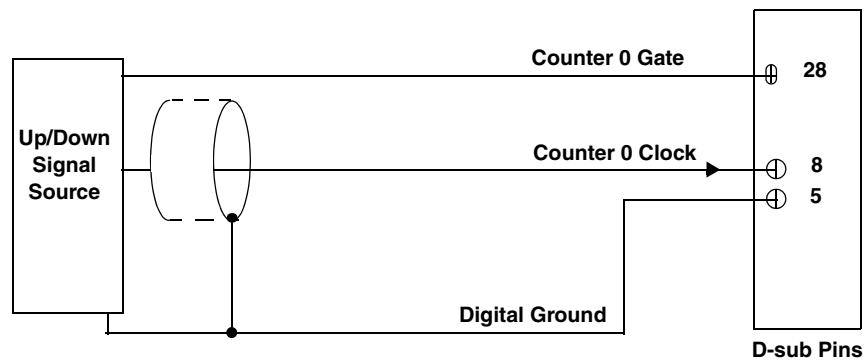


Figure 14: Connecting Counter/Timer Signals to the D-Sub Pins for an Up/Down Counting Operation

Frequency Measurement

One way to measure frequency is to connect a pulse of a known duration (such as a one-shot output of counter/timer 1) to the Counter 0 Gate input. [Figure 15](#) shows how to connect counter/timer signals to the CT/Enc In, Analog Output, Clk/Trig D-sub pins. In this case, the frequency of the Counter 0 clock input is the number of counts divided by the period of the Counter 0 Gate input signal.

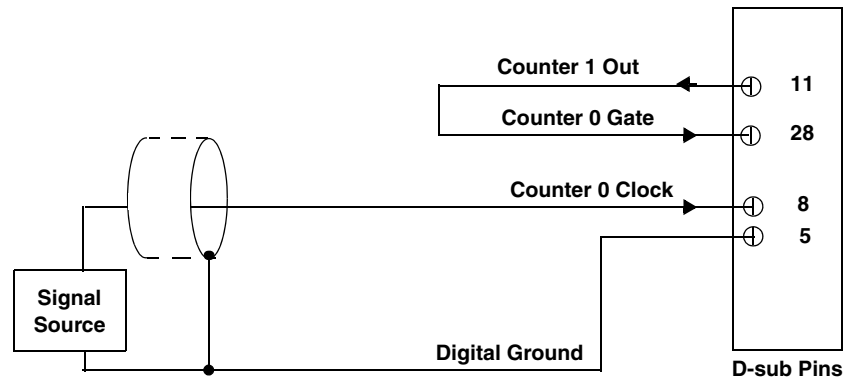


Figure 15: Connecting Counter/Timer Signals to the D-Sub Pins for a Frequency Measurement Operation Using an External Pulse

Period/Pulse Width Measurement

[Figure 16](#) shows how to connect counter/timer signals to the CT/Enc In, Analog Output, Clk/Trig D-sub pins to perform a period/pulse width measurement operation on counter/timer 0. You specify the active pulse (high or low) in software. The pulse width is the percentage of the total pulse period that is active. Refer to [page 91](#) for more information about pulse periods and pulse widths.

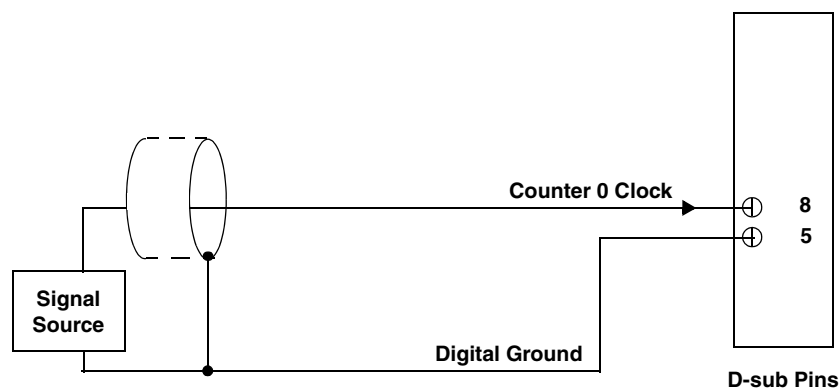


Figure 16: Connecting Counter/Timer Signals to the D-Sub Pins for a Period/Pulse Width Measurement Operation

Edge-to-Edge Measurement

Figure 17 shows how to connect counter/timer signals to the CT/Enc In, Analog Output, Clk/Trig D-sub pins to perform an edge-to-edge measurement operation using two signal sources. The counter measures the number of counts between the start edge (in this case, a rising edge on the Counter 0 Clock signal) and the stop edge (in this case, a falling edge on the Counter 0 Gate signal).

You specify the start edge and the stop edge in software. Refer to [page 91](#) for more information.

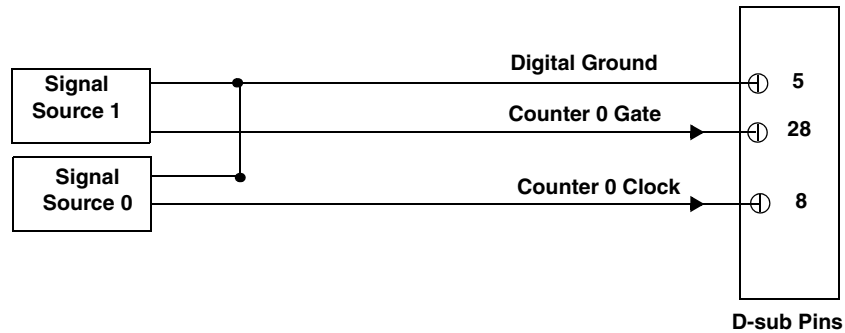


Figure 17: Connecting Counter/Timer Signals to the D-Sub Pins for an Edge-to-Edge Measurement Operation

Continuous Edge-to-Edge Measurement

Figure 18 shows how to connect counter/timer signals to the CT/Enc In, Analog Output, Clk/Trig D-sub pins to perform a continuous edge-to-edge measurement operation. The counter measures the number of counts between two consecutive start edges (in this case, a rising edge on the Counter 0 Clock signal).

You specify the start edge in software. Refer to [page 92](#) for more information.

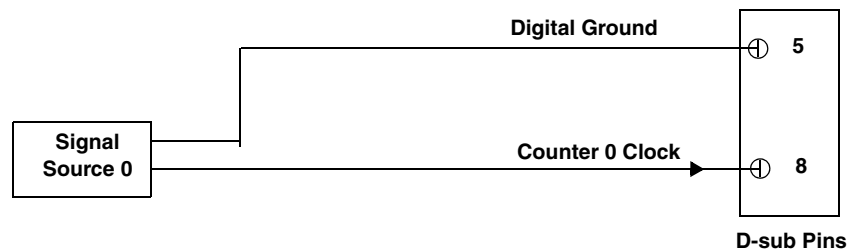


Figure 18: Connecting Counter/Timer Signals to the D-Sub Pins for a Continuous Edge-to-Edge Measurement Operation

Pulse Output

Figure 19 shows how to connect counter/timer signals to the CT/Enc In, Analog Output, Clk/Trig D-sub pins to perform a pulse output operation on counter/timer 0; in this example, an external gate is used.

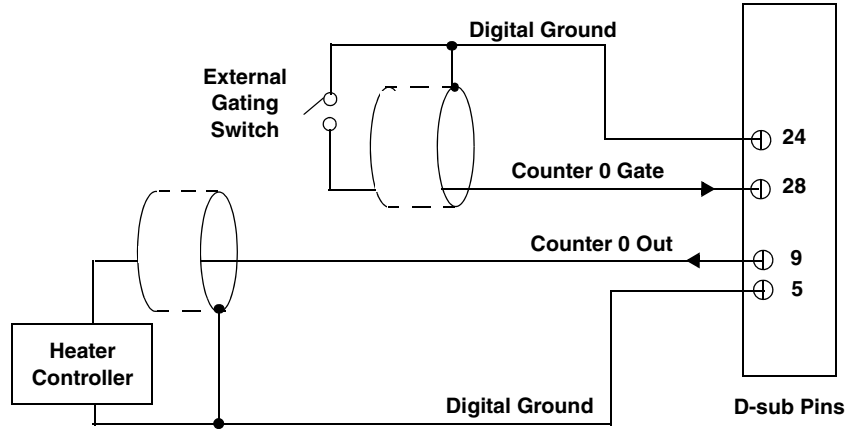


Figure 19: Connecting Counter/Timer Signals to the D-Sub Pins for a Pulse Output Operation Using an External Gate

Connecting Quadrature Decoder Signals

The BNC connection box provides three quadrature decoder channels that allow simultaneous decoding of three quadrature encoded inputs.

Each quadrature decoder supports "A," "B," and "Index" inputs and is used to interface with a quadrature encoder sensor. The A and B input relationships are used to increment or decrement the positional count; the Index input can be used to zero-out the positional count. Refer to [page 95](#) for more information about using the quadrature decoders.

[Figure 20](#) shows how to connect signals from a quadrature encoder to quadrature decoder 0 using the CT/Enc In, Analog Output, Clk/Trig D-sub pins.


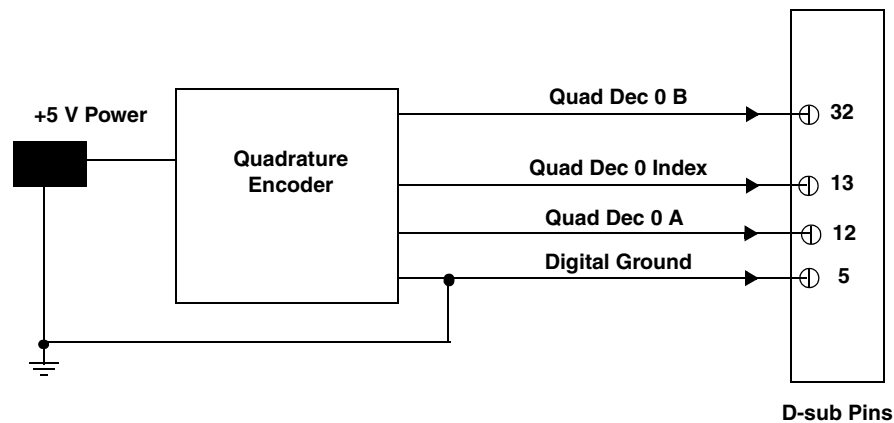


Figure 20: Connecting Quadrature Decoder Signals to the D-Sub Pins



Verifying the Operation of a Module

Running the Quick DataAcq Application.....	55
Testing Single-Value Analog Input	56
Testing Single-Value Analog Output.....	57
Testing Continuous Analog Input.....	58
Testing Continuous Analog Output	59
Testing Single-Value Digital Input.....	60
Testing Single-Value Digital Output	61
Testing Frequency Measurement.....	62
Testing Pulse Output	63

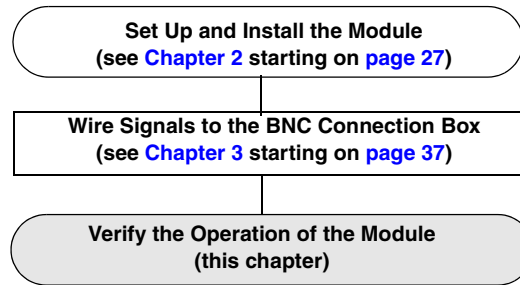

You can verify the operation of a DT9836 Series module using the Quick DataAcq application. Quick DataAcq lets you do the following:

- Acquire data from a single analog input channel or digital input port
- Acquire data continuously from one or more analog input channels using an oscilloscope, strip chart, or Fast Fourier Transform (FFT) view
- Measure the frequency of events
- Output data from a single analog output channel or digital output port
- Output pulses either continuously or as a one-shot
- Save the input data to disk

Running the Quick DataAcq Application

The Quick DataAcq application is installed automatically when you install the driver software.

To run the Quick DataAcq application, do the following:

1. If you have not already done so, power up your computer and any attached peripherals.
2. Click **Start** from the Task Bar.
3. Browse to **Programs | Data Translation, Inc | DT-Open Layers for Win32 | QuickDataAcq**.
The main menu appears.

Note: The Quick DataAcq application allows you to verify basic operations on the board; however, it may not support all of the board's features.

For information on each of the features provided, use the online help for the Quick DataAcq application by pressing F1 from any view or selecting the **Help** menu. If the system has trouble finding the help file, navigate to C:\Program Files\Data Translation\Win32\dtdataacq.hlp, where C: is the letter of your hard disk drive.

Testing Single-Value Analog Input

To verify that the module can read a single analog input value, do the following:

1. Connect a voltage source, such as a function generator, to analog input channel 0 on the DT9836 Series module. Refer to [page 44](#) for an example of how to connect an analog input.
2. In the Quick DataAcq application, choose **Single Analog Input** from the **Acquisition** menu.
3. Select the appropriate DT9836 Series module from the **Board** list box.
4. In the **Channel** list box, select analog input channel 0.
5. In the **Range** list box, select the range for the channel. *The default is ± 10 V.*
6. Select **Single Ended**.
7. Click **Get** to acquire a single value from analog input channel 0.
The application displays the value on the screen in both text and graphical form.

Testing Single-Value Analog Output

To verify that the module can output a single analog output value, do the following:

1. Connect an oscilloscope or voltmeter to analog output channel 0 on the module. Refer to [page 45](#) for an example of how to connect analog output signals.
2. In the Quick DataAcq application, choose **Single Analog Output** from the **Control** menu.
3. Select the appropriate DT9836 Series module from the **Board** list box.
4. In the **Channel** list box, select analog output channel 0.
5. In the **Range** list box, select the output range of analog output channel 0.
The default is ± 10 V.
6. Enter an output value, or use the slider to select a value, to output from analog output channel 0.
7. Click **Send** to output a single value from analog output channel 0.
The application displays the output value both on the slider and in the text box.

Testing Continuous Analog Input

To verify that the module can perform a continuous analog input operation, do the following:

1. Connect known voltage sources, such as the outputs of a function generator, to analog input channels 0 and 1 on the DT9836 Series module.
2. In the Quick DataAcq application, choose **Scope** from the **Acquisition** menu.
3. Select the DT9836 Series module from the **Board** list box.
4. In the **Sec/Div** list box, select the number of seconds per division (.1 to .00001) for the display.
5. In the **Channel** list box, select analog input channel 1, and then click **Add** to add the channel to the channel list. *Note that, by default, channel 0 is included in the channel list.*
6. Click **Config** from the Toolbar.
7. In the **Config** dialog, select **ChannelType**, and then select **Single Ended**.
8. In the **Config** dialog, select **Range**, and then select **Bipolar**.
9. Click **OK** to close the dialog box
10. From the Scope view, double-click the input range of the channel to change the input range of the module (± 10 V or ± 5 V). *The default is ± 10 V.*
The display changes to reflect the selected range for all the analog input channels on the module.
11. In the **Trigger** box, select **Auto** to acquire data continuously from the specified channels or **Manual** to acquire a burst of data from the specified channels.
12. Click **Start** from the Toolbar to start the continuous analog input operation.
The application displays the values acquired from each channel in a unique color on the oscilloscope view.
13. Click **Stop** from the Toolbar to stop the operation.

Testing Continuous Analog Output

To verify that the module can output a continuous analog signal, do the following:

1. Connect an oscilloscope or voltmeter to analog output channel 0 on the module. Refer to [page 44](#) for an example of how to connect analog output signals.
2. In the Quick DataAcq application, choose **Wave Generator** from the **Control** menu.
3. Select the appropriate DT9836 Series module from the **Board** list box.
4. In the **Waveform** area, select Sine.
5. Change the **Peak Voltage** and **Wave Frequency** values, if desired.
6. Click **Start** to output a waveform from analog output channel 0.

The application displays the waveform in the Wave Generator window, and on the attached oscilloscope or voltmeter.

Testing Single-Value Digital Input

To verify that the module can read a single digital input value, do the following:

1. Connect a digital input to digital input line 0 on the DT9836 Series module. Refer to [page 46](#) for information about how to connect a digital input.
2. In the Quick DataAcq application, choose **Digital Input** from the **Acquisition** menu.
3. Select the appropriate DT9836 Series module from the **Board** list box.
4. Click **Get**.

The application displays the entire 16-bit digital input value (0 to FFFF) in both the Data box and the Digital Input box.

In addition, application shows the state of the lower eight digital input lines (lines 0 to 7) in the graphical display. If an indicator light is lit (red), the line is high; if an indicator light is not lit (black), the line is low.

Note: Although the DT9836 Series modules contain 16 digital input lines, the Quick DataAcq application shows indicator lights for the lower eight digital input lines only. The 16-bit value is the correct value for all 16 lines.

Testing Single-Value Digital Output

Note: Although the DT9836 Series modules contain 16 digital output lines, the Quick DataAcq application allows you to perform a digital output operation on the lower eight digital output lines (lines 0 to 7) only.

To verify that the module can output a single digital output value, do the following:

1. Connect a digital output to digital output line 0 on the DT9836 Series module. Refer to [page 46](#) for information about how to connect a digital output.
2. In the Quick DataAcq application, choose **Digital Output** from the **Control** menu.
3. Select the appropriate DT9836 Series module from the **Board** list box.
4. Click the appropriate indicator lights to select the types of signals to write from the digital output lines. If you select a light, the module outputs a high-level signal; if you do not select a light, the module outputs a low-level signal. You can also enter an output value for the lower eight digital output lines (0 to FF) in the **Hex** text box.
5. Click **Send**.

The values of the lower eight digital output lines are output appropriately.

Testing Frequency Measurement

To verify that the module can perform a frequency measurement operation, do the following:

1. Wire an external clock source to counter/timer 0 on the DT9836 Series module. Refer to [page 49](#) for an example of how to connect an external clock.

Note: The Quick DataAcq application works only with counter/timer 0.

2. In the Quick DataAcq application, choose **Measure Frequency** from the **Acquisition** menu.
3. Select the appropriate DT9836 Series module from the **Board** list box.
4. In the **Count Duration** text box, enter the number of seconds during which events will be counted.
5. Click **Start** to start the frequency measurement operation.
The operation automatically stops after the number of seconds you specified has elapsed, and the frequency is displayed on the screen.
6. Click **Stop** to stop the frequency measurement operation.

Testing Pulse Output

To verify that the module can perform a pulse output operation, perform the following steps:

1. Connect a scope to counter/timer 0 on the DT9836 Series module. Refer to [page 51](#) for an example of how to connect a scope (a pulse output) to counter/timer 0.

Note: The Quick DataAcq application works only with counter/timer 0.

2. In the Quick DataAcq application, choose **Pulse Generator** from the **Control** menu.
3. Select the appropriate DT9836 Series module from the **Board** list box.
4. Select either **Continuous** to output a continuous pulse stream or **One Shot** to output one pulse.
5. Select either **Low-to-high** to output a rising-edge pulse (the high portion of the total pulse output period is the active portion of the signal) or **High-to-low** to output a falling-edge pulse (the low portion of the total pulse output period is the active portion of the signal).
6. Under **Pulse Width**, enter a percentage or use the slider to select a percentage for the pulse width. The percentage determines the duty cycle of the pulse.
7. Click **Start** to generate the pulse(s).
The application displays the results both in text and graphical form.
8. Click **Stop** to stop a continuous pulse output operation. One-shot pulse output operations stop automatically.

Part 2: Using Your Module



Principles of Operation

Analog Input Features	69
Analog Output Features	78
Digital I/O Features	84
Counter/Timer Features	86
Quadrature Decoder Features	95

Figure 21 shows a block diagram of the DT9836 Series modules.

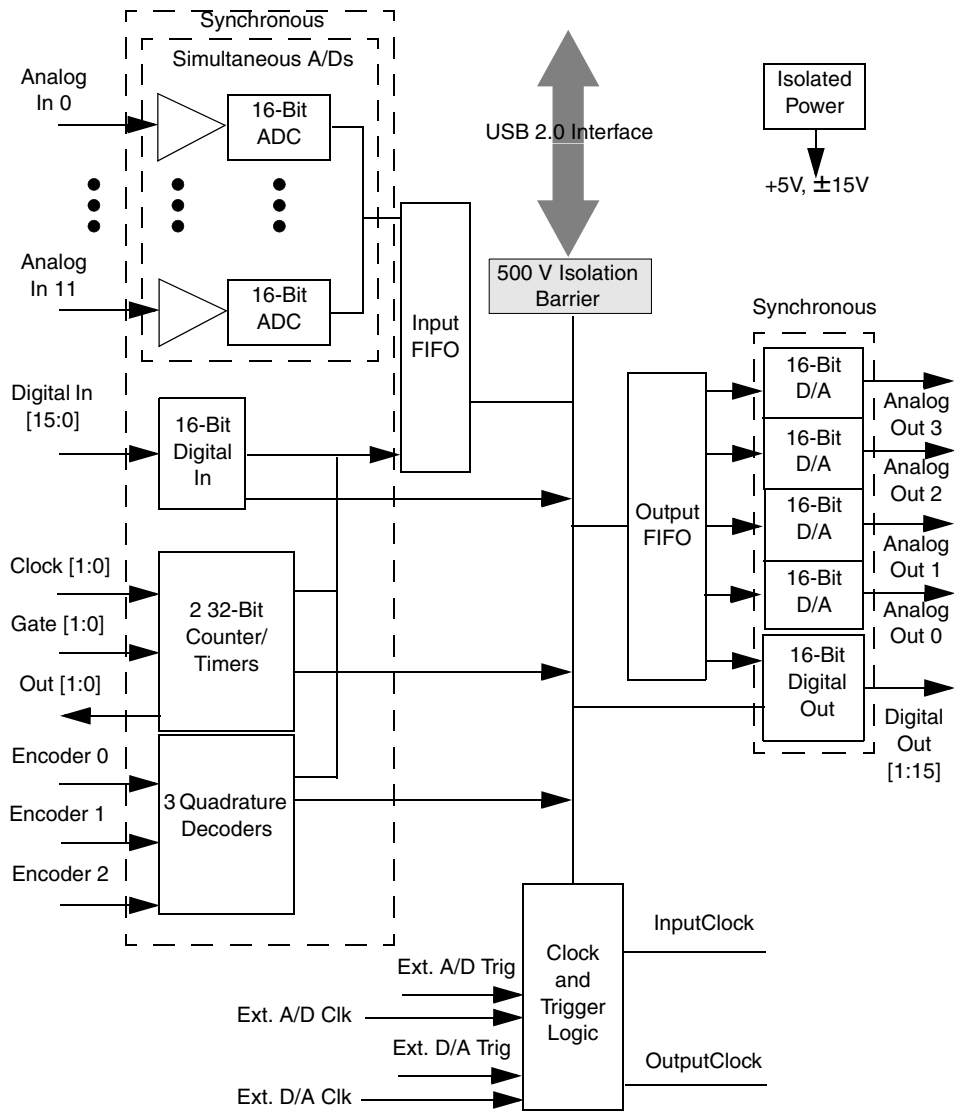


Figure 21: Block Diagram of the DT9836 Series Modules

Analog Input Features

This section describes the following features of analog input (A/D) operations on the DT9836 Series module:

- Input resolution, described below
- Analog input channels, described below
- Input ranges, described on [page 74](#)
- Input sample clock sources, described on [page 74](#)
- Analog input conversion modes, described on [page 75](#)
- Input triggers, described on [page 76](#)
- Data format and transfer, described on [page 77](#)
- Error conditions, described on [page 77](#)

Input Resolution

Input resolution is fixed at 16 bits; you cannot specify the resolution in software.

Analog Input Channels

The following modules support 12 analog input channels (numbered 0 to 11): DT9836-12-2-OEM, DT9836-12-2-BNC, DT9836-12-0-OEM, and DT9836-12-0-BNC.

These modules support 6 analog input channels (numbered 0 to 5): DT9836-6-4-OEM, DT9836-6-4-BNC, DT9836-6-2-OEM, DT9836-6-2-BNC, DT9836-6-0-OEM, DT9836-6-0-BNC, DT9836S-6-2-OEM, DT9836S-6-2-BNC, DT9836S-6-0-OEM, DT9836S-6-0-BNC.

You can connect the analog input channels in single-ended mode. In this mode the source of the input should be close to the module, and all the input signals are referred to the same common ground. The BNC connection box is shipped in a single-ended channel configuration.

Note: To maintain simultaneous operation, all analog input connections must have the same lead lengths. Do not use the STP37 screw terminal panel with the analog input subsystem.

The DT9836 Series modules can acquire data from a single analog input channel or from a group of analog input channels.

The following subsections describe how to specify the channels.

Specifying a Single Analog Input Channel

The simplest way to acquire data from a single analog input channel is to specify the channel for a single-value analog input operation using software; refer to [page 75](#) for more information about single-value operations.

You can also specify a single channel using the analog input channel list, described in the next section.

Specifying One or More Analog Input Channels

You can read data from one or more analog input channels using an analog input channel list. Because these modules feature simultaneous sampling, the order of the channels in the channel list does not matter. You cannot specify the same channel more than once in the list.

Using software, specify the channels you want to sample.

For the DT9836 Series modules that support 12 analog input channels, you can enter up to 23 entries in the channel list, including the digital input port, two 32-bit counter/timers, and three 32-bit quadrature decoders. Channels 0–11 are reserved for analog input.

For the DT9836 Series modules that support 6 analog input channels, you can enter up to 17 entries in the channel list, including the digital input port, two 32-bit counter/timers, and three 32-bit quadrature decoders. Channels 0–5 are reserved for analog input.

Note that for the DT9836S modules (DT9836S-6-2-OEM, DT9836S-6-2-BNC, DT9836S-6-0-OEM, and DT9836S-6-0-BNC), the number of channels that you enter in the channel list affects the maximum throughput that you can achieve. [Table 5](#) shows how the throughput is affected as the number of entries in the channel list is increased from 6 to 17 channels.

Table 5: Number of Channel List Entries and Effective Throughput for the DT9836S

Number of Channel List Entries	Effective Maximum Throughput
1	800 kHz
2	800 kHz
3	800 kHz
4	800 kHz
5	800 kHz
6	800 kHz
7	700 kHz
8	600 kHz
9	550 kHz
10	500 kHz

Table 5: Number of Channel List Entries and Effective Throughput for the DT9836S (cont.)

Number of Channel List Entries	Effective Maximum Throughput
11	450 kHz
12	400 kHz
13	375 kHz
14	350 kHz
15	325 kHz
16	300 kHz
17	290 kHz

Table 6 shows examples of typical channel combinations that you can enter in the channel list for DT9736S modules. Many other combinations are possible.

Table 6: Typical Channel List Entries for the DT9836S

Maximum Channel List Entries	Number of Analog Input Channels	Number of Digital Input Channels	Number of Counter/Timer Channels ^a	Number of Quadrature Decoder Channels ^a	Effective Maximum Throughput
6	6	0	0	0	800 kHz
	5	1	0	0	
	4	0	1	0	
	3	1	1	0	
	3	1	0	1	
	2	0	1	1	
	2	0	2	0	
	2	0	0	2	
	1	1	2	0	
	1	1	0	2	
	1	1	1	1	
	0	0	2	1	
	0	0	0	3	
	0	0	1	2	

Table 6: Typical Channel List Entries for the DT9836S (cont.)

Maximum Channel List Entries	Number of Analog Input Channels	Number of Digital Input Channels	Number of Counter/Timer Channels ^a	Number of Quadrature Decoder Channels ^a	Effective Maximum Throughput
10	6	0	1	1	500 kHz
	5	1	1	1	
17	6	1	2	3	290kHz

a. Each counter/timer and quadrature decoder channels use two entries in the channel list to achieve 32-bit resolution. Refer to [page 72](#) and [page 73](#) for more information.

Specifying the Digital Input Port in the Analog Input Channel List

The DT9836 Series modules allow you to read the digital input port (all 16 digital input lines) using the analog input channel list. This feature is particularly useful when you want to correlate the timing of analog and digital events.

To read the digital input port, specify channel 6 (if your module supports six analog inputs) or channel 12 (if your module supports 12 analog inputs) in the analog input channel list. You can enter channel 6 or 12 anywhere in the list.

The digital input port is treated like any other channel in the analog input channel list; therefore, all the clocking, triggering, and conversion modes supported for analog input channels are supported for the digital input port, if you specify them this way.

Specifying Counter/Timers in the Analog Input Channel List

The DT9836 Series modules allow you to read the value of the 32-bit counter/timer channels using the analog input channel list. This feature is particularly useful when you want to correlate the timing of analog and counter/timer events.

To read a counter/timer channel, specify the appropriate channel number in the analog input channel list (refer to [Table 7 on page 73](#)). You can enter a channel number anywhere in the list.

You need two channel list entries to read one 32-bit counter value. The first entry stores the lower 16-bit word, and the second entry stores the upper 16-bit word. You must specify both channel list entries if you include a counter/timer channel.

[Table 7](#) lists the channel number(s) to use for each counter/timer.

Table 7: Using Counter/Timers in the Analog Input Channel List

Counter/Timer Channel	Description	Channel to Specify in Channel List for:	
		DT9836-12	DT9836-6
C/T_0_LOW	Lower 16 bits (0 to 15) of C/T 0	Channel 13	Channel 7
C/T_0_HI	Upper 16 bits (16 to 31) of C/T 0	Channel 14	Channel 8
C/T_1_LOW	Lower 16 bits of C/T 1	Channel 15	Channel 9
C/T_1_HI	Upper 16 bits of C/T 1	Channel 16	Channel 10

The counter/timer channel is treated like any other channel in the analog input channel list; therefore, all the clocking, triggering, and conversion modes supported for analog input channels are supported for the counter/timers, if you specify them this way.

Specifying Quadrature Decoders in the Analog Input Channel List

The DT9836 Series modules allow you to read the value of the 32-bit quadrature decoders using the analog input channel list. This feature is particularly useful when you want to correlate the timing of analog and quadrature decoder values.

To read a quadrature decoder channel, specify the appropriate channel number in the analog input channel list (refer to [Table 8 on page 73](#)). You can enter a channel number anywhere in the list.

You need two channel list entries to read one 32-bit counter value. The first entry stores the lower 16-bit word, and the second entry stores the upper 16-bit word. You must specify both channel list entries if you include a counter/timer channel.

[Table 8](#) lists the channel number(s) to use for each counter/timer.

Table 8: Using Quadrature Decoders in the Analog Input Channel List

Counter/Timer Channel	Description	Channel to Specify in Channel List for:	
		DT9836-12	DT9836-6
QUAD_0_LOW	Lower 16 bits of Q/D 0	Channel 17	Channel 11
QUAD_0_HI	Upper 16 bits of Q/D 0	Channel 18	Channel 12
QUAD_1_LOW	Lower 16 bits of Q/D 1	Channel 19	Channel 13
QUAD_2_HI	Upper 16 bits of Q/D 1	Channel 20	Channel 14
QUAD_3_LOW	Lower 16 bits of Q/D 2	Channel 21	Channel 15
QUAD_3_HI	Upper 16 bits of Q/D 2	Channel 22	Channel 16

Note: If you are using the DataAcq SDK, you access the quadrature decoders through the C/T subsystem. C/T subsystem 2 corresponds to quadrature decoder 0, C/T subsystem 3 corresponds to quadrature decoder 1, and C/T subsystem 4 corresponds to quadrature decoder 2.

The quadrature decoder channel is treated like any other channel in the analog input channel list; therefore, all the clocking, triggering, and conversion modes supported for analog input channels are supported for the quadrature decoders, if you specify them this way.

Input Ranges

The DT9836 Series modules provide an input range of -10 to +10 V or -5 to +5 V. Use software to specify the range as -10 to +10 V or -5 to +5 V.

Note: This is the range for the entire analog input subsystem, not the range per channel.

You do not need to (and cannot) set gain values for DT9836 Series modules. The gain is preset at 1.

Input Sample Clock Sources

DT9836 Series modules allow you to use one of the following clock sources to pace analog input operations:

- **Internal A/D Clock** – Use software to specify the internal clock source on the module and the clock frequency at which to pace the operation.

For the DT9836S, the minimum frequency supported is 0.75 Samples/s, and the maximum frequency supported is 800 kSamples/s, depending on the number of entries in the channel list (see [page 70](#) for more information).

For all other models, the minimum frequency supported is 0.75 Samples/s, and the maximum frequency supported is 225 kSamples/s.

According to sampling theory (Nyquist Theorem), specify a frequency that is at least twice as fast as the input's highest frequency component. For example, to accurately sample a 20 kHz signal, specify a sampling frequency of at least 40 kHz. Doing so avoids an error condition called *aliasing*, in which high frequency input components erroneously appear as lower frequencies after sampling.

- **External A/D Clock** – An external A/D clock is useful when you want to pace acquisitions at rates not available with the internal A/D clock or when you want to pace at uneven intervals.

Connect an external A/D clock to the AD Clock BNC connector on the DT9836 Series module. Conversions start on the falling edge of the external A/D clock input signal.

Using software, specify the clock source as external. The clock frequency is always equal to the frequency of the external A/D sample clock input signal that you connect to the module.

Note: If you specify the digital input port and/or the counter/timer or quadrature decoder channels in the channel list, the sample clock also paces the acquisition of the digital input port, counter/timer, and/or quadrature decoder channels.

Analog Input Conversion Modes

DT9836 Series modules support the following conversion modes:

- Single-value mode, described below
- Continuous scan mode, described on [page 75](#)

Single-Value Mode

Single-value operations are the simplest to use. Using software, you specify the analog input channel. The module acquires the data from the specified channel and returns the data immediately. For a single-value operation, you cannot specify a clock source, trigger source, scan mode, or buffer.

Single-value operations stop automatically when finished; you cannot stop a single-value operation.

Continuous Scan Mode

Continuous scan mode takes full advantage of the capabilities of the DT9836 Series modules. Use continuous scan mode if you want to accurately control the period between successive simultaneous conversions of all channels in a channel list. You can specify the channel list, clock source, trigger source, scan mode, and buffer using software.

When it detects an initial trigger, the module simultaneously samples all of the input channels, including the digital inputs, counter/timers, and quadrature decoders, and converts the analog inputs. If the channel is included in the channel list, the sampled data is placed in the allocated buffer(s) and the operation continues until the allocated buffers are filled or until you stop the operation. Refer to [page 77](#) for more information about buffers.

The conversion rate is determined by the frequency of the input sample clock; refer to [page 74](#) for more information about the input sample clock. The sample rate, which is the rate at which a single entry in the channel list is sampled, is the same as the conversion rate due to the simultaneous nature of the module.

To select continuous scan mode, use software to specify the data flow as Continuous and to specify the initial trigger (the trigger source that starts the operation). You can select a software trigger, an external, positive digital (TTL) trigger, external, negative digital (TTL) trigger, or an analog threshold trigger as the initial trigger. Refer to [page 76](#) for more information about the supported trigger sources.

[Figure 22](#) illustrates continuous scan mode using a channel list with three entries: channel 0, channel 1, and channel 2. In this example, analog input data is acquired simultaneously on all channels on each clock pulse of the input sample clock. Data is acquired continuously.

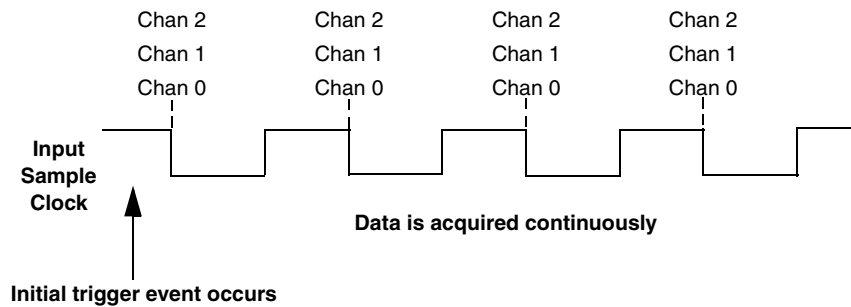


Figure 22: Continuous Scan Mode

Using software, you can stop a scan by performing either an orderly stop or an abrupt stop. In an orderly stop, the module finishes acquiring the current buffer, stops all subsequent acquisition, and transfers the acquired data to host memory; any subsequent triggers are ignored.

In an abrupt stop, the module stops acquiring samples immediately; the current buffer is not completely filled, it is returned to the application only partially filled, and any subsequent triggers are ignored.

Input Triggers

A trigger is an event that occurs based on a specified set of conditions. Acquisition starts when the module detects the initial trigger event and stops when either all the buffers that have been queued to the subsystem have been filled or you stop the operation.

The DT9836 Series module supports the following trigger sources:

- **Software trigger** – A software trigger event occurs when you start the analog input operation (the computer issues a write to the module to begin conversions). Using software, specify the trigger source as a software trigger.
- **External digital (TTL) trigger** – An external digital (TTL) trigger event occurs when the DT9836 Series module detects a transition (rising-edge or falling-edge) on the signal connected to the AD Trig BNC connector on the module. Using software, specify the trigger source as an external, positive digital (TTL) trigger for a rising-edge digital trigger or an external, negative digital (TTL) trigger for a falling-edge digital trigger.

- **Analog threshold trigger** – An analog threshold trigger event occurs when the signal on analog input channel 0 rises above (low-to-high transition) a programmable threshold level. Using software, specify the trigger source as a positive threshold trigger, the trigger channel as analog input channel 0, and the threshold level as a value between 0 and 10 V.

Data Format and Transfer

DT9836 Series modules use offset binary data encoding, where 0000 represents negative full-scale, and FFFFh represents positive full-scale. Use software to specify the data encoding as binary. The ADC outputs FFFFh for above-range signals, and 0000 for below-range signals.

Before you begin acquiring data, you must allocate buffers to hold the data. A Buffer Done event is returned whenever a buffer is filled. This allows you to move and/or process the data as needed.

We recommend that you allocate a minimum of two buffers for continuous analog input operations. Data is written to multiple allocated input buffers continuously; when no more empty buffers are available, the operation stops. The data is gap-free.

Note: The input FIFO holds 16 kSamples on the DT9836S Series modules and 2 kSamples on all other DT9836 Series modules. The data is transferred from the module to the buffers that you allocate.

Error Conditions

The DT9836 Series module reports any overrun errors by sending an overrun event to the application program. This event indicates that data buffers are not being sent from the host to the module fast enough, and so the A/D converter ran out of buffers. To avoid this error, try one or more of the following:

- Reduce the clock rate of the A/D
- Increase the size of the buffers
- Increase the number of buffers
- Close any other applications that are running
- Run the program on a faster computer

If one of these error conditions occurs, the module stops acquiring and transferring data to the host computer.

Analog Output Features

This section describes the following features of analog output operations:

- Output resolution, described below
- Analog output channels, described below
- Output ranges and gains, described on [page 79](#)
- Output triggers, described on [page 80](#)
- Output clocks, described on [page 80](#)
- Data format and transfer, described on [page 82](#)
- Error conditions, described on [page 83](#)

Output Resolution

Input resolution is fixed at 16 bits; you cannot specify the resolution in software.

Analog Output Channels

The following modules support 2 DC-level analog outputs (analog output channels 0 and 1): DT9836-12-2-OEM, DT9836-12-2-BNC, DT9836-6-2-OEM, and DT9836-6-2-BNC.

The DT9836-6-4-OEM and DT9836-6-4-BNC modules support four analog output channels (analog output channels 0 to 3). Refer to [Chapter 3](#) and [Appendix B](#) for information about how to wire analog output signals to the module.

Note: An extra analog output (D/A) subsystem is provided on all DT9836 Series modules for controlling the analog threshold trigger. The threshold trigger D/A is the highest-numbered D/A subsystem supported by your module. Refer to [page 76](#) for more information on analog threshold triggering.

The analog outputs are deglitched to prevent noise from interfering with the output signal. They power up to a value of 0 V \pm 10 mV. Unplugging the module resets the analog output channels to 0 V.

The DT9836 Series modules can output data to a single analog output channel or simultaneously to one or more analog output channels and/or the digital output port. The following subsections describe how to specify the channels.

Specifying a Single Analog Output Channel

The simplest way to output data to a single analog output channel is to specify the channel for a single-value analog output operation using software; refer to [page 80](#) for more information about single-value operations.

You can also specify a single analog output channel using the output channel list, described in the next section.

Specifying Multiple Analog Output Channels and/or the Digital Output Port

You can output data to one or more analog output channels and/or the digital output port using the output channel list. This feature is particularly useful when you want to correlate the timing of analog and digital output events.

Using software, specify the data flow mode as Continuous for the D/A subsystem (described on [page 80](#)) and specify the output channels you want to update. On modules with two analog output channels, 0 is analog output channel 0, 1 is analog output channel 1, and 2 is the digital output port. On the DT9836-6-4-OEM and DT9836-6-4-BNC modules, 0 to 3 correspond to analog output channels 0 to 3, and 4 is the digital output port. You can enter a maximum of 3 entries in the output channel list for modules with two analog output channels, or 5 entries in the output channel list for the DT9836-6-4-OEM and DT9836-6-4-BNC modules; the channels must be in order.

Note, however, that you can skip a channel in the list, if you do not want to update it. For example, if you want to update only analog output channel 1 and the digital output port on a module with two analog output channels, specify channels 1 and 2 in the output channel list. If you want to update all the analog output channels and the digital output port on this module, specify channels 0, 1, and 2 in the output channel list.

Note: The digital output port is treated like any other channel in the output channel list; therefore, all the clocking, triggering, and conversion modes supported for analog output channels are supported for the digital output port, if you specify the digital output port in the output channel list.

Output Ranges and Gains

Each analog output channel on the DT9836 Series module can output bipolar analog output signals in the range of ± 10 V.

Output Triggers

A trigger is an event that occurs based on a specified set of conditions. The DT9836 Series modules support the following output trigger sources:

- **Software trigger** – A software trigger event occurs when you start the analog output operation. Using software, specify the trigger source as a software trigger.
- **External digital (TTL) trigger** – An external digital (TTL) trigger event occurs when the DT9836 Series module detects a transition (rising-edge or falling-edge) on the signal connected to the DAC Trig BNC connector on the module. Using software, specify the trigger source as an external, positive digital (TTL) trigger for a rising-edge digital trigger, or an external, negative digital (TTL) trigger for a falling-edge digital trigger.

Output Clocks

DT9836 Series modules allow you to use one of the following clock sources to pace analog output operations:

- **Internal output clock** – Using software, specify the clock source as internal and the clock frequency at which to pace the operation. The minimum frequency supported is 0.75 Samples/s; the maximum frequency supported is 500 kSamples/s.
- **External output clock** – An external output clock is useful when you want to pace conversions at rates not available with the internal output clock or when you want to pace at uneven intervals.

Connect an external output clock to the DAC Clock BNC connector on the DT9836 Series module. Analog output operations start on the rising edge of the external DAC clock signal.

Using software, specify the clock source as external. The clock frequency is always equal to the frequency of the external output clock signal that you connect to the module.

Output Conversion Modes

DT9836 Series modules support the following conversion modes:

- **Single-value operations** are the simplest to use but offer the least flexibility and efficiency. Use software to specify the analog output channel that you want to update, and the value to output from that channel. For a single-value operation, you cannot specify a clock source, trigger source, or buffer. Single-value operations stop automatically when finished; you cannot stop a single-value operation.
- **Continuous analog output operations** take full advantage of the capabilities of the DT9836 Series modules. In this mode, you can specify an output channel list, clock source, trigger source, buffer, and buffer wrap mode. Two continuous analog output modes are supported: streaming and waveform generation mode. These modes are described in the following subsections.

Note that in waveform mode, each channel in the output channel list must write the same number of values, use the same output clock (refer to [page 80](#)), and use the same output trigger (refer to [page 80](#)).

Streaming Analog Output

Use streaming analog output mode if you want to accurately control the period between conversions of individual channels in the output channel list (refer to [page 79](#) for information on specifying the output channel list).

Use software to fill the output buffer with the values that you want to write to the analog output channels and to the digital output port, if applicable. For example, if your output channel list contains only analog output channel 0 and the digital output port, specify the values in the output buffer as follows: the first output value for analog output channel 0, the first output value for the digital output port, the second output value for analog output channel 0, the second output value for the digital output port, and so on.

When it detects a trigger, the module starts writing the values from the output buffer to the channels specified in the output channel list. The output channels are updated simultaneously. The operation repeats continuously until all the data is output from the buffers.

Make sure that the host computer transfers data to the output channel list fast enough so that the list does not empty completely; otherwise, an underrun error results.

To select streaming analog output mode, use software to specify the following parameters:

- Specify the data flow as Continuous,
- Specify WrapSingleBuffer as False to use multiple buffers
- Specify the trigger source as any of the supported trigger sources. Refer to [page 80](#) for more information about the supported trigger sources.

To stop a streaming analog output operation, you can stop queuing buffers to the analog output subsystem, letting the module stop when it runs out of data, or you can perform either an orderly stop or an abrupt stop using software. In an orderly stop, the module finishes outputting the current buffer, and then stops; all subsequent triggers are ignored. In an abrupt stop, the module stops outputting samples immediately; all subsequent triggers are ignored.

Waveform Generation

Use waveform generation mode if you want to output a waveform repetitively.

Note: The waveform pattern size must be the same for all output channels, and the total number of samples must be a multiple of the total number of output channels.

Use software to fill the output buffer with the values that you want to write to the channels in the output channel list. For example, if your output channel list contains only analog output channel 0 and the digital output port, specify the values in the output buffer as follows: the first output value for analog output channel 0, the first output value for the digital output port, the second output value for analog output channel 0, the second output value for the digital output port, and so on.

When it detects a trigger, the host computer transfers the entire waveform pattern to the module, and the module starts writing output values to the output channels, as determined by the output channel list. The output channels are updated simultaneously. A single buffer is output repeatedly. Use software to allocate the memory and specify the waveform pattern.

To select waveform generation mode, use software to specify the following parameters:

- Specify the data flow as Continuous
- Specify WrapSingleBuffer as True to use a single buffer
- Specify the trigger source as any of the supported trigger sources (refer to [page 80](#))

Data Format and Transfer

Data from the host computer must use offset binary data encoding for analog output signals, where 0000 represents -10 V, and FFFFh represents $+10$ V. Using software, specify the data encoding as binary.

Before you begin writing data to the output channels, you must allocate and fill buffers with the appropriate data. A buffer done event is returned whenever a buffer is transferred to the module. This allows you to reuse that buffer, and refill it with additional output data.

Note: If WrapSingleBuffer is False, we recommend that you allocate a minimum of two buffers that are even multiples of 256 samples. If WrapSingleBuffer is True, we recommend that you allocate a minimum of one buffer that is an even multiple of 256 samples.

In streaming mode, data is written from multiple output buffers continuously; when no more buffers of data are available, the operation stops. The data is gap-free. If the size of your buffers is less than 128 kSamples and you stop the analog output operation, the operation stops after the current buffer and the next buffer have been output.

If a single buffer is used (WrapSingleBuffer is True), data is written from a single output buffer continuously; when all the data in the buffer has been output, the module returns to the first location of the buffer and continues outputting the data. This process continues indefinitely until you stop it.

Note: If a single buffer is used and the allocated output buffer is equal to or less than the size of the output FIFO (128 kSamples) on the module, the data is written once to the module. The module recycles the data, allowing you to output the same pattern continuously without any further CPU or USB bus activity.

Error Conditions

The DT9836 Series module reports any underrun errors by sending an underrun event to the application. This event indicates that data buffers are not being sent from the host to the module fast enough, and so the D/A converter ran out of data. To avoid this error, try one or more of the following:

- Reduce the clock rate of the D/A
- Increase the size of the buffers
- Increase the number of buffers
- Close any other applications that are running
- Run the program on a faster computer

Digital I/O Features

This section describes the following features of digital I/O operations:

- Digital I/O lines, described below
- Operation modes, described below

Digital I/O Lines

DT9836 Series modules support one digital input port, consisting of 16 digital input lines (lines 0 to 15) and one digital output port, consisting of 16 digital output lines (lines 0 to 15). The resolution is fixed at 16-bits.

You can read all 16 digital input lines or write all 16 digital output lines with a single-value digital I/O operation. Refer to the next section for more information about single-value operations.

In addition, you can specify the digital input port in an analog input channel list to perform a continuous digital input operation. If your module supports analog output channels, you can specify the digital output port in an output channel list to perform a continuous digital output operation. Refer to the next section for more information about continuous digital I/O operations.

A digital line is high if its value is 1; a digital line is low if its value is 0. On power up or reset, a low value (0) is output from each of the digital output lines.

The DT9836 Series modules allow you to program the first eight digital input lines to perform interrupt-on-change operations. Refer to [page 85](#) for more information.

Operation Modes

The DT9836 Series modules support the following digital I/O operation modes:

- **Single-value operations** are the simplest to use but offer the least flexibility and efficiency. You use software to specify the digital I/O port (the gain is ignored). Data is then read from or written to all the digital I/O lines. For a single-value operation, you cannot specify a clock or trigger source.

Single-value operations stop automatically when finished; you cannot stop a single-value operation.

- **Continuous digital I/O** takes full advantage of the capabilities of the DT9836 Series modules using the analog I/O clock source, scan mode, trigger source, buffer, and buffer wrap mode.
 - **Digital input** – For digital input operations, enter the digital input port (all 16 digital input lines) as channel 6 (for modules with 6 analog input channels) or 12 (for modules with 12 analog input channels) in the analog input channel list; refer to [page 72](#) for more information. The analog input sample clock (internal or external) paces the reading of the digital input port (as well as the acquisition of the analog input, counter/timer, and quadrature decoder channels); refer to [page 74](#) for more information.

-
- **Digital output** – If your module supports analog output channels, you can enter the digital output port (all 16 digital output lines) in the output channel list; use channel 2 for module with two analog output channels, or channel 4 for the DT9836-6-4-OEM and DT9836-6-4-BNC modules. Refer to [page 79](#) for more information. The analog output clock (internal or external) paces the update of the digital output port (as well as the update of the analog output channels); refer to [page 80](#) for more information.

Note that continuous digital output operations are not supported on modules that do not have analog output channels.

- **Interrupt-on-change operations** – You can use the Open Layers Control Panel applet to select any of the first eight digital input lines to perform interrupt-on-change operations; refer to [page 35](#) for more information.

Use software to set the data flow mode of the digital I/O subsystem to Continuous. When any one of the specified bits changes state, the module reads the entire 16-bit digital input value and generates an interrupt. The software returns the current value of the digital input port as well as the digital input lines that changed state.

Note: If you are using the DataAcq SDK to perform an interrupt-on-change operation, use the *lParam* parameter of the **oldDataSetWndHandle** or **oldDataSetNotificationProcedure** function to determine which digital input line changed state and the status of the digital input port when the interrupt occurred.

The low byte of the first word of *lParam* contains the state of the digital input subsystem, where bit 0 corresponds to digital input line 0 and bit 7 corresponds to digital input line 7.

The high byte of the first word of *lParam* contains the digital lines (bits) that changed state causing the interrupt to occur, where bit 8 corresponds to digital input line 0 and bit 15 corresponds to digital input line 7.

Counter/Timer Features

This section describes the following features of counter/timer (C/T) operations:

- C/T channels, described below
- C/T clock sources, described on [page 87](#)
- Gate types, described on [page 87](#)
- Pulse types and duty cycles, described on [page 88](#)
- C/T operation modes, described on [page 88](#)

C/T Channels

The DT9836 Series modules provide two 32-bit counter/timers (numbered C/T 0 and 1) for general-purpose applications. Each general-purpose counter accepts a clock input signal and gate input signal and outputs a pulse (pulse output signal), as shown in [Figure 23](#).

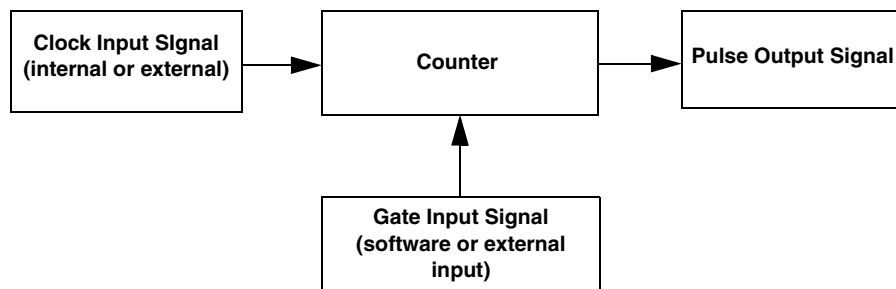


Figure 23: Counter/Timer Channel

To specify the counter/timer to use in software, specify the appropriate C/T subsystem. For example, counter/timer 0 corresponds to C/T subsystem element 0, and counter/timer 1 corresponds to C/T subsystem element 1.

Using software, you can also specify one or more of the counter/timers in the analog input channel list. You need two channel list entries to read a 32-bit counter/timer value. The first entry stores the lower 16-bit word, and the second entry stores the upper 16-bit word. Refer to [page 72](#) for more information about using C/Ts in the channel list.

C/T Clock Sources

The following clock sources are available for the general-purpose counter/timers:

- **Internal C/T clock** – Through software, specify the clock source as internal, and specify the frequency at which to pace the operation (this is the frequency of the Counter n Out signal). This is typically used in rate generation mode.
- **External C/T clock** – An external C/T clock is useful when you want to pace counter/timer operations at rates not available with the internal C/T clock or if you want to pace at uneven intervals. The frequency of the external C/T clock can range from 0.0084 Hz to 18 MHz.

Connect the external clock to the Counter n Clock input signal on the DT9836 Series module. Counter/timer operations start on the rising edge of the clock input signal.

Using software, specify the clock source as external and specify a clock divider between 2 and 4,924,967,296. Internally, the base frequency of C/T clock, which is 36 MHz, is divided by the specified clock divider to program the frequency of the external C/T clock.

Note: You typically use the external C/T clock (the clock connected to the Counter n Clock input signal) to measure frequency (event counting), or to measure the time interval between edges (measure mode). The external C/T clock is not generally used for rate generation.

If you specify a counter/timer in the analog input channel list, the A/D clock determines how often you want to read the counter value. Refer to [page 74](#) for more information about the A/D clock.

Gate Types

The edge or level of the Counter n Gate signal determines when a counter/timer operation is enabled. DT9836 Series modules provide the following gate types, which you can specify in software:

- **None** – A software command enables any counter/timer operation immediately after execution.
- **Logic-low level external gate input** – Enables a counter/timer operation when the Counter n Gate signal is low, and disables the counter/timer operation when the Counter n Gate signal is high. Note that this gate type is used for event counting and rate generation modes; refer to [page 88](#) for more information about these modes.
- **Logic-high level external gate input** – Enables a counter/timer operation when the Counter n Gate signal is high, and disables a counter/timer operation when the Counter n Gate signal is low. Note that this gate type is used for event counting and rate generation modes; refer to [page 88](#) for more information about these modes.
- **Falling-edge external gate input** – Enables a counter/timer operation when a high-to-low transition is detected on the Counter n Gate signal. In software, this is called a low-edge gate type. Note that this gate type is used for edge-to-edge measurement, one-shot, and repetitive one-shot mode; refer to [page 88](#) for more information about these modes.

- **Rising-edge external gate input** – Enables a counter/timer operation when a low-to-high transition is detected on the Counter n Gate signal. In software, this is called a high-edge gate type. Note that this gate type is used for edge-to-edge measurement, one-shot, and repetitive one-shot mode; refer to [page 88](#) for more information about these modes.

Pulse Output Types and Duty Cycles

The DT9836 Series modules can output the following types of pulses from each counter/timer:

- **High-to-low transitions** – The low portion of the total pulse output period is the active portion of the counter/timer clock output signal.
- **Low-to-high transitions** – The high portion of the total pulse output period is the active portion of the counter/timer pulse output signal.

You specify the pulse output type in software.

The duty cycle (or pulse width) indicates the percentage of the total pulse output period that is active. For example, a duty cycle of 50 indicates that half of the total pulse output is low and half of the total pulse output is high. You specify the duty cycle in software.

[Figure 24](#) illustrates a low-to-high pulse with a duty cycle of approximately 30%.

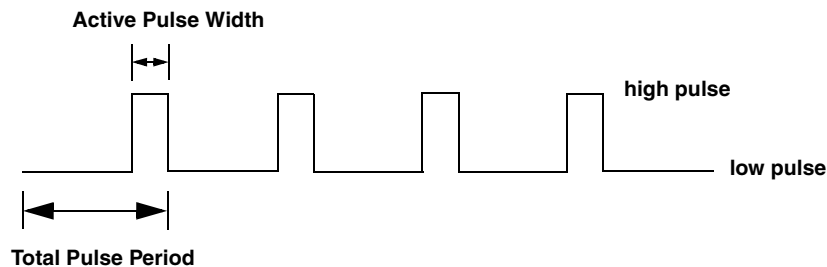


Figure 24: Example of a Low-to-High Pulse Output Type

Counter/Timer Operation Modes

DT9836 Series modules support the following counter/timer operation modes:

- Event counting
- Up/down counting
- Frequency measurement
- Edge-to-edge measurement
- Continuous edge-to-edge measurement
- Rate generation
- One-shot

- Repetitive one-shot

Note: The active polarity for each counter/timer operation mode is software-selectable.

Event Counting

Use event counting mode if you want to count the number of rising edges that occur on the Counter n Clock input when the Counter n Gate signal is active (low-level or high-level). Refer to [page 87](#) for information about specifying the active gate type.

You can count a maximum of 4,294,967,296 events before the counter rolls over to 0 and starts counting again.

Using software, specify the counter/timer mode as event counting (count), the C/T clock source as external, and the active gate type as low-level or high-level.

Make sure that the signals are wired appropriately. Refer to [page 47](#) for an example of connecting an event counting application.

Up/Down Counting

Use up/down counting mode if you want to increment or decrement the number of rising edges that occur on the Counter n Clock input, depending on the level of the Counter n Gate signal.

If the Counter n Gate signal is high, the C/T increments; if the specified gate signal is low, the C/T decrements.

Using software, specify the counter/timer mode as up/down counting (up/down), and the C/T clock source as external. Note that you do not specify the gate type in software.

Make sure that the signals are wired appropriately. Refer to [page 48](#) for an example of connecting an up/down counting application.

Note: Initialize the counter/timer so that the C/T never increments above FFFFFFFFh or decrements below 0.

Frequency Measurement

Use frequency measurement mode if you want to measure the number of rising edges that occur on the Counter *n* Clock input over a specified duration.

Using software, specify the counter/timer mode as frequency measurement (count) or event counting (count), the clock source as external, and the time over which to measure the frequency.

You can connect a pulse of a known duration (such as a one-shot output of another user counter) to the Counter *n* Gate input signal. Use software to set up the counter/timers as follows:

1. Set up one of the counter/timers for one-shot mode, specifying the clock source as internal, the clock frequency, the gate type that enables the operation as rising edge or falling edge, and the polarity of the output pulse as high-to-low transition or low-to-high transition.
2. Set up the counter/timer that will measure the frequency for event counting mode, specifying the type of clock pulses to count and the gate type (this should match the pulse output type of the counter/timer set up for one-shot mode).
3. Start both counters (pulses are not counted until the active period of the one-shot pulse is generated).
4. Read the number of pulses counted. (Allow enough time to ensure that the active period of the one-shot occurred and that events have been counted.)
5. Determine the measurement period using the following equation:

$$MeasurementPeriod = \frac{1}{ClockFrequency} \times ActivePulseWidth$$

6. Determine the frequency of the clock input signal using the following equation:

$$FrequencyMeasurement = \frac{NumberOfEvents}{MeasurementPeriod}$$

Edge-to-Edge Measurement

Use edge-to-edge measurement mode if you want to measure the time interval between a specified start edge and a specified stop edge.

The start edge and the stop edge can occur on the rising edge of the Counter n Gate input, the falling edge of the Counter n Gate input, the rising edge of the Counter n Clock input, or the falling edge of the Counter n Clock input. When the start edge is detected, the counter/timer starts incrementing, and continues incrementing until the stop edge is detected. The C/T then stops incrementing until it is enabled to start another measurement.

You can use edge-to-edge measurement to measure the following:

- Pulse width of a signal pulse (the amount of time that a signal pulse is in a high or a low state, or the amount of time between a rising edge and a falling edge or between a falling edge and a rising edge). You can calculate the pulse width as follows:
 - Pulse width = Number of counts/36 MHz
- Period of a signal pulse (the time between two occurrences of the same edge - rising edge to rising edge or falling edge to falling edge). You can calculate the period as follows:
 - Period = 1/Frequency
 - Period = Number of counts/36 MHz
- Frequency of a signal pulse (the number of periods per second). You can calculate the frequency as follows:
 - Frequency = 36 MHz/Number of Counts

When the operation is complete, you can read the value of the counter.

Using software, specify the counter/timer mode as edge-to-edge measurement mode (measure), the C/T clock source as internal, the start edge type, and the stop edge type.

Make sure that the signals are wired appropriately. Refer to [page 50](#) for an example of connecting an edge-to-edge measurement application.

Continuous Edge-to-Edge Measurement

In continuous edge-to-edge measurement mode, the counter starts incrementing when it detects the specified start edge. When it detects the next start edge type, the value of the counter is stored and the next edge-to-edge measurement operation begins automatically.

Every time an edge-to-edge measurement operation completes, the previous measurement is overwritten with the new value. When you read the counter as part of the analog input data stream, the current value (from the last edge-to-edge measurement operation) is returned and the value of the counter is reset to 0. Refer to [page 91](#) for more information on edge-to-edge measurement mode.

Note: If you read the counter before the measurement is complete, 0 is returned.

For example, you might see results similar to the following if you read the value of the counter/timer as part of the analog input data stream:

Table 9: An Example of Performing a Continuous Edge-to-Edge Measurement Operation as Part of the Analog Input Channel List

Time	A/D Value	Counter/ Timer Value	Status of Continuous Edge-to-Edge Measurement Mode
10	5002	0	Operation started when the C/T subsystem was configured, but is not complete
20	5004	0	Operation not complete
30	5003	0	Operation not complete
40	5002	12373	Operation complete
50	5000	0	Next operation started, but is not complete
60	5002	0	Operation not complete
70	5004	0	Operation not complete
80	5003	12403	Operation complete
90	5002	0	Next operation started, but is not complete

To select continuous edge-to-edge measurement mode, use software to specify the counter/timer mode as continuous measure, the C/T clock source as internal, and the start edge type.

Rate Generation

Use rate generation mode to generate a continuous pulse output signal from the Counter n Out line; this mode is sometimes referred to as continuous pulse output or pulse train output. You can use this pulse output signal as an external clock to pace other operations, such as analog input, analog output, or other counter/timer operations.

The pulse output operation is enabled whenever the Counter n Gate signal is at the specified level. While the pulse output operation is enabled, the counter outputs a pulse of the specified type and frequency continuously. As soon as the operation is disabled, rate generation stops.

The period of the output pulse is determined by the C/T clock source (either internal using a clock divider, or external). You can output pulses using a maximum frequency of 18 MHz (this is the frequency of the Counter n Out signal). Refer to [page 87](#) for more information about the C/T clock sources.

Using software, specify the counter/timer mode as rate generation (rate), the C/T clock source as either internal or external, the clock divider (for an internal clock), the polarity of the output pulses (high-to-low transition or low-to-high transition), the duty cycle of the output pulses, and the active gate type (low-level or high-level). Refer to [page 88](#) for more information about pulse output signals and to [page 87](#) for more information about gate types.

Make sure that the signals are wired appropriately. Refer to [page 51](#) for an example of connecting a rate generation application.

One-Shot

Use one-shot mode to generate a single pulse output signal from the Counter n Out line when the specified edge is detected on the Counter n Gate signal. You can use this pulse output signal as an external digital (TTL) trigger to start other operations, such as analog input or analog output operations.

After the single pulse is output, the one-shot operation stops. All subsequent clock input signals and gate input signals are ignored.

The period of the output pulse is determined by the C/T clock source (either internal using a clock divider, or external). Note that in one-shot mode, the internal C/T clock is more useful than an external C/T clock; refer to [page 87](#) for more information about the C/T clock sources.

Using software, specify the counter/timer mode as one-shot, the clock source as internal (recommended), the clock divider, the polarity of the output pulse (high-to-low transition or low-to-high transition), and the active gate type (rising edge or falling edge). Refer to [page 88](#) for more information about pulse output types and to [page 87](#) for more information about gate types.

Note: In the case of a one-shot operation, a duty cycle of 100% is set automatically.

Make sure that the signals are wired appropriately. Refer to [page 51](#) for an example of connecting a one-shot application.

Repetitive One-Shot

Use repetitive one-shot mode to generate a pulse output signal from the Counter *n* Out line whenever the specified edge is detected on the Counter *n* Gate signal. You can use this mode to clean up a poor clock input signal by changing its pulse width, and then outputting it.

The module continues to output pulses until you stop the operation. Note that any Counter *n* Gate signals that occur while the pulse is being output are not detected by the module.

The period of the output pulse is determined by the C/T clock source (either internal using a clock divider, or external). Note that in repetitive one-shot mode, the internal C/T clock is more useful than an external clock; refer to [page 87](#) for more information about the C/T clock sources.

Using software, specify the counter/timer mode as repetitive one-shot, the polarity of the output pulses (high-to-low transition or low-to-high transition), the C/T clock source as internal (recommended), the clock divider, and the active gate type (rising edge or falling edge). Refer to [page 88](#) for more information about pulse output types and to [page 87](#) for more information about gates.

Note: In the case of a one-shot operation, a duty cycle of 100% is set automatically.

Make sure that the signals are wired appropriately. Refer to [page 51](#) for an example of connecting a repetitive one-shot application.

Quadrature Decoder Features

The DT9836 Series modules provide three 32-bit quadrature decoders that allow simultaneous decoding of three quadrature encoded inputs. Quadrature decoders may be used to provide relative or absolute position, or determine rotational speed by calculating the difference between samples.

To specify the quadrature decoder to use in software, specify the appropriate QUAD subsystem. For example, quadrature decoder 0 corresponds to QUAD subsystem element 0, and quadrature decoder 1 corresponds to QUAD subsystem element 1.

Note: If you are using the DataAcq SDK, you access the quadrature decoders through the C/T subsystem. C/T subsystem 2 corresponds to quadrature decoder 0, C/T subsystem 3 corresponds to quadrature decoder 1, and C/T subsystem 4 corresponds to quadrature decoder 2.

Using software, you can also specify one or more of the quadrature decoders in the analog input channel list. You need two channel list entries to read a 32-bit quadrature decoder value. The first entry stores the lower 16-bit word, and the second entry stores the upper 16-bit word. Refer to [page 73](#) for more information about using quadrature decoders in the channel list.

Each quadrature decoder supports "A," "B," and "Index" inputs and is used to interface with a quadrature encoder sensor. The A and B input relationships are used to increment or decrement the positional count; the Index input can be used to zero-out the positional count.

[Figure 25](#) shows an example of a quadrature decoder mode. In this case, the A input leads the B input, up counting with a 90 degree Index.




Figure 25: Example Quadrature Decoder Mode

Using software, you can specify the following parameters for a quadrature decoder operation:

- The pre-scale value that is used to filter the onboard clock. Using a pre-scale value can remove ringing edges and unwanted noise for more accurate data.
- The scaling mode (X1 or X4 mode), which determines the resolution of the quadrature encoder. In X1 mode, the quadrature decoder counts the edges on the A signal input. In X4, mode the quadrature decoder counts the edges on the A and B signal inputs.

Therefore, if a quadrature encoder has 360 pulses per revolution, X1 mode yields 360 counts when the quadrature encoder is rotated 360 degrees. X4 mode yields four times the number of counts, or 1440 (360 x 4) when the quadrature encoder is rotated 360 degrees.

- The index mode, which either enables the Index signal or disables the Index signal. Note that if the scaling mode is X4, the index mode must be disabled.

Note: For quadrature decoder operations, set the clock source to external.

You can read the value of the quadrature decoder subsystem to determine relative or absolute position.

To determine the rotation of a quadrature encoder, use one of the following formulas:

X1 Scaling Mode:

$$RotationDegrees = \frac{Count}{N} \times 360$$

where N is the number of pulses generated by the quadrature encoder per rotation. For example, assume that you are using X1 scaling mode. If every rotation of the quadrature encoder generated 10 pulses, and the value that is read from the quadrature decoder is 5, the rotation of the quadrature encoder is 180 degrees ($5/10 \times 360$ degrees).

X4 Scaling Mode:

$$RotationDegrees = \frac{Count}{4 \times N} \times 360$$

where N is the number of pulses generated by the quadrature encoder per rotation. For example, assume that you are using X4 scaling mode. If every rotation of the quadrature encoder generated 10 pulses, and the value that is read from the quadrature decoder is 20, the rotation of the quadrature encoder is 180 degrees ($20/40 \times 360$ degrees).



Supported Device Driver Capabilities

Data Flow and Operation Options.....	99
Buffering	100
Triggered Scan Mode	100
Data Encoding.....	100
Channels	101
Gain	102
Ranges	102
Resolution	102
Current and Resistance Support	103
Thermocouple, RTD, and Thermistor Support	104
IEPE Support.....	105
Bridge and Strain Gage Support	105
Start Triggers.....	106
Reference Triggers	106
Clocks.....	107
Counter/Timers	108
Tachometers.....	109

The DT9836 Series Device Driver provides support for the analog input (A/D), analog output (D/A), digital input (DIN), digital output (DOUT), counter/timer (C/T), and quadrature decoder (QUAD) subsystems. For information on how to configure the device driver, refer to [Chapter 2](#).

Table 10: DT9836 Series Subsystems

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Total Subsystems on Module	1	1 or 2 ^a	1	1	2	0	3

- a. If your module doesn't support D/A, there is still one subsystem (element 0) for the analog threshold trigger. If your module does support D/A, subsystem element 0 contains the analog output channels, and element 1 is used for the analog threshold trigger.

The tables in this chapter summarize the features available for use with the DT-Open Layers for .NET Class Library and the DT9836 Series modules. The DT-Open Layers for .NET Class Library provides properties that return support information for specified subsystem capabilities.

The first row in each table lists the subsystem types. The first column in each table lists all possible subsystem capabilities. A description of each capability is followed by the property used to describe that capability in the DT-Open Layers for .NET Class Library.

Note: The following tables include the capabilities that can be queried. However, some capabilities may not be supported by your device. Blank fields represent unsupported options.

For more information, refer to the description of these properties in the DT-Open Layers for .NET Class Library online help or *DT-Open Layers for .NET Class Library User's Manual*.

Data Flow and Operation Options

Table 11: Data Flow and Operation Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Single-Value Operation Support SupportsSingleValue	Yes	Yes	Yes	Yes	Yes		Yes
Simultaneous Single-Value Output Operations SupportsSetSingleValues							
Continuous Operation Support SupportsContinuous	Yes	Yes	Yes ^a	Yes ^b	Yes ^c		Yes ^d
Continuous Operation until Trigger SupportsContinuousPreTrigger							
Continuous Operation before & after Trigger SupportsContinuousPrePostTrigger							
Waveform Operations Using FIFO Only SupportsWaveformModeOnly							
Simultaneous Start List Support SupportsSimultaneousStart	Yes	Yes					
Supports Programmable Synchronization Modes SupportsSynchronization							
Synchronization Modes SynchronizationMode							
Interrupt Support SupportsInterruptOnChange			Yes ^e				
FIFO Size, in samples FifoSize	16 kSamples or 2 kSamples ^f	128 kSamples					
Muting and Unmuting the Output Voltage SupportsMute							
Auto-Calibrate Support SupportsAutoCalibrate							

- The DIN subsystem supports continuous mode by allowing you to read the digital input port (all 16 digital input lines) using the analog input channel list.
- The DOUT subsystem supports continuous mode by allowing you to output data from the digital output port (all 16 digital output lines) using the output channel list.
- The C/T subsystem supports continuous mode by allowing you to read the value of one or more of the 2 general-purpose counter/timer channels using the analog input channel list.
- The QUAD subsystem supports continuous mode by allowing you to read the value of one or more of the 3 quadrature decoders using the analog input channel list.
- The first 8 digital input lines of the digital input port can generate an interrupt-on-change event. You enable the interrupts on a line-by-line basis during driver configuration; refer to [page 35](#) for more information on configuring the driver. If you are using the DataAcq SDK, refer to [page 84](#) for more information about determining which digital input lines changed state.
- The input FIFO on the DT9836S Series modules holds up to 16 kSamples; the input FIFO on all other DT9836 Series modules holds up to 2 kSamples.

Buffering

Table 12: Buffering Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Buffer Support SupportsBuffering	Yes	Yes					
Single Buffer Wrap Mode Support SupportsWrapSingle		Yes					
Inprocess Buffer Flush Support SupportsInProcessFlush	Yes ^a						

a. The data from a DT9836 Series module is transferred to the host in 4,096-byte (2,048-sample) segments. If the application moves data from an inprocess before the module has transferred 2,048 samples to the host, the resulting buffer will contain 0 samples. Your application program must deal with these situations when flushing an inprocess buffer.

Triggered Scan Mode

Table 13: Triggered Scan Mode Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Triggered Scan Support SupportsTriggeredScan							
Maximum Number of CGL Scans per Trigger MaxMultiScanCount	1	0	0	0	0		0
Maximum Retrigger Frequency MaxRetriggerFreq	0	0	0	0	0		0
Minimum Retrigger Frequency MinRetriggerFreq	0	0	0	0	0		0

Data Encoding

Table 14: Data Encoding Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Binary Encoding Support SupportsBinaryEncoding	Yes	Yes	Yes	Yes	Yes		Yes
Twos Complement Support SupportsTwosCompEncoding							
Returns Floating-Point Values ReturnsFloats							

Channels

Table 15: Channel Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Number of Channels NumberOfChannels	17 or 23 ^a	3 or 5 ^b	1	1	1		1
SE Support SupportsSingleEnded	Yes						
SE Channels MaxSingleEndedChannels	6 or 12	0	0	0	0		0
DI Support SupportsDifferential		Yes	Yes	Yes	Yes		Yes
DI Channels MaxDifferentialChannels	0	2 or 4	1	1	1		1
Maximum Channel-Gain List Depth CGLDepth	17 or 23 ^c	3 or 5 ^d	1	1	0		0
Simultaneous Sample-and-Hold Support SupportsSimultaneousSampleHold	Yes						
Channel-List Inhibit SupportsChannelListInhibit							
Support MultiSensor Inputs SupportsMultiSensor							
Bias Return Termination Resistor Support SupportsInputTermination							

- a. For modules with 6 analog input channels (DT9836-6 modules), channels 0 to 5 read the analog input channels; channel 6 reads all 16 bits from the DIN subsystem; channels 7 to 10 read the C/T channels, and channels 11 to 16 read the quadrature decoder channels. For modules with 12 analog input channels (DT9836-12 modules), channels 0 to 11 read the analog input channels; channel 12 reads all 16 bits from the DIN subsystem; channels 13 to 16 read the C/T channels, and channels 17 to 22 read the quadrature decoder channels.
- b. For modules with 2 analog output channels, channel 0 corresponds to analog output channel 0, 1 corresponds to analog output channel 1, and 2 corresponds to the digital output port. For modules with 4 analog output channels, channels 0 to 3 correspond to analog output channels 0 to 3, and channel 4 corresponds to the digital output port.
- c. The maximum depth of the analog input channel-gain list is 17 for the DT9836-6 modules and 23 for DT9836-12 modules.
- d. The maximum depth of the analog output channel list is 3 for DT9836-12-2-OEM, DT9836-12-2-BNC, DT9836-6-2-OEM, and DT9836-6-2-BNC modules, and 5 for DT9836-6-4-OEM and DT9836-6-4-BNC modules.

Gain

Table 16: Gain Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Programmable Gain Support SupportsProgrammableGain	Yes						
Number of Gains NumberOfSupportedGains	1	1	1	1	0		0
Gains Available SupportedGains	1	1	1	1			

Ranges

Table 17: Range Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Number of Voltage Ranges NumberOfRanges	2	1	0	0	0		0
Available Ranges SupportedVoltageRanges	± 10 V or ± 5 V	± 10 V ^a					

- a. For the D/A subsystem that is used as the threshold trigger, the range is 0 to 10 V, where a raw count of 0 represents 0 V and a raw count of 255 represents 10 V.

Resolution

Table 18: Resolution Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Software Programmable Resolution SupportsSoftwareResolution							
Number of Resolutions NumberOfResolutions	1	1	1	1	1		1
Available Resolutions SupportedResolutions	16	16 ^a	16	16	32		32

- a. For the D/A subsystem that is used to set the analog threshold value, the resolution is 8-bits.

Current and Resistance Support

Table 19: Current and Resistance Support Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Current Support SupportsCurrent							
Current Output Support SupportsCurrentOutput							
Resistance Support SupportsResistance							
Software Programmable External Excitation Current Source for Resistance SupportsExternalExcitationCurrentSrc							
Software Programmable Internal Excitation Current Source SupportsInternalExcitationCurrentSrc							
Available Excitation Current Source Values SupportedExcitationCurrentValues							

Thermocouple, RTD, and Thermistor Support

Table 20: Thermocouple, RTD, and Thermistor Support Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Thermocouple Support SupportsThernocouple							
RTD Support SupportsRTD							
Thermistor Support SupportsThermistor							
Voltage Converted to Temperature SupportsTemperatureDataInStream							
Supported Thermocouple Types ThermocoupleType							
Supports CJC Source Internally in Hardware SupportsCjcSourceInternal							
Supports CJC Channel SupportsCjcSourceChannel							
Available CJC Channels CjcChannel							
Supports Interleaved CJC Values in Data Stream SupportsInterleavedCjcTemperaturesInStream							
Supported RTD Types RTDType							
RTD R0 Coefficient RtdR0							
Supports Data Filters SupportsTemperatureFilters							
Temperature Filter Types TemperatureFilterType							

IEPE Support

Table 21: IEPE Support Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
IEPE Support SupportsIEPE							
Software Programmable AC Coupling SupportsACCoupling							
Software Programmable DC Coupling SupportsDCCoupling							
Software Programmable External Excitation Current Source SupportsExternalExcitationCurrentSrc							
Software Programmable Internal Excitation Current Source SupportsInternalExcitationCurrentSrc							
Available Excitation Current Source Values SupportedExcitationCurrentValues							

Bridge and Strain Gage Support

Table 22: Bridge and Strain Gage Support Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Bridge Support SupportsBridge							
Supported Bridge Configurations BridgeConfiguration							
Strain Gage Support SupportsStrainGage							
Supported Strain Gage Bridge Configurations StrainGageBridgeConfiguration							
External Excitation Voltage SupportsExternalExcitationVoltage							
Internal Excitation Voltage SupportsInternalExcitationVoltage							
Shunt Calibration SupportsShuntCalibration							
Voltage Excitation Per Channel SupportedPerChannelVoltageExcitation							
Minimum Excitation Voltage MinExcitationVoltage							
Maximum Excitation Voltage MaxExcitationVoltage							

Start Triggers

Table 23: Start Trigger Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Software Trigger Support SupportsSoftwareTrigger	Yes	Yes	Yes	Yes	Yes		Yes
External Positive TTL Trigger Support SupportsPosExternalTTLTrigger	Yes	Yes			Yes		
External Negative TTL Trigger Support SupportsNegExternalTTLTrigger	Yes						
External Positive TTL Trigger Support for Single-Value Operations SupportsSvPosExternalTTLTrigger							
External Negative TTL Trigger Support for Single-Value Operations SupportsSvNegExternalTTLTrigger							
Positive Threshold Trigger Support SupportsPosThresholdTrigger	Yes ^a						
Negative Threshold Trigger Support SupportsNegThresholdTrigger							
Digital Event Trigger Support SupportsDigitalEventTrigger							
Threshold Trigger Channel SupportedThresholdTriggerChannel	0						
Post-Trigger Scan Count SupportsPostTriggerScanCount							

a. Using software, specify the threshold channel as analog input channel 0, and specify a threshold level between 0 and 10 V.

Reference Triggers

Table 24: Reference Trigger Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
External Positive TTL Trigger Support SupportsPosExternalTTLTrigger							
External Negative TTL Trigger Support SupportsNegExternalTTLTrigger							
Positive Threshold Trigger Support SupportsPosThresholdTrigger							
Negative Threshold Trigger Support SupportsNegThresholdTrigger							
Digital Event Trigger Support SupportsDigitalEventTrigger							
Sync Bus Support SupportsSyncBusTrigger							

Table 24: Reference Trigger Options (cont.)

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Analog Input Channels Supported for the Threshold Trigger SupportedThresholdTriggerChannels							
Post-Trigger Scan Count Support SupportsPostTriggerScanCount							

Clocks

Table 25: Clock Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Internal Clock Support SupportsInternalClock	Yes	Yes	Yes	Yes			
External Clock Support SupportsExternalClock	Yes	Yes			Yes		
Simultaneous Input/Output on a Single Clock Signal SupportsSimultaneousClocking	Yes	Yes					
Base Clock Frequency BaseClockFrequency	36 MHz	36 MHz	0	0	36 MHz		36 MHz
Maximum Clock Divider MaxExtClockDivider	0	0	1	1	4,294,967,296		4,294,967,296
Minimum Clock Divider MinExtClockDivider	0	0	1	1	2		2
Maximum Frequency MaxFrequency	225 kHz or 800 kHz ^a	500 kHz	0	0	18 MHz		18 MHz
Minimum Frequency MinFrequency	0.0084 Hz	0.0084 Hz	0	0	0.0084 Hz		0.0084 Hz

- a. The maximum throughput of the DT9836S-6-2-OEM, DT9836S-6-2-BNC, DT9836S-6-0-OEM, and DT9836S-6-0-BNC modules is 800 kHz if the channel list includes six or fewer entries; refer to [page 70](#) for more information. For all other DT9836 Series modules, the maximum throughput is 225 kHz regardless of the number of channel list entries.

Counter/Timers

Table 26: Counter/Timer Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Cascading Support SupportsCascading							
Event Count Mode Support SupportsCount					Yes		
Generate Rate Mode Support SupportsRateGenerate					Yes		
One-Shot Mode Support SupportsOneShot					Yes		
Repetitive One-Shot Mode Support SupportsOneShotRepeat					Yes		
Up/Down Counting Mode Support SupportsUpDown					Yes		
Edge-to-Edge Measurement Mode Support SupportsMeasure					Yes		
Continuous Edge-to-Edge Measurement Mode Support SupportsContinuousMeasure					Yes		
High to Low Output Pulse Support SupportsHighToLowPulse					Yes		
Low to High Output Pulse Support SupportsLowToHighPulse					Yes		
Variable Pulse Width Support SupportsVariablePulseWidth					Yes ^a		
None (internal) Gate Type Support SupportsGateNone					Yes		
High Level Gate Type Support SupportsGateHighLevel					Yes ^b		
Low Level Gate Type Support SupportsGateLowLevel					Yes ^b		
High Edge Gate Type Support SupportsGateHighEdge					Yes ^b		
Low Edge Gate Type Support SupportsGateLowEdge					Yes ^b		
Level Change Gate Type Support SupportsGateLevel							
Clock-Falling Edge Type SupportsClockFalling					Yes		
Clock-Rising Edge Type SupportsClockRising					Yes		
Gate-Falling Edge Type SupportsGateFalling					Yes		

Table 26: Counter/Timer Options (cont.)

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Gate-Rising Edge Type SupportsGateRising					Yes		
Interrupt-Driven Operations SupportsInterrupt					Yes		

- a. In one-shot mode and repetitive one-shot mode, the duty cycle is set to 100% automatically.
- b. High-edge and low-edge are supported for one-shot and repetitive one-shot modes. High-level and low-level are supported for event counting, up/down counting, frequency measurement, edge-to-edge measurement, continuous edge-to-edge measurement, and rate generation modes.

Tachometers

Table 27: Tachometer Options

DT9836 Series	A/D	D/A	DIN	DOUT	C/T	TACH	QUAD
Tachometer Falling Edges SupportsFallingEdge							
Tachometer Rising Edges SupportsRisingEdge							
Tachometer Stale Data Flag SupportsStaleDataFlag							



Troubleshooting

General Checklist	112
Technical Support	114
If Your Module Needs Factory Service	115

General Checklist

Should you experience problems using a DT9836 Series module, do the following:

1. Read all the documentation provided for your product, including any “Read This First” information.
2. Check the OMNI CD for any README files and ensure that you have used the latest installation and configuration information available.
3. Check that your system meets the requirements stated on [page 30](#).
4. Check that you have installed your hardware properly using the instructions in [Chapter 2](#).
5. Check that you have installed and configured the device driver properly using the instructions in [Chapter 2](#).
6. Check that you have wired your signals properly using the instructions in [Chapter 3](#).
7. Search the DT Knowledgebase in the Support section of the Data Translation web site (at www.mccdaq.com) for an answer to your problem.

If you still experience problems, try using the information in [Table 28](#) to isolate and solve the problem. If you cannot identify the problem, refer to [page 114](#).

Table 28: Troubleshooting Problems

Symptom	Possible Cause	Possible Solution
Module is not recognized	You plugged the module into your computer before installing the device driver.	From the Control Panel > System > Hardware > Device Manager, uninstall any unknown devices (showing a yellow question mark). Then, run the setup program on your OMNI CD to install the USB device drivers, and reconnect your USB module to the computer.
Module does not respond.	The module configuration is incorrect.	Check the configuration of your device driver; see the instructions in Chapter 2 .
	The module is damaged.	Contact Data Translation for technical support; refer to page 114 .
Intermittent operation.	Loose connections or vibrations exist.	Check your wiring and tighten any loose connections or cushion vibration sources; see the instructions in Chapter 3 .
	The module is overheating.	Check environmental and ambient temperature; consult the module's specifications on page 131 of this manual and the documentation provided by your computer manufacturer for more information.
	Electrical noise exists.	Check your wiring and either provide better shielding or reroute unshielded wiring; see the instructions in Chapter 3 .

Table 28: Troubleshooting Problems (cont.)

Symptom	Possible Cause	Possible Solution
Device failure error reported.	The DT9836 Series module cannot communicate with the Microsoft bus driver or a problem with the bus driver exists.	Check your cabling and wiring and tighten any loose connections; see the instructions in Chapter 3 .
	The DT9836 Series module was removed while an operation was being performed.	Ensure that your DT9836 Series module is properly connected; see the instructions in Chapter 2 .
Data appears to be invalid.	An open connection exists.	Check your wiring and fix any open connections; see the instructions in Chapter 3 .
	A transducer is not connected to the channel being read.	Check the transducer connections; see the instructions in Chapter 3 .
	The module is set up for differential inputs while the transducers are wired as single-ended inputs or vice versa.	Check your wiring and ensure that what you specify in software matches your hardware configuration; see the instructions in Chapter 3 .
	The DT9836 Series module is out of calibration.	DT9836 Series modules are calibrated at the factory. If you want to readjust the calibration of the analog input or analog output circuitry, refer to Chapter 8 .
	The cable impedance is not matched at the source.	Ensure proper cable matching, as discussed on page 39 .
USB 2.0 is not recognized.	Your operating system does not have the appropriate Service Pack installed.	Ensure that you load the appropriate Windows Service Pack. If you are unsure of whether you are using USB 2.0 or USB 1.1, run the Open Layers Control Panel applet, described in Chapter 2 .
	Standby mode is enabled on your PC.	For some PCs, you may need to disable standby mode on your system for proper USB 2.0 operation. Consult Microsoft for more information.

Technical Support

If you have difficulty using a DT9836 Series module, Data Translation's Technical Support Department is available to provide technical assistance.

To request technical support, go to our web site at <http://www.mccdaq.com> and click on the Support link.

When requesting technical support, be prepared to provide the following information:

- Your product serial number
- The hardware/software product you need help on
- The version of the OMNI CD you are using
- Your contract number, if applicable

If you are located outside the USA, contact your local distributor; see our web site (www.mccdaq.com) for the name and telephone number of your nearest distributor.

If Your Module Needs Factory Service

Most hardware models can be functionally tested, evaluated for repairs (if needed), and calibrated to factory specifications. An RMA # must be obtained from Application Engineering in advance of sending any product back to Measurement Computing. Customers outside the USA must contact their local distributor for a return procedure. Calibration certificates for most analog models can be obtained for a fee (certificate must be requested at time of RMA # assignment).



Calibration

Using the Calibration Utility	119
Calibrating the Analog Input Subsystem	120
Calibrating the Analog Output Subsystem	122

DT9836 Series modules are calibrated at the factory and should not require calibration for initial use. We recommend that you check and, if necessary, readjust the calibration of the analog input and analog output circuitry on the DT9836 Series modules every six months using the DT9832 / DT9836 Calibration Utility.

Note: Ensure that you installed the DT9836 Series Device Driver prior to using the DT9832 / DT9836 Calibration Utility.

This chapter describes how to calibrate the analog input and output subsystems of DT9836 Series modules using the DT9832 / DT9836 Calibration Utility.

Using the Calibration Utility

Start the DT9832 / DT9836 Calibration Utility as follows:

1. Click **Start** from the Task Bar, and then select **Programs | Data Translation, Inc | Calibration | DT9836 Calibration Utility**.

The main menu of the DT9832 / DT9836 Calibration Utility appears.

2. Select the module to calibrate, and then click **OK**.

Once the DT9832 / DT9836 Calibration Utility is running, you can calibrate the analog input circuitry (either automatically or manually), described on [page 120](#), or the analog output circuitry of the DT9836 Series module, described on [page 122](#).

Calibrating the Analog Input Subsystem

This section describes how to use the DT9832 / DT9836 Calibration Utility to calibrate the analog input subsystem of a DT9836 Series module.

The DT9836 Series module has separate calibration for each A/D input channel. You can choose to calibrate either an individual channel or all channels on the board.

Connecting a Precision Voltage Source

To calibrate the analog input circuitry, you need to connect an external +9.3750 V precision voltage source to the DT9836 Series module. Connect the precision voltage source to the first channel you want to calibrate; for example, Analog In 0 (AD Ch0).

Using the Auto-Calibration Procedure

Auto-calibration is the easiest to use and is the recommended calibration method. To auto-calibrate the analog input subsystem, do the following:

1. Select the **A/D Calibration** tab of the DT9832 / DT9836 Calibration Utility.
2. Choose either a single channel or all channels from the **Type of Calibration** drop-down list box in the **Automatic Calibration** area.
3. Set the voltage supply on your selected channel to 0.000V.
4. Click the Auto Calibration **Start** button.
A message appears notifying you to verify that 0.000 V is applied to the channel.
5. Verify that the supplied voltage to your selected channel is 0.000 V, and then click **OK**.
The offset value is calibrated. When the offset calibration is complete, a message appears notifying you to set the input voltage of the channel to +9.375 V.
6. Check that the supplied voltage to your selected channel is +9.375 V, and then click **OK**.
The gain value is calibrated and a completion message appears.
7. If you chose to calibrate all channels, then the proceeding four steps repeat for all other A/D channels on the board the calibration utility prompts you to attach the precision voltage source to the next channel). Follow the on-screen prompts to proceed through the rest of the channels.

Note: At any time, you can click **Restore Factory Settings** to reset the A/D calibration values to their original factory settings. This process will undo any auto or manual calibration settings.

Using the Manual Calibration Procedure

If you want to manually calibrate the analog input circuitry instead of auto-calibrating it, do the following for each channel (substitute the appropriate channel number as you go):

1. Adjust the offset as follows:
 - a. Verify that 0.000 V is applied to AD Ch0, and that A/D Channel Select is set to Channel 0.
The current voltage reading for this channel is displayed in the A/D Value window.
 - b. Adjust the offset by entering values between 0 and 255 in the Offset edit box, or by clicking the up/down buttons until the A/D Value is 0.000 V.
2. Adjust the gain as follows:
 - a. Verify that +9.375 V is applied to AD Ch0, and that A/D Channel Select is set to Channel 0.
The current voltage reading for this channel is displayed in the A/D Value window.
 - b. Adjust the gain by entering values between 0 and 255 in the Gain edit box, or by clicking the up/down buttons until the A/D Value is 9.3750 V.

Note: At any time, you can click **Restore Factory Settings** to reset the A/D calibration values to their original factory settings. This process will undo any auto or manual calibration settings.

Once you have finished this procedure, continue with [“Calibrating the Analog Output Subsystem.”](#)

Calibrating the Analog Output Subsystem

This section describes how to use the DT9832 / DT9836 Calibration Utility to calibrate the analog output subsystem of a DT9836 Series module.

To calibrate the analog output circuitry, you need to connect an external precision voltmeter to analog output channels 0, 1, 2, and 3 of the DT9836 Series module.

Do the following to calibrate the analog output circuitry:

1. Select the **D/A Calibration** tab of the DT9832 / DT9836 Calibration Utility.
2. Connect an external precision voltmeter to Analog Output 0 (DAC Ch0) of the DT9836 Series module.
3. In the DAC Output Voltage box, select **-9.375 V**.
4. Adjust the offset by entering values between 0 and 255 in the DAC 0 Offset edit box or by clicking the up/down buttons until the voltmeter reads **-9.375 V**.
5. In the DAC Output Voltage box, select **9.375 V**.
6. Adjust the gain by entering values between 0 and 255 in the DAC 0 Gain edit box or by clicking the up/down buttons until the voltmeter reads **9.375 V**.
7. Repeat steps 2 through 6 for Analog Outputs 1, 2, and 3 (DAC Ch 1, DAC Ch 2, and DAC Ch 3) of the module.

Note: At any time, you can click **Restore Factory Settings** to reset the D/A calibration values to their original factory settings. This process will undo any D/A calibration settings.

Once you have finished this procedure, the analog output circuitry is calibrated. To close the DT9832 / DT9836 Calibration Utility, click the close box in the upper right corner of the window.



Specifications

Analog Input Specifications	124
Analog Output Specifications	126
Digital I/O Specifications	127
Counter/Timer Specifications	128
External Trigger Specifications	129
Clock Specifications	130
Power, Physical, and Environmental Specifications	131
Mating Connector Specifications	132
Regulatory Specifications	133
External Power Supply Specifications	134

Analog Input Specifications

Table 29 lists the specifications for the A/D subsystem on the DT9836 Series modules.

Table 29: A/D Subsystem Specifications

Feature	Specifications ^a
Number of analog input channels ^b	6 or 12 single-ended Simultaneous
Resolution	16 bits
Range	± 10 V, ± 5 V
Throughput per channel DT9836S-6-2-OEM: DT9836S-6-2-BNC: DT9836S-6-0-OEM: DT9836S-6-0-BNC: All other DT9836 Series modules:	800 kSamples/s ^c 800 kSamples/s ^c 800 kSamples/s ^c 800 kSamples/s ^c 225 kSamples/s
Channel bandwidth	>4 MHz to -3 dB point for the DT9836S >1.125 MHz to -3 dB point for all other DT9836 Series modules
Sample-and-hold Aperture uncertainty: Aperture delay: Aperture match: Gain match: Zero match:	1 ns 35 ns 5 ns $\pm 0.015\%$ ± 1.5 mV
System accuracy, to % of FSR Gain = 1:	$\pm 0.015\%$
Bipolar input range	± 10 V, ± 5 V
Data encoding	Offset binary
Maximum input voltage (without damage) Power on: Power off:	± 30 V ± 20 V
Input impedance	> 9 M Ω , 10 pF for the DT9836S 100 M Ω , 10 pF for all other DT9836 Series modules
Input bias current	± 1 nA
Integral nonlinearity	$\pm 0.015\%$
Differential nonlinearity	$\pm 0.003\%$
Inherent quantizing error	$\pm 1/2$ LSB
Drift Zero: Gain:	± 25 μ V/ $^{\circ}$ C ± 50 ppm of FSR/ $^{\circ}$ C
ESD protection Arc: Contact:	8 kV 4 kV

Table 29: A/D Subsystem Specifications (cont.)

Feature	Specifications ^a
Effective Number of Bits (ENOB) at full-scale	>14.4 bits typical for the DT9836S >13.5 bits typical for all other DT9836 Series modules
Spurious Free Dynamic Range (SFDR)	96 dB typical

- a. Input cables must be properly matched for optimum performance.
- b. The the number of channels available depends on the model you purchase.
- c. This throughput can be achieved if the channel list includes six or fewer channels; refer to [page 70](#) for more information on throughput and the number of channel list entries.

Analog Output Specifications

Table 30 lists the specifications for the D/A subsystem on the DT9836 Series modules.

Table 30: D/A Subsystem Specifications

Feature	Specifications
Number of analog output channels	0, 2, or 4 Simultaneous
Resolution	16 bits
Settling time to 0.01% of FSR	2.0 μ s, 100 mV steps 5.0 μ s, 10 V steps
Throughput	500 kSamples/s per channel
Slew rate	10 V/ μ s
Glitch energy	12 nV/s, typical
Output range	± 10 V
Data encoding	Offset binary
Output current	± 5 mA maximum load
Output impedance	0.1 Ω maximum
Capacitive driver capability	0.004 μ F
Protection	Short circuit to analog ground
Integral nonlinearity	1.0 LSB
Differential nonlinearity	1.0 LSB
Inherent quantizing error	$\pm 1/2$ LSB
Error Zero: Gain:	± 0.0003 V ± 0.0003 V
Drift Zero (bipolar): Gain:	± 10 ppm of FSR/ $^{\circ}$ C ± 30 ppm of FSR/ $^{\circ}$ C
FIFO	128 kSamples, total
ESD protection Arc: Contact:	8 kV 4 kV

Digital I/O Specifications

Table 31 lists the specifications for the DIN/DOUT subsystems on the DT9836 Series modules.

Table 31: DIN/DOUT Subsystem Specifications

Feature	Specifications
Number of digital I/O lines	32 (16 in, 16 out)
Number of ports	2 (16 bits each)
Input termination DT9836:	Inputs tied to +3.3 V through 15 k Ω pull-up resistors
DT9836S:	No pull-up resistors provided
Logic family	LVTTL
Logic sense	Positive true
Inputs Input type: Input logic load: High input voltage: Low input voltage: Low input current:	Level-sensitive 1 LVTTL 2.0 V minimum 0.8 V maximum -0.4 mA maximum
Outputs High output: Low output:	2.4 V minimum with up to 6 mA 0.4 V maximum with up to 3 mA
Interrupt on change	Yes
Clocked with sample clock	Yes
Software I/O selectable	No

Counter/Timer Specifications

Table 32 lists the specifications for the C/T subsystems on the DT9836 Series modules.

Table 32: C/T Subsystem Specifications

Feature	Specifications
Number of channels C/T: Quadrature decoder:	2 3
Internal reference clock	36 MHz
Resolution	32 bits per channel
Clock divider Minimum: Maximum:	2 4,294,967,296
Clock output Minimum: Maximum:	0.0084 Hz 18 MHz
Maximum clock or gate input frequency	18 MHz ^a
Minimum pulse width (minimum amount of time it takes a C/T to recognize an input pulse)	Greater than 27.8 ns ^a
Maximum input frequency	17.986 MHz
Logic family	LVTTL
Inputs Input logic load: High input voltage: Low input voltage: Low input current:	1 LVTTL 2.0 V minimum 0.8 V maximum -0.4 mA maximum
Outputs High output: Low output:	2.4 V minimum with up to 6 mA 0.4 V maximum with up to 3 mA

a. The integrity of the signal degrades at frequencies greater than 10 MHz.

External Trigger Specifications

Table 33 lists the specifications for the external A/D and D/A triggers on the DT9836 Series modules.

Table 33: External A/D and D/A Trigger Specifications

Feature	Specifications
Trigger sources Internal: External:	Software-initiated Software-selectable
Input type	Edge-sensitive
Logic family	LVTTL
Inputs Input logic load: Input termination: High input voltage: Low input voltage: High input current: Low input current:	1 LVTTL 2.2 k Ω pull-up to +3.3 V 2.0 V minimum 0.8 V maximum 25 μ A maximum -0.25 mA maximum
Minimum pulse width High: Low:	25 ns 25 ns
Triggering modes Single scan: Continuous scan: Triggered scan:	Yes Yes No

Clock Specifications

Table 34 lists the specifications for the internal A/D and D/A clocks on the DT9836 Series modules.

Table 34: Internal A/D and D/A Clock Specifications

Feature	Specifications
Reference frequency	36 MHz
Divisor range	3 to 4,294,967,295
Usable A/D clock range: DT9836S-6-2-OEM: DT9836S-6-2-BNC: DT9836S-6-0-OEM: DT9836S-6-0-BNC: All other DT9836 Series modules:	0.00838 Hz to 800 kHz 0.00838 Hz to 800 kHz 0.00838 Hz to 800 kHz 0.00838 Hz to 800 kHz 0.00838 Hz to 225 kHz
Usable D/A clock range:	0.00838 Hz to 500 kHz
Oscillator accuracy (recording time error)	±50 ppm

Table 35 lists the specifications for the external A/D and D/A clocks on the DT9836 Series modules.

Table 35: External A/D and D/A Clock Specifications

Feature	Specifications
Input type ^a A/D: D/A:	falling edge rising edge
Logic family	LVTTL
Inputs Input logic load: Input termination: High input voltage: Low input voltage: Low input current:	1 LVTTL 2.2 k Ω pull-up to +3.3 V 2.0 V 0.8 V 1.2 mA
Analog input oscillator frequency DT9836S-6-2-OEM: DT9836S-6-2-BNC: DT9836S-6-0-OEM: DT9836S-6-0-BNC: All other DT9836 Series modules:	DC to 800 kHz DC to 800 kHz DC to 800 kHz DC to 800 kHz DC to 225 kHz
Analog output oscillator frequency	DC to 500 kHz
Minimum pulse width High: Low:	25 ns 25 ns

a. A quiet (glitch-free) stable clock is required for best results and to prevent overclock conditions. In addition, it is recommended that you avoid gating the clock unless gating on and off is synchronous to the clock.

Power, Physical, and Environmental Specifications

Table 36 lists the power, physical, and environmental specifications for the DT9836 Series modules.

Table 36: Power, Physical, and Environmental Specifications

Feature	Specifications
Power, +5 V	±5% @ 2 A maximum
Physical Dimensions (OEM): Dimensions (BNC): Weight (OEM):	190 mm x 100 mm 215.9 mm x 105.9 mm x 50 mm 4.6 ounces
Environmental Operating temperature range: Storage temperature range: Relative humidity:	0° C to 55° C –25° C to 85° C to 95%, noncondensing

Mating Connector Specifications

Table 37 lists the mating cable connectors for the connectors on the BNC connection box, the OEM version of the DT9836 Series module, and the EP353 and EP356 accessory panels.

Table 37: Mating Cable Connectors

Module/Panel	Connector	Part Number on Module (or Equivalent)	Mating Cable Connector
BNC connection box	Analog input	AMP/Tyco AMP 5747375-8	AMP/Tyco 5-747917-2
	Digital I/O	AMP/Tyco 5747301-8	AMP/Tyco 5-747916-2
	CVT, DAC, Clk, Trig	AMP/Tyco 5747301-8	AMP/Tyco 5-747916-2
OEM version	J2	AMP/Tyco 6-104068-8	AMP/Tyco 3-111196-4 ^a
	J3	AMP/Tyco 6-104068-8	AMP/Tyco 3-111196-4 ^a
	TB1 ^b	Phoenix Contact 1707434	Phoenix Contact 1839610
EP353 accessory panel	J1	AMP/Tyco 5102321-6	AMP/Tyco 1658622-6
	J2	AMP/Tyco 5747375-8	AMP/Tyco 5-747917-2
EP356 accessory panel	J1	AMP/Tyco 5747301-8	AMP/Tyco 5-747916-2
	J2	AMP/Tyco 5747301-8	AMP/Tyco 5-747916-2

a. The mating PCB receptacle is AMP/Tyco 6-104078-3.

b. Secondary power connector.

Regulatory Specifications

The DT9836 Series modules are CE-compliant. [Table 38](#) lists the regulatory specifications for the DT9836 Series modules.

Table 38: Regulatory Specifications

Feature	Specifications
Emissions (EMI)	FCC Part 15, Class A EN55011:2007 (Based on CISPR-11, 2003/A2, 2006)
Immunity	EN61326-1:2006 Electrical Equipment for Measurement, Control, and Laboratory Use <u>EMC Requirements</u> EN61000-4-2:2009 Electrostatic Discharge (ESD) 4 kV contact discharge, 8 kV air discharge, 4 kV horizontal and vertical coupling planes EN61000-4-3:2006 Radiated electromagnetic fields, 3 V/m, 80 to 1000 MHz; 3 V/m, 1.4 GHz to 2 GHz; 1 V/m, 2 GHz to 2.7 GHz EN61000-4-4:2004 Electrical Fast Transient/Burst (EFT) 1 kV on data cables EN61000-4-6:2009 Conducted immunity requirements, 3 Vrms on data cables 150 kHz to 80 MHz
RoHS (EU Directive 2002/95/EG)	Compliant (as of July 1st, 2006)

External Power Supply Specifications

Table 39 lists the specifications for the EP361 +5 V external power supply that is used with the DT9836 Series modules.

Table 39: External Power Supply (EP361) Specifications

Feature	Specifications
Type	Total Power medical power supply (TPES22-050400 or TPEMG24-S050400-7)
Input voltage	Typical 90 - 264 V AC
Input current TPES22-050400	Typical 0.38 A at 115 V AC, 0.15 A at 230 V AC
TPEMG24-S050400-7	Typical 0.347 A at 115 V AC, 0.215 A at 230 V AC
Frequency	47 to 63 Hz
Inrush current TPES22-050400	35 A at 230 V AC typical or less than 30 A by adding thermistor
TPEMG24-S050400-7	6.274 A RMS at 230 V AC
Output voltage	5 V DC
Output current	4.0 A
Output wattage TPES22-050400	Typical 22 - 24 W
TPEMG24-S050400-7	Typical 20 - 24 W
Noise and ripple	1% peak to peak
Regulatory specifications TPES22-050400	UL, N, CE, FCC Class B
TPEMG24-S050400-7	UL, ITE, CE, FCC Class B, Energy Star compliant



Connector Pin Assignments and LED Status Indicators

OEM Version Connectors	136
BNC Box Connectors	141
EP353 Accessory Panel Connectors	144
EP356 Accessory Panel Connectors	148
EP355 Screw Terminal Assignments	152
LED Status Indicators	153

OEM Version Connectors

This section describes the pin assignments for the J2 and J3 connectors on the OEM version of the DT9836 Series modules, as well as the secondary power connector, TB1. You can access these pins by building your own cable and screw terminal panel; refer to [Appendix A](#) for information about the required mating connectors. [Figure 26](#) shows the orientation of the pins on these connectors.

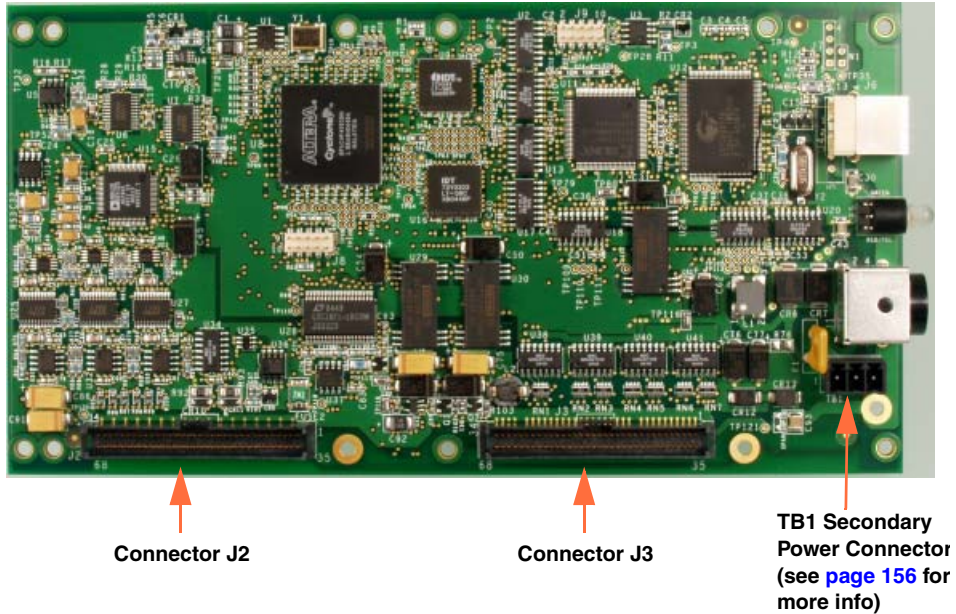


Figure 26: Connectors on OEM Version of DT9836 Module

Note: If you are using the BNC connection box, refer to [Chapter 3](#) and “[BNC Box Connectors](#)” on [page 141](#) for wiring information.

OEM J2 Connector

Table 40 lists the pin assignments for connector J2 on the OEM version of the DT9836 Series module.

Table 40: Pin Assignments for Connector J2 on the OEM Version of Module

Pin	Signal Description	Pin	Signal Description
1	+5 V Analog (0.5 A) ^a	35	Digital Ground
2	Reserved	36	Analog Ground
3	Analog Ground	37	Analog Ground
4	Reserved	38	Reserved
5	Analog Ground	39	Analog Ground
6	Reserved	40	Reserved
7	Analog Ground	41	Analog Ground
8	Reserved	42	Reserved
9	Analog Ground	43	Analog Ground
10	Reserved	44	Reserved
11	Analog Ground	45	Analog Ground
12	Reserved	46	Reserved
13	Analog Ground	47	Analog Ground
14	Reserved	48	Reserved
15	Analog Ground	49	Analog Ground
16	Reserved	50	Reserved
17	Analog Ground	51	Analog Ground
18	Reserved	52	Reserved
19	Analog Ground	53	Analog Ground
20	Reserved	54	Reserved
21	Analog Ground	55	Analog Ground
22	Reserved	56	Reserved
23	Analog Ground	57	Analog Ground
24	Analog In 5	58	Analog In 11 ^b
25	Analog Ground	59	Analog Ground
26	Analog In 4	60	Analog In 10 ^b
27	Analog Ground	61	Analog Ground
28	Analog In 3	62	Analog In 9 ^b
29	Analog Ground	63	Analog Ground

Table 40: Pin Assignments for Connector J2 on the OEM Version of Module (cont.)

Pin	Signal Description	Pin	Signal Description
30	Analog In 2	64	Analog In 8 ^b
31	Analog Ground	65	Analog Ground
32	Analog In 1	66	Analog In 7 ^b
33	Analog Ground	67	Analog Ground
34	Analog In 0	68	Analog In 6 ^b

- a. Connected to J3 pin 31 (except on DT9836-6-4 and DT9836-6-4-BNC modules); maximum 500 mA available from these two pins combined.
b. Reserved on DT9836-6 modules.

OEM J3 Connector

Table 41 lists the pin assignments for connector J3 on the OEM version of the DT9836 Series module.

Table 41: Pin Assignments for Connector J3 on the OEM Version of Module

Pin	Signal Description	Pin	Signal Description
1	Quad 2 Index	35	Quad Dec 2 B
2	Quad Dec 2 A	36	Digital Ground
3	Quad 1 Index	37	Quad Dec 1 B
4	Quad Dec 1 A	38	Digital Ground
5	Quad 0 Index	39	Quad Dec 0 B
6	Quad Dec 0 A	40	Digital Ground
7	Counter 1 Out	41	Counter 1 Gate
8	Counter 1 Clock	42	Digital Ground
9	Counter 0 Out	43	Counter 0 Gate
10	Counter 0 Clock	44	Digital Ground
11	Digital Ground	45	Reserved
12	Digital Input 15	46	Digital Output 15
13	Digital Input 14	47	Digital Output 14
14	Digital Input 13	48	Digital Output 13
15	Digital Input 12	49	Digital Output 12
16	Digital Input 11	50	Digital Output 11
17	Digital Input 10	51	Digital Output 10
18	Digital Input 9	52	Digital Output 9

Table 41: Pin Assignments for Connector J3 on the OEM Version of Module (cont.)

Pin	Signal Description	Pin	Signal Description
19	Digital Input 8	53	Digital Output 8
20	Digital Input 7	54	Digital Output 7
21	Digital Input 6	55	Digital Output 6
22	Digital Input 5	56	Digital Output 5
23	Digital Input 4	57	Digital Output 4
24	Digital Input 3	58	Digital Output 3
25	Digital Input 2	59	Digital Output 2
26	Digital Input 1	60	Digital Output 1
27	Digital Input 0	61	Digital Output 0
28	External ADC Clock	62	External ADC Trigger
29	External DAC Clock	63	External DAC Trigger
30	Digital Ground	64	Digital Ground
31	Analog Out 3 / +5 V ^{a,b}	65	Analog Out 3 Return ^c
32	Analog Out 2 ^d	66	Analog Out 2 Return ^d
33	Analog Out 1 ^e	67	Analog Out 1 Return ^e
34	Analog Out 0 ^e	68	Analog Out 0 Return ^e

- a. Analog Out 3 on DT9836-6-4-OEM and DT9836-6-4-BNC modules only; +5 V on other modules.
- b. +5 V connected to J2 pin 1 (except on DT9836-6-4-OEM and DT9836-6-4-BNC modules); maximum 500 mA available from these two pins combined.
- c. Analog Out 3 Return on DT9836-6-4-OEM and DT9836-6-4-BNC modules only; digital ground on other modules.
- d. Analog Out 2 or Analog Out 2 Return on DT9836-6-4-OEM and DT9836-6-4-BNC modules only; reserved on other modules.
- e. Reserved on DT9836-6-0 and DT9836-12-0 modules.

OEM Wiring Methods

You can connect signals directly through the J2 and J3 connectors on the OEM version of the DT9836 Series module, or you can connect signals using the connectors and screw terminals on the following accessories:

- **EP353** – This accessory panel plugs into connector J2 of the OEM version of the DT9836 Series module. It provides one 37-pin, D-sub connector for attaching analog input signals and one 26-pin connector for attaching a AC1315 cable/5B Series signal conditioning backplane.

Refer to [page 144](#) for more information about attaching the EP353 to the OEM version of the DT9836 Series module and for information about the connector pin assignments.

- **EP356** – This accessory panel plugs into connector J3 of the OEM version of the DT9836 Series module. It provides two 37-pin, D-sub connectors. Use connector J1 of the EP356 to

attach digital I/O signals, and use connector J2 of the EP356 to attach analog output, counter/timer, trigger, and clock signals.

Refer to [page 148](#) for more information about attaching the EP356 to the OEM version of the DT9836 Series module and for information about the connector pin assignments.

OEM TB1 Connector

[Table 42](#) lists the pin assignments for connector TB1 on the OEM version of the DT9836 Series modules.

Table 42: Pin Assignments for Connector TB1 on the OEM Version of Module

TB1 Pin Assignment	Signal Description
1	+5 V
2	Ground
3	Shield (Chassis Ground)

BNC Box Connectors

This section describes the pin assignments for the D-sub connectors on the BNC connection box. Note that the BNC connectors are labeled on the box.

Digital I/O Connector

Figure 27 shows the orientation of the pins on the Digital In/Out connector on the BNC connection box.

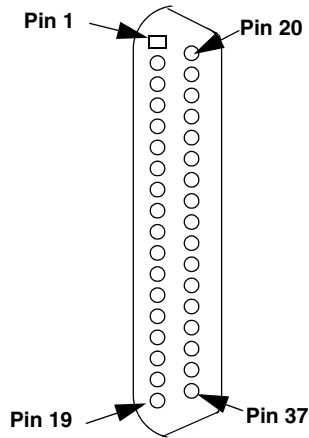


Figure 27: Orientation of the Digital In/Out Connector on the BNC Connection Box

Table 43 lists the pin assignments for the Digital In/Out connector on the BNC connection box.

Table 43: BNC Connection Box Digital In/Out Connector Pin Assignments

Pin Assignment	Signal Description	Pin Assignment	Signal Description
1	Digital Input 0	20	Digital Output 0
2	Digital Input 1	21	Digital Output 1
3	Digital Input 2	22	Digital Output 2
4	Digital Input 3	23	Digital Output 3
5	Digital Input 4	24	Digital Output 4
6	Digital Input 5	25	Digital Output 5
7	Digital Input 6	26	Digital Output 6
8	Digital Input 7	27	Digital Output 7
9	Digital Input 8	28	Digital Output 8

Table 43: BNC Connection Box Digital In/Out Connector Pin Assignments (cont.)

Pin Assignment	Signal Description	Pin Assignment	Signal Description
10	Digital Input 9	29	Digital Output 9
11	Digital Input 10	30	Digital Output 10
12	Digital Input 11	31	Digital Output 11
13	Digital Input 12	32	Digital Output 12
14	Digital Input 13	33	Digital Output 13
15	Digital Input 14	34	Digital Output 14
16	Digital Input 15	35	Digital Output 15
17	Digital Ground	36	Reserved
18	Digital Ground	37	Digital Ground
19	No Connect		

CT/Enc In, Analog Out, Clk/Trig Connector

Figure 28 shows the orientation of the pins on the CT/Enc In, Analog Out, Clk/Trig connector on the BNC connection box.

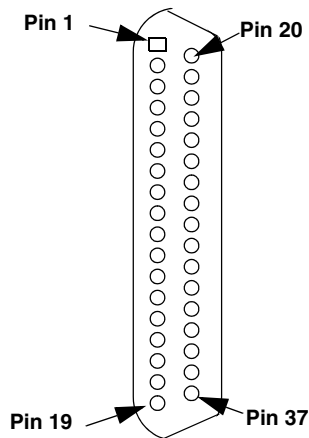


Figure 28: Orientation of the CT/Enc In, Analog Out, Clk/Trig Connector on the BNC Connection Box

Table 44 lists the pin assignments for the CT/Enc In, Analog Out, Clk/Trig connector on the BNC connection box.

Table 44: BNC Connection Box CT/Enc In, Analog Out, Clk/Trig Connector Pin Assignments

Pin Assignment	Signal Description	Pin Assignment	Signal Description
1	Analog Output 0	20	Analog Output 0 Return
2	Analog Output 1	21	Analog Output 1 Return
3	Analog Output 2 ^a	22	Analog Output 2 Return ^a
4	Analog Output 3 ^a	23	Analog Output 3 Return ^a
5	Digital Ground	24	Digital Ground
6	External DAC Clock	25	External DAC Trigger
7	External ADC Clock	26	External ADC Trigger
8	Counter 0 Clock	27	Digital Ground
9	Counter 0 Out	28	Counter 0 Gate
10	Counter 1 Clock	29	Digital Ground
11	Counter 1 Out	30	Counter 1 Gate
12	Quad Dec 0 (C/T 2) A	31	Digital Ground
13	Quad 0 (C/T 2) Index	32	Quad Dec 0 (C/T 2) B
14	Quad Dec 1 (C/T 3) A	33	Digital Ground
15	Quad 1 (C/T 3) Index	34	Quad Dec 1 (C/T 3) B
16	Quad Dec 2 (C/T 4) A	35	Digital Ground
17	Quad 2 (C/T 4) Index	36	Quad Dec 2 (C/T 4) B
18	Digital Ground	37	Digital Ground
19	No Connect		

a. Supported on the DT9836-6-4-OEM and DT9836-6-4-BNC modules only. For all other modules, these signals are reserved.

EP353 Accessory Panel Connectors

To attach an EP353 accessory panel to the OEM version of the DT9836 Series module, plug the EP353 panel into connector J2 on the module, as shown in [Figure 29](#).

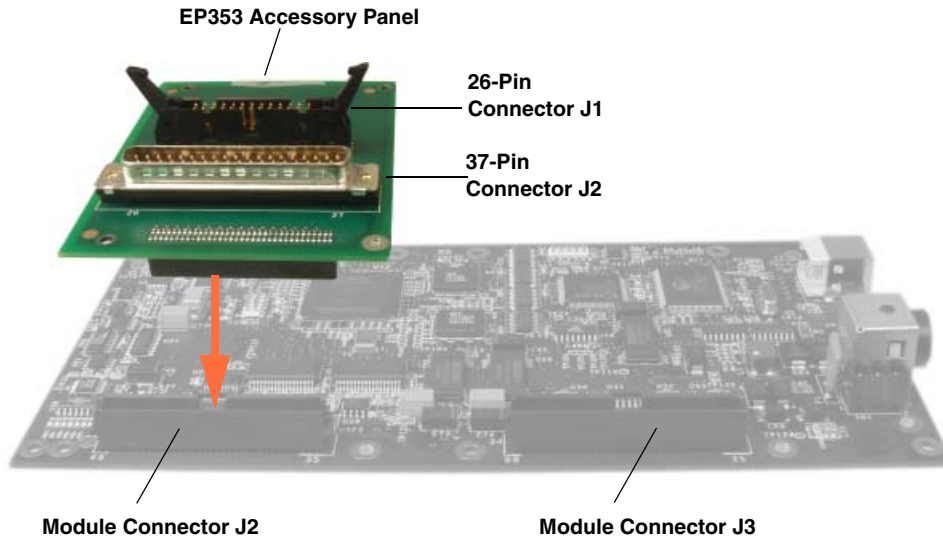


Figure 29: Connecting the EP353 Accessory Panel to Connector J2

Connector J1

[Figure 30](#) shows the orientation of the pins for connector J1 on the EP353 panel.

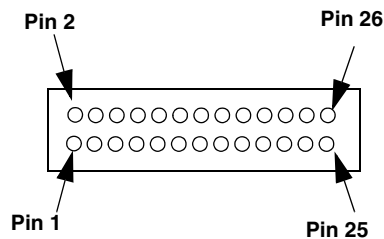


Figure 30: Orientation of the Pins for Connectors J1 on the EP353 Panel

You can use connector J1 and an AC1315 cable to attach a 5B Series signal conditioning backplane to the EP353 accessory panel.

Table 45 lists the pin assignments for connector J1 on the EP353 accessory panel.

Table 45: EP353 Connector J1 Pin Assignments

J1 Pin Assignment	Signal Description	J1 Pin Assignment	Signal Description
1	Analog In 0	2	Analog In 6 ^a
3	Analog Ground	4	Analog In 7 ^a
5	Analog In 1	6	Analog Ground
7	Analog In 2	8	Analog In 8 ^a
9	Analog Ground	10	Analog In 9 ^a
11	Analog In 3	12	Analog Ground
13	Analog In 4	14	Analog In 10 ^a
15	Analog Ground	16	Analog In 11 ^a
17	Analog In 5	18	Analog Ground
19	Reserved	20	Reserved
21	Analog Ground	22	Reserved
23	Reserved	24	Analog Ground
25	Reserved	26	Reserved

a. Reserved on DT9836-6 modules.

Connector J2

Use EP353 connector J2 to attach analog input signals to the EP353 accessory panel. Figure 31 shows the orientation of the pins for connector J2 on the EP353 panel.

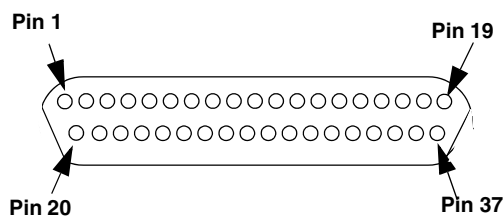


Figure 31: Orientation of the Pins for Connectors J2 on the EP353 Panel

You can access the pins on connector J2 either by using the EP360 cable and STP37 screw terminal panel (available from Data Translation), shown in Figure 32, or by building your own cable/panel. Refer to Appendix A for information about the required mating connectors.

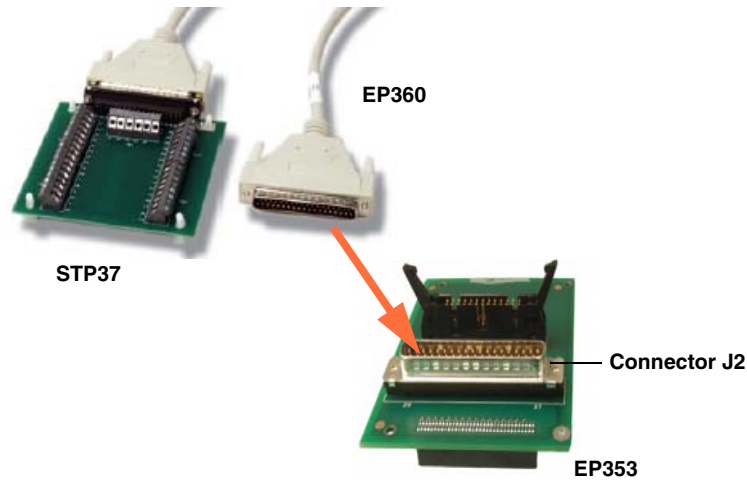


Figure 32: Connecting the STP37 Screw Terminal Panel to Connector J2 of the EP353 Accessory Panel Using the EP360 Cable

Table 46 lists the pin assignments for connector J2 on the EP353 accessory panel.

Table 46: EP353 Connector J2 Pin Assignments

Pin Assignment	Signal Description	Pin Assignment	Signal Description
1	Analog In 0	20	Analog In 6 ^a
2	Analog In 1	21	Analog In 7 ^a
3	Analog In 2	22	Analog In 8 ^a
4	Analog In 3	23	Analog In 9 ^a
5	Analog In 4	24	Analog In 10 ^a
6	Analog In 5	25	Analog In 11 ^a
7	Reserved	26	Reserved
8	Reserved	27	Reserved
9	Reserved	28	Reserved
10	Reserved	29	Reserved
11	Reserved	30	Reserved
12	Reserved	31	Reserved
13	Reserved	32	Reserved
14	Reserved	33	Reserved
15	Reserved	34	Reserved
16	Reserved	35	Reserved

Table 46: EP353 Connector J2 Pin Assignments (cont.)

Pin Assignment	Signal Description	Pin Assignment	Signal Description
17	Reserved	36	Analog Ground
18	+5 V Analog	37	Digital Ground
19	Chassis Ground		

a. Reserved on DT9836-6 modules.

EP356 Accessory Panel Connectors

To attach an EP356 accessory panel to the OEM version of the DT9836 Series module, plug the EP356 panel into connector J3 on the module, as shown in [Figure 33](#).

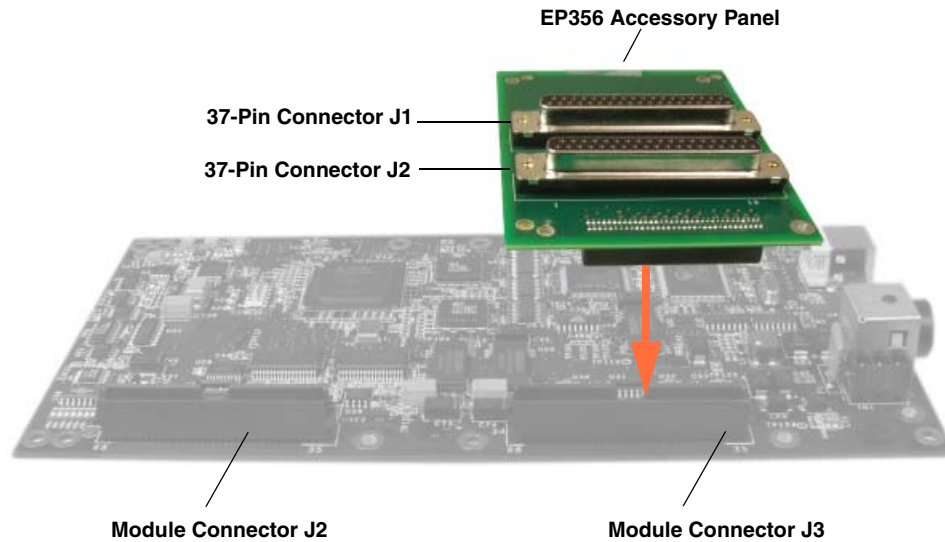


Figure 33: Connecting the EP356 Panel to the OEM Module

[Figure 34](#) shows the orientation of the pins for connectors J1 and J2 on the EP356 panel.

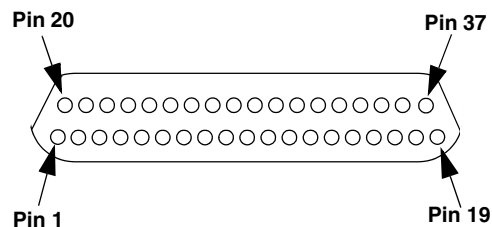


Figure 34: Orientation of the Pins for Connectors J1 and J2 of the EP356 Panel

Connector J1

Use connector J1 on the EP356 accessory panel to attach digital I/O signals. You can access the pins on the connector J1 either by using the EP333 cable and STP37 screw terminal panel (available from Data Translation), shown in [Figure 35](#), or by building your own cable/panel. To build your own cable/panel, refer to [Appendix A](#) for information about the required mating connectors.

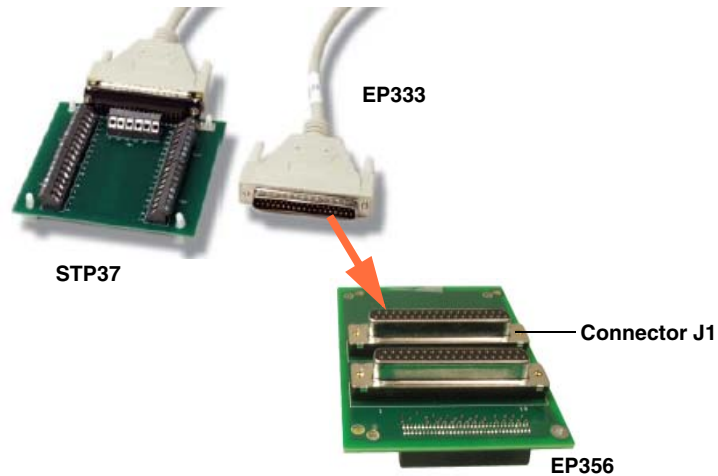


Figure 35: Connecting the STP37 Screw Terminal Panel to Connector J1 of the EP356 Accessory Panel Using the EP333 Cable

Table 47 lists the pin assignments for connector J1 on the EP356 panel.

Table 47: EP356 Connector J1 Pin Assignments

Pin Assignment	Signal Description	Pin Assignment	Signal Description
1	Digital Input 0	20	Digital Out 0
2	Digital Input 1	21	Digital Out 1
3	Digital Input 2	22	Digital Out 2
4	Digital Input 3	23	Digital Out 3
5	Digital Input 4	24	Digital Out 4
6	Digital Input 5	25	Digital Out 5
7	Digital Input 6	26	Digital Out 6
8	Digital Input 7	27	Digital Out 7
9	Digital Input 8	28	Digital Out 8
10	Digital Input 9	29	Digital Out 9
11	Digital Input 10	30	Digital Out 10
12	Digital Input 11	31	Digital Out 11
13	Digital Input 12	32	Digital Out 12
14	Digital Input 13	33	Digital Out 13
15	Digital Input 14	34	Digital Out 14
16	Digital Input 15	35	Digital Out 15

Table 47: EP356 Connector J1 Pin Assignments (cont.)

Pin Assignment	Signal Description	Pin Assignment	Signal Description
17	Digital Ground	36	Reserved
18	Digital Ground	37	Digital Ground
19	Chassis Ground		

Connector J2

Use connector J2 on the EP356 accessory panel to attach analog output, counter/timer, trigger, and clock signals. You can access the pins on the connector J2 either by using the EP333 cable and STP37 screw terminal panel (available from Data Translation), shown in [Figure 36](#), or by building your own cable/panel. To build your own cable/panel, refer to [Appendix A](#) for information about the required mating connectors.

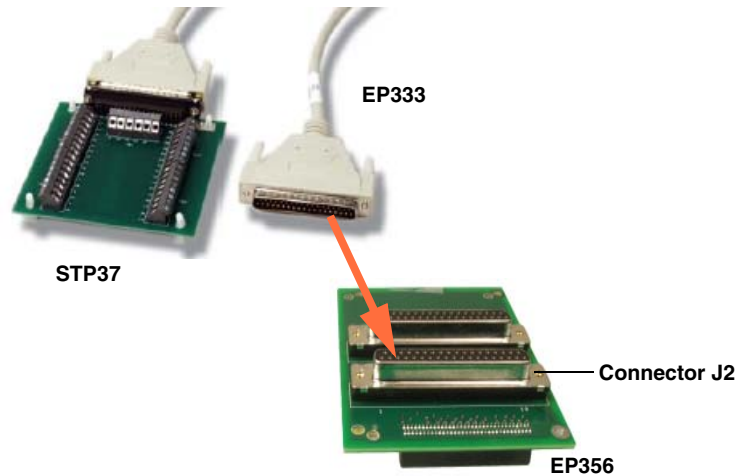


Figure 36: Connecting the STP37 Screw Terminal Panel to Connector J2 of the EP356 Accessory Panel Using the EP333 Cable

Table 48 lists the pin assignments for connector J2 on the EP356 panel.

Table 48: EP356 Connector J2 Pin Assignments

Pin Assignment	Signal Description	Pin Assignment	Signal Description
1	Analog Out 0 ^a	20	Analog Out 0 Return ^a
2	Analog Out 1 ^a	21	Analog Out 1 Return ^a
3	Analog Out 2 ^b	22	Analog Out 2 Return ^b
4	Analog Out 3 / +5 V ^c	23	Analog Out 3 Return ^d
5	Digital Ground	24	Digital Ground
6	External DAC Clock	25	External DAC Trigger
7	External ADC Clock	26	External ADC Trigger
8	Counter 0 Clock	27	Digital Ground
9	Counter 0 Out	28	Counter 0 Gate
10	Counter 1 Clock	29	Digital Ground
11	Counter 1 Out	30	Counter 1 Gate
12	Quad Dec 0 (C/T 2) A	31	Digital Ground
13	Quad 0 (C/T 2) Index	32	Quad Dec 0 (C/T 2) B
14	Quad Dec 1 (C/T 3) A	33	Digital Ground
15	Quad 1 (C/T 3) Index	34	Quad Dec 1 (C/T 3) B
16	Quad Dec 2 (C/T 4) A	35	Digital Ground
17	Quad 2 (C/T 4) Index	36	Quad Dec 2 (C/T 4) B
18	Digital Ground	37	Digital Ground
19	Chassis Ground		

- a. Reserved on DT9836-6-0 and DT9836-12-0 modules.
- b. Analog Out 2 and Analog Out 2 Return on DT9836-6-4-OEM and DT9836-6-4-BNC modules only; reserved on other modules.
- c. Analog Out 3 on DT9836-6-4-OEM and DT9836-6-4-BNC modules only; +5 V on other modules.
- d. Analog Output 3 Return on DT9836-6-4-OEM and DT9836-6-4-BNC modules only; digital ground on other modules.

EP355 Screw Terminal Assignments

To attach an EP355 accessory panel to the OEM version of the DT9836 Series module, plug the EP355 panel into connector J3 on the module, as shown in [Figure 37](#).

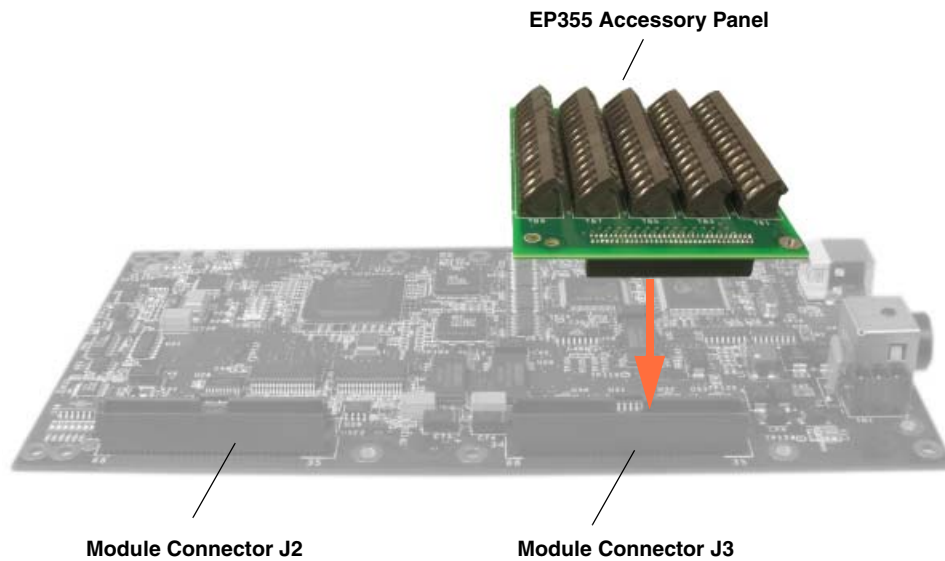


Figure 37: Connecting the EP355 Panel to the OEM Module

The screw terminal assignments correspond to the pin assignments on the J3 connector on the OEM version of the DT9836 Series module itself. Refer to [Table 41](#) on [page 138](#), using the pin numbers to reference the screw terminals on the EP355.

LED Status Indicators

DT9836 Series modules have a single bi-color LED that indicates the status of the module, as described in [Table 49](#).

Table 49: LED Status Indicators on the DT9836 Series Modules

Color of the LED	Status Description
Green	Module is powered
Blinking amber	Module is acquiring data



Ground, Power, and Isolation

Secondary Power Connector	156
Ground, Power, and Isolation Connections	157

Secondary Power Connector

The OEM version of the DT9836 Series module provides a secondary power connector, which is useful for embedded applications. The location of the connector is shown in [Figure 38](#).

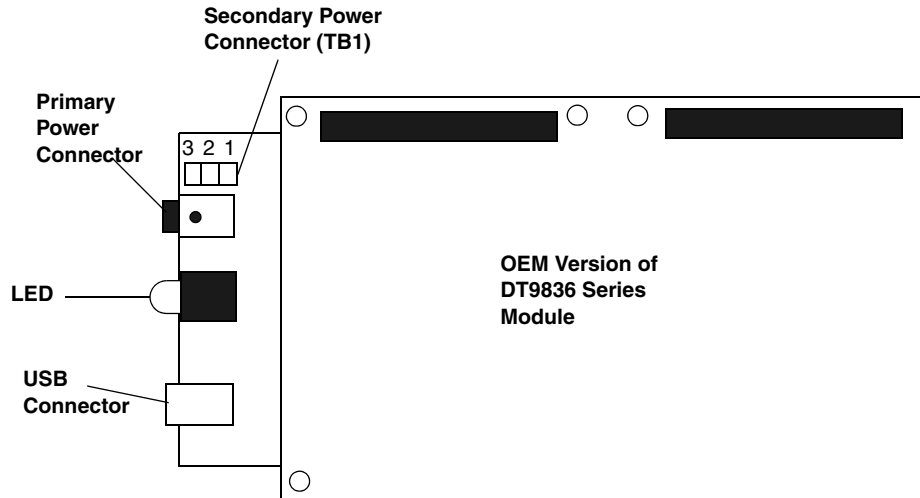


Figure 38: Secondary Power Connector

The pin assignments for the secondary power connector (TB1) are as follows:

- **Pin 1** = +5 V
- **Pin 2** = Ground
- **Pin 3** = Shield (chassis ground)

Ground, Power, and Isolation Connections

Figure 39 illustrates how ground, power, and isolation are connected on a DT9836 Series module.

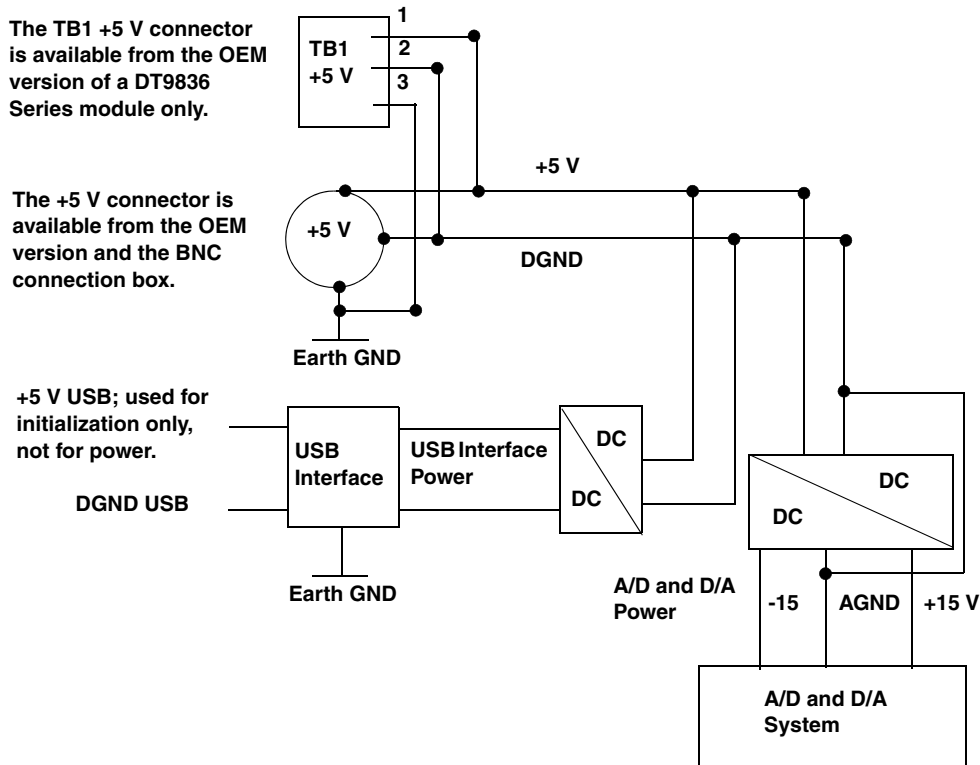


Figure 39: Ground, Power, and Isolation Connections

Keep the following in mind:

- Earth ground on the DT9836 module is not connected to DGND or AGND.
- Earth ground is connected to the aluminum case of the BNC connection box.
- You should connect earth ground to the power supply earth.
- You should isolate the +5V/DGND input. Note that the EP361 power supply (shipped with the BNC connection box and available from Data Translation for the OEM version of the module) has no connection between +5V/DGND and earth ground.
- The USB connector case is connected to earth ground.
- The USB data lines and USB GND are not connected to earth ground.
- The USB DGND is connected to the USB GND of the PC USB port.

A

- A/D subsystem specifications [124](#)
- accessories [22](#)
 - BNC DIN Rail Kit [22](#)
 - EP333 cable [23](#)
 - EP353 accessory panel [22](#)
 - EP355 accessory panel [22](#)
 - EP356 accessory panel [22](#)
 - EP360 cable [23](#)
 - EP361 [22](#)
 - STP37 screw terminal panel [23](#)
- administrator privileges [35](#)
- aliasing [74](#)
- analog input
 - calibrating [120](#)
 - channel list [70](#)
 - channel list for counter/timers [72](#)
 - channel list for quadrature decoders [73](#)
 - channel list for the digital input port [72](#)
 - channels [69](#)
 - continuous operations [75](#)
 - conversion modes [75](#)
 - data format and transfer [77](#)
 - error conditions [77](#)
 - ranges [74](#)
 - resolution [69](#)
 - sample clock sources [74](#)
 - single-ended configuration [44](#)
 - single-ended operations [75](#)
 - testing continuous [58](#)
 - testing single-value [56](#)
 - triggers [76](#)
 - wiring [44](#)
- analog output
 - calibrating [122](#)
 - channel list [79](#)
 - channels [78](#)
 - clock sources [80](#)
 - continuous operations [80](#)
 - conversion modes [80](#)
 - data format and transfer [82](#)
 - error conditions [83](#)
 - gain [79](#)
 - ranges [79](#)
 - resolution [78](#)
 - single-value operations [80](#)

- subsystem specifications [126](#)
- testing continuous [59](#)
- testing single-value [57](#)
- wiring [45](#)
- analog threshold trigger [77](#)
- applet, Open Layers Control Panel [85](#), [113](#)
- application wiring
 - analog outputs [45](#)
 - continuous edge-to-edge measurement [50](#)
 - digital inputs and outputs [46](#)
 - edge-to-edge measurement [50](#)
 - event counting [47](#)
 - frequency measurement [49](#)
 - period measurement [49](#)
 - pulse output [51](#)
 - pulse width measurement [49](#)
 - single-ended analog inputs [44](#)
 - up/down counting [48](#)
- applications
 - Quick DataAcq [21](#)

B

- base clock frequency [107](#)
- BaseClockFrequency [107](#)
- binary data encoding [100](#)
- BNC box connectors [141](#)
- BNC DIN Rail Kit [22](#)
- buffers [100](#)
 - inprocess flush [100](#)
 - single wrap mode [100](#)

C

- C/C++ programs [21](#)
- C/T, *see* counter/timer [128](#)
- cable matching [39](#)
- cables, USB [32](#), [33](#)
- calibrating the module
 - analog input subsystem [120](#)
 - analog output subsystem [122](#)
 - running the calibration utility [119](#)
- CGLDepth [101](#)
- channel list
 - for analog input channels [70](#)
 - for counter/timers [72](#)

- for quadrature decoders [73](#)
- for the digital input port [72](#)
- channel type
 - differential [101](#)
 - single-ended [101](#)
- channel-gain list depth [101](#)
- channels
 - analog input [69](#)
 - analog output [78](#)
 - counter/timer [86](#)
 - digital I/O [84](#)
 - number of [101](#)
 - quadrature decoder [95](#)
- clock sources
 - analog input [74](#)
 - analog output [80](#)
 - counter/timer [87](#)
 - quadrature decoder [96](#)
- clock-falling edge type [108](#)
- clock-rising edge type [108](#)
- clocks
 - base frequency [107](#)
 - external [107](#)
 - internal [107](#)
 - maximum external clock divider [107](#)
 - maximum throughput [107](#)
 - minimum external clock divider [107](#)
 - minimum throughput [107](#)
 - simultaneous [107](#)
 - specifications [130](#)
- connecting signals
 - analog outputs [45](#)
 - continuous edge-to-edge measurement [50](#)
 - digital inputs and outputs [46](#)
 - edge-to-edge measurement [50](#)
 - event counting [47](#)
 - frequency measurement [49](#)
 - period measurement [49](#)
 - pulse output [51](#)
 - pulse width measurement [49](#)
 - single-ended analog inputs [44](#)
 - up/down counting [48](#)
- connecting to the host computer [32](#)
- connector J1 pin assignments [153](#)
- connector J2 pin assignments
 - EP356 [43](#)
 - OEM version [137](#)
- connector J3 pin assignments, OEM version [138](#)
- connector pin assignments
 - BNC connection box [141](#)
 - EP353 [144](#)
 - EP356 [148](#), [149](#)
- connector TB1 pin assignments, OEM version [140](#)
- continuous analog input
 - post-trigger [99](#)
 - scan operations [75](#)
- continuous analog output [99](#)
 - streaming [81](#)
 - waveform generation mode [81](#)
- continuous counter/timer [99](#)
- continuous digital I/O [84](#), [99](#)
- continuous edge-to-edge measurement mode [92](#), [108](#)
 - wiring [50](#)
- Control Panel applet [85](#), [113](#)
- conversion modes
 - analog input (scan mode) [75](#)
 - continuous analog input (scan mode) [75](#)
 - continuous analog output [80](#)
 - digital I/O [84](#)
 - single-value analog input [75](#)
 - single-value analog output [80](#)
- conversion rate [75](#)
- counter/timer
 - channels [86](#), [101](#)
 - clock sources [87](#), [107](#)
 - clock-falling edge type [108](#)
 - clock-rising edge type [108](#)
 - connecting edge-to-edge signals [50](#)
 - connecting event counting signals [47](#)
 - connecting frequency measurement signals [49](#)
 - connecting period signals [49](#)
 - connecting pulse output signals [51](#)
 - connecting pulse width signals [49](#)
 - connecting up/down counting signals [48](#)
 - continuous edge-to-edge measurement mode [108](#)
 - edge-to-edge measurement mode [108](#)
 - event counting [108](#)
 - gate types [87](#)
 - gate-falling edge type [108](#)
 - gate-rising edge type [109](#)
 - high-edge gate type [108](#)
 - high-level gate type [108](#)
 - high-to-low output pulse [108](#)
 - in analog input channel list [72](#)
 - internal gate type [108](#)
 - interrupt-driven operations [109](#)
 - low-edge gate type [108](#)
 - low-level gate type [108](#)
 - low-to-high output pulse [108](#)
 - one-shot mode [108](#)

rate generation mode 108
 repetitive one-shot mode 108
 subsystem specifications 128
 up/down counting 108
 variable pulse width 108
 counting events 89
 customer service 115

D

D/A, *see* analog output 126
 DAQ Adaptor for MATLAB 21
 data encoding 77, 82, 100
 data flow modes
 continuous C/T 99
 continuous digital input 99
 continuous post-trigger 99
 single-value 99
 data format and transfer
 analog input 77
 analog output 82
 DataAcq SDK 21
 device driver 19, 35
 differential channels 101
 digital I/O 84
 input port 84
 input port in the analog input channel list 72
 lines 84
 operation modes 84
 output port 85
 output port in the output channel list 79
 subsystem specifications 127
 testing digital inputs 60
 testing digital outputs 61
 wiring 46
 Digital In/Out connector pin assignments 42
 digital trigger 76, 80
 DT-Open Layers for .NET Class Library 21
 duty cycle 88

E

edge type
 clock falling 108
 clock rising 108
 gate falling 108
 gate rising 109
 edge-to-edge measurement mode 91, 108
 wiring 50
 encoding data 77, 82
 environmental specifications 131

EP333 cable 23
 EP353 accessory panel 22, 144
 EP355 accessory panel 22
 EP355 screw terminal 152
 EP356 accessory panel 22, 148, 149
 EP356 pin assignments 43
 EP360 cable 23
 EP361 power supply 22
 errors
 analog input 77
 analog output 83
 event counting 89, 108
 wiring 47
 expansion hub 33
 external clock 87, 107
 external clock divider
 maximum 107
 minimum 107
 external digital trigger 76, 80
 negative TTL 106
 positive TTL 106

F

factory service 115
 features 16
 FIFO
 input 77
 output 82
 FIFO size 99
 FifoSize 99
 formatting data
 analog input 77
 analog output 82
 frequency
 base clock 107
 external A/D clock 75
 external C/T clock 87
 external output clock 80
 internal A/D clock 74, 107
 internal A/D sample clock 107
 internal C/T clock 87, 107
 internal output clock 80
 internal retrigger clock 100
 output pulse 91
 frequency measurement 49, 90
 testing 62

G

gain
 actual available 102
 analog output 79
 number of 102
 programmable 102
gate type 87
 high-edge 108
 high-level 108
 internal 108
 low-edge 108
 low-level 108
gate-falling edge type 108
gate-rising edge type 109
generating pulses 93, 94
ground 157

H

hardware features 16
help, online 55
high-edge gate type 108
high-level gate type 108
hot-swapping 32

I

inprocess buffers 100
input
 channels 69
 configuration, single-ended 44
 ranges 74
 resolution 69
 sample clock sources 74
input FIFO 77
internal
 clock 87, 107
 gate type 108
interrupt-driven operations 109
interrupt-on-change 85, 99
isolation 157

J

J1 connector pin assignments 153
J2 connector pin assignments
 EP356 43
 OEM version 137
J3 connector pin assignments
 OEM version 138

L

LabVIEW 21
LED 32, 33
LED status indicator 153
LEDs 33
legacy CPL elevated 35
lines, digital I/O 84
low-edge gate type 108
low-level gate type 108
LV-Link 21

M

matching cables 39
MATLAB 21
MaxDifferentialChannels 101
MaxExtClockDivider 107
MaxFrequency 107
MaxMultiScanCount 100
MaxRetriggerFreq 100
MaxSingleEndedChannels 101
measuring frequency 90
measuring pulses 91, 92
MinExtClockDivider 107
MinFrequency 107
MinRetriggerFreq 100
multiple channels
 analog input 70
 analog output 79

N

number of
 differential channels 101
 gains 102
 I/O channels 101
 resolutions 102
 scans per trigger 100
 single-ended channels 101
 voltage ranges 102
NumberOfChannels 101
NumberOfRanges 102
NumberOfResolutions 102
NumberOfSupportedGains 102
Nyquist Theorem 74

O

OEM version
 connector J2 pin assignments 137
 connector J3 pin assignments 138

- connector TB1 pin assignments [140](#)
- one-shot pulse output [93](#), [108](#)
- online help [55](#)
- Open Layers Control panel [35](#)
- Open Layers Control Panel applet [85](#), [113](#)
- operation modes
 - continuous analog input (scan mode) [75](#)
 - continuous digital I/O [84](#)
 - single-value analog input [75](#)
 - single-value analog output [80](#)
 - single-value digital I/O [84](#)
 - waveform generation [81](#)
- output
 - channel list [79](#)
 - clock sources [80](#)
 - pulses [108](#)
 - ranges [79](#)
- output FIFO [82](#)
- output pulses
 - testing [63](#)
 - wiring [51](#)
- outputting pulses [93](#), [94](#)

P

- period [91](#)
- period measurement, wiring [49](#)
- physical specifications [131](#)
- pin assignments [153](#)
 - Digital In/Out connector [42](#)
 - EP356 [43](#)
 - OEM version connector J2 [137](#)
 - OEM version connector J3 [138](#)
 - OEM version connector TB1 [140](#)
- ports, digital I/O [84](#)
- positive threshold trigger [106](#)
- post-trigger acquisition mode [99](#)
- power [31](#), [156](#), [157](#)
- power specifications [131](#)
- power supply [31](#)
- preparing to wire signals [39](#)
- pre-scale value [95](#)
- pulse output
 - one-shot [93](#)
 - rate generation [93](#)
 - repetitive one-shot [94](#)
 - testing [63](#)
 - types [88](#)
 - wiring [51](#)
- pulse width [88](#), [91](#)
 - wiring [49](#)

Q

- quadrature decoder
 - features [95](#)
 - in the analog input channel list [73](#)
 - wiring [52](#)
- Quick DataAcq application [21](#)
 - running [55](#)
- QuickDAQ
 - Advanced FFT Analysis option [20](#)
 - Base version [19](#)
 - FFT Analysis option [20](#)

R

- ranges
 - analog input [74](#)
 - analog output [79](#)
 - number of [102](#)
- rate generation [93](#), [108](#)
- recommendations for wiring [39](#)
- repetitive one-shot pulse output [94](#), [108](#)
- resolution
 - analog input [69](#)
 - analog output [78](#)
 - available [102](#)
 - number of [102](#)
- retrigger clock frequency [100](#)
- returning boards to the factory [115](#)
- RMA [115](#)

S

- sample clock sources [74](#)
- sample rate [75](#)
- scaling mode [95](#)
- scan operations, analog input [75](#)
- screw terminal assignments, EP355 [152](#)
- SDK [21](#)
- simultaneous clocking [107](#)
- simultaneous sample-and-hold support [101](#)
- simultaneous start list [99](#)
- single buffer wrap mode [100](#)
- single channel
 - analog input [70](#)
 - analog output [79](#)
- single-ended channels [44](#), [101](#)
 - number of [101](#)
- single-value operations [99](#)
 - analog input [75](#)
 - analog output [80](#)
 - digital I/O [84](#)

- software trigger [76](#), [80](#), [106](#)
- specifications [123](#)
 - analog input [124](#)
 - analog output [126](#)
 - clocks [130](#)
 - counter/timer specifications [128](#)
 - digital I/O [127](#)
 - environmental [131](#)
 - external power supply [134](#)
 - physical [131](#)
 - power [131](#)
 - regulatory [133](#)
 - triggers [129](#)
- stopping an operation [76](#), [81](#)
- STP37 screw terminal panel [23](#)
- SupportedGains [102](#)
- SupportedResolutions [102](#)
- SupportedThresholdTriggerChannel [106](#)
- SupportedVoltageRanges [102](#)
- SupportsBinaryEncoding [100](#)
- SupportsBuffering [100](#)
- SupportsClockFalling [108](#)
- SupportsClockRising [108](#)
- SupportsContinuous [99](#)
- SupportsContinuousMeasure [108](#)
- SupportsCount [108](#)
- SupportsDifferential [101](#)
- SupportsExternalClock [107](#)
- SupportsGateFalling [108](#)
- SupportsGateHighEdge [108](#)
- SupportsGateHighLevel [108](#)
- SupportsGateLowEdge [108](#)
- SupportsGateLowLevel [108](#)
- SupportsGateNone [108](#)
- SupportsGateRising [109](#)
- SupportsHighToLowPulse [108](#)
- SupportsInProgressFlush [100](#)
- SupportsInternalClock [107](#)
- SupportsInterrupt [109](#)
- SupportsInterruptOnChange [99](#)
- SupportsLowToHighPulse [108](#)
- SupportsMeasure [108](#)
- SupportsNegExternalTTLTrigger [106](#)
- SupportsOneShot [108](#)
- SupportsOneShotRepeat [108](#)
- SupportsPosExternalTTLTrigger [106](#)
- SupportsPosThresholdTrigger [106](#)
- SupportsProgrammableGain [102](#)
- SupportsRateGenerate [108](#)
- SupportsSimultaneousClocking [107](#)
- SupportsSimultaneousSampleHold [101](#)

- SupportsSimultaneousStart [99](#)
- SupportsSingleEnded [101](#)
- SupportsSingleValue [99](#)
- SupportsSoftwareTrigger [106](#)
- SupportsTwosCompEncoding [100](#)
- SupportsUpDown [108](#)
- SupportsVariablePulseWidth [108](#)
- SupportsWrapSingle [100](#)
- system requirements [30](#)

T

- TB1 connector pin assignments
 - OEM version [140](#)
- technical support [114](#)
- threshold trigger
 - channel [106](#)
 - threshold trigger, positive [106](#)
- throughput
 - maximum [107](#)
 - minimum [107](#)
- transferring data
 - analog input [77](#)
 - analog output [82](#)
- triggered scan
 - number of scans per trigger [100](#)
 - retrigger frequency [100](#)
- triggers
 - analog input [76](#)
 - analog threshold [77](#)
 - external [76](#), [80](#)
 - external negative digital [106](#)
 - external positive digital [106](#)
 - positive analog threshold [106](#)
 - software [76](#), [80](#), [106](#)
 - specifications [129](#)
- troubleshooting
 - procedure [112](#)
 - technical support [114](#)
 - troubleshooting table [112](#)
- TTL trigger [76](#), [80](#)
- twos complement data encoding [100](#)

U

- units, counter/timer [86](#)
- unpacking [29](#)
- up/down counting [89](#), [108](#)
 - wiring [48](#)
- USB cable [32](#), [33](#)
- USB expansion hub [33](#)

V

- variable pulse width [108](#)
- Visual Basic for .NET programs [21](#)
- Visual C# programs [21](#)
- voltage ranges [74](#), [102](#)
 - number of [102](#)

W

- waveform generation mode [81](#)
- wiring signals
 - analog outputs [45](#)
 - continuous edge-to-edge measurement [50](#)
 - digital inputs and outputs [46](#)
 - edge-to-edge measurement [50](#)
 - event counting [47](#)
 - frequency measurement [49](#)
 - period measurement [49](#)
 - preparing [39](#)
 - pulse output [51](#)
 - pulse width measurement [49](#)
 - recommendations [39](#)
 - single-ended analog inputs [44](#)
 - to the BNC connection box [40](#)
 - up/down counting [48](#)
- writing programs in
 - C/C++ [21](#)
 - Visual Basic .NET [21](#)
 - Visual C# [21](#)

