

N2894-60002 **Passive Probe**



User's Guide



Agilent Technologies

Manual Part Number

N2894-97000

May 2012

Printed in Germany

Notices

© Agilent Technologies, Inc. 2012

Agilent Technologies, Inc

Oscilloscope Products Division



This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste. Product Category: With reference to the

equipment types in the WEEE Directive Annex I, this product is classed as a "Monitoring and Control instrumentation" product. Do not dispose in domestic household. To return unwanted products, contact your local Agilent office, or refer to www.agilent.com for more information.



This symbol indicates the Environmental Protection Use Period (EPUP) for the product's toxic substances for the China RoHS requirements.



Recycle marking.

Restricted Rights Legend

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Warranty

The material contained in this document is provided "as is," and is subject to being changed, without notice, in future editions. Further, to the maximum extent permitted by applicable law, Agilent disclaims all warranties, either express or implied, with

regard to this manual and any information contained herein, including but not limited to the implied warranties of merchantability and fitness for a particular purpose. Agilent shall not be liable for errors or for incidental or consequential damages in connection with the furnishing, use, or performance of this document or of any information contained herein. Should Agilent and the user have a separate written agreement with warranty terms covering the material in this document that conflict with these terms, the warranty terms in the separate agreement shall control.

Safety Notices

This apparatus has been designed and tested in accordance with IEC Publication 1010, Safety Requirements for Measuring Apparatus, and has been supplied in a safe condition. This is a Safety Class I instrument (provided with terminal for protective earthing). Before applying power, verify that the correct safety precautions are taken (see the following warnings). In addition, note the external markings on the instrument that are described under "Safety Symbols."

CAUTION. A **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.

WARNING. A **WARNING** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.

Introduction

The N2894-60002 passive probe is compatible with Agilent InfiniiVision and Infiniium Series oscilloscopes with 1 M Ω input and provides up to 700 MHz bandwidth on DSOX/MSOX 4000A-series oscilloscopes. The product number for replacement probe is N2894A or you may choose any of the N2870A–76A Series for other bandwidth and characteristics.

NOTE

For more information on the single-pack version of N2894-60002, go to Agilent.com and search on N2894A. Then, click on Manuals, and download the user’s guide (with the literature number, N2876–97001). The accessories provided with your N2894A, may be a reduced set from that listed in the user’s guide. You can also locate the user’s guide in the Probe Resource Center (PRC). The PRC is an application that you download to your computer. It contains manuals, application notes, data sheets, videos, SPICE models, and more for your Agilent oscilloscope probes. Visit <http://www.agilent.com/find/PRC> to download the PRC.


Supplied Accessories


Table 1 Supplied Accessories

Accessory	Quantity
2.5 mm passive probes	2
Sprung hook tip	2
Trimmer tool	1
Channel identification rings, 3 x 4 colors	1
Spring-loaded probe tips, 0.5 mm	2
Rigid probe tip, 0.5 mm	1
Ground spring 2.5 mm	2
Ground lead 15 cm	2
Insulating cap	1

Available Accessories

The available accessories shown in this picture are listed in [Table 2 on page 6](#) with their associated accessory kits.

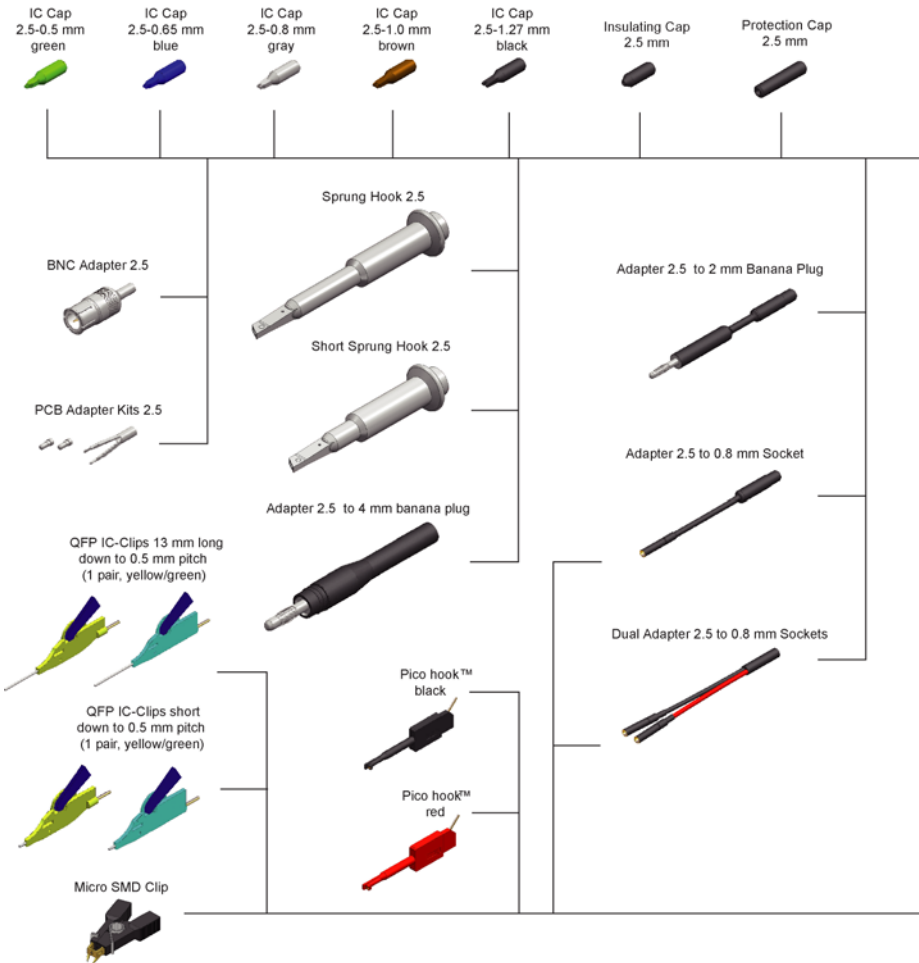

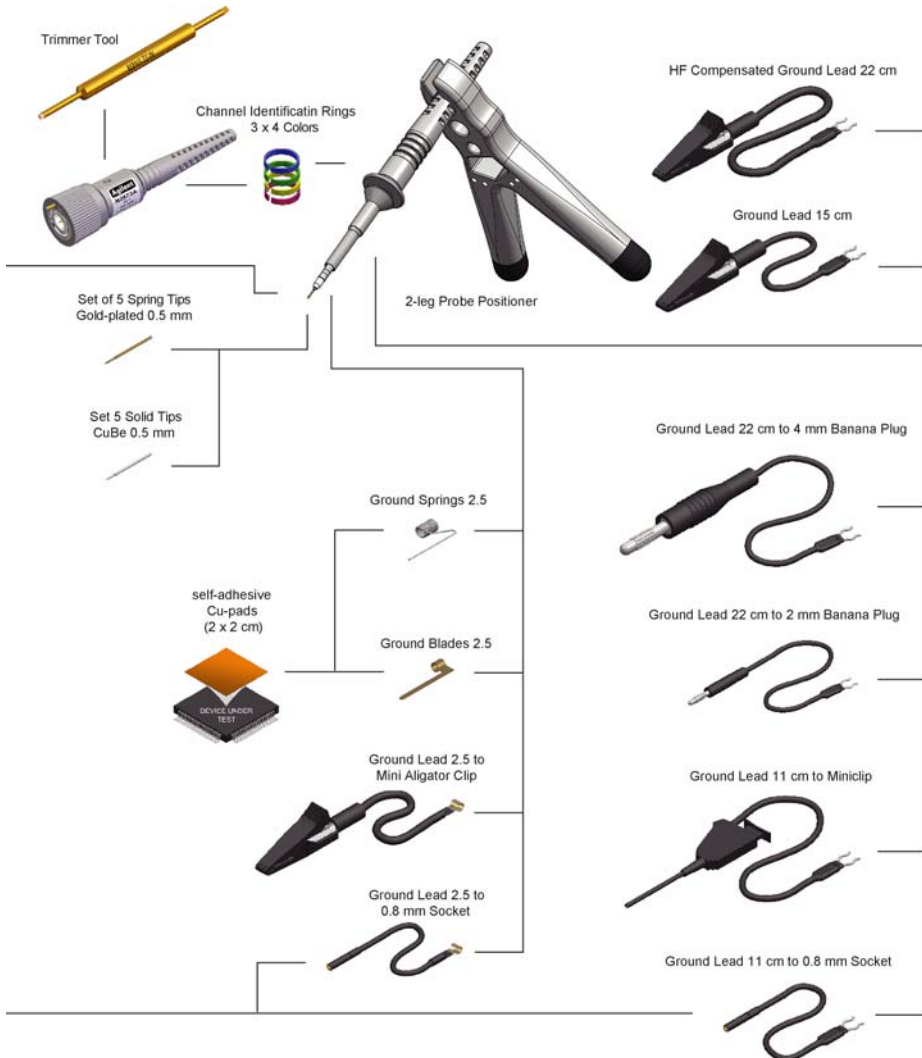

Available Accessories

Table 2 Accessory Quantity in Kits (Sheet 1 of 2)

Optional Accessory	N2877A Deluxe Kit	N2879A Fine Pitch Kit	N2878A General Purpose Kit	N2885A PCB Socket Adapter Kit	Accessory P/N
IC Cap 2.5 - 0.5 mm green	3	3	1	—	0960-2983
IC Cap 2.5 - 0.65 mm blue	3	3	1	—	0960-2984
IC Cap 2.5 - 0.8 mm gray	3	3	1	—	0960-2988
IC Cap 2.5 - 1.0 mm brown	3	3	1	—	0960-2989
IC Cap 2.5 - 1.27 mm black	3	3	1	—	0960-2986
Insulating Cap 2.5 mm	1	1	1	—	0960-2985
Protection Cap 2.5 mm	1	1	1	—	0960-2996
LF Compensation Trimmer Tool	1	—	—	—	—
HF Compensated Ground Lead 22 cm	1	—	—	—	0960-2993
Ground Lead 22 cm to 4 mm banana plug	1	—	—	—	—
Ground Lead 22 cm to 2 mm banana plug	1	—	—	—	—
Ground Lead 11 cm to mini- clip	1	—	—	—	0960-2977
Ground Lead 11 cm to 0.8 mm socket	1	—	—	—	0960-2978
Ground Spring 2.5 mm	3	3	—	—	0960-2980
Self-adhesive Cu-pads (2 x 2 cm)	10	10	10	—	0960-2908
Ground Blade 2.5 mm	3	3	1	—	0960-2982
Ground Lead 2.5 to mini Alli- gator Clip	1	—	—	—	0960-2991
Ground Lead 2.5 to 0.8 mm socket	1	—	—	—	0960-2994
Set of 5 Spring Tips Gold-plated 0.5 mm	1	1	1	—	0960-2981
Set of 5 Solid Tips CuBe 0.5 mm	1	1	1	—	0960-2979
Adapter 2.5 to 2 mm banana plug	1	—	—	—	—
Adapter 2.5 to 0.8 mm socket	2	—	—	—	0960-2990

Table 2 Accessory Quantity in Kits (Sheet 2 of 2)

Optional Accessory	N2877A Deluxe Kit	N2879A Fine Pitch Kit	N2878A General Purpose Kit	N2885A PCB Socket Adapter Kit	Accessory P/N
Dual Adapter 2.5 to 0.8 mm sockets	2	2	—	—	0960-2898
Sprung Hook 2.5 mm	1	—	1	—	0960-2905
Short Sprung Hook 2.5 mm	1	—	—	—	0960-2907
Adapter 2.5 to 4 mm banana plug	1	—	—	—	—
Pico Hook black	2	2	—	—	—
Pico Hook red	2	2	—	—	—
BNC Adapter 2.5 mm	1	—	—	—	0960-2987
PCB Adapter Kit 2.5 mm	1	10	—	25	—
QFP IC-Clips 13 mm long down to 0.5 mm pitch (1 pair yellow/green)	2	2	—	—	0960-2992
QFP IC-Clips short down to 0.5 mm pitch (1 pair yellow/green)	2	2	—	—	0960-2995
Ground Lead 15 cm	1	—	1	—	0960-2906
Channel Identification Rings, 4 colors	3	—	3	—	—
2-leg Probe Positioner	1	1	—	—	N2786-60001
Micro SMD Clip	1	2	—	—	—

Characteristics and Specifications

This section lists the characteristics and specifications for the probes. The probe and oscilloscope should be warmed up for at least 20 minutes before any testing and the environmental conditions should not exceed the probe's specified limits.

Table 3 Electrical and Mechanical Characteristics

Description	Characteristic
Attenuation ratio	10:1
Bandwidth (−3 dB)	700 MHz ^a
Probe Risetime (10%-90%)	500 ps
Maximum Rated Input Voltage	400 V CAT I ^b , 300 V CAT II ^c
Input Resistance (scope + probe)	10 MΩ
Input Capacitance (system)	9.5 pF
Compensation Range	10 - 25 pF
Input Coupling of the Measuring Instrument	1 MΩ
Weight (probe only)	48 g
Cable Length	1.3 m
Probe Barrel Diameter	2.5 mm

- a.700 MHz BW only available on DSOX/MSOX 4000A-series oscilloscopes with 1 GHz or 1.5 GHz bandwidth.
- b.Measurement Category I, 1250V transient overvoltage.
- c.Measurement Category II.

Table 4 Safety Specifications

Specification
Low Voltage Directive 2006/95/EC
CEI/IEC 61010-031:2008-08

Table 5 Environmental Specifications

Description	Specification
Temperature	Operating: 0 °C to +50 °C Nonoperating: -40 °C to +70 °C
Altitude	Operating: 2,000 m (6,561 ft) Nonoperating: 15,000 m (49,212 ft)
Humidity	Operating: 80% room humidity for temperatures up to 31 °C, decreasing linearly to 40% at 50 °C Nonoperating: 95% room humidity for temperatures up to 40 °C
Pollution Degree	Pollution Degree 2

Typical Voltage Derating (Measurement Category I)

WARNING The maximum input voltage rating of the probe decreases as the frequency of the applied signal increases.

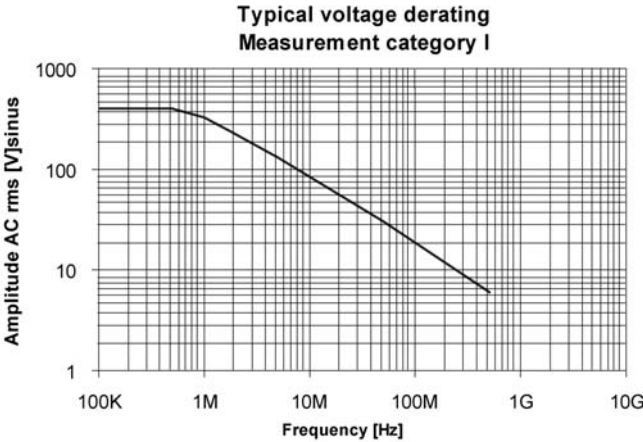


Figure 1. Typical Voltage Derating Plot

CAUTION Refer to the oscilloscope documentation for the oscilloscope’s acceptable input range and do not exceed this limit when using the probes.

Typical Input Impedance

CAUTION The input impedance of the probe decreases as the frequency of the applied signal increases.

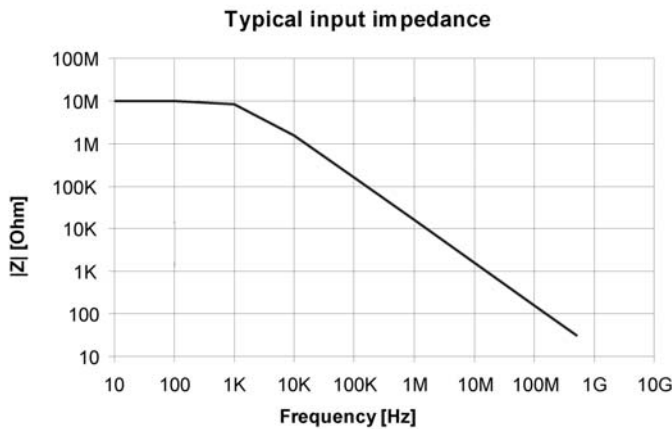


Figure 2. Typical Input Impedance

Safety Information

-
- WARNING** To avoid personal injury and to prevent fire or damage to this product or products connected to it, review and comply with the following safety precautions. Be aware that if you use this probe assembly in a manner not specified, the protection this product provides may be impaired.
-
- WARNING** Handle Probe Tips / Accessories Carefully. Some of the probe tips / accessories are very sharp (the spring tips and ground spring, for example). You should handle these with care to avoid personal injury.
-
- WARNING** Use Only Grounded Instruments. Do not connect the probe's ground lead to a potential other than earth ground. Always make sure the probe and the oscilloscope are grounded properly.
-
- WARNING** Connect and Disconnect Properly. Connect the probe to the oscilloscope and connect the ground lead to earth ground before connecting the probe to the circuit under test. Disconnect the probe input and the probe ground lead from the circuit under test before disconnecting the probe from the oscilloscope.
-
- WARNING** Observe Probe Ratings. Do not apply any electrical potential to the probe input which exceeds the maximum rating of the probe. Make sure to comply with the voltage versus frequency derating curve on page 9.
-
- WARNING** Keep Away From Live Circuits. Avoid open circuitry. Do not touch connections or components when power is present.
-
- WARNING** Indoor Use Only. Do not operate in wet/damp environments. Keep product surfaces dry and clean.
-
- WARNING** Do Not Operate With Suspected Failures Refer to qualified service personnel.
-
- WARNING** Do Not Operate in an Explosive Environment
-

IEC Measurement Category Definitions and Examples

Definitions and Examples (Clause 6.5.2).

Measurement Category I (CAT I)

Measurement category I is for measurements performed on circuits not directly connected to a mains supply.

Example. Measurements in circuits not derived from a mains supply and specially protected (internal) circuits derived from a mains supply. In the latter case, transient stresses are variable. For that reason, it is required that the transient withstand capability of the equipment is made known to the user.

Measurement Category II (CAT II)

Measurement category II is for measurements performed on circuits directly connected to the low voltage installation.

Example. Household appliances, portable tools, and similar equipment.

Measurement Category III (CAT III)

Measurement category III is for measurements performed in the building installation.

Example. Measurements on distribution boards, circuit breakers, wiring including cables, bus-bars, junction boxes, switches, socket-outlets in the fixed installation and equipment for industrial use like, for example, stationary motors with permanent connections to the fixed installation.

Measurement Category IV (CAT IV)

Measurement category IV is for measurements performed at the source of the low-voltage installation.

Example. Electricity meters and measurements on primary over-current protection devices and ripple control units.

IEC Pollution Degrees

Definitions (Clause 3.5.6).

Pollution Degree 1

No POLLUTION or only dry, non-conductive POLLUTION. NOTE: The POLLUTION has no influence.

Pollution Degree 2

Only non-conductive POLLUTION. Occasionally, however, a temporary conductivity caused by condensation must be accepted.

Pollution Degree 3

Conductive POLLUTION occurs or dry, non-conductive POLLUTION occurs which becomes conductive due to condensation which is to be expected.



夹层转换板分析仪示波器探头 INTERPOSER/ANALYZER/OSCILLOSCOPE PROBE						
部件名称 Part Name		有毒有害物质或元素 Toxic or Hazardous Substances and Elements				
		铅 Pb	汞 Hg	镉 Cd	六价铬 CrVI	多溴联苯 PBB
金属扣件	Metal fasteners	○	○	○	×	○
连接器	Connectors	×	○	○	×	○
印制电路板	Printed circuit assemblies	×	○	×	○	○
电缆	Cables	×	○	○	○	○
机械部件	Machined parts	×	○	○	○	○
其它部件	Other parts	○	○	○	○	○

0: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
X: 表示该有毒有害物质至少在该部件某一均质材料中的含量超出SJ/T11363-2006 标准规定的限量要求。
O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006.
X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363-2006.
如果上述表单多于一个，请参考您的订单或者装箱单从上述表格中找到适合您的产品的列表。
If more than one table is shown above, reference your order or packing list to determine which is applicable to your product.
若您需要了解有关本产品的生产日期信息，请联系您的安捷伦销售代表。
If you have a question about the manufacturing date for your product, ask your Agilent representative
有关如何与安捷伦联系的信息，请参考产品使用手册。
For Agilent contact information, please reference your product manual.
根据中国《电子信息产品污染控制管理办法》的规定，安捷伦已经为本产品标识了显示其环保使用期限的数字。该数字是对本产品在日常使用和操作条件下的使用寿命的评估，其使用和操作条件已经在产品使用手册上做出了明确的规定和说明。该数字仅为与《管理办法》为目的的活动提供参考；并不意味着并担保本产品在环保使用期限过期前免于损坏。该环保使用期限不代表任何担保或保证。该环保使用期限数字不改变任何创立的担保；并且不影响与该产品销售相关的任何方面、任何项目及条件。您使用的安捷伦产品可能包含一些可替换的零部件（包括驱动器、电源、鼠标、显示器或者电池等非安捷伦制造的产品），他们的环保使用期限比安捷伦产品本身的环保使用期限短。对于这些非安捷伦制造的零部件标识其环保使用期限数字，其本身标的EPUP有高的优先权，安捷伦对非安捷伦制造的产品环保使用期限没有任何主张也不负任何责任。
In accordance with the requirements of China's Administrative Measure on the Control of Pollution Caused by Electronic Information Products (the "Measure"), Agilent has labeled this product with a number identifying its Environment-Protection Use Period ("EPUP") This number reflects an estimate of the expected life of the product under the normal use and operating conditions as defined in the product user manual which is distributed with the product. Use of the number is only for purposes related to the Measure and does not imply or guarantee that the product is free from defects prior to the EPUP expiration date. No warranties or guarantees are implied by use of the EPUP number. Use of the EPUP number does not alter any warranties found in, nor affect in any way, the terms and conditions associated with the purchase of this product.
Your Agilent product may contain replaceable assemblies/components (including disk drive, power supply, mouse, display, or battery, which are not manufactured by Agilent) which have a shorter EPUP number than that which is indicated on the product itself. In cases where the assembly, component, or part is labeled with an EPUP which differs from the one indicated by Agilent, the EPUP on the assemblies/component or part takes precedence. Agilent makes no claims concerning, and takes no responsibility for the EPUP numbers reflected on goods which are not manufactured by Agilent.

Revision: G





Manual Part Number: N2894-97000